
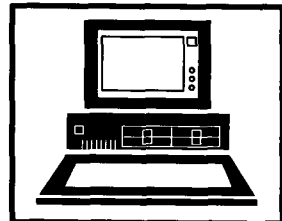
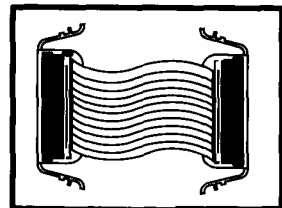
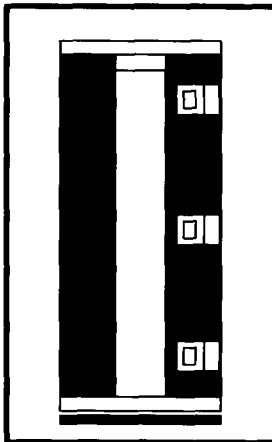
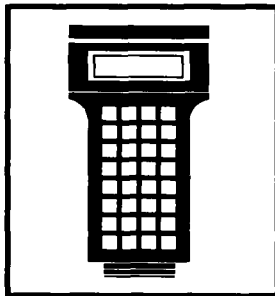
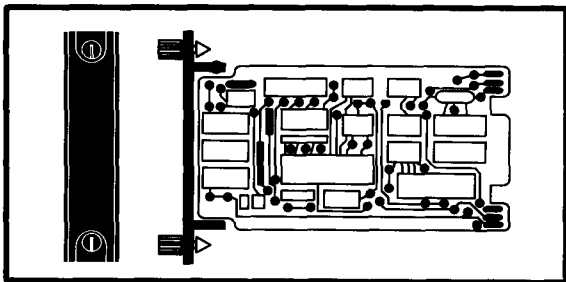


**Bailey[®]
infi 90[®]**

Instruction

**Operator Interface Station (40 Series)
Operation/Configuration Manual
(Software Release E)**

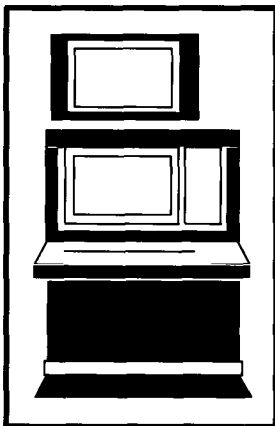

WARNING not ces as used n ths manua apply to hazards or unsafe pract ces whch cou d resu t n persona njury or death

CAUTION not ces apply to hazards or unsafe pract ces whch cou d resu t n property damage

NOTES hgh ght procedures and conta n nformat on whch ass st the operator n understand ng the nformat on contained n ths manua

WARNING

INSTRUCTION MANUALS

DO NOT INSTALL MA NTA N OR OPERATE TH S EQU PMENT W THOUT READ NG UNDERSTAND NG AND FOLLOW NG THE PROPER **Bailey Controls** NSTRUCT ONS AND MANUALS OTHER SE N NJURY OR DAMAGE MAY RESULT

RADIO FREQUENCY INTERFERENCE

MOST ELECTRON C EQU PMENT S NFLUENCED BY RAD O FREQUENCY NTERFERENCE (RF) CAUT ON SHOULD BE EXERC SED W TH REGARD TO THE USE OF PORTABLE COMMUN CAT ONS EQU PMENT N THE AREA AROUND SUCH EQU PMENT PRUDENT PRACT CE D CTATES THAT S GNS SHOULD BE POSTED IN THE V C N TY OF THE EQU PMENT CAUT ON NG AGA NST THE USE OF PORTABLE COMMUN CAT ONS EQU PMENT

POSSIBLE PROCESS UPSETS

MA NTEANCE MUST BE PERFORMED ONLY BY QUAL F ED PERSONNEL AND CNLY AFTER SECUR NG EQU PMENT CONTROLLED BY TH S PRODUCT ADJUST NG OR REMOV NG TH S PRODUCT WH LE T S N THE SYSTEM MAY UPSET THE PROCESS BE NG CONTROLLED SOME PROCESS UPSETS MAY CAUSE NJURY OR DAMAGE

AVERT'SSEMENT

MANUELS D'OPERATION

NE PAS METTRE EN PLACE REPARER OU FA RE FONCT ONNER CE MATER L SANS AVO R LU COMPRIS ET SU V LES NSTRUCT ONS REGLEMENTA RES DE **Bailey Controls** TOUTE NEGL GENCE A CET EGARD POURRA T ETRE UNE CAUSE D ACC DENT OU DE DEFA LLANCE DU MATER EL

PERTURBATIONS DE LA FREQUENCE RADIOPHONIQUE

LA PLUPART DES EQU PEMENTS ELECTRON QUES SONT SENS BLES AUX PERTURBAT ONS DE LA FREQUENCE RAD O DES PRECAUT ONS DEVRONT ETRE PR SES LORS DE LUT L SAT ON DE MATER EL DE COMMUN CAT ON FORTAT F LA PRUDENCE EX GE QUE LES PRECAUT ONS A PREN DRE DANS CE CAS SO ENT S GNALEES AUX ENDRO TS VOULUS DANS VOTRE US NE

PERTES ROCEDE RENVERSEMFNTS

L'ENTRETIEN DO T ETRE ASSURE PAR UN PERSONNE QUAL F E ET EN CONS DERAT ON DE L ASPECT SECUR TA RE DES EQU PMENTS CONTROLES PAR CE PRODU T L ADJUSTMENT ET/OU L EXTRAIT ON DE CE PRODU T LORSQU L EST NSERE A UN SYSTEME ACT F PEUT OCCAS ONNER DES A COUPS AU PROCEDE CCNTROLE SUR CERTA NS PROCEDES CES A COUPS PEUVENT EGALEMENT OCCAS ONNER DES DOMMAGES OU BLESSURES

NOTICE

The informat on conta ned n ths document s subject to change w thout not ce

Ba ey Contro s Company ts aff ates emp yees and agents and the authors of and contr butors to ths pub cat on spec f ca y d sc a ma ab t es and warrant es express and mp ed (nc ud ng warrant es of merchantab ty and ftness for a part cu ar purpose) for the accuracy currency comp eteness and /or re ab ty of the nformat on conta ned here n and/or for the ftness for any part cu ar use and/or for the performance of any materia and/or equipment se ected n who e or part w th the user of/or n rel ance upon nformat on conta ned here n Select on of materia s and/or equipment s at the so e r sk of the user of ths pub cat on

This document conta ns propr etary nformat on of Ba ey Contro s Company Esag Ba ey nc and s ssued n str ct conf dence ts use or reproduct on for use for the reverse eng neer ng deve opment or manufacture of hardware or software descr bed here n s proh b ted No part of ths document may be photocop ed or reproduced w thout the pr or wr ten consent of Ba ey Contro s Company

Preface

This instruction provides both general information that overviews the HIOIS40 Operator Interface Station, and specific information necessary to operate and configure the console. It consists of three parts made up of 17 sections and five appendices

- Description and functions
- Operation
- Configuration

The instruction can be used as an operations guide for operators, or as a reference for system engineers or technicians responsible for configuring the operator interface station (OIS) for its intended application. It is *not* a tutorial for process control, and assumes the reader has a general knowledge of video graphics based process control systems. The instruction explains console interaction with the INFI 90[®] Strategic Process Management System only.

In addition to the standard functions of the console, this instruction discusses certain functions that apply to systems, such as the open access system and user task interface, that are only available to meet unique plant requirements. Unless applicable to your plant operations, disregard the program options that support these non standard systems, and the sections in this instruction that describe the program options.

The instruction references numerous figures to explain operation and configuration of the console. Several of the figures presented are actual screen prints from the console itself. Each display the console presents contains a date and time field in the upper left corner as a fixed part of the display. Even though a screen image shown in this instruction may contain a date that is not current, it reflects the current version of that page.

This instruction supersedes and replaces I-E96 101C. This instruction reflects the E 1 software release for the HIOIS40 Operator Interface Station.

List of Effective Pages

Total number of pages in this instruction is 863, consisting of the following

Page No.	Change Date
Preface	Original
List of Effective Pages	Original
iii through xxiii	Original
1-1 through 1-14	Original
2-1 through 2-21	Original
3-1 through 3-17	Original
4-1 through 4-10	Original
5-1 through 5-5	Original
6-1 through 6-17	Original
7-1 through 7-55	Original
8-1 through 8-32	Original
9-1 through 9-21	Original
10-1 through 10-18	Original
11-1 through 11-6	Original
12-1 through 12-62	Original
13-1 through 13-29	Original
14-1 through 14-28	Original
15-1 through 15-17	Original
16-1 through 16-253	Original
17-1 through 17-39	Original
A-1 through A-2	Original
B-1 through B-120	Original
C-1 through C-4	Original
D-1 through D-9	Original
E-1 through E-51	Original
Index 1 through Index 10	Original

When an update is received, insert the latest changed pages and dispose of the superseded pages

NOTE On an update page the changed text or table is indicated by a vertical bar in the outer margin of the page adjacent to the changed area. A changed figure is indicated by a vertical bar in the outer margin next to the figure caption. The date the update was prepared will appear beside the page number.

Table of Contents

	Page
SECTION 1 - INTRODUCTION	1-1
OVERVIEW	1 1
INTENDED USER	1 1
OIS DESCRIPTION	1 2
FEATURES	1 7
INSTRUCTION CONTENT	1 8
HOW TO USE INSTRUCTION	1 10
DOCUMENT CONVENTIONS	1 10
REFERENCE DOCUMENTS	1 11
GLOSSARY OF TERMS AND ABBREVIATIONS	1 12
NOMENCLATURE	1 13
CAPABILITIES SUMMARY	1 14
SECTION 2 - INFI 90 SYSTEM AND OIS OVERVIEW	2-1
INTRODUCTION	2 1
INFI 90 SYSTEM OVERVIEW	2 1
Communication Highway	2 1
Process Control Unit	2 2
Operator Interface Station	2 3
Network Interface Unit	2 3
OIS FUNCTIONS	2 4
Operations Interface	2 5
Security Management	2 5
Database	2 5
Alarm Management	2 6
Trending	2 8
Logging	2 9
Archival Storage and Retrieval	2 10
INFI 90 System Status and Diagnostics	2 11
INFI 90 System Tuning and Configuration	2 11
Display Configurator	2 11
Operator Configurable Displays	2 12
OIS OPERATING THEORY	2 12
Control Engineering	2 14
Plant Operation	2 14
Summary and Status Displays	2 15
Process Monitor and Control Displays	2 16
System Troubleshooting	2 16
OIS TRENDING	2 17
Distributed Trending	2 17
Standard Trending (FC 66)	2 17
Enhanced Trending (FC 179)	2 18
Local Trend Data Collection	2 19
Remote Trend Data Collection	2 20
TIME STAMP	2 20
USER TASKS	2 21
SECTION 3 - KEYBOARD AND PERIPHERALS	3-1
INTRODUCTION	3 1
KEYBOARDS	3 1

Table of Contents (continued)

	<i>Page</i>
SECTION 3 - KEYBOARD AND PERIPHERALS (continued)	
Keyboard Operation	3 1
MKM2 Keyboard Type	3 2
XKBD Keyboard Type	3 3
Keyboard Error	3 3
KEYBOARD LAYOUT	3 3
Display Control	3 4
Alphabetic Characters	3 6
Numeric Keypad	3 7
Cursor and Trend Control	3 8
Station and Remote Control	3 10
Assignable Function Keys	3 11
Alarm Acknowledge and Silence	3 11
DATA INPUT	3 12
Making a Field Active	3 12
Inputting Data	3 13
ANNUNCIATOR DISPLAY PANEL	3 14
PRINTERS	3 14
Log Printers	3 15
Shared and Private Printers	3 16
Printer Status	3 16
Printer Redundancy	3 17
SECTION 4 - DISPLAY SYSTEM.....	4-1
INTRODUCTION	4 1
DISPLAY SYSTEM	4 1
Display Characteristics	4 3
Title Line Display Elements	4 3
Bottom Line Display Elements	4 5
Keyboard Status	4 5
User Space	4 6
Color Scheme	4 7
Display Element Escape Commands	4 7
DISPLAY AND CONTROL SELECT OPTIONS	4 8
Control Select Highlighting	4 9
Pop Up Control	4 10
SECTION 5 - MENU STRUCTURE.....	5-1
INTRODUCTION	5 1
GENERAL FUNCTIONS MENU	5 1
MISCELLANEOUS MENU	5 2
COMMAND LINE MENU	5 2
SECTION 6 - WINDOW OPERATIONS	6-1
INTRODUCTION	6 1
WINDOW CONTROL	6 1
Icons	6 4
Sizing a Window	6 4
SESSION MANAGER	6 5

Table of Contents (continued)

	Page
SECTION 6 - WINDOW OPERATIONS (continued)	
MESSAGE WINDOW	... 6 6
OIS START UP	6-6
Automatic OIS Application Start Up	. 6 7
Logging Into an Account	. 6 7
Start Up	6-10
Shutdown	6 10
Reset	6 11
OPENING A TERMINAL WINDOW	6-12
COPY SCREEN	6 12
Selecting a Copy Screen Printer	6 14
Configuring a Copy Screen Printer	6-14
<hr/>	
SECTION 7 - PROCESS MONITORING.....	7-1
INTRODUCTION	. 7 1
PASSWORD LOG IN AND LOG OUT	. 7 1
ACCESSING DISPLAYS	.. 7 2
Menu Items	.. 7-2
Keyboard Access	7 3
Display by Name Access	... 7 3
Automatic Displays or Pop Up Elements	.. 7 4
User Task Activated	. 7 5
Display Paging	.. 7 6
TAG OPERATIONS	. 7 7
Operating Parameters Display Call Up	. 7-8
Operating Parameters Display Attributes	7 9
Operating Parameters Display Operations	7 11
TRENDING OPERATIONS	7 15
Trend Displays	7 16
Trend Control	7 21
Move Time Cursor	7 22
Modify Scale Range	7 23
Pan	7 24
Zoom	7 25
Magnifying Glass	7 27
Operator Assignable Trends	7 28
Trend Assignments	7 29
Operator Assignable Trends Display Call Up	7 32
XY PLOT OPERATIONS	7 33
XY Plot Display	7 34
XY Plot Control	7 36
Plot Data Background Curves	7 38
OPERATOR CONFIGURABLE DISPLAYS	7 39
Tag Element Definition	7-46
Trend Element Definition	7 49
Alarm Summary Element Definition	7 52
Making an Operator Configurable Display Permanent	7 54
<hr/>	
SECTION 8 - PROCESS CONTROL AND TUNING.....	8-1
INTRODUCTION	. 8 1

Table of Contents (continued)

	<i>Page</i>
SECTION 8 - PROCESS CONTROL AND TUNING (continued)	
PROCESS CONTROL FUNCTIONS	8 1
Common Control Element Attributes	8 2
Loop Control	8 5
Station Element Attributes	8 5
Station Control	8 9
Device Control	8 12
Remote Control Memory Element	8 12
RCM Control	8 14
Remote Manual Set Constant Element	8 15
RMSC Control	8 16
Device Driver Element	8 17
DD Control	8 18
Multi State Device Driver Element	8 19
MSDD Control	8 21
Remote Motor Control Block Element	8 23
RMCB Control	8 25
PROCESS TUNING FUNCTIONS	8 26
Block Details Display	8 26
Display Call Up	8 27
Block Details Display Operations	8 28
Station Tuning Display	8 30
Display Call Up	8 31
Station Tuning Display Operations	8 32
SECTION 9 - DATA ACQUISITION	9-1
INTRODUCTION	9 1
DATA ACQUISITION FUNCTIONS	9 1
Common Data Acquisition Element Attributes	9 2
Analog Element Attributes	9 4
Digital Element Attributes	9 5
Data Acquisition Analog Element	9 6
DANG Element Attributes	9 7
DANG Control	9 10
Data Acquisition Digital Element	9 11
DADIG Element Attributes	9 12
DADIG Control	9 14
Text String Element	9 15
TEXTSTR Element Attributes	9 16
TEXTSTR Control	9 17
SECTION 10 - ALARM PROCESSING	10-1
INTRODUCTION	10 1
ALARM INDICATIONS	10 1
Alarm Status Fields	10 3
Alarm Status Indicators	10 3
Quality Indicators	10 5
Title Line Indicators	10 6
Alarm Priority Descriptors	10 7
BAD QUALITY ALARMING	10 7

Table of Contents (continued)

	<i>Page</i>
SECTION 10 - ALARM PROCESSING (cont nued)	
ALARM PROCESSING PROCEDURES	10-8
Alarm Tone Silence	10-8
Alarm Acknowledge	10-9
Correcting Alarm Conditions	10 10
ALARM SUMMARY	10 10
Alarm Summary Element Attributes	10 12
Alarm Summary Operations	10 13
Activating an Alarm Summary	10 14
Paging Through the Alarm Summary	10 14
Alarm Summary Alarm Acknowledge	10 14
Primary Display Select	10 15
ALARM GROUP INHIBIT	10 15
SECTION 11 - OIS OPERATIONAL INFORMATION	11-1
INTRODUCTION	11-1
OPERATOR ACTION REQUESTS	11-1
Display Call Up	11 1
Processing Action Requests	11 3
Enabling the Action Request Page	11 3
Paging Through Entries	11-3
Acknowledging a Request	11-3
OPERATOR INFORMATION EVENTS	11-4
Enabling the Operator Information Events Page	11-6
Paging Through Entries	11 6
Deleting Entries	11-6
SECTION 12 - RECORDING PROCESS DATA	12-1
INTRODUCTION	12-1
LOGGING	12 1
Printing and Displaying Log Reports	12 2
Custom Configured Logs	12-4
Generating Sequence of Events Summary Logs	12-5
Sequence of Events Logs	12 7
Printing the Events and Operator Actions Log	12-7
Displaying System Events Log	12 8
Display Call Up and Mode Selection	12 10
Search Criteria	12 11
Log Status	12 12
Select Start Log	12 14
Custom Logs Status Page	12 15
SOE Log Status Page	12 16
Status Page Operations	12 18
Action Menu Operations	12 18
Activating Logs	12 19
Deactivating Logs	12 20
Canceling Waiting Log Prints	12 20
ARCHIVING	12 21
Archive Data Storage	12 22
Store Data	12 24

Table of Contents (continued)

	<i>Page</i>
SECTION 12 - RECORDING PROCESS DATA (continued)	
Use New Volume	12 25
Archive Data Retrieval	12 27
Directory of Archive Volume	12 27
Data Type Retrieval	12 30
Retrieving System Events	12 32
Retrieving Logs	12 34
Retrieving Tag Data	12 36
Retrieving Trend Data	12 37
Retrieving PCU Configurations	12 41
Unused Archive Trend Indices	12 43
Directory of Retrieved Data	12 43
Directory of Retrieved Tag Data	12 45
Directory of Retrieved Trend Data	12 45
Directory of PCU Configurations	12 46
Viewing or Printing Retrieved Archive Data	12 47
Tag Historian	12 48
Tag Historian Data Retrieval	12 49
Retrieve by Alarm Group	12 51
Retrieve by Historian Group	12 52
Retrieve by Tag Name	12 53
Retrieve by Tag List	12 55
Printing or Deleting Tag Data	12 58
Printing RDF Tag Data	12 59
Delete or Abort RDF Tag Data Processing	12 62
SECTION 13 - UTILITIES 13-1	
INTRODUCTION	13 1
SET DATE AND TIME	13 1
Setting the Time for INFI NET System	13 5
Time Maintenance Options	13 5
Date and Time Requirements for INFI NET System	13 8
Setting the Time for Plant Loop System	13 9
Time Maintenance Options	13 10
Date and Time Requirements for Plant Loop System	13 13
TAG SUMMARIES	13 14
Set Range and Search Pattern	13 16
Summary Options	13 17
Selecting an Option	13 19
PRINT TAG LIST	13 20
Set Tag Range	13 22
Set Search Pattern	13 22
Select Tag Type	13 23
PRINT TREND LIST	13 23
Set Range	13 25
Select Trends	13 25
CANCELING QUEUED PRINT JOBS	13 27
SECTION 14 - INFI 90 AND OIS DIAGNOSTICS 14-1	
INTRODUCTION	14 1

Table of Contents (continued)

	<i>Page</i>
SECTION 14 - INFI 90 AND OIS DIAGNOSTICS (continued)	
INFI 90 SYSTEM STATUS DISPLAYS	14 1
Status Display Call Up	14 2
System Status Overview Page	14 3
Node Status Summary Page	14 4
Module Status Summary Page	14 7
Module Status Bytes	14 8
Module Problem Reports	14 9
Acknowledg ng System Status Alarms	14 10
MODULE FIRMWARE REVISION DISPLAY	14 10
Page Attributes	14 11
Operations	14 12
INFI-NET DIAGNOSTICS	14 15
Display Call Up	14 15
Selecting a Loop and Node	14 16
Options	14 18
Loop Topology	14 18
Node Topology	14 20
Communication Module Details	14 22
Event and Error Counters	14 23
Exception Statistics	14 24
Printing Diagnostics Information	14 26
Updating Diagnostics Information	14 27
Print Network Topology	14 28
SECTION 15 - INFI 90 SYSTEM CONFIGURATION	15-1
INTRODUCTION	15 1
PCU CONFIGURATION	15 1
Module Configuration	15 1
Select a Loop, PCU and Module	15 3
Change Module Mode	15 3
Modify a Block	15 4
Add a Block	15 4
Delete a Block	15 5
Tune a Block	15 5
Copy a Block	15 5
Move a Block	15 6
Modify Red Tag Status	15 6
Find Function Code	15 9
Display Blocks	15 9
Show Function Codes	15 10
PCU Management	15 10
Select Loop PCU, Modules and Media	15 11
Change Mode of Modules	15 13
Save Configuration to Media	15 14
Load Configuration from Media	15 14
Verify Configuration Against Media	15 15
Printing Configurations	15 15
Display Directory of Configurations	15 16

Table of Contents (continued)

	<i>Page</i>
SECTION 16 - OIS CONFIGURATION	16-1
INTRODUCTION	16 1
GENERAL INFORMATION	16 1
OIS SUBSYSTEMS CONFIGURATION	16 4
Network Definitions	16 7
OIS System Configuration	16 8
System Configuration	16 8
Keyboard Definitions	16 14
Task Processing Configuration	16 16
Time/Date Format	16 19
Window Management	16 21
X Device Definition	16 22
Remote Window Assignment	16 24
Password Security Configuration	16 25
Security Options	16 28
Logical CRT Definitions	16 30
Security Level	16 30
User Password Definition	16 32
Display Mask Definition	16 34
Tag Security Level and Group	16 35
Log Security Level	16 36
Database Configuration	16 36
Tag Database	16 37
Tag Broadcasts	16 40
Tag Database Configuration	16 40
Enabling On Line Tag Broadcasts	16 41
Entering or Editing Individual Tags	16 42
Alarm Comments	16 60
Tag Descriptors	16 64
Defining Engineering Unit Descriptors	16 66
Defining Logic State Descriptors	16 67
Display Generation	16 69
Display Generator	16 70
Display Errors	16 72
Text Editor Display Generation or Editing	16 74
Keyboard Configuration	16 74
Defining Key Macros	16 76
Assigning Keyboard Keys	16 79
Assigning ADP Pushbuttons	16 82
Defining Logical Alarm Tones	16 85
Defining Logical Alarm Relays	16 88
Alarm Management Configuration	16 91
Alarm Group Configuration	16 91
Tag Alarm Group Assignment	16 92
Alarm Group Definition	16 92
Alarm Quality Option	16 95
Automatic Tag Alarm Inhibiting	16 98
Alarm Summary Configuration	16 99
Setting Maximum Alarms	16 102
Defining Summary Lines	16 103

Table of Contents (continued)

	<i>Page</i>
SECTION 16 - OIS CONFIGURATION (continued)	
Setting Priority Colors	16 111
Alarm Summary Report	16 113
Summary Report Title Lines	16 113
Formatting Report Entries	16 116
Defining and Scheduling Alarm Summary Reports	16 116
Alarm Tones and Relays	16 119
Global Alarming Acknowledge and Silence	16 120
Node List Configuration	16 121
Tag Configuration	16 122
Alarm Tone Configuration	16 123
Enabling OIS Receive and Send Capabilities	16 123
Remote OIS Alarm Acknowledge	16 124
Open Access System Configuration	16 125
OAS Definition	16 126
Defining Remote Trends	16 128
OAS Archival Storage	16 128
Trend Definition	16 128
Trend Database Configuration	16 130
Sizing the Trend Database	16-132
Entering a Trend Definition	16 132
Trend Display and XY Plot Configuration	16 136
Logging Configuration	16 137
System Events Log Configuration	16 138
Configuring Individual Tags	16 140
Events Log Configuration	16 140
Defining Events Log Format	16 142
Events Log Considerations	16 145
Custom Log Configuration	16 145
Log Definition	16 148
Cell Definition	16 153
Cell Utilities	16 164
Log Errors	16 166
Scheduling Examples	16 167
SOE Log Configuration	16 168
Defining SOE Log Operating Parameters	16 171
Defining SOE Report RCM Tags	16 172
Defining SER Input Lists	16 173
SOE Report Definition	16 174
Archival Storage	16 176
Archival Configuration	16 178
Data Type to Volume Definition	16 180
Volume to Media Definition	16 182
Miscellaneous Definitions	16 186
Configuring Events to be Archived	16 188
Configuring Trend Data to be Archived	16 189
Configuring Custom Logs to be Archived	16 189
Configuring Sequence of Events Logs to be Archived	16 190
Configuring PCU Configurations to be Archived	16 190
Configuring Tag Data to be Archived	16 190

Table of Contents (continued)

	<i>Page</i>
SECTION 16 - OIS CONFIGURATION (continued)	
Peripheral Configuration	16 194
Defining DEVSTAT Tags	16 195
Console and Logical CRT Definition	16 195
Console Definition	16 196
Logical CRT Definition	16 197
Printers	16 197
Printer Assignments	16 198
Printer Color Maps	16 200
Display Configuration	16 203
Operator Configurable Displays Faceplate Configuration	16 204
Defining Faceplates	16 206
Defining Operating Parameters	16 208
XY Plot Configuration	16 211
XY Plot Definition	16 212
XY Plot Display Configuration Requirements	16 217
Automatic Displays and Pop up Elements CONFIGURATION	16 217
Creating a Pop Up Element	16 218
Creating a Denotation Symbol	16 219
Configuring a Tag Set	16 220
Text Definition and Substitution	16 224
Text Substitution	16 224
Tag Text Selector	16 227
Remote Motor Control Text	16 230
Alarm Comment Text	16 233
Engineering Unit and Logic State Descriptor Text	16 233
Trend Pen Cluster Configuration	16 233
General Parameters	16 234
Device Definition	16 236
Device Assignment	16 237
Trend Pen Cluster Usage Example	16 239
Input Scaling	16 241
Module Configure Tag Requirements	16 242
Trend Pen Cluster Configuration Restrictions	16 244
Trend Pen Cluster Operation Restrictions	16 245
Trend Pen Cluster Function Restrictions	16 246
Download Procedures	16 247
Adding or Changing an Analog Tag Assignment	16 247
Adding or Changing a Digital Tag Assignment	16 248
Delete Pen Assignment	16 249
Modify Scaling Factor	16 249
Trend Pen Cluster Configuration Files	16 249
User Task Definition	16 250
Function Key and ADP Pushbutton Activation	16 250
Key Select and Touch Point Activation	16 252
Display Call Up Operation	16 252
SECTION 17 - TERMINAL UTILITIES..... 17-1	
INTRODUCTION	17 1

Table of Contents (continued)

	Page
SECTION 17 - TERMINAL UTILITIES (cont nued)	
ACCESSING UTILITIES	17 1
OIS DIRECTORIES	17 1
CHANGING DIRECTORIES	17-2
UTILITIES	17 2
Diagnostic Log	17 2
Activity Monitor	17 2
VMS Monitor	17 3
Task Monitor	17 3
MSG Subdirectory	17 3
VMS Help	17 4
Software Key Lock	17 4
STREAMING TAPE DRIVE OPERATION	17 4
SAVING AND RESTORING CONFIGURATIONS	17 5
TRANSFERRING CONFIGURATION FILES	17 6
Transferring Between OIS Consoles	17 6
DECnet File Transfer	17 6
Floppy Disk File Transfer	17 8
Tape Cartridge File Transfer	17 10
Transferring SLDG Created Configurations	17 11
File Transfer	17 12
Floppy Disk Transfer	17 12
DECnet Network File Transfer	17 15
EWS Terminal Emulation	17 16
Tag Database Builder	17 17
User Created Display and Symbol Files	17 19
Trend Database Builder	17 21
Log Report Definition	17 22
FILE COMPRESSION	17 22
ENABLING TAG LIST BROADCAST MODE	17 23
COMMANDS	17 24
ACTMON	17 25
D	17 26
DATABASE	17 27
DOT	17 28
LOGS	17 29
OISRESET	17 30
OISSHUTDOWN	17 31
OISSTARTUP	17 32
PROCDT	17 33
RESTORECONFIG	17 34
SAVECONFIG	17 35
TAGMODE	17 36
TRENDS	17 37
VL or VLOG	17 38
XLATEDT	17 39
APPENDIX A - AUXILIARY ENGINEERING KEYBOARD.....	A-1
OVERVIEW	A 1

Table of Contents (continued)

	<i>Page</i>
APPENDIX B - GRAPHIC AND ESCAPE COMMANDS.....	B-1
INTRODUCTION	B 1
Display Guidelines	B 1
Display Element Syntax	B 3
General Display and Symbol Escape Commands	B 4
File Delimiters	B 5
Begin Body (bb)	B 5
Begin Metafile (bm)	B 5
Begin Picture (bp)	B 6
End Metafile (em)	B 6
End Picture (ep)	B 6
End of Input (%%)	B 6
File Attributes	B 7
Clip Rectangle (cr)	B 7
VDC Extent (ex)	B 7
Reference (rf)	B 8
Remark (rm)	B 8
Security Mask (sm)	B 8
Graphic Primitives	B 9
Arc (ac)	B 9
Append Text (at)	B 9
Closed Arc (ca)	B 10
Circle (cc)	B 10
Polygon (pg)	B 11
Polyline (pl)	B 11
Polymarker (pm)	B 12
Rectangle (rt)	B 12
Text (tx)	B 13
Graphic Attributes	B 14
Background Color (bc)	B 14
Character Height (ch)	B 14
Character Space (cs)	B 15
Fill Color (fc)	B 15
Interior Style (is)	B 15
Line Color (lc)	B 16
Line Type (lt)	B 16
Line Width (lw)	B 16
Marker Color (mc)	B 17
Marker Size (ms)	B 17
Marker Type (mt)	B 17
Text Color (tc)	B 18
Graphic and Escape Commands	B 19
Program Escape (pe)	B 21
Symbol (es)	B 21
Alarm Status Commands	B 22
Escape Alarm (ea 56)	B 22
Node Type and Configuration Error (ea 64)	B 22
Node Error Short Form (ea 65)	B 23
Node Error Long Form Off Line (ea 65)	B 23
Node Error Long Form Module (ea 65)	B 23

Table of Contents (continued)

	Page
APPENDIX B - GRAPHIC AND ESCAPE COMMANDS (continued)	
Node Error Long Form Communications (ea 65)	B 23
Node Error Long Form Node Status (ea 65)	B 24
Module Type and Configuration Error (ea 68)	B 24
Module Mode (ea 69)	B 24
Module Error Indicator (ea 70)	B 24
Device Status (ea 93)	B 25
Alarm State (ea 114)	B-25
Interactive Commands	B-26
Touch Point Display Select (ei 107)	B 26
Keystroke Display Select (ei 108)	B 27
Touch Point Control Select (ei 107)	B 27
Keystroke Control Select (ei 108)	B 28
Soft Touch Select (ei 107)	B 29
Soft Key Select (ei 108)	B 30
Trend Touch Point Control Select (ei 107)	B 31
Trend Keystroke Control Select (ei 108)	B 31
Alarm Summary Touch Point Control Select (ei 107)	B 32
Alarm Summary Keystroke Control Select (ei 108)	B 32
Alarm Summary Primary Display Touch Point Select (ei 107)	B 33
Alarm Summary Primary Display Keystroke Select (ei 108)	B 33
Pop Up Element Touch Point Select (ei 107)	B 34
Pop Up Element Keystroke Select (ei 108)	B 34
Tag Index Substitution for Pop Up Element Touch Point Select (ei 107)	B 35
Tag Index Substitution for Pop Up Element Keystroke Select (ei 108)	B 36
Block Details Touch Point Control Select (ei 107)	B 37
Block Details Keystroke Control Select (ei 108)	B 37
Plot Touch Point Control Select (ei 107)	B 37
Plot Keystroke Control Select (ei 108)	B 38
Tabular Trend Touch Point Control Select (ei 107)	B 38
Tabular Trend Keystroke Control Select (ei 108)	B 39
User Task Touch Point Select (ei 107)	B 39
User Task Keystroke Select (ei 108)	B 40
Configuration Data Commands	B 42
Alarm Comment (ec 33)	B 42
Tag Name (ec 34)	B 42
Tag Descriptor (ec 35)	B 43
Customer Identifier (ec 36)	B 43
Logic State Descriptor (ec 37)	B 43
Engineering Unit (ec 38)	B 43
Alarm Limit (ec 39)	B 44
Alarm Limits High and Low (ec 39)	B 44
Scale Limit (ec 40)	B 45
Scale Limits High and Low (ec 40)	B 45
Alarm Ticks High and Low (ec 41)	B 46
Node Number (ec 63)	B 46
Node Error Configuration Text Node (ec 66)	B 46
Node Error Configuration Text Module (ec 66)	B 47
Node Error Configuration Text Configuration System (ec 66)	B 47
Node Error Configuration Text Node Status (ec 66)	B 47

Table of Contents (continued)

	<i>Page</i>
APPENDIX B - GRAPHIC AND ESCAPE COMMANDS (continued)	
Module Address (ec 67)	B 47
Device Type (ec 96)	B 48
Device Number (ec 97)	B 48
Alarm Group (ec 104)	B 48
Data Acquisition Reference Value (ec 105)	B 49
Data Acquisition Bar Graph Pivot Point Tick Mark (ec 106)	B 50
Console Text String Length (ec 124)	B 50
Block Text String Length (ec 125)	B 50
Dynamic Commands	B 51
Alarm Comment (ed 33)	B 51
Logic State Descriptor (ed 37)	B 51
Value (ed 42)	B 51
Output Indicator (ed 43)	B 52
RCM Feedback Indicator (ed 44)	B 52
RMCB Feedback Indicator (ed 44)	B 53
RCM Set Permissive Indicator (ed 45)	B 53
RCM Override Indicator (ed 46)	B 54
Station Mode Type 1 (ed 47)	B 54
Station Status Type 1 (ed 48)	B 54
Moving Value (ed 49)	B 55
Dynamic Bar (ed 50)	B 56
Dynamic Pointer (ed 51)	B 57
RMSC Tracking Indicator (ed 57)	B 57
DD or MSDD Override (ed 58)	B 58
Feedback Indicator (ed 59)	B 58
Mode (ed 60)	B 58
MSDD Output Indicator (ed 61)	B 59
MSDD Control Override (ed 62)	B 59
Node Type and Configuration Error (ed 64)	B 59
Node Error Short Form (ed 65)	B 60
Node Error Long Form Off Line (ed 65)	B 60
Node Error Long Form Module (ed 65)	B 60
Node Error Long Form Communications (ed 65)	B 60
Node Error Long Form Node Status (ed 65)	B 61
Module Type and Configuration Error (ed 68)	B 61
Module Mode (ed 69)	B 61
Module Error Indicator (ed 70)	B 61
Module Status Bytes (ed 71)	B 62
Station Mode Type 2 (ed 74)	B 62
Station Status Type 2 (ed 75)	B 62
Station Tracking Type 2 (ed 76)	B 62
Station Mode Type 3 (ed 77)	B 63
Text Selector (ed 79)	B 63
RMCB Bad Start Text (ed 80)	B 63
RMCB Fault Indicator Text (ed 80)	B 63
RMCB Permissive Indicator (ed 81)	B 64
RMCB Error Code Text (ed 92)	B 64
Device Status Bytes (ed 94)	B 64
Device Status Description (ed 95)	B 65

Table of Contents (continued)

	<i>Page</i>
APPENDIX B - GRAPHIC AND ESCAPE COMMANDS (continued)	
Deviation Bar Type 1 (ed 98)	B-65
Deviation Bar - Type 2 (ed 99)	B 66
Red Tag Status Text (ed 100)	B 67
Enhanced Module Status (ed 101)	B 68
Red Tag Status Outline (ed 102)	B 68
Exception Report Text (ed 103)	B-69
Data Acquisition Constrained Value Indicator (ed 107)	B 70
Data Acquisition Bidirectional Dynamic Bar (ed 108)	B-71
Data Acquisition Value Source and Lock Indicator (ed 109)	B 72
Data Acquisition Variable Alarm Type Indicator (ed 110)	B 72
Data Acquisition No Report Indicator (ed 111)	B 72
Quality Override Indicator (ed 112)	B-73
Alarm Priority (ed 113)	B 73
Alarm State (ed 114)	B 74
Data Acquisition Next Highest or Next Lowest Alarm State (ed 114)	B 74
Quality (ed 115)	B 75
Data Acquisition Next Alarm Limit (ed 116)	B 75
Data Acquisition Moving Next Alarm Limit (ed 117)	B 76
Data Acquisition Moving Next Alarm Limit Tick Marks (ed 118)	B 77
Text String (ed 120)	B-77
Text String Interlock Indicator (ed 121)	B 78
Text String Truncation Indicator (ed 122)	B 78
Received Text String Length (ed 123)	B 78
Block Details Display (bd 126)	B 79
Alarm Summary Element Commands	B-80
Alarm Summary (as 82)	B 80
Alarm Summary (as 83)	B 83
Trend Element Commands	B 86
Tabular Trend Element (et 52)	B-86
Trend Element (et 53)	B 87
Tabular Trend Summary Information High and Low Limits (su 152)	B 91
Tabular Trend Summary Information High Limit of Column (su 152)	B-92
Tabular Trend Summary Information Low Limit of Column (su 152)	B 92
Tabular Trend Summary Information Maximum of Column (su 152)	B 93
Tabular Trend Summary Information Minimum of Column (su 152)	B-93
Tabular Trend Summary Information Average of Column (su 152)	B 94
Tabular Trend Summary Information Summation of Column (su 152)	B 94
Example Tabular Trend Display	B 95
XY Plot Element (et 154)	B 97
XY Plot Summary Information High and Low Limit (su 154)	B 99
XY Plot Summary Information Value Per Grid Division (su 154)	B 100
XY Plot Summary Information Plot Descriptor (su 154)	B 101
Example Tag or Trend XY Plot Display	B 101
Dynam c Symbols	B 103
Analog Dynamic Symbol (ed 54)	B 103
Digital Dynamic Symbol (ed 54)	B 104
Exception Report Discrete Dynamic Symbol (ed 54)	B 105
Symbol Name (sn)	B 106
Advanced Analog Dynamic Symbol (ed 54)	B 106

Table of Contents (continued)

	<i>Page</i>
APPENDIX B - GRAPHIC AND ESCAPE COMMANDS (continued)	
MSDD Dynamic Symbol Requested State (ed 54)	B 108
MSDD Dynamic Symbol Current State (ed 56)	B 109
Range Symbol (rs)	B 110
Display File Example	B 114
Symbol File Examples	B 118
APPENDIX C - HARD DISK UTILIZATION	
INTRODUCTION	C-1
UTILIZATION EXAMPLE	C 4
APPENDIX D - TASK CODES	
INTRODUCTION	D 1
INTERACTIVE TASK CODES	D 1
RESIDENT TASK CODES	D 5
WINDOW AND NETWORK TASK CODES	D 8
APPENDIX E - ERROR MESSAGES	
INTRODUCTION	E 1
ERROR MESSAGES	E 1

List of Figures

<i>No.</i>	<i>Title</i>	<i>Page</i>
1 1	Operator Interface Station	1 2
1 2	Power Entry Panel	1 6
2 1	INFI 90 Communication Highway and Nodes	2 2
3 1	Mylar Keyboard	3 2
3 2	Keyboard Sections	3 4
4 1	Common Display Characteristics	4 4
5 1	General Functions Menu	5 1
5 2	Miscellaneous Menu	5 2
5 3	Menu Structure OIS Operation and OIS Configuration	5 3
5 4	Menu Structure OIS Utilities	5 5
6 1	Windows Overview	6 2
7 1	Operating Parameters	7 8
7 2	Trend Display	7 16
7 3	Trend Attributes	7 18
7 4	Trend Display Panning Enabled	7 24
7 5	Trend Display Zooming Enabled	7 26
7 6	Trend Display Magnifying Glass Enabled	7 27
7 7	Operator Trend Assignments	7 29
7 8	XY Plot	7 34
7 9	Plot Attributes	7 35
7 10	Example Operator Configurable Display	7 41
7 11	Example Display Setup	7 41

List of Figures (continued)

No.	Title	Page
7 12	Operator Configurable Displays Directory Page	7 42
7 13	Operator Configurable Displays Editing Page	7 43
7 14	Tag Elements	7-47
7-15	Tag Elements .	7-48
7-16	Trend Elements	7 50
7 17	Alarm Summary Elements	7 53
8 1	Standard Process Control Faceplate Symbols	8 3
8 2	Control Station Element	8 6
8 3	Remote Control Memory Element	8 13
8 4	Remote Manual Set Constant Element	8 15
8 5	Device Driver Element	8-17
8 6	Multi State Device Driver Element	8 20
8 7	Remote Motor Control Block Element	8 23
8 8	Block Details Display	8 27
8 9	Station Tuning Display	8-30
9 1	Standard Data Acquisition Faceplate Symbols	9 2
9-2	Analog Element	9-4
9 3	Analog Annunciator Element	9 5
9 4	Digital Element	9-6
9 5	Digital Annunciator Element	9 6
9 6	Data Acquisition Analog Element	9 7
9 7	Data Acquisition Digital Element	9 12
9 8	Text String Element	9 16
10 1	Alarm Summary Page	10 13
10 2	Alarm Group Inhibit	10 16
11-1	Operator Action Request Display	11 2
11 2	Operator Information Events Display	11 5
12 1	Events Log Display Real Time Mode	12 9
12 2	Events Log Display Snapshot Mode	12 10
12 3	Events Log Display Search Criteria	12 11
12 4	Log Status Display Menu	12 14
12 5	Log Status Display Custom Logs Status	12 15
12 6	Log Status Display SOE Logs	12 17
12 7	Store Data Menu	12 25
12 8	Use New Volume	12 26
12 9	Directory of Archive Volume Display	12 28
12 10	Sample Archive Volume Directory	12 29
12 11	Retrieve Data Menu	12-31
12 12	Retrieve Events Page	12 33
12 13	Print Log Images Page	12 35
12 14	Retrieve Tag Data Page	12 37
12 15	Retrieve Trend Data Page	12 38
12 16	Retrieve PCU Configurations Page	12 42
12 17	Unused Archive Trend Indices Page	12 43
12 18	Directory of Retrieved Data Menu	12-44
12-19	Directory of Retrieved Tags	12 45
12 20	Directory of Retrieved Trends	12 46
12-21	Directory of PCU Configurations	12 47
12 22	Tag Historian Menu	12-49
12 23	Tag Historian Retrieval Menu	12 50
12-24	Retrieve by Alarm Group Page	12 51

List of Figures (continued)

No	Title	Page
12 25	Retrieve by Historian Group Page	12 53
12-26	Retrieve by Tag Wild Card Page	12 54
12 27	Retrieve by Individual Tags Page	12 55
12 28	Print/Delete RDF Page	12-59
12 29	Print RDF Tag Data Options Page	12 60
12 30	Example Retrieved Tag Data Printout	12 61
13-1	Set Date and Time Display	13 4
13-2	Tag Summaries Menu	13 16
13 3	Example Tag Summary	13-20
13 4	Example Tag Summary Printout	13-21
13 5	Tag List to Printer	13 21
13 6	Trend List to Printer	13 24
13 7	Directory of Queued Prints	13 28
14 1	System Status Overview Page	14 3
14 2	Node Status Summary Page	14 5
14 3	Module Status Summary Page	14 7
14 4	Module Firmware Revision Display	14 11
14 5	INFI-NET Diagnostics Options Menu	14 16
14 6	INFI NET Diagnostics Loop Topology	14 19
14 7	INFI NET Diagnostics Node Topology	14 21
14 8	INFI NET Diagnostics - Communication Module Details	14 22
14 9	INFI NET Diagnostics Event and Error Counters	14 24
14 10	INFI NET Diagnostics Exception Statistics	14 25
15 1	PCU Configuration Menu	15 2
15 2	Module Configuration Menu	15 2
15 3	Modify Red Tag Status	15 7
15 4	PCU Management Menu	15 10
15 5	Select Loop/PCU/Modules/Media	15 12
15 6	Display Directory of Configurations	15 16
16 1	General Functions Menu	16 2
16 2	OIS System Configuration General Parameters	16 9
16 3	OIS System Configuration Keyboard Definitions	16 14
16 4	OIS System Configuration CIU Task Processing	16 18
16 5	OIS System Configuration Time and Date Format	16 20
16 6	Window Management X Device Definition	16 23
16 7	Password Security Security Options	16 29
16 8	Password Security Security Levels	16 31
16 9	Password Security User Password Definitions	16 33
16 10	Password Security Display Mask Definition	16 35
16 11	Database Tag Configuration	16 43
16 12	Database Alarm Comment Configuration	16 62
16 13	Database Alarm Comment Configuration (Tag Check)	16 64
16 14	Database - EUD Configuration	16 66
16 15	Database LSD Configuration	16 68
16 16	Display Generation Display Generator	16 71
16 17	Display Generation Show Display Errors	16 72
16 18	Keyboard Key Macro Definition	16 77
16 19	Keyboard Assign Keys to Displays (Page 1)	16 79
16 20	Keyboard - Assign Keys to Display (Page 2)	16 80
16 21	Keyboard - ADP Assignment Display (Page 1)	16 83
16 22	Keyboard ADP Assignment Display (Page 2)	16 84

List of Figures (continued)

No.	Title	Page
16-23	Keyboard Tone Configuration	... 16 86
16-24	Keyboard Relay Configuration	... 16-89
16-25	Alarm Management Alarm Groups	... 16 93
16-26	Alarm Management Alarm Quality Options	16 96
16 27	Alarm Summary Options Menu	16 104
16 28	Alarm Summary Line Options	16-105
16-29	Alarm Summary - Display/Modify Format Menu	16 107
16-30	Alarm Summary - Add Element Menu	16 108
16-31	Alarm Summary Priority Colors	16-112
16 32	Alarm Summary Report Alarm Summary Title	16 114
16-33	Alarm Summary Report Definition	16-117
16 34	Alarm Management Global Alarm Acknowledge/Silence	16 122
16-35	Alarm Management Remote Acknowledge Tag Assignments	16-125
16 36	Open Access System Configuration OAS Definition	16-127
16 37	Trend Define Trends	16 134
16 38	Logging Event Log Configuration	16 141
16 39	Logging Event Log Format Menu	16 143
16 40	Logging Event Log Item Format Page	16 144
16 41	Log Configuration Log Definition	16 149
16 42	Log Configuration Cell Configuration Display	16 154
16 43	Log Configuration Alarm/Quality Field Cell Definition	16 156
16 44	Log Configuration ASCII Text Cell Definition	16 156
16 45	Log Configuration - Constant Value Cell Definition	16 157
16 46	Log Configuration Formula Cell Definition	16 158
16 47	Log Configuration OIS Time and Date Cell Definition	16 159
16 48	Log Configuration - Offset Time Cell Definition	16 161
16 49	Log Configuration Tag Value Cell Definition	16 161
16 50	Log Configuration Trend Value Cell Definition	16 162
16 51	Log Configuration Tag Attribute Cell Definition	16 164
16 52	Log Configuration Cell Utilities Menu	16 164
16 53	Example Trip Log Printout	16 167
16 54	Logging SOE General Parameters	16 171
16 55	Logging SER Definition	16 173
16 56	Logging SOE Report Definition	16 175
16 57	Archival Storage Data Type to Volume Definition	16 181
16 58	Archival Storage Volume to Media Definition	16 185
16 59	Archival Storage Miscellaneous Definitions	16 187
16 60	Archival Storage Historian Tag Configuration	16 191
16 61	Peripherals Console Definition	16 196
16 62	Peripherals Logical CRT Definition	16 198
16 63	Peripherals Printer Assignments	16 199
16 64	Peripherals Printer Color Maps	16 201
16 65	Printer Color Maps Text Color Map	16 202
16 66	OCD Default Parameters Page 1 of 5	16 207
16 67	OCD Default Parameters Page 2 of 5	16 207
16 68	OCD Default Parameters Page 3 of 5	16 208
16 69	OCD Default Parameters Page 4 of 5	16 211
16 70	OCD Default Parameters Page 5 of 5	16 211
16 71	Display Configuration XY Plot Configuration	16 213
16 72	Automatic Displays Tag Set Selection	16 220
16 73	Automatic Displays Tag Set Configuration	16 221

List of Figures (continued)

<i>No.</i>	<i>Title</i>	<i>Page</i>
16 74	Automatic Displays Tag Configuration	16 223
16 75	Text Substitution Page 1	16 225
16 76	Text Substitution Example Configurable Text String Page	16 226
16 77	Text Definition Tag Text Selector Configuration	16 228
16 78	Text Definition RMCB Text Configuration	16 231
16 79	Trend Pen Cluster Configuration Main Menu	16 235
16 80	Trend Pen Cluster Configuration General Parameters	16 235
16 81	Trend Pen Cluster Configuration Device Definition	16 236
16 82	Trend Pen Cluster Configuration Device Assignment Display	16 238
16 83	Trend Pen Cluster Configuration Pen Off	16 240
16 84	Trend Pen Cluster Configuration Configure Tag/Timer Configuration	16-243
16 85	Trend Pen Cluster Configuration Configure Tag to Pen Configuration Position Logic	16 244
16-86	User Task Definition Definition..	16 251
16 87	User Task Definition - Options	16 253
17 1	OIS Application Directories	17 1
A 1	Key Mapping for the Auxiliary Engineering Keyboard	A 1

List of Tables

<i>No</i>	<i>Title</i>	<i>Page</i>
1 1	Related Documents	1 11
1 2	Glossary of Terms and Abbreviations	1 12
1 3	Capabilities Summary	1 14
3 1	Display Control Block Key Functions	3 4
3 2	Alphabetic Character Block Key Functions	3 7
3 3	Numeric Keypad Block Key Functions	3 8
3 4	Cursor and Trend Control Block Key Functions	3 8
3 5	Station and Remote Control Block Key Functions	3 10
3 6	Alarm Acknowledge and Silence Block Key Functions	3 12
4 1	Display/Symbol Library File Listing	4 1
7 1	Alarm Summary Entries	7 54
8 1	Station Modes	8 8
8 2	Tracking Indicators	8 9
9 1	DANG Element Next High and Next Low Alarm Limit Criteria	9-9
9 2	TEXTSTR Element Operating Conditions	9 19
10 1	Alarm Status Indicators for the Alarm Status/Quality/Group Field	10 4
10 2	Alarm Status Indicators for the Alarm Status Field	10 4
12 1	Events Retrieval Page Fields	12 12
12 2	Events Retrieval Page Fields	12 33
12 3	Log Image Retrieval Page Fields	12 35
12 4	Tag Data Retrieval Page Fields	12 36
12 5	Trend Data Retrieval Page Fields	12 40
12 6	PCU Configurations Retrieval Page Fields	12 42
14 1	Module Status Bytes	14 9
14 2	Module Revision Level Availability	14 13
16 1	OIS Configuration Keys	16 3
16 2	OIS System Configuration Attributes	16 10

List of Tables (continued)

No.	Title	Page
16 3	Keyboard Definition Attributes	16 15
16 4	X Device Definition Fields	16 23
16 5	Tag Database - General Attributes	16 46
16 6	Tag Database - ANALOG and INTANG Attributes	16 49
16 7	Tag Database - DANG Attributes	16 49
16 8	Tag Database - DAANALG Attributes	16 51
16 9	Tag Database - DIGITAL, DADIGTL, DADIG, INTDIG and RCM Attributes	16 52
16 10	Tag Database - STATION Attributes	16 53
16 11	Tag Database - RMCB, DD and MSDD Attributes	16 54
16 12	Tag Database - RMSC Attributes	16 56
16 13	Tag Database - TEXT Attributes	16 56
16 14	Tag Database - TEXTSTR Attributes	16 56
16 15	Tag Database - DEVSTAT Attributes	16 57
16 16	Tag Database - N90STA Attributes	16 58
16 17	N90STA Tag - INFI 90 Module Types for PCU Modules	16 58
16 18	N90STA Tag - INFI 90 Module Types for Consoles	16 60
16 19	Engineering Unit Descriptors	16 65
16 20	Logic State Descriptors	16 66
16 21	Alarm Group Attributes	16 94
16 22	Alarm Quality Options	16 97
16 23	Default Alarm Line Formats	16 101
16 24	Alarm Summary Element Options	16 102
16 25	Trend Capabilities for Standard Trends	16 131
16 26	Trend Definition Attributes	16 135
16 27	Event Log Configuration Attributes	16 141
16 28	Log Definition	16 150
16 29	Trend Value Cell Fields	16 162
16 30	SOE General Parameters	16 172
16 31	SOE Report Definition Attributes	16 175
16 32	Active Plot Sample Constraints	16 212
16 33	XY Plot Definition - General Fields	16 214
16 34	XY Plot Definition - Tag Type	16 215
16 35	XY Plot Definition - Trend Type	16 216
17 1	Display File Processing	17 21
B 1	Key Legend	B 2
B 2	Color Index	B 3
B 3	Escape Command Parameters	B 19
B 4	Soft Key Parameters	B 29
B 5	RMCB Feedback Signal to Feedback Indicator Relationship	B 53
B 6	Exception Report Text Option Codes	B 69
B 7	Alarm Summary Filtering Options	B 85
B 8	Advanced Dynamic Symbol Codes	B 112
C 1	Standard Trend Data Disk Space Utilization	C 2

22 10 10 04 10 07

Bailey

SECTION 1 - INTRODUCTION

OVERVIEW

This instruction contains information and instructions necessary to configure and operate the IIOIS40 Operator Interface Station. The operator interface station (OIS) provides integrated operations interface, data acquisition and reporting capability in addition to process control for the INFI 90 Strategic Process Management System.

The console allows total plant process monitoring and control through a single control point. Flexible, dynamic, interactive color graphics displays quickly and effectively communicate equipment status and process state to an operator once configured. Through these displays and keyboard actions, an operator can control and acquire data from process devices distributed throughout the entire process. The displays also provide a consistent method to interpret process status and a means to respond to unusual conditions, both dependent on process requirements.

NOTE: There are additional versions of the operator interface station available, each having different processing capabilities and functions. In this manual, any reference to operator interface station or OIS refers to the IIO S40.

In this document, main console refers to an IIOIS401, IIOIS402, or IIOIS403. An IIOIS40A or IIOIS40D driver cabinet is also a main console, but it requires an auxiliary terminal. Auxiliary terminal refers to an IIOIC401, IIOIC4021, IIOIC4022, IIOIC4023, IIOIC403, or IIOIC404 console. The same operations can be done while at any one of these types of consoles.

INTENDED USER

This instruction can be used as an operations guide for operators, or a reference for system engineers or technicians responsible for configuring the console for its intended application. This manual is *not* a tutorial for process control, and assumes the reader has a general knowledge of video graphics based process control systems. It explains console interaction with the INFI 90 system only.

After completely reading and understanding the information presented, the system engineer or technician should have the knowledge required to tailor console operation to the specific requirements of the process.

INTRODUCTION

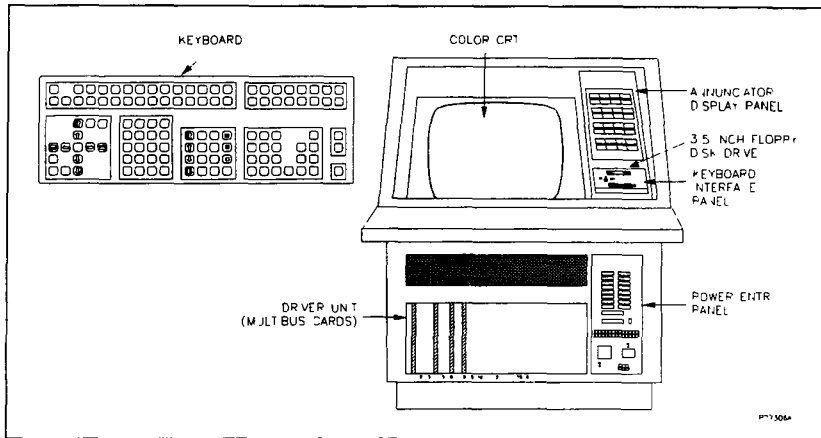


Figure 1-1. Operator Interface Station

OIS DESCRIPTION

The OIS console uses a VAXstation™ along with a multibus architecture to allow flexibility and expandability. Figure 1-1 shows the standard console (HIOIS401) and the location of primary console components. Several hardware options can be added to the standard console package to enhance operation. Refer to the *Operator Interface Station, Hardware Manual* for a detailed description and complete list of standard and optional hardware.

The main components of the console are

- VAXstation
- Driver unit
- Color CRT
- Keyboard interface panel
- Keyboard
- Annunciator display panel (ADP)
- Disk drives
- Power entry panel

This section describes the main components of the console only. It is important to become familiar with their locations and general functions before configuring or operating the console.

™ Trademark of Digital Equipment Corporation

VAXstation A VAXstation (not shown in Figure 1-1) using the VMS™ operating system performs all processing for the console, it is mounted to the back access door

The VAXstation contains a central processing unit (CPU), memory, small computer system interface (SCSI), hard disks and floppy disk drive controllers, and a graphics interface card. Multibus cards of the driver unit provide the interface to the INFI 90 communication highway and keyboards for the VAXstation. The station can directly connect to a DECnet™ network to access all networking capabilities.

Driver Unit The hardware of the driver unit connects and interfaces the console to the communication highway. These circuits also communicate with the keyboards and supported peripherals. The loop and peripheral communications give complete access to the entire plant system and console supported devices through interactive and dynamic displays.

The driver unit modular circuitry mounts in a multibus card cage located at the front, lower section of the console. An access door covers and protects this circuitry during normal operation. The multibus card cage provides the communication path and hardware priority level for the multibus modules, which include:

IIMCLO1 Multibus Communication Loop Termination Module - terminates communication highway coaxial or twin axial cable

IIMLM01 Multibus Loop Module allows communication between the communication processor module and INFI 90 communication highway through the communication termination module.

IIMCPO1 or IIMCPO2 Multibus Communication Processor Module contains the commands required to send data to, and receive data from plant process control units (PCU) and other operator consoles and interfaces. The IIMCPO1 module is part of a 10,000 tag interface unit to the Plant Loop system, the IIMCPO2 module part of a 30,000 tag interface unit to the INFI-NET system.

NOTE: The IIMCLO1, IIMLM01, and IIMCPO1 or IIMCPO2 modules comprise the communications interface unit of the console.

IIMKMO2 Multibus Keyboard Module - interfaces the keyboards and annunciator display panels (ADP). The module controls six solid state alarm output relays and six keyboard alarm tones.

Color CRT The OIS console uses a 19-inch CRT with 1024 x 864 resolution to display its color graphics. The screen is the primary information device. It presents a variety of displays to allow performing all OIS functions. The CRT supports 64 different colors.

™ Trademark of Digital Equipment Corporation

INTRODUCTION

Keyboard Interface Panel The keyboard interface panel provides connection ports for the keyboard, auxiliary engineering keyboard, mouse or trackball and a tabletop annunciator display panel. The TUNE/CONFIG key lock switch and floppy disk drive are located at this panel.

Authorized personnel can configure and tune most PCU modules and troubleshoot the system using the keyboard. A single key lock switch protects against accidental changes or data loss from unauthorized configuration and tuning. The key switch restricts certain functions to only authorized personnel. It is located at the keyboard interface panel.

The key lock switch is labeled as TUNE (tuning) and CONFIG (configuration). The only way to change the position of the switch is to insert a key and turn. After changing switch position, remove the key. This locks the key switch into the proper position for the desired operation.

Password security also provides protection against unauthorized changes. It is defined during console configuration. Password security can be used along with key lock protection, or can disable key lock requirements.

Keyboard The operator keyboard is a flat panel covered by a mylar membrane having alphabetic, numeric and specialized function keys. It connects to the KEYBOARD connector located at the keyboard interface panel. The keyboard gives access to various displays, then allows operator interaction with the displayed elements. Once configured, an operator can display and control any process loop or device in the INFI 90 system through keyboard keys.

The auxiliary engineering keyboard is a typewriter-style, QWERTY keyboard that can be used in place of the mylar keyboard. The operator can use this keyboard in conjunction with a mylar keyboard or alone. The keyboard connects to the AUX KEYBOARD connector located at the keyboard interface panel. When operating with the mylar keyboard, connection to the VAXstation is through an IIMKM02 keyboard interface module. Used alone, it can connect directly to the VAXstation without use of a keyboard interface. Without the keyboard interface, however, the console cannot drive an annunciator display panel, and access alarm tones and relays. Refer to Appendix A for auxiliary keyboard key mapping.

NOTE When the term keyboard occurs in this manual without a qualifying mylar or auxiliary it refers to the mylar keyboard.

ADP An annunciator display panel is a panel containing 32 indicator and pushbutton pairs. Process points defined as tags can be assigned an ADP lamp, and each pushbutton assigned a display, key macro or user task. Once configured, a process point that

goes into an alarm condition causes the assigned ADP indicator to light. The display required to view and take action on the alarm condition can then be called by pressing its associated pushbutton. A key macro assigned to an ADP pushbutton incorporates multiple keystrokes into a single key press. A user task assigned to an annunciator display panel allows immediate execution of a user-written task at any time by pressing a pushbutton.

A single console supports up to four annunciator display panels. The three additional panels can be tabletop type that connect and daisy-chain from the keyboard interface panel.

Disk Drives The main console has two hard disks and a floppy disk drive. The floppy disk drive handles removable 3.5-inch, high density disks (1.44 megabytes). This drive can be used to save and restore PCU and OIS configurations. The floppy disk drive is located at the keyboard interface panel.

One of the two hard disk drives contains the VMS operating system software. The other drive provides on-line storage for

- OIS operating software.
- Assembled display files
- Log and trend data
- Archived data
- OIS configuration data

Power Entry Panel The power entry panel is located behind the front access door. This panel provides

- Main power connection point
- Main power on/off switch
- Console reset switch
- I/O and peripheral ports
- Keyboard I/O terminal block
- CRT degaussing switch

Figure 1-2 shows the power entry panel.

Printers The console can access up to four different printers for creating hard copy records of plant alarm occurrences, configured logs and system events. It can also access up to four additional but different printers for creating hard copy printouts of selected OIS screens. The printers designated for logging purposes are completely independent of those used by the copy screen function available at the console.

Printer configuration and selection for the copy screen function is done through a screen print configuration window. Refer to **COPY SCREEN** in the *Window Operations* section for further explanation and types of printers supported for use in screen printing

FEATURES

30,000-Tag Capacity. Monitors and allows operator control of up to 30,000 process variables through dynamic, interactive color graphics displays. The console automatically determines the maximum size of the database based on the type of communications processor module installed. The maximum size is 30,000 tags if using an IIMCP02 module, or 10,000 tags if using an IIMCP01 module on a Plant Loop system.

Four OIS Windows. Generates up to four windows that can be directed to the local screen of the console, to auxiliary terminals, or to other nodes connected to the DECnet network.

Custom Graphics. Flexible graphics hierarchy enables the creation of displays tailored to specific application needs. Text, shapes, lines and symbols as well as real-time dynamic values and state fields present information in status displays or process mimics. Standard device faceplate symbols and status displays are provided in the OIS software.

Full Control and Input Capability. Fully supports configuration, control and tuning of process control parameters within the INFI 90 system from both standard faceplates and user-designed graphics.

10,000-Point Distributed Trending. Provides for distributed trending of up to 10,000 variables. Trending offers an historical perspective of process conditions for analysis of operations.

Logging. Creates up to 300 custom logs (STANDARD, TRIP or PERIODIC), 160 sequence of events (SOE) logs, and an events log containing up to 1,000 events. These logs provide a hard copy history of process operations and customized operations summaries.

Advanced Alarm Management. Multilevel alarming capabilities optimize operator response through color coded prioritization and single keystroke alarm acknowledgment.

Single Keystroke Display Access. Display or control selects can be performed with a single operator action through the keyboard, a mouse or an annunciator display panel.

High Resolution CRT. Supports 1024 x 864 resolution display screens.

Historical Data Archiving. Provides a history of process operations for subsequent analysis and process improvement. Archived data can include tag, trend, log, system events and PCU configuration data. The console supports archiving of all data types to magnetic tape (i.e., TK50 cartridge) and optical disk, and log and events archiving to an open access system (OAS).

INFI 90 System Troubleshooting and Diagnostics. Enables on line INFI 90 system troubleshooting and diagnostics through system status displays and INFI-NET diagnostics functions.

INFI 90 System Tuning and Configuration. Allows INFI 90 module configuration and tuning capabilities over the INFI-NET and Plant Loop communication highways.

INSTRUCTION CONTENT

This instruction is set up in three main parts: OIS description and functions, operation, and configuration. It includes a Table of Contents, List of Figures, List of Tables and Index giving several options to locate specific information quickly. Appendices supplement information presented in the individual sections.

This instruction explains console operations and procedures referenced to standard operational displays provided with the console. Flexibility in display creation allows tailoring these displays or creating user-defined displays designed to meet specific requirements of any given plant. All operational capabilities inherent to the console and available through displays remain the same whether using standard or user created operational pages.

OIS Description and Functions

The OIS description and functions part of the instruction is intended to familiarize the reader with OIS functions and operating theory, and components that provide an interface to the console functions. A general understanding of the console is necessary to ensure optimum use of all available features and functions. The sections that make up this part of the instruction include:

INFI 90 SYSTEM AND OIS OVERVIEW (Section 2) introduces the console describing its function in the INFI 90 system.

KEYBOARD AND PERIPHERALS (Section 3) - describes the keyboard and peripheral devices that enable interaction with the console.

DISPLAY SYSTEM (Section 4) - gives an explanation of the display system including fixed screen elements and user created elements.

MENU STRUCTURE (Section 5) - gives a tree structured view of the configuration, utility, and operation menus. Provides a quick reference when accessing functions through menu selections.

Operation Operation explains the operator actions that can be taken to monitor and control a process, and explains console and INFI 90 system operations. The operations discussed occur after all display creation and console configuration have been completed. It also explains how to record process data. The sections that make up this part of the instruction include:

WINDOW OPERATIONS (Section 6) - describes the windows and window operations, and gives login, start-up, shutdown and reset procedures. This section also explains creating terminal windows for running terminal utilities.

PROCESS MONITORING (Section 7) - discusses methods of accessing displays. This section also contains information on tag operations, trend operations and operator configurable displays.

PROCESS CONTROL AND TUNING (Section 8) details the information presented in standard faceplate elements designed to mimic process devices, and the control operations performed through these elements. The console provides these elements as part of its symbol library on hard disk. The same information and capabilities available through each of the standard control elements can be incorporated into any user-created displays.

DATA ACQUISITION (Section 9) - details the information presented at standard data acquisition faceplate display elements. The console provides these elements as part of its symbol library on hard disk. The same information presented by each of the standard data acquisition elements can be incorporated into any user-created displays.

ALARM PROCESSING (Section 10) - explains alarm indications and processing procedures, and procedures to inhibit these alarm indications. This section also details the information and functions performed through the alarm summary page.

OIS OPERATIONAL INFORMATION (Section 11) describes the pages used to monitor certain OIS functions. The pages indicate the current operation being performed, and any operator actions required to continue processing of certain operations.

RECORDING PROCESS DATA (Section 12) describes the logging and archiving functions. These capabilities allow recording process and console related data as either hard copy printed reports or digitally stored archive data.

UTILITIES (Section 13) explains the utilities available. The utilities relate to both process operations and OIS operations.

INFI 90 AND OIS DIAGNOSTICS (Section 14) describes the pages that present INFI 90 system status information.

Configuration Configuration gives step-by-step procedures required to configure INFI 90 modules and set up each OIS function, component and

INTRODUCTION

peripheral for proper operation. The sections that make up this part of the instruction include.

INFI 90 SYSTEM CONFIGURATION (Section 15) explains the INFI 90 system configuration utilities available through the console. These utilities can be used to configure, save, verify, load and view INFI 90 module configurations.

OIS CONFIGURATION (Section 16) defines the console configuration requirements necessary to enable its operation and functions.

TERMINAL UTILITIES (Section 17) - explains the commands and utilities available to support OIS operation. This section also details the commands and procedures to save, restore and transfer configurations.

HOW TO USE INSTRUCTION

Read this entire instruction through in sequence before attempting to configure or operate the OIS console. It is important to become familiar with the entire manual content prior to configuring and operating to attain optimum and ensure maximum use of all OIS functions.

The manual is organized in three parts, and limits the information presented in each part to only specific items required to complete the desired task. The organization enables finding specific information quickly, and using this manual as a reference after becoming fully familiar with the console.

Be sure to read the notes in text. Notes provide

- Additional information
- Amplifying information
- Information that should be considered before performing a certain operation or function.

DOCUMENT CONVENTIONS

NOTE: The OIS console is case sensitive. For example, entering tag-name w not cal the tag TagName; they are two distinct names. Take note of case when entering data into the console.

This document uses standard text conventions throughout to represent keys, user data inputs and display items.

Convention	Represents
------------	------------

KEY	Identifies a keyboard key
	Example: Press ENTER

USER INPUT Indicates a fixed input that must be entered exactly as shown

Example Type **OISSTARTUP**

Display item Any item that displays on an OIS screen appears as italic text in this document.

Examples: *A OIS Configuration* (menu selection)
General Functions Menu (display title)
SELECT a Cell Item from the Menu
MSG 261 (messages)
Tag name or index number (prompt)

File name Any file names and file extensions appear as bold-italic text

Examples ***DISPL1.DU***
.DT

The document uses a specific set of text conventions for commands.

Convention **Represents**

BOLD Identifies any part of a command line that is *not* optional or variable, and must be entered exactly as shown

italic Identifies a variable parameter in a command line.

[] The brackets indicate a parameter is optional. Text within the brackets still follows the previously described conventions

Example **PUSH** *filename ext nodename* [L]

REFERENCE DOCUMENTS

This instruction provides operation and configuration information only Table 1-1 lists additional documents that relate to operation and configuration, and are referenced in this instruction

Table 1-1 Related Documents

Number	Document
I-E93 917-1	Sequent a Events Recorder (SER)
-E96-106	Operator Interface Station Hardware Manua
-E96-200	Function Code App cat on Manua
-E96-716	Software Logg ng Database Graphics (SLDG)
-E96-825	Software Global Database Manager (SGDM)

INTRODUCTION

GLOSSARY OF TERMS AND ABBREVIATIONS

Table 1-2 is a glossary of terms and abbreviations used in the instruction.

Table 1-2. Glossary of Terms and Abbreviations


Term	Definition
Analog	Continuous y variable as opposed to discretely variable
Block address	A number designating a specific function block within a module
Configuration	The act of setting up equipment to accomplish specific functions or a list of parameters associated with such a setup
Controlway	A redundant peer-to-peer communication path for status and point data transfer between intelligent modules within a process control unit
Cursor	A position indicator used on a video display terminal to indicate a character to be corrected or a position in which data is to be entered
Database	A collection of logically related information
Digital	A discretely variable signal usually having only two states ON or OFF
Digital value	The representation of a value by some number of digital bits
Display element	A discrete component used in creating a process display. Each item that appears on a display is an element. For example: station faceplate, trend display, alarm summary, dynamic symbols, dynamic values, etc.
EUD	Engineering unit descriptor. Unit of measurement associated with an analog process value
EWS	Acronym for engineering workstation
Exception report	Information update generated when the status or value of a point changes by more than a specified significant amount. Abbreviated as XR
Function block	The occurrence of a function code at a block address of a module
Function code	An algorithm which manipulates specific functions. These functions are linked together to form the control strategy
INFINET	Advanced data communication highway
MFC	Multi-function controller module. A multi-peer-to-peer controller with data acquisition and information processing capabilities
MFP	Multi-function processor module. A multi-peer-to-peer controller with data acquisition and information processing capabilities
Module address	A unique identifier of a specific device or a communication channel. Refers to Controlway or module bus address
Module bus	Peer-to-peer communication link used to transfer information on between intelligent modules within a process control unit
Node	A point of interconnection to a network
Node address	A unique identifier of a specific device or a communication channel. Refers to Plant Loop address or INFINET address
O/S	Operator interface station. Integrated operator console with data acquisition and reporting capabilities. It provides digital access into the process for flexible control and monitoring

Table 1-2 Glossary of Terms and Abbreviations (continued)

Term	Definition
PCU	Process control unit A node on the plant-wide communication network containing control and I/O modules
Plant Loop	Network 90 [®] data communication highway
SCS	Small computer system interface An I/O bus standard by the American National Standard Institute (ANSI) that defines the protocol and peripheral interconnect formats of a high speed parallel bus for use throughout the computer industry

NOMENCLATURE

The standard nomenclature convention for Bailey Controls consoles is

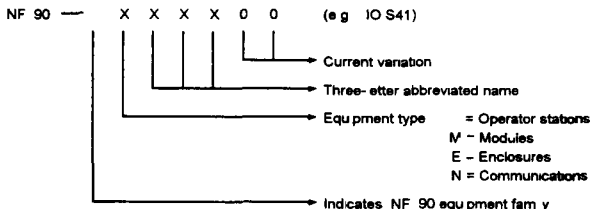

The standard nomenclature convention for other Bailey Controls equipment is

- Computer hardware starts with H, followed by a three-letter abbreviated name and variation
- Computer software starts with S
- Termination units start with NT, followed by a two-letter abbreviated name and variation
- Termination modules start with NI, followed by a two-letter abbreviated name and variation.
- Cables start with NK, followed by a two-letter abbreviated name and variation

On displays (e.g., system status displays), the nomenclature presented will be either a three letter abbreviation and variation (e.g., IIT02) or three letter abbreviation without variation (e.g., MFP). In either case, the family and equipment type identifiers do not appear

® Registered trademark of Emerson Bailey Group

CAPABILITIES SUMMARY

Table 1-3 summarizes the capabilities of the console

Table 1-3 Capabilities Summary

Software	Capability
Database	
Alarm comments	20 000
Tags	
1 MCP01 module	10 000
1 MCP02 module	30 000
Trends	10 000
Display only	10 000
External source (OAS node)	5 000
Save to disk (standard trends)	2 000
Displays (graphics)	1 500
Dynamics	
Dynamic bars per display	400
Dynamics per display	200
Tags displayed per console	800
Operator assignable trends	20
Operator configurable displays	25
Logging	
Custom logs (STANDARD TRIP and PERIODIC)	300
Event log (no. of events)	1 000
SOE	
Logs	160
Recorders	32
Peripherals	
Annunciator display panels	16 (4 per MKM02 module)
Keyboards	4
Logical relays	24
Logical tones	20
Printers	
Copy screen	4
Logging	4
Windows	4

NOTE Refer to the specifications in the *Operator Interface Station, Hardware Manual* for O/S power requirements, certification and operating environment. Also refer to the hardware manual for number and type of peripherals supported for a specific type of console (eg I/O S401 I/O S40D O C401 etc)

22 10 26 04 10 07

SECTION 2 - INFI 90 SYSTEM AND OIS OVERVIEW

INTRODUCTION

This section introduces the operator interface station (OIS) describing its function in the INFI 90 system. It provides a brief overview of selected INFI 90 system components, and explains OIS functions and operating theory.

INFI 90 SYSTEM OVERVIEW

The INFI 90 Strategic Process Management System is a distributed process management and control system. Using a series of integrated control nodes, the INFI 90 system allows monitoring and control of process variables such as flow rate, temperature and pressure according to a control configuration that the process (system) engineer or technician sets. A node is any device connected for communication on the plant communication highway.

Figure 2-1 shows a single communication highway system with INFI 90 nodes. This figure presents only specific nodes that relate directly to the operation and configuration procedures discussed in this instruction. Depending on the type of communication highway being used, a single loop can contain up to 250 individual nodes. Additional nodes can be other consoles, process control units, and local and remote network interface units (NIU).

Communication Highway

The INFI 90 system operates on either an INFI-NET or Plant Loop communication highway. The communication path established by the highway ties each system node together for

- Sharing control variables among modules in different nodes
- Monitoring operation of control schemes in control nodes
- Performing control actions at an OIS console or a computer connected through a network interface unit
- Configuring and maintaining PCU control schemes from an OIS console or computer
- Monitoring the status of system components from an OIS console or computer

The INFI-NET communication highway supports up to 250 loops with up to 250 nodes per loop, Plant Loop communication highway a single loop with up to 63 nodes.

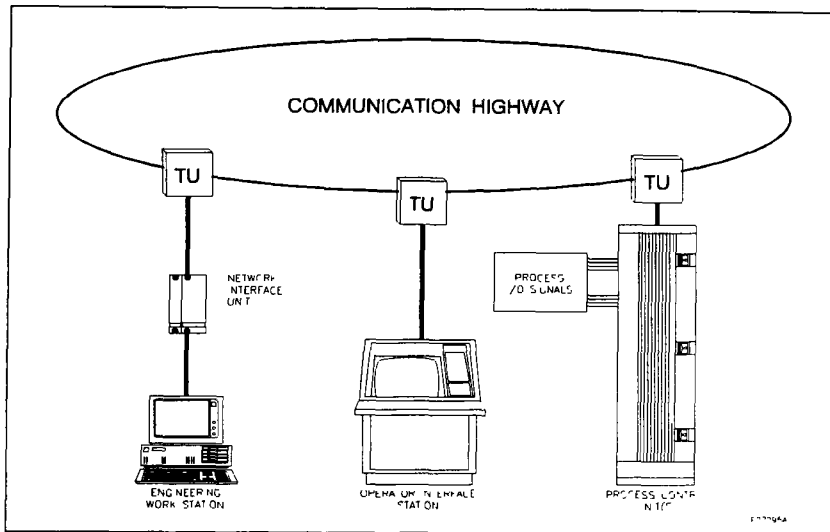


Figure 2.1 INFI 90 Communication Highway and Nodes

Process Control Unit

The process control unit (PCU) is the fundamental control node of an INFI 90 system. The actual process control and management takes place at this level. Predefined algorithms set in memory of a PCU control module establish parameters for process control. These parameters also determine the operation of functions such as alarming, trending, logging, and process monitoring and control.

PCU refers to either a group of INFI 90 control modules and their I/O modules, or any cabinet containing:

- Power panels
- Configurable control modules and their I/O modules
- Termination units or modules

A single cabinet may contain several PCUs each having their own communication interface modules, and each is identified by a distinct hardware address.

A PCU can be a stand alone control system containing control stations for system interfacing, and a configuration and tuning terminal (CTT) for configuring control schemes. Control and

indicator stations physically located on the process floor display process variables and allow process changes. A configuration and tuning terminal enables local building and modifying of control schemes (i.e., configurations) in PCU modules.

Individual control modules store configuration data in on-board, nonvolatile memory. A nonvolatile memory device retains data even after removing power. It is also possible to back up (store) and download stored configurations on floppy disks, or hard disk of a computer or console.

Termination units or modules directly connect process field device I/O signals to process control units in the INFI 90 system. The communication highway then links all process control units together in series. This enables process control units in the plant to share control functions and data from any other in the system. It also lets OIS consoles and computers communicate with any process control unit. The console requires this communication to acquire process values and to put process changes into effect.

Operator Interface Station

Using the OIS console, an operator monitors and controls overall plant operation from a single point. The number of consoles in a system varies depending on the overall control plan and size of a plant. A console enables monitor and control of an entire plant process through its color graphic displays and pushbutton keyboard. There are many other operator interface devices that the OIS console enhances, for example analog control station, analog indicator station, and digital logic station.

The process engineer, technician or maintenance person can use the console to configure and maintain control schemes throughout the plant system. The console is able to read and display the configuration of any control module in the system. The engineer can then modify the configuration, having the console write the modifications back to the module. The module configuration can be read then saved on disk (hard disk), or read from disk then written back to a module.

Using the console, system management personnel can list process (tag) details, change various alarm limits, affect tuning functions, lock out plant control by password, and manipulate files by various file management commands. The console has on-line utilities, on-line documentation capabilities and diagnostics.

Network Interface Unit

Network interface unit (NIU) is a general term used to describe INFI 90 modules that provide an interface or access to the communication highway. A network interface unit is a group of modules that provide a link between separate communication highways or an interface to the loop for consoles, computer systems or other networks.

INFI 90 SYSTEM AND OIS OVERVIEW

Figure 2-1 shows an interface unit connecting an engineering work station (i.e., computer) to the loop. For computer interfacing, the interface unit is either an INFI-NET to computer interface (ICI) or Plant Loop to computer interface (PCI) depending on the communication highway. Although not shown in the figure, the console also has a dedicated interface unit consisting of multibus modules.

Through a network interface unit, a computer or console has access to any node on the loop. This connection allows gathering process information, making process decisions, and performing or recommending process changes. The interface unit does not directly display any information.

A network interface unit is an automatically operating device. A computer or console performs process monitoring and control based on internal calculations and program routines set in the interface unit. The interface unit also serves as a data acquisition point for the host computer or console. The console downloads its database information during start-up to establish the operations of its own interface unit.

The network interface unit is programmable during configuration, but the operator does not use it directly to interface with the system. A network interface unit reinforces INFI 90 data processing capability. The console collects process data and implements operator control actions through its interface unit.

An engineering work station (EWS) supports database management and display creation for the console. It also provides additional utilities and engineering tools used in INFI 90 management.

OIS FUNCTIONS

INFI 90 control modules perform the actual process control through control schemes loaded in module memory. A process engineer creates these control schemes by constructing a control configuration made up of function codes, and entering this configuration into a PCU module. Function codes are software algorithms that define individual calculations and functions available in a module. These function codes also determine and are related to all operations of the console. The process engineer arranges a set of function codes in a logical order to define the control responsibilities of a module.

Functions of the console enhance the INFI 90 system and PCU modules by providing a single point for managing and configuring process control schemes throughout the entire plant, and for processing alarms and making control changes as necessary. The console receives its reports, point values and alarms in exception report messages from PCU modules. An operator can initiate process control through operator actions at a console. The

process engineer can use the console to create or modify control schemes.

Operations Interface

As an interface to the process, the OIS console supports monitoring and control through graphic displays. These displays quickly and effectively communicate equipment status and process state. The displays also provide a consistent method to interpret process status and to respond to unusual conditions.

The process display is configured within the window display area with any of 64 available colors. Each display can use dynamic elements for variables and symbols and static elements allowing considerable information to be condensed into a display. Graphic elements for process dynamic data and graphic elements for static data can be combined with predefined or user-created symbols to form a complete display. This allows setting up detailed process schematics, faceplates, and summary displays for monitoring and control.

The console does not have a set display hierarchy for user created displays. This allows creating displays to suit individual processes and applications. The process engineer sets up the logical connections between displays.

The operator keyboard is the main operator interface to the console and the process. Optional input devices such as annunciator display panels can be added to enhance operation.

Security Management

Security features built into the OIS console prevent unauthorized access to console functions. Key locks and password security features limit access to specific process displays, variables, control points, configurations and utilities. Password security can be tailored to plant needs. Security can be set up to accommodate individual personnel's responsibilities and specific types of operations.

Passwords permit controlling access and operation of functions at a higher level than key lock by defining access rights for individual users. Each password defines configuration, control, tuning, monitor, alarm management, log operations and window access rights. Personnel must log in at the console with the appropriate password once password security is established.

Database

The tag database is the foundation for all functions supported by the OIS console. Each tag in the database enables communication with a point in the process, which is required to perform any function. The database includes specific information for each process variable that the console is to allow control, or to display,

monitor, trend, log and archive The database can be created or modified through OIS functions, or off-line

A trend list defines variables used in trending functions These tags allow the console to locally acquire data collected by the INFI 90 distributed trending system, or remotely from an open access system (OAS) This database includes specific information required for proper display and logging of historical, trended data

Database summaries - the console is able to search its tag and trend list for specific attributes and generate a printed listing of this data. For example, all tags with hardware addresses in a specific PCU could be listed in order of their module and block address.

Tag status summaries - the console provides displays or printed listings of all tags with a specific operating status Tag summaries can include all tags, or only tags with

- Acknowledged alarms
- Unacknowledged alarms
- Manually inhibited alarms
- Off scan status
- Suppressed status
- Bad quality
- Suspect quality
- Alarms
- Manually substituted values
- Red tag status

Alarm Management

The OIS console monitors alarm limits defined in each control scheme to notify an operator of abnormal conditions Extensive alarm management capabilities allow quick operator response to these conditions. Alarm management sets up standard indications that help to ensure proper operator response to process alarms, and minimize nuisance alarms

Acknowledgment any display can be set up to contain an alarm status field, which associates with a process value or state on that display When an alarm occurs, this field changes to identify the type or level of alarm The operator must perform keyboard actions to acknowledge the alarm This acknowledgment is the first step in alarm processing An acknowledgment stops alarm indications the console uses to notify an operator of an alarm, such as a flashing alarm group indicator status field or dynamic symbol, and an alarm tone

Alarm acknowledgment can also be sent over the communication highway to acknowledge the alarm at other consoles. Acknowledgment can be configured to occur based on the condition of another process variable.

Multiple-level alarms - the INFI 90 system provides support for distributed data acquisition functions including multiple-level alarms and deviation alarm levels for process variables. This is a function of the control scheme set in a PCU module configuration. The console monitors the alarms to present specific indications to an operator. The indication identifies each alarm level as the process variable reaches a set alarm threshold.

Variable alarm limits - alarm limits can be configured to track automatically based on specific process changes. The multiple-level alarming capability still applies, and thresholds adjust according to the process variable being tracked.

Alarm comments - an alarm comment field of up to 64 characters provides an operator with additional information for process alarms. An alarm comment can be entered for each alarm level or alarm state related to a process variable. The comment can describe, for example, the purpose of the alarm or operator actions that should be taken to correct the alarm. Any display can present an alarm comment associated with a tag.

Alarm groups - each tag in the database can be assigned to any one of 99 alarm groups. This allows arranging an area of related process points into a group for easier management. When an alarm condition exists for a process point, its alarm group number appears at the top of the screen. It flashes until an operator acknowledges all alarms within that alarm group. The alarm group status indicator line is a fixed display attribute that appears at all displays.

Alarm indications are set for each alarm group individually. Each group can have a distinct alarm tone, and a specific external alarm relay. The alarm tone provides an audible indication, the alarm relay can be used to trigger an external alarm annunciator.

Alarm priorities - there are eight priority levels that allow sorting alarm entries that appear in an alarm summary by priority level. Priority can be set for each alarm level, an alarm state, return to normal condition and bad quality when used as an alarm.

Alarm summary display - an alarm summary display shows changes in alarm state and the time of occurrence for all or specific tags depending on its configuration. The entries in this summary appear arranged chronologically or by priority level. A summary can contain up to 1,000 most recent alarms. The total number of current outstanding alarms, and the number of unacknowledged alarms appear at this page.

INF1 90 SYSTEM AND OIS OVERVIEW

Single key access to a primary display for any alarming point listed in the alarm summary is a standard feature. The primary display is the screen that the operator uses to initiate actions to correct the alarm.

Alarm summary displays are configurable. A given alarm summary can contain all alarms, unacknowledged alarms only, or acknowledged alarms only. Besides the types of alarms, an alarm summary can be limited by alarm groups or alarm priorities. A summary can list alarms for all or only specific alarm groups, or all or only specific alarm priorities.

Alarm summary report - the alarm summary report provides a snapshot printout of all alarms currently being saved for alarm summaries. The printout is similar in appearance to the alarm summary display. Alarm summary reports can be scheduled to print periodically or after being triggered by a process event.

Alarm inhibiting - the console provides an alarm inhibiting option to manually turn off alarm indications for individual tags or alarm groups. The console does not sound an alarm tone, trigger an alarm relay nor require acknowledgment for inhibited tags. Inhibited tags are not added to the alarm summary and event log. Automatic inhibiting of alarms can occur triggered by specific process conditions. In this case, the inhibiting occurs based on the condition of another process variable.

Trending

Trending at the console offers a historical perspective of process conditions for analysis of current operations. The console displays this data referenced to time, or as a function of other process variables. The data can also be printed.

Trend Display

The console provides standard trend displays of varying sizes. The standard display element supports up to five trended variables with changeable display range, time span and resolution. Several functions inherent to trend displays allow moving, expanding, shrinking and magnifying the display through keyboard actions. Any changes affect the display only and remain in effect only until exiting the display.

Move time cursor - when the time cursor is activated and moved along the trend line, the system digitally displays the historical value indicated by the position of the time cursor.

Modify range - allows changing the high scale and low scale limits for each trend line displayed individually. The current data segment and any other data that the cursor is moved to uses these set scale ranges.

Pan - shifts the display back in time to show an historical perspective of the process variables.

Zoom - expands or compresses the time span of the element for easier trend analysis.

Magnify expands the time scale for a limited section of the trend display to determine the exact time a process disturbance occurred

XY Graphs Trending can incorporate XY graph elements that compare up to five process variables as a function of a sixth, or five pairs of variables whose x-coordinate position is determined by one process variable, and y-coordinate position by another

Operator Assignable Operator assignable trends allow trending any tags in the tag database, or function blocks in a PCU module control scheme not defined as tags. This function is separate from trends defined in the trend list. Up to 20 operator assignable trends can be configured to help analyze specific process events. The console updates these trends at two-second intervals and stores up to two hours of data.

Logging

The OIS console logging features automatically document process operations summaries, or specific events as they occur. The console has extensive logging capabilities to create custom, sequence of events and system events records.

System Events Log The system events log provides a sequential list of process and system alarms, process events, operator actions and operation notes. A system events log can print continuously, periodically or on demand. The console can save a maximum of 1,000 of the most recent events on the hard disk for periodic printing, and archiving for long term storage.

Custom Logs Custom logging capabilities create spreadsheet format summaries of two types: Periodic or system event triggered. The periodic log produces operations summaries hourly, daily, weekly or yearly. The event triggered log produces summaries of a particular operation (e.g., batch report, pre-fault and post-fault log).

A defined time or process event, or operator demand triggers data collection and printing for each report. Printing can also occur after the log completes a scheduled collection period. The console allows saving on its hard disk a maximum of nine of the most recent generations of each configured log. Some standard custom logs include trend, trip and snapshot logs.

Trend log collects and prints trend data at specified intervals for up to 20 trend tags, with up to 250 values for each trend. Intervals for data collection range from one collection per minute to one collection in a 24-hour period.

INFI 90 SYSTEM AND OIS OVERVIEW

Trip log - provides a history of up to 20 trend tags. A maximum of 250 values for each tag composed of pre-event and post-event data can be included in a trip log.

Snapshot log - collects and prints the current values of up to 250 tags at log completion time. Snapshot logs can be tag event or time triggered

**Sequence of
Events Log**

Sequence of events logs access data collected by the Bailey Controls sequential events recorder (SER). The sequence of events report generated by a recorder provides one-millisecond resolution time tagging for critical event data time of occurrence. Report types include scheduled standard, pre-fault, post-fault and standard reports, and operator initiated summary reports

Archival Storage and Retrieval

The OIS console provides for digital storage of trends, logs, system events, PCU configurations and tag data in any combination of information on any supported archive media. The console supports archiving of any data type to magnetic tape (i.e., TK50 cartridge) or optical disk, or logs and events to an open access system (OAS). Contact Bailey Controls Company for more information about the open access system.

Archived system events and log data can easily be read back into the console for printing. Trend and PCU configurations can be read back into the console for display and PCU management respectively. Database summaries derived from archived tag database snapshots can also be printed.

Information storage - the console automatically transfers archival information it temporarily stores to its hard disk to removable archive medium or an open access system. The console stores or indicates the necessity to force storage of data before the temporary storage area becomes full and archived data loss occurs. A message displays to identify required operator actions when the archive medium is approaching capacity. The period of data archived for process history depends on the amount and types of information being archived.

Information retrieval - archived information to be retrieved is transferred from the archive medium to hard disk. An open access system provides the capability to retrieve any data (logs and events) archived to the open access system from the console, therefore, data cannot be transferred back to the hard disk in this case. The console transfers only information for a specified time period. A retrieval utility searches the time tagged archive files for the required time period. Retrieved trends can be displayed, manipulated and copied.

INFI 90 System Status and Diagnostics

The OIS console provides system and node status displays that show status for each device in the INFI 90 system. Status is available for all control, data acquisition and communication modules, consoles and power supplies in the system. The console provides module problem reports used to diagnose faults down to the individual I/O level for ease of maintenance.

The console also provides a set of diagnostic functions specifically designed to facilitate the diagnosis of communications related problems. These functions provide diagnostics information on a system-wide basis. The functions help to reduce the time and effort spent diagnosing communication related faults, and to minimize the need for time consuming visual inspections of nodes and modules to determine the origin of a communications problem.

INFI 90 System Tuning and Configuration

The OIS console allows tuning and configuration of the INFI 90 modules over the communication highway. Tuning displays are available for control loops. The tuning display includes a manual/auto station for the loop, a trend display for fast monitoring of control output (CO), set point (SP) and process variable (PV) during tuning, and a PCU block detail display for adjusting loop tuning parameters.

PCU module configuration and management utilities also support both module configuration and tuning. Key lock and password security protect against unauthorized tuning and configuration changes.

Display Configurator

Displays are designed on the Bailey Controls engineering workstation (EWS) using an interactive, command oriented display generator called screen oriented display generator (SODG). This display generator combines free form drawing and text configuration capabilities with libraries of symbols and display elements to provide an efficient engineering tool. The SODG utility is part of the Personal Computer Software, Logging, Database and Graphics (SLDG) software package.

The console and SLDG software include a library of standard symbols most commonly used in display design. These symbols are designed into OIS displays as either static or dynamic symbols. Provisions are included for separate user symbol libraries. This library permits custom symbols to be established and saved for repeated use.

INFI 90 SYSTEM AND OIS OVERVIEW

An engineering work station running the SLDG program and connected to the INFI-NET communication highway has the ability to create then transmit displays to an on-line console. After receiving a transmitted display, the console automatically processes the display, which is then available at the next display call up. Display transmission does not interrupt normal OIS operation, and does not require any special setup.

Operator Configurable Displays

Operator definable and configurable displays allow the operator to easily group critical combinations of process variables for effective process management during abnormal circumstances. Up to 25 displays can be configured in a menu driven fashion. Each operator configurable display can include standard faceplates of all tag types (e.g., manual/auto station, device driver), trend display elements and alarm summary elements. If desired, these displays can be made permanent for use in normal operations.

OIS OPERATING THEORY

The console processes information from messages it receives over the communication highway, and performs control through messages it sends on the highway. It does this through its multibus modules that provide the interface to the loop. These modules make up the network interface unit of the console.

During start up or reset, the console downloads its database list to the interface unit. The database provides information the interface unit needs to establish a communication route to individual points in the process. Once downloading is complete, the interface unit both transmits and receives messages as directed by the console. The interface unit also provides data storage until the console is able to process any received data. Communication modules handle the data transfer between PCU modules and the communication highway.

Message types include

- Data transfer
- Exception reports
- Process control
- Trend data
- Module status
- Tuning and configuration

Data transfer messages allow the console to read analog real values or digital states, and the status of these points within a

process control scheme. The console can then display these process variables on its screen or store them on disk for later viewing. This is a request/reply message sequence. The console sends a request data message to a PCU module, then the PCU module sends a reply with the requested data

Exception reports appear on the screen as dynamic values, alarms and state changes. The console first generates a message to establish an exception report route between it and a PCU module. Once established, exception reporting becomes automatic. The console receives PCU module exception reports periodically to update values, after a process point reaches a defined alarm limit or changes state, or a significant change in value occurs. There are several alarm indicators that can be communicated in exception report messages.

The console generates process control messages after an operator initiates control actions through the keyboard. Control can be performed through the keyboard only, not the display (i.e., mouse). These messages allow the operator to exercise station, remote control and device driver control from the console.

Trend data messages allow the console to acquire historical process information collected by the INF 90 distributed trending system. This information is necessary for process trend analysis (trending) and process evaluation. A trend data message initiates a request/reply data transfer sequence. The console sends a request for trend data, a PCU module replies with the requested, collected, time stamped data.

The OIS console generates module status request messages to read then display INFI 90 module status and problem reports. The status of most PCU modules can be requested. A module status request from the console causes a module to reply with its status bytes and a detailed problem report.

NOTE: Not all PCU modules are capable of sending status byte or problem report information.

The console uses tuning and configuration messages to initiate its inherent PCU module management capabilities. These capabilities include reading, writing, deleting and tuning function blocks.

The console permits access to the INFI 90 system for three purposes:

- Control engineering
- Plant operation
- System troubleshooting

INFI 90 SYSTEM AND OIS OVERVIEW

Control Engineering

The OIS console access to PCU module configurations enables the following functions for creating and maintaining module configurations

- Change module operating mode
- Modify a configuration (e.g , add, modify, tune and delete)
- Copy a configuration from module to disk (save)
- Copy a configuration from disk to module (restore)
- Verify configuration against disk
- List module configuration to printer
- Red tagging

NOTE: Red tagging is for status purposes only and does *not* prevent operation of equipment. Red tag status communicated to the console alerts personnel to equipment or system problems which could cause damage or injury. It applies to specific function blocks defined with controllable tags such as DAD G DANG DD MSDD RCM RMCB STAT ON and TEXTSTR type tags.

The CONFIG/TUNE key lock switch and password security protect against unauthorized use of these module configuration capabilities.

Plant Operation

The OIS console lets the operator monitor the process and take control action when necessary. Once the system is configured, exception reports that contain the process variables for selected control scheme points travel to the console from other nodes over the communication highway. The console receives this data and displays it on the screen. Operator actions at the keyboard automatically send messages to the PCU modules to initiate control action. PCU modules directly interface with the process after receiving information entered at a console.

NOTE: Taking the console offline or a console failure in the NF 90 system has no effect on control scheme execution by PCU modules.

Exception reports update process values displayed by the OIS console. The engineer determines the amount of change that is significant, maximum and minimum limits for alarming, and maximum and minimum time (in milliseconds) for exception reporting during module configuration. The exception report process enables the console to display current data without continuous polling.

PCU control modules can send exception reports for individual variables or a collection of variables from PID (i.e., process variable, set point and control output) and on/off control functions (e.g., remote control and device drivers). A hardware address of

the function block originating the report identifies each exception report. This address contains the loop, PCU, module and block number.

A tag configured in the console represents each exception report. The engineer defines each exception report item the console monitors as a tag during OIS configuration. Tags are defined points in the INFI 90 system that the operator can monitor or control.

The console provides a structured view of the plant through its operational displays. Once configured, the operator initiates all monitoring and control actions through these displays and the keyboard. It uses two main categories of operational (data) displays: Summary and status, and process monitor and control.

SUMMARY AND STATUS DISPLAYS

The summary and status displays provide a broad view of plant processes. The current information relating to INFI 90 equipment and alarms, and console operations can be viewed at these displays. The console provides standard summary and status pages which can be used as is or user-configured. Standard displays of this type are usually in a tabular format. Most are assigned dedicated keys, however, others must be assigned to keyboard assignable function keys for easy, one-key access.

Alarm summary - reviews the status of up to 1,000 of the most current alarms. The number of alarms that are saved and appear in a summary is configurable.

Display summary - can contain a complete list of all displays in the system. This display can enable an operator to view a complete list and call each display in the list through keyboard selections.

Tag summaries - presents the current database status for a selected tag or group of tags. These summaries can be printed or displayed.

Operating parameters - identifies the current operating conditions and parameters for a selected tag. It displays the tag type, hardware address and alarm limits. It can be used to control reporting abilities (i.e., scan on or off), inhibit alarming, substitute values and view the primary display for a tag. In some cases, the page has selections for viewing the block details, tuning and module problem report page depending on the tag selected. These are all console level operations. In other cases, the page presents options that directly control the operation of a function block in a PCU module.

Log status - shows the type, configuration parameters, printing status and current collection status (i.e., active or inactive) for all types of custom logs and sequence of events logs. It also allows

activating or deactivating log collection, and canceling queued log prints

PROCESS MONITOR AND CONTROL DISPLAYS

The operator performs process monitoring and control through graphic displays designed to represent the overall plant process, detailed process unit or area, and individual plant devices. Displays can be configured as static informational pages or interactive, dynamic operational screens. They provide detailed information on process variables and manual control of process points.

Process overview - provides live process information to support control actions through schematic format displays (i.e., process mimics). These interactive displays can contain dynamic symbols, dynamic process variables, and display and control select elements.

Group display - provides real-time process information to support control actions. It consists of a group of related faceplate format elements (i.e., device mimics). Each faceplate represents an actual process control point or variable. This type of display is normally called from a higher level graphic display.

Process detail presents a combination of graphic process mimics and faceplates. This type of display provides a more detailed view, and process control of specific related process points. It combines the process mimic and device mimic capabilities into a single display. A process detail display is also normally called from a higher level graphic.

Block details display gives access to a configured block in a PCU module, and displays the specifications and operating parameters for that block. Parameters affecting the operation of a PCU module control scheme can be modified through this page.

Tuning display - provides a display for tuning, trending and controlling a single station element and the block details for that element. Effects of any changes made through this display can be viewed at a trend graph presented as part of the display.

System Troubleshooting

A series of system status pages allows monitoring the operational status of INFI 90 equipment on the communication highway. Each status page level can be used to narrow a problem down to a specific module. The status information presented for a particular module is in the form of module status bytes and problem reports.

System overviews operational status of INFI 90 equipment on the loop, displays both normal or problem conditions.

Node - reviews the status of each module within a process control unit, displays both normal or problem conditions

Module - gives a detailed status review of a single module. Monitors and displays the status bytes and problem reports of individual modules.

Module firmware - can be used to acquire firmware levels for modules in any given process control unit. This display also presents the type and current mode of each PCU module

Topology summaries - can be used to overview the communications status of a selected loop and individual nodes of the loop.

OIS TRENDING

The OIS console provides the capability to gather data collected by the INFI 90 distributed trending system either locally or remotely. PCU modules perform the actual data collection and storage of data. The console gathers and presents the data in trend or XY plot displays, records the data in custom logs, or archives the data to storage media for later analysis of process operations.

Distributed Trending

Through a trend block, a trending capable PCU module performs the initial data compression and calculations for a trended process point. A trend block, and not the attributes set during trend definition, determines the actual values a module sends to the console.

The console can collect data from two different trend blocks. A standard trend uses function code 66 (FC 66) to perform its data collection. An enhanced trend uses function code 179 (FC 179) to perform its data collection.

STANDARD TRENDING (FC 66)

Any analog exception reporting function block can be trended using the standard trend block. A digital point can also be trended but requires some additional setup and signal conditioning in the control scheme.

A trend block determines how often the PCU module collects data for a trended point. For a standard trend, it can be gathered in two ways depending on the selected resolution in the control scheme of the module. Resolution refers to normal or fast trending. Normal trending stores values at one-minute intervals, fast trending stores values at 15-second intervals.

Another characteristic determined by the PCU module control scheme is the mode of collection. For a standard trend block the collection modes are sample, maximum, minimum, sum or average. This determines the final value that a module sends to the

INFI 90 SYSTEM AND OIS OVERVIEW

OIS console based on the values seen during the resolution in interval (i.e., 15-seconds or one-minute).

Sample mode - the module saves a value every 15 seconds or one minute

Maximum or minimum mode - the module saves either the maximum or minimum value seen during the time interval

Sum mode - the module calculates the total of all values collected during the interval

Average mode - the module calculates the average of all values collected during the interval

ENHANCED TRENDING (FC 179)

An enhanced trend provides additional capabilities beyond those available in the standard trend block. It provides flexibility in both types of data that can be trended, and in sampling resolution. The function blocks that the enhanced trend block allows direct trending of include

- Analog exception report (FC 30)
- Digital exception report (FC 45)
- Remote control memory (FC 62)
- Remote manual set constant (FC 68)
- Control station (FC 80)
- Device driver (FC 123)
- Multi-state device driver (FC 129)
- Remote motor control (FC 136)
- Data acquisition analog (FC 177)
- Data acquisition digital (FC 211)

The enhanced trend block still determines how often the PCU module collects data, but it provides greater resolution in its collection. An enhanced trend block can collect and store data at a resolution of one sample per second

NOTE The console currently only supports sample mode for enhanced trends

Another characteristic determined by the PCU module control scheme is the mode of collection. For an enhanced trend block the collection modes are **sample**, **maximum**, **minimum**, **sum**, **average** or **range**. This determines the final value that a module sends to the OIS console based on the values seen during the resolution interval.

Sample mode - the module saves a value based on the input sampling time set in the PCU module control scheme.

Maximum or minimum mode - the module saves either the maximum or minimum value seen during a specified time interval (statistical time period).

Sum mode - the module calculates the total of all values collected during the interval

Average mode - the module calculates the average of all values collected during the interval

Range mode - the module calculates the value as maximum minus minimum samples collected over the interval

NOTE Enhanced trending requires INFI-NET communication on highway

Local Trend Data Collection

The OIS console requires a local trend to be defined in its database to directly access data collected by a PCU module trend block. Performing trend definition at the console or through the off-line SLDG program establishes a list of trends from which the console is to collect data. A trend tag references the trend block in a PCU module configuration. This allows the console to connect a communication route between itself and the trend block.

The OIS console collects data from PCU modules over the communication highway. Once the console establishes a communication route to a trended point, it initiates and directs trend data poll messages to the PCU module to collect data. The module then replies with the requested, collected, time-stamped data. The console establishes communication with a point during start-up or reset.

A PCU module capable of trending can store approximately 30 minutes of collected trend data for a standard trend. The console polls the module prior to the 30 minutes to collect data and prevent any data loss. For an enhanced trend, the module sends a trend data notification message to indicate that the console needs to poll the module for trend data. The console then responds to the notification by polling the module for the data. In this case, there is no fixed time of collection for the console. A PCU module does *not* send any trend data until the console requests it.

For standard trends, trend data loss begins to occur at a console if it is turned off for more than 30 minutes. When data loss begins to occur at the console for enhanced trends depends on the collection resolution of the trend.

The console stores the data received after polling a PCU module in a trend data file (.TR) on its hard disk. The file can maintain up to three months of data for a standard trend. For enhanced

INFI 90 SYSTEM AND OIS OVERVIEW

trends, the maximum number of events saved to disk as set during the definition of the trend determines the amount of data stored in a trend data file. Archiving functions allow storing and retrieving this data indefinitely

NOTE Currently enhanced trends cannot be archived

While viewing a trended variable, the console polls the PCU module almost continuously to collect trend data. It updates the display every 15 seconds or one minute for standard trends, or at the resolution interval defined for enhanced trends

Remote Trend Data Collection

For a remote trend, the console makes a request to an open access system for historical trend data. The open access system gathers data from the INFI 90 distributed trending system in the same way as local data collection by the console. The open access system has its own trend tag list to access data collected by PCU modules. A trend must be defined in both the open access system and OIS database to perform remote trend data collection.

Remote trending is for display purposes only. The console does not store any data for remote trends. The open access system provides the historical data storage for display, logging and archiving purposes. When viewing a remote trend at the console, the console first makes a request for historical data to the open access system, not a PCU module. It then updates a trend display by implementing local data collection while the trend remains at the screen. After exiting the display, local data collection terminates. The console collects data from an open access system over the DECnet network, not the communication highway.

TIME-STAMP

Communication highway time synchronization establishes a common system time (absolute time) for all nodes on the loop. Functions that collect and time-stamp data use this system time as their time-stamp reference value. PCU modules performing trending time-stamp collected data with this system time.

A node designated as the time-sync master maintains system time for all nodes on a loop. The time-sync master maintains the time by issuing a module time-sync message directed to the communication modules of each node on the loop. The communication modules verify then relay the time in this message to their local modules. A module processes a time-sync message only while in execute mode. A communication module sends a time sync message to its modules.

- When a module first starts up.
- After a module changes from configure to execute mode.
- After it receives a new time sync message.

A module that is sent a set time command message from a communication module must reply to acknowledge receipt of the message. If the reply is not received by the communication module, the time-sync sequence repeats.

The console can become the time-sync master on a loop. Normally, the console becomes the master when the *Set Time and Date* function is used to set the system time to Greenwich Mean Time (GMT). If there is more than one console in the system, the consoles perform an arbitration process to establish a time-sync master. This allows the console with the most accurate external clock to assume the responsibility of maintaining system time. Refer to **SET DATE AND TIME** in the *Utilities* section for further explanation.

USER TASKS

A user task interface (UTI) gives the capability to create user-written programs to access INFI 90 process data. The user task interface can be used to implement such things as custom calculations or custom reports that encompass a small number of tasks.

NOTE The UTI function is intended to implement moderately sized user-written programs, not as an INFI 90 interface for large third party or user systems such as plant wide historians and data analysis packages. Bailey Controls Company offers other platforms for use of these additional entities.

The user task interface provides a means to extract INFI 90 process data from the console through specialized user-written programs. Also, it provides an environment that allows the programs to employ the full capabilities of the VAXstation running the VMS operating system. It does this while safeguarding console operations as much as possible from either intentional or accidental interference. Contact Bailey Controls Company for more information about the user task interface and user-written programs.

A user program can be run from the UTI account on the host VAXstation. The activation of a user-written program from the console can be tied to.

- An assignable function key
- An ADP pushbutton
- A touch point
- A key select (i.e., **A-I**)

Refer to *User Task Definition* in the *OIS Configuration* section for OIS requirements for user task configuration, and *Keyboard Configuration* for specifics on keyboard and ADP assignments.

SECTION 3 - KEYBOARD AND PERIPHERALS

INTRODUCTION

This section describes the keyboards and peripheral devices the operator interface station (OIS) uses to enable and enhance its process monitoring and control capabilities

KEYBOARDS

The keyboard is the main communication interface between the operator and the INFI 90 system. During operation, the operator uses the keyboard to perform process monitoring and control. It enables entering process changes and values, processing alarms, and selecting displays. The process engineer or technician uses the keyboard to define operating parameters enabling console operation, and also for INFI 90 system troubleshooting and module configuration.

NOTES When the term keyboard appears in this instruction without a qualifying mylar or auxiliary it refers to the mylar keyboard.

The console supports two types of keyboards: A standard mylar keyboard and auxiliary engineering keyboard (QWERTY style). Both types provide the same access to OIS functions. The layout of each type of keyboard is different to facilitate specific kinds of operations. The mylar keyboard is designed for operating ease when performing normal operation. A QWERTY layout engineering keyboard is for ease of data entry and configuration.

This section describes each block of the standard mylar keyboard identifying its keys and their functions. Refer to Appendix A for auxiliary keyboard key mapping. Figure 3-1 shows the layout of the standard mylar keyboard.

Keyboard Operation

The console employs two very different operator input device interface channels: Keyboard interface and XTM window interface.

Keyboard Interface

The keyboard interface allows operator input through the mylar keyboard. It supports annunciator display panels (ADP), key lock assembly, and tones and relays. Using this interface allows assigning a keyboard to a window using SWITCH CRT.

X Window Interface

The X window interface provides full X window capability through an X keyboard and a mouse. Both the mylar keyboard and auxiliary engineering keyboard are X keyboards. The X keyboard can

TM Trademark of Massachusetts Institute of Technology

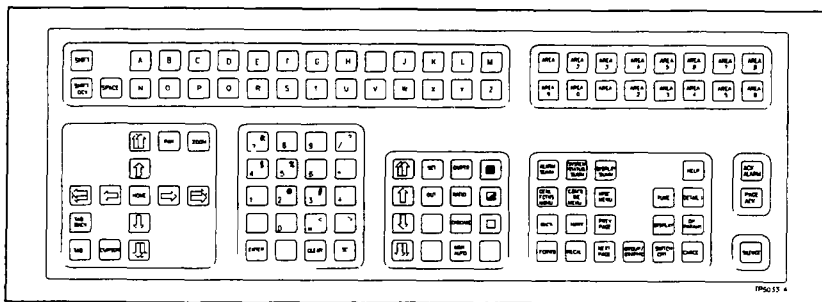


Figure 3-1 Mylar Keyboard

be assigned to any window that appears on the screen directly connected to the same station as the keyboard. Placing the mouse pointer anywhere in the window and clicking the left mouse button assigns the window to the keyboard. The title bar of the window changes color to indicate that the window to keyboard assignment has been made. In the X environment, this is referred to as **setting input focus**.

The process engineer identifies keyboard type during OIS system configuration as either MKM2 or XKBD. Refer to **OIS System Configuration** in the **OIS Configuration** section for further details.

NOTE The console cannot be run without a keyboard and mouse connected.

MKM2 KEYBOARD TYPE

To define a keyboard as an MKM2 type requires that the keyboard be connected through an IIMKM02 keyboard interface module. A keyboard must either be connected to a main console or to an auxiliary terminal tied to this main console to be defined as an MKM2 type. The auxiliary terminal must also use an IIMKM02 keyboard interface module to connect its keyboards.

The interface module both connects and enables a keyboard (mylar, IIAKB02 or IIAKB03 type) and supported peripherals. The IIMKM02 interface module has two cables that connect to the VAXstation to allow the mylar keyboard to utilize X device functions. In this hardware configuration, the mouse connects to the VAXstation through a keyboard interface board, **not** to the VAXstation directly.

Both the mylar keyboard and auxiliary engineering keyboard can be assigned to any window on their home screen by setting input focus with the mouse. Both keyboards also can be assigned to

the four windows generated by the console of which it is a part. The assignment of the mylar keyboard to these windows is automatically done when using **SWITCH CRT**

All mylar keyboard keys are mapped on the IIAKB02 or IIAKB03 auxiliary engineering keyboard. Refer to Appendix A for the mapping, and an explanation of certain key functions.

XKBD KEYBOARD TYPE

On a main console, the XKBD keyboard type is for using the IIAKB02, IIAKB03 or LK-201 keyboard connected directly to the VAXstation without use of an IIMKM02 interface. In this case, the auxiliary engineering keyboard still maintains all the mylar keyboard functions, and can be assigned to the four windows generated by the console of which it is a part. The keyboard also can access all windows on its home screen by setting input focus with the mouse.

The XKBD keyboard type is also for any other node not tied to the main console that is to receive a window from the main console. For example, a personal computer, a work station or another main console is defined with an XKBD keyboard type. Or, an auxiliary terminal of another main console that is to receive a window is defined with an XKBD keyboard type. Refer to Appendix A for IIAKB02, IIAKB03 and LK-201 keyboard key mapping.

Keyboard Error

The console monitors the status of its keyboards. If it cannot communicate with a keyboard for any reason, a flashing **A** appears at the title line in the upper right corner of the OIS application window. This indicates an operator action request and notifies the operator that some action is required. A message at the operator action requests display will indicate the problem keyboard. After the problem is fixed, the keyboard can be put back into operation by acknowledging the message at the operator action requests display. Refer to **OPERATOR ACTION REQUESTS** in the **OIS Operational Information** section for procedures to process a request.

KEYBOARD LAYOUT

The mylar keyboard is a flat panel divided into blocks of related overlay pushbutton keys. Pressing any key provides both tactile and audible feedback. Each block of keys relates to a specific type of operation (see Figure 3-2).

This section provides a brief description of key functions intended only as a quick reference. Other sections of the instruction provide more information for those keys requiring additional explanation.

KEYBOARD AND PERIPHERALS

Bailey

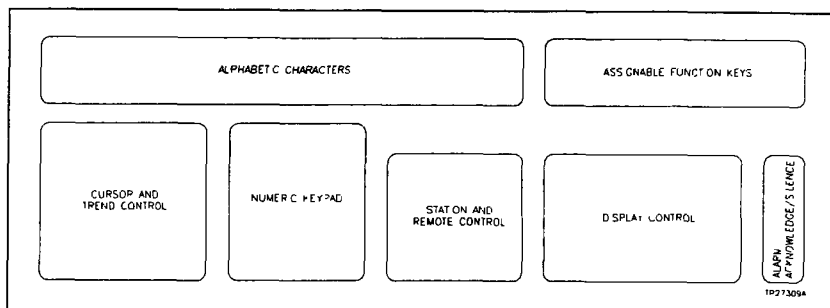


Figure 3-2 Keyboard Sections

Display Control

The display control block keys give single key access to the different configuration and operational displays available at the console. This block also provides keys for moving between the different displays.

Table 3-1 describes the function of each display control block key.

Table 3-1. Display Control Block Key Functions

Key	Function
ALARM SUMM	Displays a user-selected alarm summary display. Usually used to call a display that lists all current process alarms. The process engineer defines tags that are to appear in the alarm summary during configuration.
BACK	Recalls the previously selected display. When pressed repeatedly, moves through the last six displays most recently called by the operator.
CANCEL	Aborts an operation. It is the first key in a two-key sequence. Once pressed, the console prompts to <i>ENTER function to be canceled</i> .
COMMAND LINE MENU	<p>Displays a list of options that appear at the bottom line of the screen. The command menu options presented are:</p> <p>CALC - provides an on-line four-function calculator to perform addition (+), subtraction (-), multiplication (*) or division (/). An input field appears after selecting this option. The field allows entering calculations using the operators available in the numeric keypad. Press \square after keying in the calculation to see the results of the calculation.</p> <p>NOTE - calls an input field that allows entering notes into the events log.</p> <p>ASGN PRN - initially defines or changes printer assignments. This determines for example, where the console directs print tag status request. (continued)</p>

Table 3-1. Display Control Block Key Functions (continued)

Key	Function
<p>COM D LINE MENU (continued)</p>	<p>PRINT - initiates a screen print of the current display to a configured printer. Refer to COPY SCREEN in the <i>Window Operations</i> section for configuration procedures.</p> <p>LOG/NAME - gives access to the <i>Log by Name</i> function for printing configured logs. Refer to <i>Printing and Displaying Log Reports</i> in the <i>Recording Process Data</i> section for specifics.</p> <p>PASSWORD - causes an input prompt to log in a password (user). A password dictates the functions and displays to which designated personnel have access. The user index number for the currently logged in user appears in the keyboard status block.</p> <p>LOG OUT - logs out the current password and logs in a default password.</p>
<p>DETAILS</p>	<p>Calls up the block details for a selected tag on the display. If no tags selected, a prompt appears requesting the tag name or index.</p> <p>After selecting a tag using the input prompt or mouse control of that tag is automatically enabled if the <i>Build Select Tag Table</i> function has been turned on during system configuration. This provides an automatic control enable feature.</p>
<p>DISPLAY</p>	<p>Causes the primary display for a selected tag. The tag must have a primary display assigned to it before this key can function for that tag. A primary display can be assigned during tag database configuration. Only one display per tag.</p>
<p>DISPLAY SUMM</p>	<p>Causes a configured display summary. The process engineer can create a summary graphic containing a list of available displays and assign this graphic to the display summary key during keyboard configuration. A display select function, if built into the display summary, allows an operator to call any display listed in the summary.</p>
<p>FORWD</p>	<p>Provides the same function as BACK except it starts at the last of the six previously selected displays and moves forward to the most recent.</p>
<p>GENL FCTNS MENU</p>	<p>Displays a menu containing functions available to the operator and engineer. This is the main menu of the console and presents the following options:</p> <ul style="list-style-type: none"> A. OIS Configuration B. OIS Utilities C. OIS Operation <p>Refer to the <i>Menu Structure</i> section for a tree structured view of functions accessed after selecting any of the three options presented.</p>
<p>GROUP/ GRAPH</p>	<p>Does not function in this software release.</p>
<p>HELP</p>	<p>Can be defined to present a user-configured menu of instructions related to process and OIS operation. Normally calls the highest level menu in a set of defined help menus when assigned to this key during keyboard configuration.</p>
<p>MARK</p>	<p>Flags the current display for later access. This is similar to using a book page marker. Up to ten displays can be marked. To use this function, press MARK then a numeric key (0 to 9). The display can then be recalled at any time using RECALL. For example:</p> <p style="text-align: center;">MARK 2</p>

Table 3 1 Display Control Block Key Functions (continued)

Key	Function
M SC MENU	Displays a full screen menu that allows access to the following options <i>Log Status</i> - used to view the status of both custom and SOE logs. The status functions also provide the ability to activate or deactivate log collections and cancel queued prints <i>Log by Name</i> - initiates a printout or display of a custom SOE events or operator actions log <i>Display by Name</i> - used to call a display by entering its name. The name corresponds to the assembled display file name without its two character extensions. This option can call any type of display including operator configurable displays
NEXT PAGE	Accesses the next page when a function uses multiple pages (e.g. alarm summary display summary etc). Normally used in conjunction with PREV PAGE
OP PARAMS	Calls the operating parameters display for a given tag. This display presents information relating to the tag configuration and allows turning scan on or off enabling or disabling alarming calling a primary display and substituting values for a tag. For certain tag types a tuning block details and module problem report display section is available
PREV PAGE	Accesses the previous page when a function uses multiple pages (e.g. alarm summary display summary etc). Normally used in conjunction with NEXT PAGE
RECALL	Recalls a display marked using MARK . To use this function press RECALL and the number assigned previously. For example RECALL 2
SWITCH CRT	Switches between windows generated by or available to the console. Assigns the keyboard to any one of four windows called. X device definition determines the windows accessed by this key. The status information relating to a window displays at the lower left corner of the screen
SYSTEM STATUS CLMM	Calls up a defined display that contains the status for selected nodes. The process engineer must define N90STA tags during tag database configuration to create a system status summary display. Once tags are configured they appear in the summary to allow monitoring of all nodes control modules communications modules and power supplies. Frequently used to call the highest level system status display in a hierarchy of status displays
TUNE	Calls a tuning display for a selected STATION type tag if the key lock switch is in the TUNE position and tuning access is enabled through password security. A tuning display allows modifying tuneable parameters that affect process operation. After selecting a tag using the input prompt or mouse control of that tag is automatically enabled if the <i>Build Select Tag Table</i> function has been turned on during system configuration. This provides the automatic control enable feature

Alphabetic Characters

The alphabetic character block keys enable the operator to enter required input character strings or select elements to initiate OIS operations. The keys in this block include the 26 letters of the English alphabet and **SPACE**, **SHIFT** and **SHIFT LOCK**

The console is case sensitive. When entering characters, make sure to take note of upper or lowercase. For example, entering tagname will not call a tag named TagName. Additionally, all file names must be entered, and menu selections must be made using uppercase letters. At start-up or reset, the console defaults to uppercase letters.

Table 3-2 describes the function of each alphabetic character block key.

Table 3-2. Alphabetic Character Block Key Functions

Key	Function
26 alphabetic keys	Enable entering required input strings Select OIS options or initiate operations when pressing the key corresponding to a display or control select character. The display or control select characters are defined during display creation.
SHIFT	Enables typing lowercase alphabetic characters or upper position punctuation characters in the numeric keypad. Press and hold SHIFT then press the desired character key.
SHIFT LOCK	Locks the alphanumeric keys into either of two positions: typing a lowercase letter and upper position punctuation characters or all uppercase letters, numbers and arithmetic operators (e.g. + * / etc.). The current toggle position of this key can be seen in the keyboard status block at the lower left corner of the screen.
SPACE	Fills a character position in a field with a blank space.

Numeric Keypad

The numeric keypad block has four groups of characters: Numbers, punctuation, arithmetic operators and function keys.




The numeric keypad enables

- Entering numeric portion of an operator input
- Entering any numeric value for tuning, function block changes, calculations, and set point, ratio and control output.
- Clearing data entry fields
- Entering information into the console
- Escaping to abort the current operation and return to a previous operation
- Entering arithmetic operators in calculations when using the calculator function

Table 3-3 describes the function of each numeric keypad block key.

KEYBOARD AND PERIPHERALS

Table 3-3. Numeric Keypad Block Key Functions

Key	Function
Numeric keys	Enable entering numeric values punctuation and arithmetic operators
	Inputs the value or data typed in answer to a system prompt Press ENTER after keying in aphanumeric values or character strings at an input prompt or field At some configuration pages must be pressed after completing any and all changes to enter the changes made and update the O S configuration
	Erases any data from an input field It can be used to clear an error made while entering data or old data from an input field To clear data this key must be pressed before ENTER
	Cancels a current operation or function at certain pages Causes the console to exit the current display page to return to a previous display Option presented in messages usually along with an enter option to a low aborting an input or operation

Cursor and Trend Control

The cursor and trend control block keys have two functions Cursor control for data input and display item selection, and trend display control

An input cursor normally appears as a highlighted field that allows data entry It can be positioned at any display field by using the control keys The cursor also can be positioned using these keys to select certain elements for control and alarm acknowledgment The cursor highlights the outline of an element to identify it as being selected

After activating a trend element, the keys in this block perform functions inherent to all trend displays These functions allow changing the display presentation for better analysis of trended process data

Table 3-4 describes the function of each cursor and trend control block key

Table 3-4 Cursor and Trend Control Block Key Functions








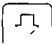
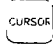





Key	Function
 	Cursor control - move the input field cursor one field in the direction of the arrow Trend control - zooms the trend presentation This changes the display resolution to increase or decrease the amount of historical trend data displayed Perform the same function as ZOOM without specifying a zoom factor In addition used to zoom the trend curve inside a trend magnifying glass

Table 3-4 Cursor and Trend Control Block Key Functions (continued)

Key	Function
 	<p>Cursor control - move the input field cursor one posit on in the direction of the arrow</p> <p>Trend control - pan the trend presentation. Depending on the key pressed, each keystroke causes the display to move either forward or backward in time. Press to move back to a specific time and date, or move forward toward the current time and date. These keys do not bring up the time and date prompt.</p>
 	<p>Cursor control - move the cursor within an input field one posit on in the direction of the arrow</p> <p>Trend control - move the time pointer in the direction of the arrow. Using these keys places the time pointer at a specific time, which is done to view historical values at the pointer location or before enabling the magnifying glass.</p> <p>Fine tune the posit on of the trend magnifying glass after enabling the glass.</p>
 	<p>Move the input field one position in the direction of the arrow when at the key macro configuration page.</p>
	<p>Clears the alarm tabbing cursor from the screen when used with CLEAR.</p>
	<p>Resets an input field to the text string it held when the display was first called. Allows an input error to be corrected, but must be done before pressing ENTER.</p> <p>Removes the alarm cursor when there is cursor tabbing on the screen. Cursor tabbing relates to alarm acknowledgment functions.</p> <p>Used to return to the first page of an active alarm summary element.</p>
	<p>Calls a time and date field while at a trend display. The field allows entering a time and date to move the display to a specific time of historical trend data.</p>
	<p>Cursor control - moves the input field to the next logical data input field determined by the console.</p> <p>Moves between alarming tags on a display to allow acknowledging individual alarms. Press ACK ALARM first to use this key for selecting alarming tags.</p> <p>Trend control - moves the input field between scale limits of a selected trend element.</p>
	<p>Cursor control - moves the input field to the previous logical data input field determined by the console.</p> <p>Moves between alarming tags on a display to allow acknowledging individual alarms. Press ACK ALARM first to use this key for selecting alarming tags.</p> <p>Trend control - moves the input field between scale limits of a selected trend element.</p>
	<p>Calls a Zoom factor field while at a trend element. This allows increasing or decreasing the amount of displayed historical trend data by entering a zoom factor (-9 to 9).</p>

NOTE To perform any trend control using these keys a trend element must first be selected

Station and Remote Control







The station and remote control block keys permit changing control and operational mode of any station function block, and enable manually changing control output, set point and ratio index values. They also can change the current state of any two-position or three-position control device, and the operating mode for a data acquisition function block. A control element must first be selected to make any changes. The faceplate element for either a station, remote control device or data acquisition function block will reflect any changes made through the keyboard.

Table 3-5 describes the function of each station and remote control block key.

Table 3-5 Station and Remote Control Block Key Functions

Key	Function
	Changes the selected tag to or from cascade mode. This key is only functional for cascade type STATION tags.
	Changes the selected tag to or from computer mode. Selects the alternate input source mode for a DANG or DADIG tag.
	Toggles the selected tag between manual and automatic mode. Manual mode allows the operator to take control and change output. Automatic mode allows the control scheme on a PCU module to control operation. For a STATION tag, automatic mode allows the operator to change the set point or ratio index of a STATION tag while still under PCU module control. For a TEXTSTR tag, the mode determines how an input from the console is handled by a PCU module. Toggles between user input source mode and normal input source mode for a DANG or DADIG tag.
	Displays the current output value of a selected tag. Once pressed, a control output TARGET prompt allows the operator to change the output value.
	Displays the ratio value of a selected tag. Once pressed, a ratio index TARGET prompt allows the operator to change the ratio value.
	Displays the set point value of a selected tag. Once pressed, a set point TARGET prompt allows the operator to change the set point value. Calls a SET U/I/N prompt and input field to change the user inserted value for a DANG or DADIG tag. Calls a TGT TEXT prompt and input field to allow the operator to input a text string for a TEXTSTR tag.
	Changes a selected remote control memory (RCM) device driver (DD) or remote motor control block (RMCB) tag to its one state (on). It changes a multistate device driver (MSDD) tag to its three state. Changes the user-inserted value for a DADIG tag to the one state. Sets an alarm indication to allow the operator to indicate that there is an alarm condition associated with a text string entry for a TEXTSTR tag.

Table 3-5 Station and Remote Control Block Key Functions (continued)

Key	Function
	Changes a selected MSDD tag to its two state (mid-state)
	Changes a selected RCM DD or RMCB tag to its zero state (off) t a so changes a se ected MSDD tag to its one state Changes the user-inserted value for a DADIG tag to the zero state Sets a no alarm indication to allow the operator to indicate that there is not an alarm condition associated with a text string entry for a TEXTSTR tag
 	Ramp a value 0.2% of span per keystroke This allows the operator to effect a slow ramping set point control output or ratio index change
 	Ramp a value 4.0% of span per keystroke This allows the operator to effect a fast ramping set point control output or ratio index change

Assignable Function Keys

The user-assignable function keys can be set to provide single key access to frequently used group, graphic or summary displays. These keys can also contain defined macros to consolidate multiple operator keystrokes into a single key. A user-written task can be assigned to any one of these function keys then executed by pressing that key.

During keyboard configuration, the process engineer can assign a user-created display, defined macro or user-written task to any one of 32 available function keys. Press **[SHIFT]** along with these function keys to access the 16 additional function keys (**[F 17]** through **[F 32]**).

Alarm Acknowledge and Silence




The alarm acknowledge and silence block keys permit acknowledging process or system alarms (i.e., stopping a flashing alarm indicator) and silencing an alarm tone. A process alarm notifies an operator that a process value has exceeded an alarm trip point set in the PCU module control scheme. A system alarm indicates a fault in the INFI 90 system. In any of these situations, an alarm indicator flashes yellow in the upper right corner of the screen.

An alarm indicator continues to flash until accessing its display page or an alarm summary and pressing **[ACK ALARM]** or **[PAGE ACK]**. This acknowledges the alarm and stops the flashing. The alarm indicator remains on all displays until the problem is corrected causing the alarm or process value to leave its alarm state (i.e., return to normal).

If the process engineer assigned an alarm tone to an alarm group during configuration, **[SILENCE]** stops the alarm tone associated with that alarming group but does not acknowledge alarms. Also, if the *Relay Hold until Silenced* field at the system configuration page is set to **YES**, **[SILENCE]** opens all relays that have closed due to an alarm condition.

Table 3-6 describes the function of each alarm acknowledge and silence block key

Table 3-6 Alarm Acknowledge and Silence Block Key Functions

Key	Function
	Acknowledges process and system alarms. The first time it is pressed, a cursor appears at the screen. After tabbing the cursor to an alarming tag on the display it acknowledges the alarm for that tag only.
	Acknowledges all tags in alarm on the current display.
	Turns the audible alarm tone associated with an alarm off. Pressing this key does not acknowledge an alarm. Tags continue to flash on the screen until they are acknowledged using [ACK ALARM] or [PAGE ACK] . Opens all relays that have closed due to an alarm condition if the <i>Relay Hold until Silenced</i> field at the system configuration page is set to YES .

NOTE Only tags with alarm fields displayed are acknowledged when the acknowledge keys are pressed

DATA INPUT

In general, the console uses two types of input fields. One type has a limited number of permissible entries. For example, each tag type for the console is distinct, and the console does not allow variations when inputting a tag type. The other type of field used by the console accepts an indeterminate input. For example, a name field accepts any alphanumeric character string up to the maximum characters allowed by the field.

Making a Field Active

For configuration pages, the input cursor appears at the upper left most field available for entering data once the page is made active. The active field always appears highlighted in reverse video.


To move the input cursor and activate a field for data entry, press




Moves the input cursor to the next logical field determined by the console. If there is an error, the cursor stays on the input field in error, and the system displays an error message. Tabbing also enters data for the field from which the cursor was tabbed.



Performs the same functions as **TAB**, but moves to the previous logical input field.



Moves the input cursor one field in the direction of the arrow. Use these keys to randomly move about a display.



Moves the cursor within an input field one position in the direction of the arrow.

These keys are all located in the cursor and trend control block of the keyboard. Refer to **KEYBOARD LAYOUT** in this section for its location on the keyboard.

Inputting Data

As mentioned previously, an input field accepts either a limited number of choices, or it accepts an indeterminate entry. Each input field is as long as the maximum number of characters allowed as input for the field. An input field is highlighted (reverse video) when active. Move the cursor within the active field and edit characters of the field using the cursor control keys described previously.

In either type of field, a new entry can be made by simply typing the entry. The input field cursor operates in two ways.

1. If the first key pressed is an alphanumeric key, the console assumes that the current information is to be replaced. Any characters previously in the field clear and the entered character becomes the first character of the new entry.
2. If a cursor control key is pressed first to move the cursor within the field, the console assumes that the field is to be edited and does not clear the current entry. It then operates in a character replace mode.

To edit the **first character** in the field without clearing it, move the cursor right one space, then left one space.

For those fields that have specific permissible entries, the console allows the operator to enter only enough of the entry to allow the console to distinguish the entry from other possible entries for that field. For example, a field is to be defined with an RMCB tag type. Keying in RMC, then either pressing **ENTER**, or moving the input cursor away from the field is enough for the console to determine that the input is to be the RMCB tag type. This is true for most fields of this type.

KEYBOARD AND PERIPHERALS

Error Checking The console performs error checking after entering data. If the entry is invalid, it is not possible to leave the field until changing the entry or resetting it to its original entry.

[HOME] resets the current field to the text string it held when the display was first called. Press [HOME] while at a field, but before moving to the next field or pressing any other key to reset a field.

ANNUNCIATOR DISPLAY PANEL

An annunciator display panel (ADP) extends the standard number of OIS assignable keys. An annunciator display panel provides single keystroke access to critical operating displays through pushbutton and LED pairs.

The intended purpose of the annunciator display panel is to associate a display with an alarm indication; however, it can be used to call any display or function if desired. Associating a display with an alarm indication allows the operator to locate a process value (tag) in alarm through a single key press.

Each panel provides 32 pushbutton and LED pairs. Any display generated for use at the console can be assigned to these pushbuttons. Key macros defined at the console which incorporate a sequence of key presses can also be assigned. A user-written task assigned to one of the pushbuttons allows executing the task by pressing the pushbutton. A tag assigned to one of the LED indicator lamps causes that lamp to light when it enters an alarm condition.

After proper configuration, an LED indicator lamp lights to notify the operator when a tag enters an alarm condition. The operator can then press the pushbutton to call a display. This display should be one at which the operator performs appropriate actions to correct the alarm. Prior to configuration, pressing any of these pushbuttons calls a standard blank display.

PRINTERS

Using a DECnet local area network (LAN) with the OIS console gives the ability to connect printers to the network instead of directly to the console. This allows consoles connected to the network to share printers connected through terminal servers.

Printers also connect through an auxiliary terminal. These printers, however, cannot be accessed by other consoles on the network since the printer is local to that auxiliary terminal and its associated main console. In either case, the console directs queued prints to a printer over the network.

A single console can access up to eight printers, four used strictly for logging and the remaining four only for screen printing. A utility (i.e., DEFINE_DEVICES) must be run before the

console recognizes a printer. Refer to the *Operator Interface Station, Hardware Manual* for procedures. The number of physical printers in a system for logging is defined during OIS system configuration. Refer to *OIS System Configuration* in the *OIS Configuration* section for more information. Refer to the *Window Operations* section for procedures to configure printers for screen printing.

Log Printers

Printer assignments at the OIS level are made through printer assignment configuration or through the *ASGN PRN* option of the command line menu.

The printer assignment page identifies the terminal server port connection for each physical printer, and allows designating them as either shared or private. The configuration also defines logical printer assignments. Logical printer numbers, and not physical printer numbers, assign a printer to a log during configuration of that log. The printer assignments should be made before any log configuration so that logical printer numbers can be assigned to a log during its configuration. Refer to *Printer Assignments* in the *OIS Configuration* section for additional information.

The *ASGN PRN* option of the command line menu assigns a printer to a window. After making this assignment, the console directs demanded prints such as tag summaries, print tag list and print trend list made at a window to its assigned printer. This key does not assign a printer used for printing screen copies.

To assign a printer to a window

1 Press ASSIGN PRNTR. The console prompts with *Enter printer number*.

2 Enter a physical printer number from 1 to 4. The keyboard status block should update to show the number of the selected printer. Refer to *KEYBOARD STATUS* in the *Display System* section for an explanation of the keyboard status block.

The console requires a DEVSTAT tag in its database to identify the type of printer. The printer types for log printing are

- ANSI low speed, no color
- ANSI low speed, color
- ANSI high speed, no color
- IBM®, no color
- IBM, color

® Registered trademark of International Business Machines Corporation

If a tag is not configured for a printer, the printer defaults to ANSI low speed, no color.

Shared and Private Printers

The console can generate a number of different logs. It uses both logical printer assignment and shared or private printer designation to direct the printing of these logs. Logs can be classified into two categories: Page-oriented and line by-line

A page-oriented log is one in which an entire log is formatted as a complete document before being sent to a printer. This applies to all periodically scheduled (or demand) logs generated by the console. These include custom logs and SOE logs, and events and operator actions logs when configured to print periodically.

A line-by-line log outputs real-time, individual line entries as they occur. For the console, this includes the events and operator actions log when configured to print events or actions immediately. An immediate printing events and operator actions log prints entries line-by-line rather than as a complete page.

NOTE Printers must be defined consistently among various consoles.

Shared Printers A shared printer can be used by any number of consoles (and other stations) on the same network. Output from several consoles or stations can be directed to a shared printer. A shared printer must be connected to a terminal server and not an auxiliary terminal. A line-by-line log cannot be directed to this printer.

Private Printers A private printer is dedicated to a single console, and can be used only by that console. Output from other consoles (or stations) cannot be printed on this dedicated private printer. A private printer can be connected either at an auxiliary terminal or a terminal server. A line-by-line or page oriented log can be directed to this printer.

Printer Status

The console determines printer problems by the number of consecutive retries required to complete a print job. If the console determines that the printer is not available, it waits a short period of time, then attempts the print again. After a specified number of retries, the console indicates a printer error to the operator.

If the console detects a printer error, a flashing *A* displays at the title line in the upper right corner of the OIS application window. This indicates to the operator that an action request has been entered into the operator action request list. The message *Printer n Powered Down, Disconnected, or Network Problem* appears as an entry in the list.

After correcting the error, the action request message must be acknowledged through the operator action requests page to continue printer operations. After acknowledging this error, the console then retries the print job automatically. Refer to **OPERATOR ACTION REQUESTS** in the *OIS Operational Information* section for procedures to process a request.

NOTE The time period between retries and the number of retries is set specifically to try and eliminate false error indications. These false errors can be generated when a shared printer is being used by other devices for a long period of time. In this case, acknowledging the error message at the operator action requests screen will allow the console to retry the print request.

Printer Redundancy

With the implementation of shared printers, all redundancy is manual. The network can be configured with redundant terminal servers and redundant printers, but there is no automatic fail-over from primary to backup. In the event of failure, the logical printer must be manually reassigned to the backup physical printer using the printer assignment screen.

SECTION 4 - DISPLAY SYSTEM

INTRODUCTION

The operator interface station (OIS) presents various display formats on its screen. Each operational display aids in the monitoring and control of plant operations. This section first gives a general explanation of the display system including fixed system screen elements and user space. It then explains screen control through the keyboard and mouse.

DISPLAY SYSTEM

All operational displays are user configurable, however, the console does provide several standard faceplate symbols and text summary templates. Each operation, configuration or summary display in the console is part of the display or symbol library on hard disk. Table 4-1 lists the standard displays and symbols provided with the software. These files reside in the [DATA USN54] directory on the hard disk.

Table 4-1. Display/Symbol Library File Listing

File (.DT)	Display/Element Type
ALMSUMFL ANALOG1 ANCBOOL1 ANCREAL1 ANLGHF1 ATNKDBL	Arm summary (full screen) Analog Digital annunciator Analog annunciator Analog (half height) Atmospheric pressure tank (double size)
ATNKFL ATNKHFL BOOLEAN1 BOOLHF1 DAD G1 DAD GPOP	Atmospheric pressure tank (full size) Atmospheric pressure tank (half size) Digital Digital (half height) Data acquisition digital Data acquisition digital (pop up)
DCSFPOP DCSFULL1 DCSFULL2 DCSHALF1 DCSHPOP DEVDR1	Control station (full size pop up) Control station (full size) Control station (full size always shows mode) Control station (half size mode included with tracking) Control station (half size pop up) Device driver
DEVDRPOP DNGFULL1 DNGFPOP DNGHALF1 MODLINE MSDEVDR1	Device driver (pop up) Data acquisition analog (full size) Data acquisition analog (full size pop up) Data acquisition analog (half size) Standard module status line for status pages Multistate device driver

Table 4 1. Display/Symbol Library File Listing (continued)

File (.DT)	Display/Element Type
MSDEVPOP N90STAT1 NODLINE NODSTAXX RCM1 RCMPOP	Multi-state dev ce dr ver (pop up) System status overview page (template) Standard node status line for status pages Node status summary page (template) RCM RCM (pop up)
RMCB1 RMCBPOP RMSC1 RMSCPOP TEXTSTR1 TRNDCCFL	RMCB RMCB (pop up) RMSC RMSC (pop up) Text str ng Trend box with control output text (fu)
TRNDCCHF TRNDGFL TRNDGHF TRNDPVFL TRNDPVHF TRNDR FL	Trend box with contro output text (ha f) Trend box for digita (ful) Trend box for d gita (half) Trend box with process var ab e text (fu) Trend box with process var ab e text (half) Trend box w th ratio index text (fu)
TRNDRIHF TRNDSPFL TRNDSPHF VALVEDN VALVELT VALVERT	Trend box w th ratio ndex text (ha f) Trend box with set point text (fu) Trend box with set po nt text (ha f) Valve down Va ve eft Va ve r ght
VALVEUP XYAFL XYAHF XYDFL XYDHF XYPFL5	Valve up XY pot ana og (ful) XY plot ana og (half) XY pot d gits (fu l) XY pot dig ta (ha f) XY pot (temp ate)

NOTE For trends and XY pots the fu and ha f designat on does not refer to size but rather the attributes that appear for each When us ng a half source fie for a trend for examp e the tag descriptor does not appear for the trend

The console uses standard faceplate symbols to represent certain tag types as device mimics, summary screen templates for use in system and alarm summaries, and fixed displays for menu screens These displays and symbols already have the required interactives to enable their functions Interactives are features built into displays that allow an operator to direct operations through them

Any standard symbol or template can be incorporated into any operations in any display desired They can also be modified to customize operations Menu screens such as the *General Functions Menu* cannot be modified or part of a user configured display

NOTE If standard faceplate symbols are to be modified to create custom faceplates it is suggested that the original symbol file be first copied and renamed Then perform the modifications on the new renamed file This maintains the integrity of the provided symbol library

Display Characteristics

The console uses an x,y coordinate system to set up each of its different displays. An x,y coordinate associated with each display element defines the position of that element on the screen (or within the window). An element is any item that is part of a display, and can refer to any component of the display from a simple valve to a complete faceplate symbol.

The entire screen grid range is from 0,0 at the lower left corner of the window to 10000,7500 at the upper right. To maintain consistency throughout all displays, certain areas of the grid are reserved for fixed elements. The console reserves the outer segments of the entire grid for system functions (e.g., date, time, interface unit status and alarm group indicators), prompts, messages and keyboard status. The rest of the grid area (400,400 to 9600,7200) is available as user space for creating graphic, summary and informational displays, and also for system menus.

Many different elements combine to form a complete display page, but all pages share a few common features. Each page uses a multicolored display scheme, and has a reserved space for a title line and bottom line prompts.

The standard display screen is a 19-inch, high resolution (1024 x 864 pixel), color CRT. The CRT accepts standard RGB (red, green, blue) inputs and is capable of up to 64 solid and 64 flashing colors.

Figure 4-1 shows the common display features and their fixed locations that remain the same for all displays.

TITLE LINE DISPLAY ELEMENTS

The top two lines of every OIS application window are its title line. The information on these lines always has the same format regardless of which page is on display. From left to right it shows:

- Current time, date and day of the week (order depends on time and date format configuration)
- Display title.
- Status of its interface unit
- Alarm group status indicators (system and process) and operator action request indicator

With standard configuration the title appears in cyan, alarm status indicators in yellow, and the remaining information in green.

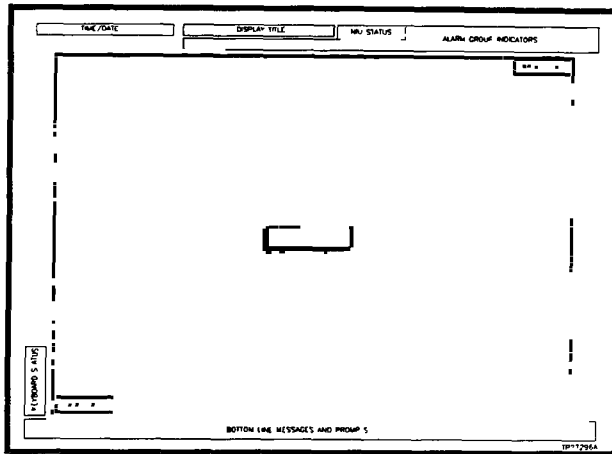


Figure 4-1 Common Display Characteristics

- Time/Date** The time and date are presented in military format by default. The format is hour:minute:second followed by day month year, then day of the week (e.g., 23:59:59 10-DEC 92 MONDAY). Time and date format configuration allows changing the order of appearance.
- Display Title** The display title is either the report title or display name. Report titles are fixed while a maximum of 25 characters can be entered for a user-created display. Title position is normally above the user space starting at a coordinate of 3000,7350.
- Alarm Indicators** INFI 90 system and process alarm indicators appear at the title line. If a process value exceeds its alarm trip point or a system fault occurs, an alarm group indicator (1 to 99 or S) appears to notify an operator. An alarm group number identifies the area containing a fault. An A appears in this area to notify an operator that some action must be taken before the console can continue processing. If no alarms exist, this section of the screen remains blank.

Alarm group indicators display in two lines. The lowest 20 alarm groups display on the top line, right justified. When this area fills, the remaining alarm group indicators display right justified on the second line. If both lines fill and there are more alarm indicators to display, an M (more alarms) appears right justified on the second line.

When an alarm indicator first appears it flashes to identify it as unacknowledged by the operator. Once acknowledged, the alarm

indicator for the group stops flashing. When the problem becomes corrected the I through 99, S or A disappears.

CIU Status The console indicates the status of its communications interface unit within the alarm group indicators area. If the console indicates *offline*, the interface unit is not communicating on the communication highway and the console is not receiving data from the loop. In this case, the console assumes that all points are in a bad quality state. This does not apply to internal tag types (i.e., INTANG and INTDIG). In most cases, resetting the console reestablishes communication with the loop.

NOTE When the console comes up for the first time the *offline* message appears. This is normal while the console is downloading points to its interface unit.

BOTTOM LINE DISPLAY ELEMENTS

Unlike the title line, the bottom line elements vary depending on the current operation being performed. The following attributes are some of the items that appear as bottom line elements of the window.

Messages - all operator and error messages display at the lower right of the window. This area remains blank if there are no messages. The message number (e.g., MSG 323 or ERR 38) appears to the right of the text string message. A message may be up to 50 characters long. Refer to Appendix E for a list of error messages.

Operator prompts - the bottom line area presents operator prompts and options available while viewing some OIS displays. Depending on configuration, a faceplate element can be set up to present its screen options in this area. These prompts depend on the type of faceplate element.

Input fields the console uses this area to present an input field when it needs additional input to complete a desired function. For example, the appropriate prompt allows the operator to key in a name to call up a display or print a log when using the *Display by Name* and *Log by Name* options available through the miscellaneous menu.

Command line menu - various options display across the bottom line of the window after pressing COM'D LINE MENU. An input field appears when certain options are selected from this menu.

KEYBOARD STATUS

The keyboard status block appears in the lower left corner of all OIS application windows. It presents from top to bottom:

- User index number of the current logged in user
- Keyboard assigned to the window

- Printer assigned to the window
- Status of the key lock switch
- Status of SHIFT LOCK

The user index number (1 through 128) identifies the last user to log in at the console. Personnel log in by entering their passwords. A password can be entered by selecting the *LogIn* option from the command line menu. This is for password security and is different than logging into an account

A *KB*-field indicates which keyboard is assigned to the window. The keyboard corresponding to the number following *KB* depends on the keyboard assignments made during OIS system configuration. Any window that appears at the screen can only be manipulated through key actions at the assigned keyboard. When a keyboard is not currently assigned to a window, *UNASSIGNED* appears at the keyboard status block of that window

A *PR*-field indicates which printer is assigned to the window. The printer corresponding to the number following *PR*- depends on printer assignment configuration. The console directs any prints the operator initiates through keyboard actions to the printer shown. This does not apply to printing of scheduled logs and reports which designate a specific printer in their configuration

When the key lock is in either the *CONFIG* (configure) or *TUNE* position, *CON* or *TUN* displays in the keyboard status block in cyan. When the key lock is in the *LOCK* position, *con* or *tun* display in green. The state of the key lock shown in this block determines the operations permissible through the window

When the SHIFT LOCK key is locked in uppercase letters, *SHF* appears in cyan. When locked in lowercase, *shf* appears in green

USER SPACE

The user space as described previously is the area of the window available for displaying any desired process information. This area can be used to incorporate and display elements such as

- Static information and values
- Dynamic process data and symbols
- Keyboard and touch point display and control selects
- Station and control device mimics for process control
- Pop up station and control device mimics
- Alarm summaries containing current process or system alarms

- Tabular or XY graph trend elements
- Text summaries.
- Menu options.

COLOR SCHEME

The console has an established color scheme for its standard display pages and symbols. The console displays specific types of information in the same color, regardless of the page on display, to allow quick recognition of different information by its color. Standard displays present these colors against a black background.

Cyan Static text or prompts that cannot be changed. Also, the outline of an element changes to cyan to identify it as being active.

Green Dynamic items or user-configured data.

Red Control and display element selectors, menu item selectors and outline of a red tagged element.

Yellow Alarm conditions.

Blue Display or symbol outlines. A blue outline for a symbol identifies it as being inactive.

Some display page element colors can be changed from this standard during OIS configuration. The foreground and background colors can be any system colors desired. The process engineer is able to create any color scheme desired for user-created displays, although a standard color scheme is recommended. Colors are set during display creation.

Display Element Escape Commands

Escape commands define each static and dynamic item presented at a display, and enable the capabilities of that display. These commands, defined in a display source file, create the display presentation. A display can be created to include process information, and to enable process control and monitoring. Some example commands are:

pg 950,950;100,0;0,-100;0,-100~ - draws a polygon, which can be used, for example, as the outline of a control element or entire display page.

ed 42,32,1,1489,1512,124,3,0,7,1,6,2,0 - references a tag with index number one to acquire the dynamic value of an analog process variable. The value is for the process variable defined by the tag.

ei 108,82,48,49,NODSTA01~ - enables calling a display named NODSTA01 from the current display by key select The key parameters in this escape command identify the display select key combination as the 0 and 1.

Refer to Appendix B for a complete list of escape commands, and a few examples of complete display and symbol source files

Either the software oriented display generator (SODG) utility or the EDT text editor can be used to create a display by entering these escape commands. The SODG utility is part of the software logging, database and graphics (SLDG) program The EDT function is available at the console and invoked by using the EDIT command Refer to the VMS documentation provided with the console for information about the EDT text editor and the EDIT command.

The difference between the SODG and EDT utilities is that the SODG utility automatically enters the required escape commands and their parameters for each created display element based on user entry The EDT function requires entering each escape command and its parameters for each element as individual line entries Refer to the *Personal Computer Software Logging, Database and Graphics* instruction for additional information about the SODG utility

Another difference in the two is that the SODG utility also provides a screen presentation while creating the display The EDT function requires some prior work to map out the x,y coordinate of each element of the display One method of doing this is by drawing the display as it should appear at the screen on a grid having coordinates ranging from 400,400 to 9600,7200. The coordinates for a drawn element can then be transferred to the display source file as the x,y coordinate parameters of an escape command

Both the console and SLDG software provide a library of standard symbols and displays One method of determining the escape commands required to create a display and present certain types of information is by referencing the provided symbols and displays The elements incorporated in these symbols and displays can be viewed using the SODG utility, or the escape commands defining each element can be viewed through the EDT function

DISPLAY AND CONTROL SELECT OPTIONS

The keyboard is the main operator input device for the console The keyboard, described earlier in the *Keyboard and Peripherals* section, provides the display and control element select, data input and process control capabilities

The mouse provides an alternate method of selecting display items instead of using the keyboard Position the mouse pointer over the desired display item, then press MB1 (mouse button one

or the left mouse button) The mouse is available to select displays or activate control elements, however, the actual control actions can only be initiated through keyboard keys. Data input also can only be done through the keyboard. Any active element can be deactivated by pressing **[ESC]**.

Any display can use key selects or touch points (mouse), or both. A key select is any single alpha character or a two alphanumeric character combination. The single character requires only a single key press for selection. The two-character combination requires pressing a two-key sequence. Touch points are designated areas of the screen where the operator places the mouse cursor to initiate a display select or activate control. The type of select options available for an element are determined during display creation. Refer to *Display Generation* in the *OIS Configuration* section for methods and procedures to create displays, and Appendix B for display and control select escape commands.

NOTE Standard OIS displays and menus have touch points a ready designated in the configuration which allows using the mouse for selection.

Control Select Highlighting

To verify selection or identify a display element as being in active mode, the console uses outline border highlighting. A change in the outline of an element from a normal to a highlight color provides a visual verification of selection. Standard highlighting changes an outline color from blue to cyan when used against a black background. Used with other background colors brings different results. The highlighting feature applies to elements such as alarm summary, faceplate symbols for control, and trend displays.

An option available through OIS configuration causes a touch area border to highlight when selected using the mouse. This option is similar to border highlighting that occurs through keyboard selection. The process engineer enables touch point highlighting by setting the *Highlight Selected Touch Area* option to **YES** during OIS system configuration. Once set, the outer border of a designated touch area uses the highlighting feature.

A border highlight whether initiated through key or touch point selection remains on the display until:

- Selecting another touch area with the mouse
- Initiating a selection through the keyboard
- A new display call up causes an entire display change.
- Pressing **[ESC]**

For example, after calling a group display, a single faceplate can be enabled for control by key selector or using the mouse. The border of a selected faceplate then highlights (changes to cyan).

identifying the element as active. Once in the active mode, keyboard actions allow process control. Selecting another element causes the previously selected element to return to its normal color scheme and condition. Control for that element also disappears. Only one element can be selected for control at a time.

Pop Up Control

The process engineer can design displays that incorporate pop up elements. The OIS symbol library provides standard pop up elements for DANG, DADIG, DD, MSDD, RCM, RMCB, RMSC and STATION tag faceplates.

Once selected, a pop up element comes up in the active control mode. Device control can be initiated through normal keyboard actions which are dependent on the type of element. The operator can deactivate pop up control by pressing **ESC**. The element remains on the display, and can be activated again by using key or mouse select options.

SECTION 5 - MENU STRUCTURE

INTRODUCTION

The process engineer and operator access most of the operator interface station (OIS) functions through menu selections. This section explains the menu structure and provides a tree structured view of the menu hierarchy for the console

GENERAL FUNCTIONS MENU

The main menu used as the starting point for accessing OIS functions is the *General Functions Menu* (see Figure 5 1) Press GENL FCTNS MENU at any time from any other menu, or any interactive operation or configuration display to call this menu to the screen

The menu has three separate choices, each providing access to a group of related operations, utilities or configurations. Figure 5 3 shows the menu options accessed after selecting either *A OIS Configuration* or *C OIS Operation* from the menu. Figure 5-4 shows the options after selecting *B OIS Utilities*

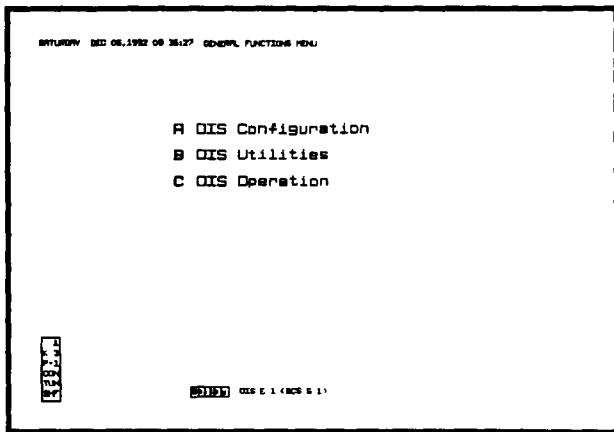


Figure 5 1. General Functions Menu

TPS0752B

MISCELLANEOUS MENU

The miscellaneous menu provides access to the *Log Status*, *Log by Name* and *Display by Name* functions. These are explained in later sections of the instruction. Press **MISC MENU** to access the *Miscellaneous Menu* page (see Figure 5-2).

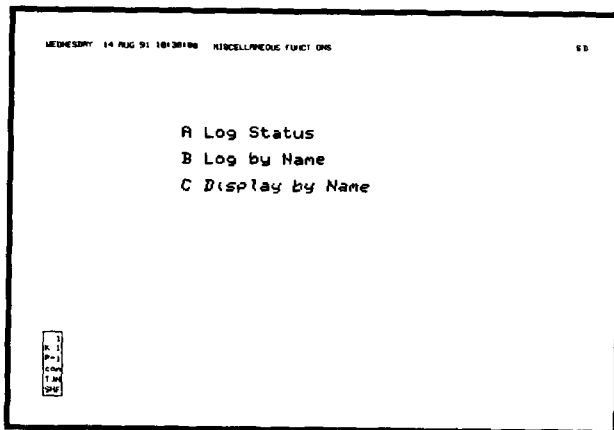



Figure 5-2 Miscellaneous Menu

TPS0109A

COMMAND LINE MENU

The command line menu is a bottom line menu. Press **COM'D LINE MENU** to call the command line menu to the screen. The menu gives access to the following functions:


- A *CALC* on-line calculator
- B *NOTE* note field for entering notes into the events log
- C *ASGN PRN* - printer assignment function
- D *PRINT* - initiates a screen print
- E *LOG/NAME* initiates a log printout
- F *PASSWORD* password log in capability
- G *LOG OUT* - password log out capability

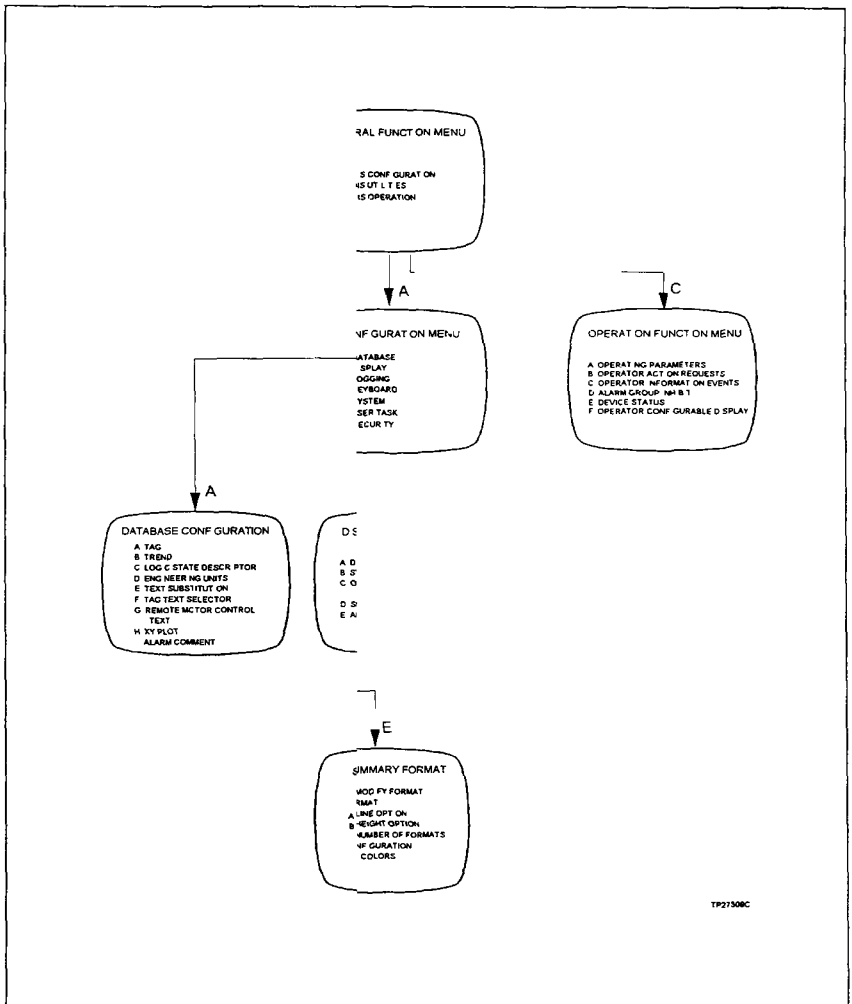

TP27508C

Figure 5-3 Menu Structure OIS Operation and OIS Configuration

2011 14 04 10:07

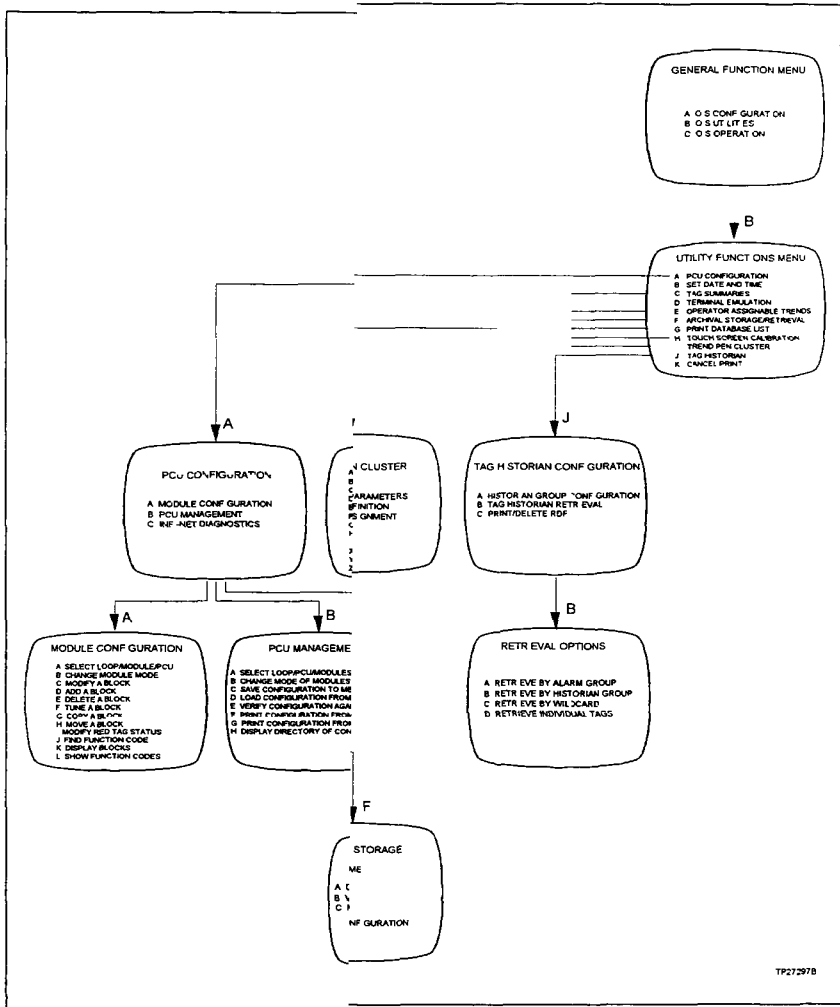

TP272978

Figure 5 4 Menu Structure - OIS Utilities

2011 10 04 10:07

SECTION 6 - WINDOW OPERATIONS

INTRODUCTION

The display system of the operator interface station (OIS) directly employs the X library to generate graphic displays. The X library is a standard component of the X Window System™. The MOTIF™ window manager supplied as part of the VAXstation system that this OIS console is built on provides the windowing environment in which the displays operate.

This section provides a summary of key window features used in OIS operation. The VAXstation documentation provided with the console describes the operation of windows and the user interface in detail. This section also explains how to use the mouse and session manager features, and OIS application start-up, shutdown and reset.

WINDOW CONTROL

The mouse is an integral component of the windows system and OIS operation. The mouse pointer and mouse buttons initiate most screen operations. Placing the pointer over a display item and *clicking* (press and release) the appropriate mouse button enters or initiates the action. Positioning the mouse pointer over a display item is also referred to as *pointing*.

Press the mouse switch located at the keyboard interface panel to switch between the upper and lower screen of a console having dual screens.

The mouse has three buttons designated as MB1 (mouse button one), MB2 and MB3. MB1 is the left button, MB2 is the center button and MB3 is the right button by default. The mouse is configurable as far as switching the MB1 and MB3 button locations. When operating in the OIS application window, MB1 is mostly used. When told to *drag* the pointer, press and hold MB1 then move the mouse to position the pointer.

The mouse provides the ability to assign a keyboard to a window. This is required to perform the operations enabled through the window using a keyboard. Assigning the keyboard to a window is referred to as *setting input focus*. To set input focus for a window:

- 1 Place the mouse pointer anywhere in the window area except over a control button. The control buttons are located at the upper right corner of the window.

™ X Window System is a Trademark of Massachusetts Institute of Technology.
 ™ MOTIF is a trademark of Open Software Foundation, Inc.

2 Click MB1

The OIS windows support all standard MOTIF window operations. The console does, however, have some restrictions on certain operations due to *specific operational requirements*. The following sections explain the restrictions.

Figure 6-1 shows an example of the screen depicting the window items only. The main components of the screen are the applications window and icons. The top of the screen is reserved for application icons. An icon represents each active application window. An application window can be, for example, the OIS application, a terminal window, or a message window. Each window has the same basic layout:

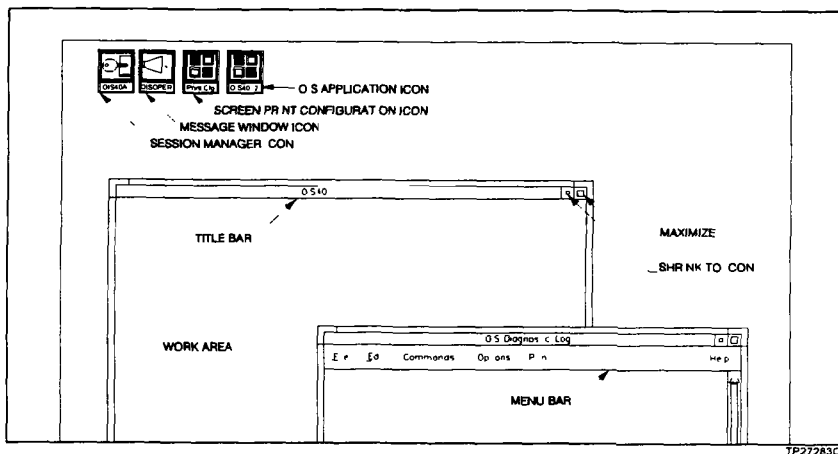


Figure 6-1. Windows Overview

Title Bar A title bar contains the application name and window control buttons. Windows can be moved to other locations on the screen by using a built-in feature of the title bar.

To *move* a window.

- 1 Place the mouse pointer anywhere in the title box, except on a control button, of the window to move.
2. Press and hold MB1, then drag the pointer to a new location on the screen.

3. Release MB1, the window then moves to the new location.

The title bar also allows moving a window from the top to the bottom of a stack of windows if windows are overlaying one another.

To **push** a window to the back of a stack of windows

- 1 Place the mouse pointer anywhere within the title bar except over a control button
2. Double-click MB1 to move the window to the bottom of the stack

Menu Bar A menu bar lists the names of available pull-down menus, not all windows have menu bars

To **view** the options of a pull down menu

- 1 Place the mouse pointer over the desired menu name
- 2 Click MB1

To **activate** an option of a pull down menu

1. Place the mouse pointer over the name of the desired pull-down menu
- 2 Press and hold MB1.
- 3 Drag the mouse pointer over the desired menu option, then release MB1

- or

- 1 Place the mouse pointer over the name of the desired pull-down menu
- 2 Click MB1
- 3 Place the mouse pointer over the desired menu option
- 4 Click MB1

Work Area The work area is the main display area of the window This is where the displays and menus of the OIS application appear. It is also the area where the operator performs all functions.

Control Buttons Each window called to the screen has window control buttons located at the upper right corner of its title bar For the OIS application, these control buttons work slightly different than in other application windows The buttons are the shrink to icon button and maximize button

- **Shrink to icon button** - shrinks a window to an icon, and re moves a window from the screen. This does not close the application. It allows calling the application window back to the screen at any time. To shrink a window:

1. Place the mouse pointer over the shrink to icon button
- 2 Click MB1.

When the icon is later expanded, the window restores to the previous screen location it occupied before being shrunk

- **Maximize button** - used to resize the OIS application window to its maximum size. For all other windows this button toggles between the maximum size of the window and a previously set size. To maximize the OIS application window

- 1 Place the mouse pointer over the maximize button
- 2 Click MB1

NOTES

- 1 When a previously hidden portion of an OS window is exposed either by removing an overlaying window or expanding an icon, the console redraws the window
- 2 When working on an interactive screen such as configuration displays, the console redraws the menu used to select that interactive not the interactive itself

Icons

An icon appears at the top of the screen to identify an application that is currently running. Once an application starts and is running minimized, its icon appears at the top of the screen. The icon disappears when the operator restores an application to a window.

The operator can call an application window from an icon by moving the mouse pointer to the icon for that application, then double clicking MB1. It can also be called by clicking MB1 once, then selecting *Restore* from the pull-down menu. The application can be shrunk back to an icon by placing the mouse pointer on the shrink to icon button for that application, then clicking MB1.

Sizing a Window

The OIS application supports window resizing in discrete steps, not arbitrary sizes. The console allows windows that vary in size by approximately one inch increments in the vertical direction. On the normal 1024 × 864 resolution screen, six discrete window sizes are supported ranging from ¼-screen to full size.

To resize the OIS application window:

- 1 Move the pointer until it bumps the top edge, bottom edge or any corner of the window. The pointer changes in shape to indicate when resizing is enabled
- 2 Press and hold MB1
- 3 Drag the mouse pointer vertically until reaching the desired size, then release MB1 For the OIS application window, the window reduces or expands to the discrete size closest to the chosen size.

This type of window resizing was implemented so that displays remain consistent as windows are resized Graphics can be resized to any size, but text screens are limited to available font sizes The available window sizes maintain the relationship between graphic images and text from size to size

NOTE Resizing works by moving to a new vertical size resizing by moving the mouse pointer horizontally is not supported

SESSION MANAGER

The session manager, shown in Figure 6-1, controls a windows session The session manager can be activated by positioning the mouse pointer on the session manager icon and double clicking MB1 This opens the session manager window

Session The *Session* option of the session manager window no longer allows terminating the session

Applications The *Applications* option of the session manager window gives access to

Login Window - allows starting a terminal window to run various utilities and to execute system commands Refer to **OPENING A TERMINAL WINDOW** in this section for further explanation.

Mail gives access to network mail

Message Window enables the message window to view operation communication (OPCOM) messages Refer to **MESSAGE WINDOW** in this section for additional information

OIS Utilities The *OIS Utilities* option of the session manager window gives access to

OIS Activity Monitor - starts the activity monitor. Refer to **Activity Monitor** in the **Terminal Utilities** section for an explanation.

OIS Diagnostic Log - starts the diagnostic log. Refer to *Diagnostic Log* in the *Terminal Utilities* section for an explanation.

Abort Screen Copy - cancels the last queued screen print request. Refer to **COPY SCREEN** in this section for an explanation.

- Startup/Shutdown** The *Startup/Shutdown* option of the session manager window gives access to *Abort Auto OIS*, *OIS Startup*, *OIS Shutdown*, and *OIS Reset* explained later in this section.
- Options** *Options* allows changing the appearance of the screen background and window colors.

MESSAGE WINDOW

Various network conditions can cause the generation of operation communication (OPCOM) messages. These are often seen when the network is first being configured. They also can be generated by the system manager of the network and provide information relating to network shutdowns or other events.

On the console, OPCOM messages display in a message window. When a message is received, the system beeps to inform the operator. Position the mouse pointer over the message window icon, then double-click MB1 to view OPCOM messages.

Messages are not lost if the window is changed to an icon or overlaid. Expanding the icon or bringing the window back as the top window allows viewing any messages.

The message window becomes available after start up of the console. If the window has been closed, it can be opened again through the session manager.

To open the message window:

- 1 Open the session manager window.
- 2 Choose *Message Window* from the *Applications* pull down menu.

OIS START-UP

Start-up is automatic after powering up the console. The console executes a load sequence after applying power. Power for the console turns on at the power entry panel (see Figure 1-1). To turn the power on:

- 1 Open the front cabinet door to gain access to the main power circuit breaker. Figure 1-2 shows the location of the circuit breaker.
- 2 Set the breaker to the on (or up) position. The POWER ON lamp lights to indicate power to the console. The console runs a

power up sequence, then an automatic start-up sequence. A complete start-up takes several minutes

Automatic OIS Application Start-Up

The automatic start-up sequence for the console consists of starting the windowing system, opening the session manager, message window, and screen print configuration window; and initializing the OIS application. The OIS application appearing in an open window identifies a successful start-up of the console.

The console provides the ability to cancel the automatic start up of the OIS application. This can be done, for example, if the process engineer intends to log into the OISENGR account to run the database builder. Canceling the automatic start up eliminates the need to wait for the OIS application to initialize, then having to shut the application down through a pull-down menu or terminal window.

To cancel the automatic start-up of the OIS application

- 1 Power up the console as normal
- 2 Wait for the session manager icon to appear
- 3 Immediately open the session manager
- 4 Choose *Abort Auto OIS* from the *Startup/Shutdown* pull-down menu

This must be done before the console begins initializing the OIS application. The console waits approximately 30 seconds after initializing all other applications before it begins initializing the OIS application.

Logging into an Account

Under the VMS operating system, the operator or process engineer logs into an account to perform certain functions. Logging into an account is performed by entering a *Username* and *Password*. A log in can be done through a terminal window (*Login Window*) at the main console or an auxiliary terminal, or at log in prompts of a VT-series terminal. This section provides the log in procedures for each

Accounts A main console such as an IIOIS401 or IIOIS40A/D has four different operational accounts. These accounts provide different capabilities related to the console. The OIS application accounts are

OISOPER - allows normal operations such as start-up, shutdown and reset of the OIS system. The console initially comes up logged into the OISOPER account.

OISENGR - allows the same operations as the OISOPER account plus access to configuration and system build data. Refer to the *Terminal Utilities* section for an explanation of the utilities run while in the OISENGR account.

OISWIN - used to initially define or make changes to window assignments of the main console. An OISWIN account can be accessed to perform remote window management from a remote node or terminal. After logging into this account, the system runs an interactive program that displays current window assignments, and gives the ability to redirect windows in the same way as the *X Device Definition* function.

SYSTEM - allows access to the main system definition area for all procedures that require this level of access. The SYSTEM account also exists on auxiliary terminals.

NOTE: Only personnel responsible for system configuration and maintenance should access the SYSTEM account.

An auxiliary terminal such as an IIOIC401 has a separate SLAVE account that allows the start up, shutdown and reset of the OIS application. This account is similar to the OISOPER account at the main console. The auxiliary terminal initially comes up logged into the SLAVE account.

Choose the *Login Window* option from the *Applications* pull down menu of the session manager, then identify the account name at the *Username* prompt to access an account. A password may also be required depending on network security configuration.

Passwords

A password determines accessibility to accounts. A password must be entered that gives access to an account before the system allows logging into that account. For the console, the default passwords, except for the SYSTEM account, are the same as the account name. The password for the SYSTEM account is **BAILEY-CONTROLS**. The passwords can be changed by the system manager or authorized personnel.

Enter a password at the *Password* prompt of a terminal window after entering the name of an account to access an account.

To log into an account at the *main* console:

1. Open a terminal window using the procedures given in **OPENING A TERMINAL WINDOW** in this section.
2. Type the name of the account to log into at the *Username* prompt, then press **ENTER** (or **Return**).
3. Type a password at the *Password* prompt, then press **ENTER** (or **Return**). The password does not appear on the screen.

4. After a short time, the dollar sign (\$) prompt appears

To log into an account at an *auxiliary terminal*

1. Open a terminal window using the procedures given in **OPENING A TERMINAL WINDOW** in this section

2. Type the name of the account to log into at the *Username* prompt, then press **ENTER** (or **Return**)

3. Type a password at the *Password* prompt, then press **ENTER** (or **Return**). The password does not appear on the screen.

4. After a short time, the dollar sign (\$) prompt appears

To log into an account from a *VT-series terminal* connected through a terminal server:

1. Press **Return** twice

2. Type a terminal server name, *Username* and *Password* (if required). These entries are site specific and depend on the network setup.

3. Press **Return**

4. When the server prompt (*local>*) appears, type

CONNECT *nodename*

then press **Return**. Enter the node name assigned to the main console to which to connect the terminal

5. Type an account name at the *Username* prompt and account password at the *Password* prompt

6. Press **Return**

To log into an account from a *VT-series terminal* connected directly to a driver cabinet (II0IS40A/D)

1. Press **Return**

2. Type an account name at the *Username* prompt and account password at the *Password* prompt

3. Press **Return**. After log in, the terminal may then be used as required, specifically to initiate a start-up or shutdown of the OIS application

WINDOW OPERATIONS

Start-Up

Normally, the OIS application automatically starts up after powering up the console. The session manager and pull-down menus provide the capability to start the OIS application if it has been shut down through a pull down option or after aborting the automatic start-up sequence. Start-up of the OIS application can also be done remotely from a terminal.

To **start up** the OIS application

- 1 Open the session manager window by placing the mouse pointer over the session manager icon and double clicking MB1
- 2 Position the pointer over *Startup/Shutdown*
- 3 Press and hold MB1, then drag the cursor to *OIS Startup*
- 4 Release MB1. After a short time, a start up window appears and system initialization begins. Do **not** select *OIS Startup* again while the console performs its start-up sequence. Look at the message window to determine the status of the start-up.

After the start up sequence completes, an OIS application window and icons appear to indicate a successful start-up. Normal process operations can now be performed.

Typing **OISSTARTUP** at a logged in terminal or a terminal window performs the same function. For a driver cabinet (IIOIS40A/D), start up the application using an auxiliary terminal or a VT-series terminal.

An auxiliary terminal automatically starts up in the SLAVE account, however, OIS windows or icons do not appear at an auxiliary terminal unless directed to that terminal from the main console. Use *X Device Definition* to initially define or change window assignments that direct windows to an auxiliary terminal.

Log into the OISWIN account to perform remote window assignments to redirect windows after the console is operating or to initially direct windows to auxiliary terminals of an IIOIS40A/D console.

*Logging into the OISWIN account initiates an interactive program that allows viewing and changing window assignments. Refer to **Window Management** in the **OIS Configuration** section for a description of both *X Device Definition* and remote window assignments.*

Shutdown

The session manager and pull-down menus provide the shut down capability for the OIS application at the main console or

from an auxiliary terminal. Shutdown of the OIS application can also be done remotely from a VT-series terminal.

NOTE A shutdown also disables the application for auxiliary terminals to which the main console directs windows

To **shut down** the application running at a main console:

1. Open the session manager window by placing the mouse pointer over the session manager icon and double-clicking MB1.
2. Position the pointer over *Startup/Shutdown*.
3. Press and hold MB1, then drag the cursor to *OIS Shutdown*.
4. Release MB1. After a short time, all displays and icons disappear. Do **not** select *OIS Shutdown* again while the console performs its shutdown sequence. Look at the message window to determine the status of the shutdown

Typing **OISSHUTDOWN** at a logged in terminal or a terminal window performs the same function. For a driver cabinet (IIOIS40A/D), shut down the application using an auxiliary terminal or a VT-series terminal.

Reset

Some configuration procedures require a reset to enter changes to the OIS operating parameters. A reset also may be required due to a system problem. A reset of the OIS application does not require a physical shutdown of the entire console. The session manager and a pull-down menu provide the reset capability for the OIS application at the main console or at an auxiliary terminal. Reset of the OIS application can also be done remotely from a terminal.

To **reset** the application running at the main console:

1. Open the session manager window by placing the mouse pointer over the session manager icon and clicking MB1.
2. Position the pointer over *Startup/Shutdown*.
3. Press and hold MB1, then drag the cursor to *OIS Reset*.
4. Release MB1. After a short time, all displays and icons disappear, then reappear at reset completion. Do **not** select *OIS Reset* again while the console performs its reset sequence. Look at the message window to determine the status of the reset

Typing **OISRESET** at a logged in terminal or a terminal window performs the same function. For a driver cabinet (IIOIS40A/D), reset the application using an auxiliary terminal or a VT series terminal

OPENING A TERMINAL WINDOW

The operator requires a terminal window to perform operations such as running terminal utilities and executing system commands. An application can be run by typing the appropriate command at the dollar (\$) prompt of the terminal window.

To **open** a terminal window:

- 1 Open the session manager window by placing the mouse pointer over the session manager icon and clicking MB1.
- 2 Position the pointer over *Applications* at the top of the session manager window.
- 3 Press and hold MB1, then drag the cursor to *Login Window*.
- 4 Release MB1.
- 5 After a short time, the terminal window appears. Position the mouse pointer anywhere within the window and click MB1 to assign the keyboard to the window.
- 6 Type the name of an account at the *Username* prompt, then press ENTER (or Return). Normally, OISENGR would be used.
- 7 Type a password at the *Password* prompt, then press ENTER (or Return). The password does not appear on the screen.
- 8 After a short time, the dollar sign (\$) prompt appears.

To **close** a terminal window:

1. If not already open, open the terminal window.
2. Choose *Exit* from the *File* pull-down menu.

COPY SCREEN

NOTE The copy screen function prints only the portion of the screen contained within the borders of the O/S application window.

The *Print* option at the command line menu provides the ability to initiate a screen print of the current OIS application screen. The console can direct the printout to one of up to four network printers connected through a terminal server. The printers available for screen printing are different and completely separate from those designated for printing of logs generated by the console. The console currently supports the following types of printers for the copy screen function:

- DEC™ LJ250 (IIPT06)

- DEC LFO1 (IIPRT07).
- DEClaser 2150.
- HP Deskjet 550C (IIPRT08).
- HP LaserJet III

Before the *Print* option can function, the process engineer must perform *X Device Definition* to identify the node that is the print server node. The print server node is the node responsible for configuration of the printer, capture of the OIS application window, and directing the image to the print queue manager. Any main console running the copy screen software can be specified as the print server node for a particular window Refer to **X DEVICE DEFINITION** in the **OIS Configuration** section for procedures

Also before initiating a screen print, make sure a printer has been previously configured, and the desired printer has been selected to receive the print job Refer to **Selecting a Copy Screen Printer** and **Configuring a Copy Screen Printer** in this section for specifics.

NOTE When printing with the DEC LJ250 reduce the size of the window before initiating a screen print

To initiate a screen print

- 1 Press **COM'D LINE MENU**
- 2 Select *D Print*

To set the number of copies

- 1 Open the screen print configuration window
- 2 Click on the *Configure Printer* button After a short time, the *Configure Screen Copy Printer* window should appear on the screen.

NOTE To change the text string that appears in a configuration field position on the mouse pointer just before the starting character to change then press and hold MB1 Drag the pointer until it highlights all or only the desired portion of the text to change release MB1 Type the new text string

- 3 Enter the number of copies at the *Copies* field
4. Click on the *Save* button to save the configuration

To cancel the last queued screen print request

- 1 Open the session manager window by placing the mouse pointer over the session manager icon and clicking MB1.

WINDOW OPERATIONS

- 2 Position the pointer over *OIS Utilities* at the top of the session manager window
- 3 Press and hold MB1, then drag the cursor to *Abort Screen Copy*
4. Release MB1
5. When completed, the console writes a message to the message window to verify the result of the cancellation request Open the message window to view the results, refer to **MESSAGE WINDOW** in this section

Selecting a Copy Screen Printer

The console directs a screen print to one of four selected printers. To choose a printer:

- 1 Open the screen print configuration window. If a printer has not yet been configured, perform the steps given in **Configuring a Copy Screen Printer** in this section before continuing.
- 2 Choose a printer from the list of configured printers under the heading *Screen Copy Printer to Select/Configure*. Point to the desired printer and click MB1.
- 3 Click on the *Select Printer* button to enable the selection. The *Selected Screen Copy Printer* field should update to the name of the chosen printer.

Refer to **COPY SCREEN** in this section for procedures to initiate a screen print.

Configuring a Copy Screen Printer

Before a printer can be selected for screen printing, it must be configured. The console allows for four different configurations. The operator has a few options for configuring printers.

In a system having four different printers available for screen printing, for example, each configuration can be for a specific printer on the network. This allows selecting to which of the four the console sends a print job.

For those systems with only one printer for screen printing, for example, each configuration can be set up with different print attributes. In this case, the single printer can be configured four different ways. Each setup is dependent on the type of screen printing to be done. For example, a printer can be set up for gray scale printing in one configuration, and for color printing in another. This allows the operator to switch between the two without having to reconfigure the printer.

Each printer designated for screen printing must first be identified to the system using the **DEFINE_DEVICES** procedure. During

this procedure, the console automatically assigns a queue name to a printer to identify it to the print queue manager. The queue name is also used in the configuration procedures that follow to direct a print job to a specific printer. Refer to the *Operator Interface Station, Hardware Manual* for an explanation of the **DEFINE_DEVICES** procedure. A queue name is in the format:

`nodename.$RSCQn`

where

`nodename` Name of a main (or host) console

`n` Queue number from 1 to 4 that corresponds to printers one to four

To configure a printer.

- 1 Open the screen print configuration window
- 2 Choose a printer to configure from the list of printers under the heading *Screen Copy Printer to Select/Configure*. Point to the desired printer and click MB1.
- 3 Click on the *Configure Printer* button. After a short time, the *Configure Screen Copy Printer* page should appear in the window.

NOTE To change the text string that appears in a configuration field position the mouse pointer just before the starting character to change then press and hold MB1. Drag the pointer until it highlights all or only the desired portion of the text to change. Release MB1. Type the new text string.

- 4 Enter a name for the printer configuration at the *Configuration Name* field. The name should be meaningful since it is also the text that appears at the initial configuration page under the *Screen Copy Printer to Select/Configure* heading to identify this printer. The name should be descriptive enough to easily identify the printer and its configuration.
- 5 Click on next to *Queue Name* to call a list of queue names that allow directing a printout to a specific printer. The names correspond to the queue name assigned to a printer during network configuration. Choose one of the queue names.
- 6 Click on next to *Printer Type* to call a list of available printer types. Choose one of the printer types from the list or *UNDEFINED* by pointing to it and clicking MB1. The *Printer Type* field should update to show the selected type.

NOTE An HP LaserJet with a postscript cartridge installed or a DEC Laser 2150 can be used for copy screen printing. For details, choose the DEC LF01 printer type when using either of these printers.

WINDOW OPERATIONS

7. The remaining attributes determine the number of copies, orientation, invert option, window border option, and color mapping explained later in this section. Make any desired changes to these attributes. If the default selections do not require any changes, continue with the next step.

8. Click on the *Save* button to save the configuration.

Click on the *Reset* button before the *Save* button to restore the previous configuration.

Click on the *Cancel* button before the *Save* button to exit without saving any changes.

9. Click on the *Cancel* button to exit and return to the *Screen Copy Printer Set Up* page, or shrink the window to an icon.

Refer to **COPY SCREEN** in this section for procedures to initiate a screen print.

Print Attributes

The *Orientation* attribute selects either portrait or landscape printing.

The *Black/White Invert* attribute determines how the printer is to treat black and white colors. This allows inverting black and white in the printed version of the screen to change the normal black background to white and any white text or graphics to black. If *As Viewed* is chosen, the printout uses the same color scheme as on the screen.

The *Window Border* attribute determines whether or not the printed version of the screen contains the window border that appears around the OIS application window on the screen. Choose *Include* to have the border printed.

The *Color Mapping* attribute allows selecting either a color print out, or a gray scale or black and white printout depending on the type of printer being configured. The console automatically enables or disables the *Color* and *Grayscale/B&W* options depending on the type of printer previously selected to configure. If using an HP LaserJet III or a DEClaser 2150, choose the *Gray scale/B&W* option.

Considerations

The amount of time it takes to print an image depends on

Window size - the larger the window, the longer it takes to process the image.

Border option - when printing with the border on, the print head must travel the entire width of the image on every pass. Printing without a border reduces the travel distance of the print head, which speeds up the printing process. The effects of printing without a border are more evident when there is a large amount of blank space around the edge of the display.

Color mapping option - printing in color takes more processing time than printing in gray scale or black and white. Also, the data files for color printing are larger. This makes gray scale or black and white printing faster than color printing

Image complexity - the more complex the image, the longer the time required to process then print the image

The recommended configuration to minimize print time is:

- Gray scale/black and white.
- Invert black and white.
- No border.

SECTION 7 - PROCESS MONITORING

INTRODUCTION

The operator interface station (OIS) can present information on various aspects of a process. The information presented and the way that it is presented depends upon the particular process requirements. The console allows for flexibility when developing the responsibilities of the console, in particular process control and data acquisition operations

Because of variations in operation of the console and the displays that can be user-created, this section is limited to those operations performed through standard displays and the keyboard. Specifically, this section discusses

- Password log in and log out
- Accessing displays
- Tag operations
- Trend operations
 - Trend display
 - Trend control
 - Operator assignable trends
- XY plot operation and control
- Operator configurable displays

PASSWORD LOG IN AND LOG OUT

The operations that can be performed after start up depend on the key lock position, or password security if implemented. The console automatically logs in a default user during start-up. Which user depends on the password security configuration.

Log In For specific personnel to access all operations dictated by the access rights of their security level, a log in procedure must be performed.

To log in a password at the console

- 1 Press **COM'D LINE MENU** to call a bottom line menu.
- 2 Select the *F Password* option. This calls an input prompt to the screen that appears as *****

PROCESS MONITORING

3. Enter a valid password. Security maintenance personnel define passwords during password security configuration

NOTE The default passwords are **MAINT** for security maintenance personnel and **OPERATOR** for all normal operations

4. Press **[ENTER]**, the console prompts if an invalid password was entered. The top field in the keyboard status block at the lower left corner of the window identifies the user index number of the currently logged in user. Password log in also appears in the events and operator actions log.

NOTE A password log in remains in effect until changed by entering another password, automatic log out, or performing a log out procedure. To prevent unauthorized personnel from using the current access rights, log out before leaving the console.

A new password can be entered at any time without having to log out the current user. Repeat the log in procedure to enter another user password. An option defined during password security can be set to automatically log a user off the system and log in a default user when the console is inactive for a specified period of time.

Log Out A log out procedure cancels the current password access rights and logs in a default user. To log out at the console:

1. Press **[COM'D LINE MENU]** to call a bottom line menu.

2. Select the **G Log Out** option. As soon as it is selected, the user index number in the keyboard status block updates to the index number of the default user.

NOTE If the O/S application is reset, the console comes back on-line with the access rights of the last entered user. The console enters the default user after a complete shutdown and power up.

ACCESSING DISPLAYS

The OIS console uses several different displays to convey process information. The operator must access these displays to view that information. Depending on the OIS configuration and features built into user-created graphics, the operator can call displays either through keyboard selections or menu selections. Another option available through display configuration is for displays or pop up elements to automatically appear at the screen based on the occurrence of certain process events.

Menu Items

The process engineer can design menus into any graphic. The menu options are built-in, interactive display select command features of the graphic. The operator can use these built-in selects to directly access a particular display page. This requires

the operator to press an alphanumeric key sequence or select the menu item through an optional display select method Refer to the *Display System* section for optional select methods available for this console

An option available to the process engineer is to create a graphic that lists all system displays This graphic can incorporate built-in selection features for each of the displays listed The graphic can then be assigned to **DISPLAY SUMM** for easy access. The operator can, for example, press **DISPLAY SUMM** to obtain the list then press specific alphanumeric keys to call a particular display from the list.

Keyboard Access

The operator can access displays in several different ways through the keyboard, which include

- Assignable function keys
- Display control keys
- Annunciator display panel (ADP) pushbuttons

During OIS configuration, the process engineer assigns displays to assignable function keys and certain keys in the display control section of the keyboard. Refer to the *Keyboard and Peripherals* section for the location of these keyboard areas Pressing a function key or one of the display control keys calls an assigned display The operator can call a display at any time using any of these keys

If an optional annunciator display panel is installed, the process engineer can also assign displays to the pushbuttons of the panel. These pushbuttons are normally used for alarm processing Pressing any of the pushbuttons at any time calls an assigned display. Refer to the *Keyboard and Peripherals* section for an explanation of ADP operation.

Pressing an ADP pushbutton or assignable key that does not currently have a display assigned calls a default display This display is the *BLANK.DU* file on hard disk The default can be changed through annunciator display panel or keyboard configuration

Display by Name Access

A *Display by Name* option allows the operator to call a display by its name. This option requires the operator to know and enter the name of a desired display. The name entered must correspond to an assembled display file on the hard disk To call a display by its name:

1. Press **MISC MENU** A full page menu appears at the screen

PROCESS MONITORING

2 Select *C Display by Name* A *Display Name* input prompt appears at the bottom of the page.

3 Enter the display file name without its extension For example, to call a display defined in a file called **AREA1.DU**, enter the following at the prompt.

AREA1

4 Press **[ENTER]** after keying in the name The desired display then appears. If a file corresponding to the name entered does not exist, the console prompts with an error message

Display Not Found

Automatic Displays or Pop Up Elements

Depending on configuration, an entire display or a partial pop up element can be defined to automatically appear in place of, or at the current page Once configured, the console references a set of digital type tags to trigger the automatic activation of these displays or pop up elements This allows automatic display activation based on process changes

Automatic displays and pop up elements are configured in sets Each set contains a list of tags Each tag in the list has an associated assembled display (*.DU*) or an assembled pop up element (*.DL*) assigned A pop up element also requires an x,y coordinate to determine its position on the page

The triggering of an automatic display or pop up occurs when a digital type tag in the active set changes from its zero to one state This requires, however, that there is no previously triggered display or pop up, or the state of the digital type tag associated with the last triggered display or pop up element has returned to its zero state

Any display or pop up element triggered for automatic display operates as normal once it appears at the screen Any display or element designated for automatic display can also be called in the normal methods described previously During configuration, the process engineer assigns a master display and a termination display to a set

To **activate** a particular set and enable its automatic features, call the master display for the desired set to the screen Either the operator or automatic display function can do this

The console then monitors the list of tags defined in the set to trigger the automatic display function A set remains active until the operator or automatic display function calls a termination display assigned to the set, or another set is made active

The automatic display function for the current active set also deactivates when the operator manually calls a display (not a pop up) that is not a master display. The display being called can be part of a tag set as long as it is not a master display. In this case, the manually called display operates as normal, and the last active automatic display set will not trigger any displays or pop up elements.

To *reactivate* the previous set, either call its master display, or call the last display triggered by the set.

If configured, a denotation symbol assigned to the set appears to identify to the operator that the display or element is an automatic display or pop up element. For this function to work, however, a symbol file (.DL) must be created and assigned to the set during configuration of the Automatic Displays option. The denotation symbol does not appear for a display or pop up element if it is called to the screen manually using any of the methods previously described. Refer to **AUTOMATIC DISPLAYS AND POP UP ELEMENTS CONFIGURATION** in the *OIS Configuration* section for additional information.

User Task Activated

A user task interface provides the capability to write a program and have it executed by the operator at the console. This program has the ability to call up displays during its execution. Depending on the configuration of the console and displays, the operator can execute a program by pressing a function key or an ADP pushbutton, or by using any of the display select methods discussed in **DISPLAY AND CONTROL SELECT OPTIONS** in the *Display System* section.

The call up of a display by a user-written program can operate in two different ways at the console. By default, the console requires the operator to first acknowledge the display activation before the display is brought up on the screen. This requirement, however, can be disabled causing the activation of a display to immediately replace the current display.

If enabled, a dialog box that identifies the window number where the display is to appear displays at the upper left of the screen. The title bar of the dialog box shows the following text:

UTI Display Request for xxxx n

where *xxxx* is the OIS client name entered during *X Device Definition*, and *n* is the window number. Input focus is not automatically set for the dialog box when it appears to allow the operator to continue with any current operations.

The box also contains some dialog generated by the program, and two control buttons. The control buttons allow the operator to accept (i.e., *DISPLAY* button) the display and have it appear at the

screen or reject (i.e., *IGNORE* button) the display and cancel the call up

A time-out parameter in the user-written program, when put into effect, automatically initiates a rejection of the display call up if the operator does not respond to the call up within a certain amount of time. In this case, the operator must respond to the call up request promptly before the dialog box disappears. Unless the program is written specifically to initiate the call up of the display again immediately after a time-out, the dialog box does not reappear until after the operator executes the program again. The time-out can also be set to zero to have the program wait for a response indefinitely.

To respond to a display call up

- 1 Set input focus for the dialog box by placing the mouse pointer in the box and clicking MB1
- 2 Click on the *DISPLAY* button to accept the display call up, or click on the *IGNORE* button to reject the display call up

If accepted, the dialog box disappears and the called display appears at the indicated window replacing any current display at that window. If the window is currently shrunk to an icon, the console automatically opens the window. The dialog box disappears and a new display does not appear if the operator rejects the call up.

NOTE It is suggested that a dialog boxes be cleared before shutting down or resetting the console

Display Paging

The keyboard provides several keys used to move between pages and displays. Once a desired display is on the screen, the operator can perform the normal operations related to that screen.

The **BACK** and **FORWD** keys recall the last six displays previously viewed by the operator.

To use **BACK**:

1. Press **BACK** to call the display that was on the screen previous to the current display.
2. Continue to press the key to sequence backwards through additional displays until eventually returning to the current display.

To use **FORWD**:

- 1 Press **FORWD** to call the last of six previous displays

2 Continue to press the key to sequence forward through additional displays until eventually returning to the current display

The **MARK** and **RECALL** keys provide a bookmark function. The operator can mark a display page to recall it at any time in the future. Up to ten different displays can be marked for eventual recall.

To mark a display:

1. Press **MARK**. The console prompts with *Enter display number to MARK*
2. Press any number key from **0** to **9**. This becomes the number that must be entered to recall the display.

To recall a display

1. Press **RECALL**. The console prompts with *Enter display number to RECALL*
2. Press the number key previously selected using the mark function. Once entered, the desired display appears at the screen.

The **NEXT PAGE** and **PREV PAGE** function only at specific pages. As a general rule, a function identifies the requirement for using these keys by either presenting *NEXT PAGE* or *PREV PAGE* text or a *Page n of n* field. The process engineer can incorporate these keys as interactives in any user-created graphic.

TAG OPERATIONS

The operator accesses an operating parameters function to view the current operating information related to a selected tag. The information presented concerns the process variable or device, INFI 90 module or node, or OIS peripheral device that the selected tag references. For process variables or devices, the information relates to the inputs that control operation of a function block, and outputs of the function block. The outputs, in most cases, are the process control signals.

The display also gives the status of events and operator actions logging, tag reporting status, and alarm and alarm inhibit information for the selected tag. These are all OIS level operations. In addition, the display presents options for controlling tag operations, which include

- Disestablishing or reestablishing a point
- Inhibiting or enabling alarm reporting
- Primary display call up
- Substituting values

- Viewing block details
- Calling a tuning display for a STATION tag
- Calling a module problem report for an N90STA tag.
- Suppressing or allowing alarms for a DANG, DADIG or TEXT STR tag
- Turning exception reporting on or off for a DANG or DADIG tag
- Forcing a report from a DANG or DADIG tag when exception reporting has been turned off
- Reset the alarm state latch for a DADIG tag

Figure 7-1 shows an example of the operating parameters display

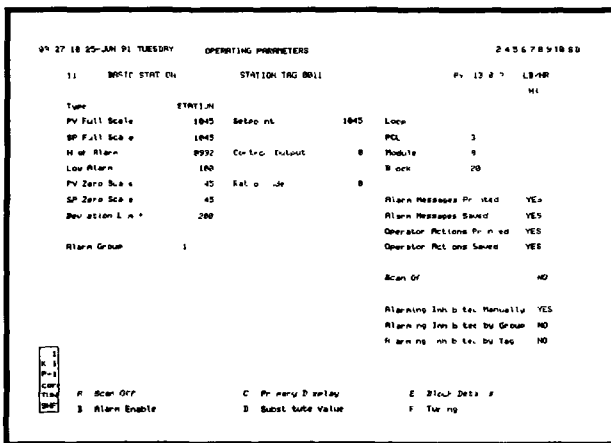


Figure 7-1 Operating Parameters

7PS0028A

Operating Parameters Display Call Up

The operator can call an operating parameters display in two ways, either by menu selection or a keyboard key. To call the operating parameters display

1. Press **GENL FCTNS MENU**, then select the following menu items in the sequence shown

C OIS Operations → A Operating Parameters

- OF -

Press **[OP PARAMS]**. This key allows calling the operating parameters for a tag at any time from any display page

In either case, the console presents a *Tag name or Index* input field

2. Key in a valid tag name or index number

3 Press **[ENTER]** The parameters for the desired tag appear

The **[OP PARAMS]** key also allows calling the operating parameters page for a tag directly without requiring any input Select the tag or tag element, then press **[OP PARAMS]**

After display call up, certain keyboard keys allow calling or sequencing through additional tag operating parameters displays

Press **[ESC]** to bring the *Tag Name or Index* field back to the screen This allows calling the operating parameters display for another tag Press **[ESC]** again to exit the display The screen returns to the *Operator Functions Menu* page

Press **[NEXT PAGE]** or **[PREV PAGE]** to sequence to the operating parameters display for the next or previous tag in the database

Operating Parameters Display Attributes

The information that appears, and operations that can be performed at the operating parameters display vary depending upon tag selection The attributes of the display itself, however, remain constant

Tag Description	At the top line of the display starting at the left, the index number, tag name, and tag description appear These are the descriptors set in the tag database for the tag
Value	At the far right of the top line is a value field The variable presented is either an analog value or digital state. In most cases, this field presents an output value related to the tag If the value presented is an analog exception reported value, an engineering unit descriptor (EUD) appears to the right of the value
	Some exceptions include the STATION and N90STA tags For the STATION tag, this field is the process variable (PV); the N90STA tag does not use this field
Alarm Comment	Under the tag descriptors, the display presents an alarm comment field. The text displayed in this field depends on the alarm condition of the selected tag The field remains blank if the tag is not in alarm Alarm comments associated with specific tag alarm conditions are determined by the configuration of the tag

PROCESS MONITORING

Alarm Status To the far right of the screen on the same line as the alarm comment field is an alarm status/quality/group field. This field presents all normal alarm and quality indications. The field also provides normal alarm processing capabilities, specifically alarm acknowledgment. The same conditions identified at this field appear at all other displays that use a five-position alarm status/quality/group field.

The quality indications that relate directly to this function are *i* for alarm inhibited, *x* for off scan, *s* for substituted and *//* for suppressed alarming.

Tag Type The *Type* field reflects the tag type selected. Attributes related to the tag type appear directly under the *Type* field and are dependent on the tag selected. Generally, the information contains scale and alarm limit levels, and additional values that can be user substituted.

For example, the set point, control output and ratio index values appear and can be substituted for STATION type tags. The status information related to a node or PCU module appear for an N90STA tag.

Function Block Address The *Loop/PCU/Module/Block* fields are the address of the function block within a PCU module that this tag is referencing.

Alarm Group An alphanumeric in the *Alarm Group* field identifies the alarm group to which this tag is assigned. The value will be either 0 for no alarm group, or 1 through 99 or *S*. A tag is assigned to an alarm group during tag configuration.

Tag Events The operating parameters display presents information on the type of events being logged for a particular tag. Event logging prints alarm events and operator actions events to a designated printer immediately as events occur, or periodically at a set schedule. Fields at this display reflect the event logging setup as defined in the tag database.

NOTE The process engineer sets attributes governing event and operator actions logging for a tag during tag database configuration. Events and operator actions logging requires additional configuration to enable data collection and operation.

Alarm Messages Printed if set to *NO*, alarm events for this tag do not appear in an events or operator actions log that prints continuously and immediately. Alarm events print immediately as they occur if set to *YES*.

Alarm Messages Saved if set to *YES*, the console is saving alarm events for this tag as they occur for periodic log printing or archiving. The console is not saving alarm events if set to *NO*.

Operator Actions Printed if set to *NO*, operator actions events for this tag do not appear in an events or operator actions log that

prints continuously and immediately Operator actions events print immediately as they occur if set to YES

Operator Actions Saved - if set to YES, the console is saving operator actions events for this tag as they occur for periodic log printing or archiving. The console is not saving operator actions events if set to NO.

Communications Status

The *Scan Off* field identifies a tag as being either established or disestablished with the loop Disestablished means that the tag is completely disconnected from communications with the loop. When the field is YES, the console is not receiving exception reports for a process point defined by the tag A NO at this field indicates normal communications with the loop The operator turns scan on or off through the operating parameters *Scan On/Off* option

Alarm Inhibit

If any of the *Alarm Inhibited* fields indicate a YES, the console does not present any of its normal alarm indications for this tag, which include an alarm group indicator, flashing alarm status field, alarm tone, and an entry in the alarm summary and events log The console presents all normal alarm indications if all fields indicate NO. An alarm status/quality/group field still presents alarm status indications (e.g , A, 2L, 3H, etc) and changes to an alarm color, but no other alarm indications occur

Alarming Inhibited Manually - the operator performs manual inhibiting through the operating parameters *Alarm Inhibit/Enable* option

Alarming Inhibited by Group - alarms for an entire alarm group can be inhibited If the selected tag is part of a group that has been inhibited, this field indicates YES Alarm group inhibiting is performed through the *Alarm Group Inhibit* function. Refer to **ALARM GROUP INHIBIT** in the **Alarm Processing** section for procedures to inhibit or enable an alarm group

Alarming Inhibited by Tag - inhibiting by tag is an automatic alarm inhibit feature configured in the tag database In this case, alarm inhibiting is based on the alarm status or state of another tag (process variable) A NO in this field indicates no automatic inhibiting A tag index number appears at this field if automatic inhibiting is in effect In this case, the tag configured to inhibit is in a certain alarm condition or state which causes the alarm indications for this tag to be inhibited The index number is of the tag defined in the database to automatically inhibit this tag (i.e., *Alarm Inhibit Tag* field)

Operating Parameters Display Operations

Scan Off

Option A appears as either *Scan Off* or *Scan On* depending on the current condition of the tag Press [A] to toggle between on and off

PROCESS MONITORING

The *Scan Off* and alarm status/quality/group field update to indicate the current condition. The operator can identify a scan off condition by

1. *Scan Off* field indicating a *YES*.
2. An *x* in the quality position of an alarm field (e.g., *x10*)
3. Value or state fields displaying a bad quality string.

Alarm Inhibit Option *B* appears as either *Alarm Inhibit* or *Alarm Enable* depending on the current manual alarm inhibit condition of the tag. Press **[B]** to toggle between inhibit and enable.

The operator can identify a manual alarm inhibit condition by

1. *Alarming Inhibited Manually* field indicating *YES*
2. An *!* in the quality position of an alarm field (e.g., *A!10*)

Primary Display The *Primary Display* option allows calling the primary display at which this tag appears. The display should be one that lets the operator perform any required actions related to the process point identified by the tag. Press **[C]** to call the primary display.

The console exits the operating parameters display to present a new display. A tag must have a primary display identified in its configuration for this option to function. If it does not, pressing **[C]** has no effect.

Substitute Value The *Substitute Value* option disestablishes a tag and allows the operator to enter a new value. Substitution is an *OIS* level operation only. A substituted value is not sent on the communication highway. Substitutions do not affect execution of a PCU module control scheme. When a substitution is made, the console uses the entered value in all of its operations as it would an exception reported value.

Substitution can be performed on all tag types except *N90STA* and *DEVSTAT* tags. For these tag types, the *Substitute Value* option is not available.

For the *DANG* or *DADIG* tag, this is a console level or local substitution only. This is not the same as selecting the user inserted value, which is a PCU module level substitution (global substitution).

To **substitute** a value

1. Press **[D]**, the console positions an input field at the first value field available for substitution. The input field can be moved to other fields using the cursor control keys. Refer to the **Keyboard and Peripherals** section for their location and function.

For a STATION tag, **SET**, **OUT** and **RATIO** can also be pressed to position the input field at the *Setpoint*, *Control Output* and *Ratio Index* fields respectively

The *Scan Off* field updates to YES, and the alarm field updates to x in the quality position as soon as the operator selects the *Substitute Value* option for an analog type tag. The quality position updates to s after making the actual substitution. The s applies for both analog or digital substitutions.

2. The operations that can be performed next depend upon the value being substituted

Analog value - key in a new value, or press the following keys in the station and remote control block section of the keyboard, not in the cursor control section



To effect a slow, ramping value change. This changes the value 0.2 percent per keystroke.



To effect a fast, ramping value change. This changes the value 4.0 percent per keystroke.

Digital state - press the following keys in the station and remote control block section of the keyboard to make a state substitution:



Sets a digital type of tag to a one state substituted output. Sets an MSDD tag to a three state substituted output.



Sets an MSDD tag to a two state substituted output



Sets a digital type of tag to a zero state substituted output. Sets an MSDD tag to a one state substituted output

Text string - key in the substitution text string. Press **TAB** to move to the *Alarm* field. Key in YES to put the tag into alarm, or NO to not

3. If keying in an analog value or text string, press **ENTER** to put the substitution into effect. Substitution takes effect immediately if using the ramping keys to change the analog value. A digital state substitution occurs immediately after pressing any of the control keys

4. The input field remains active on the screen to allow further changes to analog values. Press **ESC** to deactivate and remove the input cursor. The *Substitute Value* option must be selected again to make another digital state substitution for the tag

PROCESS MONITORING

To **unsubstitute** a value, press [A] to select the *Scan On* option. This removes the substitution and reestablishes loop communication for the tag.

Block Details The *Block Details* option can be selected to call a block details display for the current tag. The block details display presents information on the parameters controlling the function block that the tag is referencing. The option is not available for DEVSTAT, N90STA, INTDIG and INTANG tags. Refer to ***Block Details Display*** in the ***Process Control and Tuning*** section for an explanation of information and operations available through this display.

Tuning The *Tuning* option is available for STATION tags only. A tuning display for the STATION tag can be called by selecting this option. The tuning display allows adjusting loop control parameters, viewing the effects of these adjustments, and initiating station control. Refer to ***Station Tuning Display*** in the ***Process Control and Tuning*** section for an explanation of information and operations available through this display.

Problem Report The *Problem Report* option is available for N90STA tags only. A display listing detailed problem information related to a specific node or PCU module can be called using this option. The problem report is for the node or module being referenced by the N90STA tag. Refer to ***Module Problem Reports*** in the ***INFI 90 and OIS Diagnostics*** section for an explanation of information presented at this display.

Suppress/Allow Alarms The operating parameters page provides an alarm suppression control option after selecting a DANG, DADIG or TEXTSTR tag. Depending on the current status of the selected tag, the option appears as *Suppress Alarms* or *Allow Alarms*. This option activates or deactivates alarm suppression at the PCU module function block level. This is different than *Alarm Inhibit/Enable*, which enables or disables alarm indications at the console level only.

Press [F] to toggle between suppress and allow. If the tag is set to suppress, the module does not report any high or low level alarms, high or low deviation alarms, or high or low rate of change alarms. The console identifies the current alarm suppression status, and the type of alarm control being implemented by the PCU module function block under *Alarm Control* at the display.

The operator can identify a suppressed alarm condition for a DANG or DADIG tag at the alarm status/quality/group field. The status position of the field appears as // to indicate suppressed alarms.

On/Off Report The operating parameters page provides an option for changing the reporting status of a DANG or DADIG tag. Depending on the current status of the selected tag, the option appears as *On Report* or *Off Report*. This option turns reporting on or off at the PCU module function block level. This is different than *Scan On/Off*,

which locally disestablishes or reestablishes communication with a point.

Press **G** to toggle between on and off. The function block does not generate any exception reports when reporting is off. When the tag is initially set to off, the function block sends one final exception report to update the console.

The operator can identify a no report condition by an *N* appearing at the top right of the operating parameters page, and at the DANG or DADIG tag faceplate element.

Force Report The *Force Report* option for a DANG or DADIG tag allows the operator to force the DANG or DADIG function block to generate an exception report while the block is in a no report condition. Press **H** to initiate a forced report.

Latch Reset The *Latch Reset* option for a DADIG tag allows the operator to reset the alarm state latch if enabled in the function block. The alarm state latch function causes the block to remain at its current output state and alarm status when an alarm occurs. When latched, the output state and alarm status reported by the block does not update until the operator initiates a reset from the console, or the control logic initiates a reset.

TRENDING OPERATIONS

NOTE This section explains the trending operations using standard OIS trend displays and symbols referenced by these displays. The console provides the symbols as part of its symbol library on hard disk. The procedures and operations explained here remain the same for custom trend displays designed to provide the same capabilities. The escape commands defined in the display and symbol files during creation determine the trend displays capabilities. Refer to the *Display System* section for further explanation.

Trending provides a historical perspective of process conditions for analysis of current operations. The console references the data to time, or as a function of other process variables. Trend data for displays can come from three different sources:

The console provides the capability to directly gather and store trend data collected by the INFI 90 distributed trending system. This is local trend data collection. In this case, the data stores on the hard disk of the console for use by other trending functions.

The console can request trend data from an open access system (OAS), which gathers and stores data from the distributed trending system. This is remote trend data collection. For remote collection, the console begins local data collection after receiving historical data from the open access system to update the display presentation. Local data collection continues until the display is no longer on the screen at which time collection terminates. The console does not save any remotely collected data, therefore, the data is not available to other trending functions.

The last data source is the operator assignable trend capability of the console. This data is not distributed trend data.

The trending operations specifically explained here include:

- Information presented at standard trend displays
- Trend control through keyboard keys.
- Operator assignable trends

Refer to **OIS TRENDING** in the **INFI 90 System and OIS Overview** section for a discussion of the INFI 90 distributed trending system.

Trend Displays

The OIS trend operations use standard trend displays in varying sizes. These sizes range from a full screen display to 1/4 screen. Figure 7-2 is an example trend display. It shows the display as it appears after being accessed then selected by the operator. The display shown contains a standard, half size trend element. The trend display source file used to create the trend display shown in Figure 7-2 incorporates a **TRNDPVHF.DT** symbol source file.

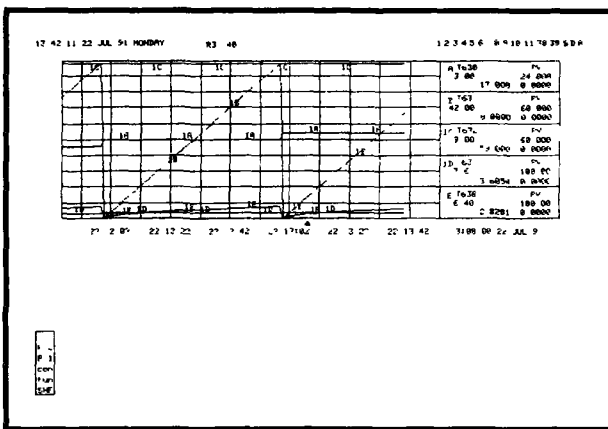


Figure 7-2 Trend Display

TPS0036A

Each trend element on a display can present trended information for up to five separate process variables. The display presents the historical data as a continuous line on an x,y graph. The x axis is referenced to time and the y-axis is the value of the variable.

The trend line for each variable on the graph is identified by a specific color and alphanumeric. The console periodically updates a trend line as new data is collected for that variable. The display presents newly collected values along with the historical values to maintain the continuously running line. An interruption in data collection can be seen as a break in the line.

Resolution refers to the amount of time between data samples. A 15-second resolution, for example, provides more detail for collected data. A one-minute resolution provides less detail.

During creation, the process engineer sets the initial resolution for a trend display. Also, display resolution is set as one of the attributes of an enhanced trend. This attribute overrides any display resolution set during display creation. The display resolution determines how often the console updates the trends at the display. The display resolution must either match the collection resolution of the trends at the display, or be a multiple of the collection resolutions. The resolution defined during display creation is only the initial resolution of the display. Zooming allows temporarily changing the resolution.

The initial display resolution for operator assignable trend displays and trend elements in operator configurable displays is the least common multiple of the display resolutions among all the trends within the display. The display resolution for standard trends is 15 seconds or one minute. The display resolution for enhanced trends is specified in the definition of the trend tag.

For trends saved to disk, the console first looks for data on its hard disk to present historical data when a trend display is called to the screen. The console retrieves historical data from a PCU module for display only trends. Once this data is retrieved, the console connects to the tag associated with the trend and any new data displayed is updated from exception reports rather than trend data reports. This type of updating continues until the display is removed from the screen. Once removed, the console disconnects the tag. The data saved to disk is always the data collected by the trend block and sent in a trend data message, not exception reported data.

For example, if a trend display is set to two-second resolution, the console first retrieves all historical data saved on the hard disk. It then updates the display with exception reported data. Every two-second interval represents the latest exception reported data.

An enhanced trend has a minimum resolution of one second. Under heavy load conditions, the console may not be able to update the data for a trend display every resolution period. No data is lost in this case, only delayed.

The console retrieves the last 30 minutes worth of data from a specified trend block for display only trends This data then displays and is constantly updated with the most recent trend data As new data is received, the old data remains visible until it scrolls off the screen or the operator exits the display then calls the display again

The attributes of a trend line appear at the right of the trend element (see Figure 7-2) The color and alphanumeric of a trend line associate it with the trend line attributes presented in one of the five boxes For example, a trend line in green with an alphanumeric of 1C corresponds to the trend attributes box with a green, 1C selector

Figure 7-3 identifies the attributes that appear for a trend Some of these fields do not appear until after selecting a trend element for control

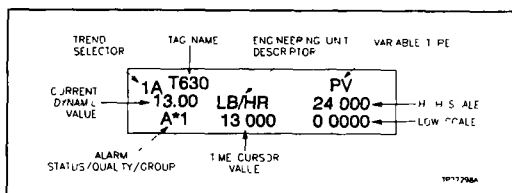


Figure 7-3 Trend Attributes

Trend Attributes

During trend configuration, the process engineer enters a tag name in one of the trend definition fields The name is that of the tag referencing the PCU module function block (process variable) for which a trend block is collecting data The console requires this tag name to present real time attributes associated with a trended variable

Alarm status/quality/group - the current alarm information received for the variable (tag) All normal alarm indications appear at this field The operator can acknowledge an alarm using normal alarm processing procedures Refer to the **Alarm Processing** section for alarm processing, conditions and indications

Engineering unit descriptor - the unit of measurement being reported for, and associated with the variable A PCU module reports an index number for an analog value the console uses to determine and display the proper engineering unit descriptor

Tag name the name of the tag associated with this trend This is the name of the tag entered during trend definition A tag name entered when defining a trend allows the console to associate real time data and information with the trended variable

Current dynamic value - this is the current value being exception reported for the process point. The field updates to reflect any current changes in the process variable.

High and low scale limit - the scale limits appear in two different ways. For user-created trend displays, the limits are set during display creation. The limits are the zero and span values received in an exception report for a point when the trend element is part of an operator configurable display or operator assignable trend display. The operator can change these limits after calling the trend display to adjust the presentation. These are local display changes only. A scale limit change does not affect the display configuration or PCU module zero and span set for a point.

Variable type - this field is configured as part of the symbol file used in creating the trend display. It identifies the type of variable being trended. The types that can appear include:

- PV - process variable
- SP - set point.
- CO - control output
- RI - ratio index
- DG - digital

Time cursor value - this field does not appear until after selecting a trend element for control. The time cursor value field indicates a historical value dependent on the time cursor position. The value corresponds to the value of the variable at the exact time and date determined by the position of the time cursor. The field also identifies through text the reason for any gaps or missing trend data.

Resolution Invalid - The display resolution time (e.g., 15-seconds) defined for the trend is less than the collection resolution time (e.g. one-minute) of a trend in the display. This occurs if the display resolution has not been defined correctly during display creation, or the operator zooms the display to a display resolution that provides more detail than that of the trend collection resolution.

Not In Yet - The console made a request for data but the data has not been processed or received yet.

Not Connected - The console cannot connect to the tag associated with the trend. This occurs if the tag type has been changed, or the tag has been deleted from the tag database. It also occurs if the tag index, trend mode or tag subtype

has been changed in the trend database, or a trend has been deleted from the trend database while the trend display is at the screen

Stats Suspect Occurs when at least one value used in a statistical calculation was bad quality

Missing The data is not available at the console. This is not an error. It appears when the console does not have access to the requested data since it is not stored on the hard disk. This normally occurs if the display is panned to a point past the data stored on disk.

Not Retrieved Indicates that the data is not currently available at the console, but it should be available due to a past archive to media. The data must be retrieved using archive data retrieval procedures. Refer to the **Recording Process Data** section for procedures.

Not Available Indicates that the data is not currently available at the console, and an attempt to retrieve the data from archive media was made but unsuccessful due to bad data on the archive media.

Data Error Indicates a read error encountered during an attempt to retrieve trend data from an archive media.

Invalid Trend Occurs when the trend display references a trend index number of an undefined trend. The process engineer determines the trend index numbers the display is to use during display creation.

Internal Error Some internal processing error occurred.

A time cursor position field appears directly below the trend at tributaries boxes (e.g., 13 00 08 22-JUL-91) to identify the current cursor position (see Figure 7-2). The field updates as the time cursor moves along the trend.

Time Span Each display presents a series of time increments along the bottom of the trend graph portion of the screen (see Figure 7-2). A time increment appears at every other vertical scale line. For example, the time increments in Figure 7-2 appear as 22 12 02, 22 12:22, 22-12 42, etc. Each displayed time increment corresponds to the vertical scale line directly above it. The time increments shown in Figure 7-2 represent a time span of ten minutes between each line. This time span can be increased or decreased using trend zooming.

Trend Control

Trend display control features allow moving, expanding, shrinking and magnifying a trend presentation through keyboard actions. Trends, specifically distributed trends, can appear as part of a user-created graphic or in an operator configurable display. In either case, the functions available for manipulating the trend presentation remain and operate the same. The control features affect the display presentation only, not the PCU module configuration or stored trend data. Any changes made to the trend presentation remain in effect only while the trend element displays at the screen.

NOTE Trend elements also appear in tuning displays or operator assignable trend displays. They present the same type of information as displays using distributed trending data but differ in resolution due to the way that data is collected for these trends.

Several options are available for calling a trend display to the screen. When a trend element is part of an operator configurable display, the *Display by Name* option is normally used. A user-created trend can be assigned to any available keyboard key during keyboard configuration, or also called by name.

Move time cursor - the operator can move the time cursor along the trend to position it at a specific time and date. This allows viewing the value that a variable was at during a particular time instant. The operator can also align the time cursor with a specific point on a trend line. This allows determining the exact time and date that a process disturbance occurred.

The time cursor can be moved using keyboard keys or panning. A time cursor value field for each trend displays the value of the variable at the current time cursor position.

Modify scale range - the high and low scale limits associated with each process variable can be increased or decreased individually. The current data and any historical data to which the time cursor is moved displays at the newly entered scale range.

Pan - a pan function moves the time cursor to show historical data values for each of the variables. A time cursor position field indicates the exact time and date position of the cursor.

Zoom - a zoom function expands or compresses the time span of the element for easier trend analysis. Negative zooming decreases the time span between each vertical scale line, positive zooming increases the time span.

Magnify - a magnifying glass feature highlights a limited section of the trend display. The operator can use this glass to determine the exact time a process disturbance occurred without having to change the entire trend display presentation. The trend inside the magnifying glass can be zoomed to increase or decrease the

PROCESS MONITORING

time span resolution, and the time cursor can be moved within the glass to determine more exactly the time and date of a trended value.

Enable Trend Control

A trend element must first be enabled for active control before the operator can initiate any of the previously explained trend control functions. All trend control keys are located in the cursor and trend control section of the keyboard. Refer to the *Keyboard and Peripherals* section for their location.

Enter any one of the alphanumeric trend selectors that appear for an element, or use any optional control select method to enable the element. Refer to *DISPLAY AND CONTROL SELECT OPTIONS* in the *Display System* section for an explanation of alternate control select methods available for this console.

Any of the five possible selectors for a single graph element can be entered. For example, if an element contains selectors 1A through 1E, [1] then [C] can be pressed to enable control for that trend element. Besides the addition of a time cursor, time cursor position field and time cursor value fields, the outline of the trend attributes boxes highlights to identify an element as enabled.

Disable Trend Control

Press [ESC] at any time to disable trend control, which resets the display back to its original default presentation.

MOVE TIME CURSOR

The time cursor and its related display fields appear after selecting a trend element. The trend cursor appears along the bottom of the trend graph. The operator can move this cursor along the graph to view historical, trended values collected for a variable. Initially, the time cursor positions itself at the right of the graph at its home position.

A time cursor position field appears under the trend attributes boxes to indicate the current cursor time and date position. When the time cursor is at its home position, the time cursor position field updates its time and date as the console receives new data reports. The field shows the time and date of the most recently received data. It updates at intervals dependent on the display resolution. The resolution determines how often the display updates. The displayed time and date also follows any time cursor movement and increments or decrements to show the new cursor position.

The time cursor value field for each trend also updates when the time cursor is moved. The value in each of these fields is the value of the variable at the time cursor position. While the cursor is at its home position, these fields update to newly received trend data values.

To move the time cursor, press:



Moves the time cursor back in time.



Moves the time cursor forward in time

These keys are normally used to move the cursor in small increments. The panning options can be used to make significant changes in the time cursor position.

The amount of time movement that each press of these keys represents depends on the time span (or zoom factor) of the graph. For example, if the time span between each vertical scale line is ten minutes, each press of the time cursor movement keys represents a one-minute movement.

Press **[HOME]** to reset the cursor to its home position.

MODIFY SCALE RANGE

When a user-created trend display is first called, the scale ranges for each trended variable are those set during creation of the display. For operator configurable displays with a trend element or operator assignable trend displays, the limits in most cases will all be set differently. This is because the high and low scale limits for each trend reflect the zero and span values set in a function block referencing the variable. The varying scale limits may or may not be desired. In either case the limits can be adjusted.

To change the scale limits of a variable:

1 With the element enabled, select the specific variable to change, or any variable by entering its alphanumeric selector. An input field appears at the high scale limit value of the selected variable. This field enables scale range changes.

Once the input field is on the screen, it can be moved to any scale limit for any variable by pressing **[TAB]** or **[TAB BACK]**.

2 Enter a new high or low scale limit for each variable to change. Both the high and low scale can be changed, or only one of the limits if desired.

3 Press **[ENTER]**; the display updates to the new scale limits, and both current and historical values for each variable conform to their newly entered range limit.

NOTE It is important to remove the input cursor from the screen when done. The operator cannot perform some of the trend control functions while it is on the screen.

4 Press **ESC** to remove the input cursor

The scale limits return to their original values after exiting the display. At the next display call up, the scale ranges are again the default or zero and span values.

PAN

The operator can use panning available at trend displays to quickly move the time cursor backward or forward in time, or to a specific time and date. Figure 7-4 shows a trend display with panning activated.

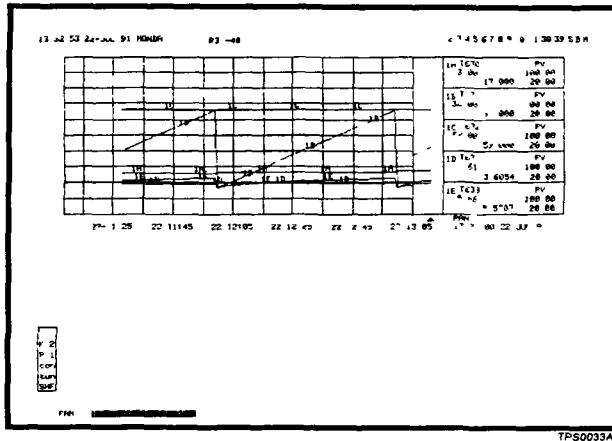


Figure 7-4 Trend Display - Panning Enabled

An option available during trend display creation is to have the element display an update window. This window can be seen in Figure 7-4. As the time cursor is panned back to a historical time and date, this window continually updates to show current trend data from newly received trend reports.

To pan to a specific time and date.

- 1 With the element enabled, press **PAN**. This calls a **PAN** input field to the screen. The field appears at the lower left corner of the screen as shown in Figure 7-4. The time and date in the field is the last entered time and date, or the current time cursor position.

- 2 Enter a desired time and date of historical data to view.

3 Press **[ENTER]**. The trend display updates with the time cursor positioned at the indicated time and date

NOTE It is important to remove the *PAN* input field from the screen when done. The operator cannot perform some of the trend control functions while it is on the screen.

4 Press **[ESC]** to clear the *PAN* input field from the screen

To randomly pan backward or forward in time, with the element enabled press:



Moves backward in time to view historical data.



Moves forward toward the current time and date

When using the keys, the amount of time panned depends on the current time span (or zoom factor) of the display. As a general rule, each press moves the display backward or forward half the time span of the entire trend graph. For example, if the entire trend graph time span is one hour, pressing either of these pan keys displays the next or previous 30 minutes of data.

PAN appears under the trend attributes boxes to indicate that the element has been panned (see Figure 7-4). The operator can zoom while the display is panned.

Press **[HOME]** to reset the time cursor and display back to the current time and date. This disables panning, and removes the *PAN* indication and update window.

ZOOM


The operator can use zooming features available at trend displays to increase or decrease the amount of trend data (trend line) displayed. Figure 7-5 shows a trend display with zooming activated.

Zooming changes the trend presentation by increasing or decreasing the time span, thereby decreasing or increasing the amount of trend line presented. Positive zooming increases the time span or amount of time between each vertical scale line, which makes the presentation look like it is contracting. Negative zooming is just the opposite.

The operator can zoom in two different ways. A display can be zoomed by entering a zoom factor from 9 to -9, or using keyboard keys.

To enter a zoom factor

1. With the element enabled, press **[ZOOM]**. This calls a *ZOOM* input field to the screen. The field appears at the lower left corner.

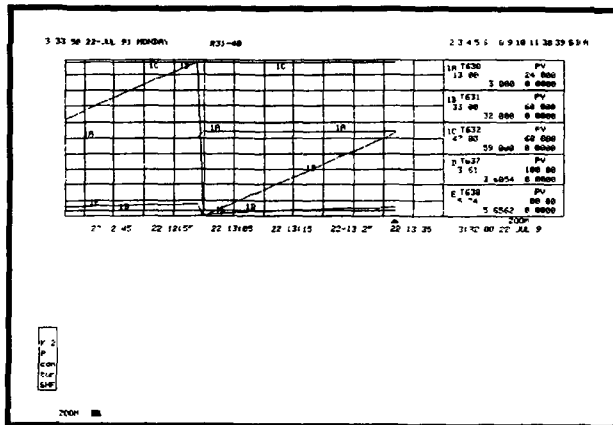

TPS0034A

Figure 7-5 Trend Display Zooming Enabled

of the screen as shown in Figure 7-5. The factor that appears in the field is the last entered factor.

- 2 Enter a desired zoom factor. Enter any number from 1 to 9 to perform positive zooming or -1 to -9 for negative zooming.
- 3 Press **[ENTER]**, the trend display updates at the entered factor.

NOTE It is important to remove the ZOOM input field from the screen when done. The operator cannot perform some of the trend control functions when it is on the screen.

- 4 Press **[ESC]** to clear the ZOOM input field from the screen.

To randomly zoom, with the element enabled, press



Performs positive zooming



Performs negative zooming

The amount of zoom per keystroke depends on the current time span of the display.

ZOOM appears under the trend attributes boxes to indicate that the element has been zoomed (see Figure 7-5). The operator can pan while a display is zoomed.

Press **[HOME]** to reset the display back to its original time span. This disables zooming and removes the *ZOOM* indication

MAGNIFYING GLASS

The operator can move the time cursor, then enable a magnifying glass feature at any time. Figure 7-6 shows a trend display with magnifying glass enabled

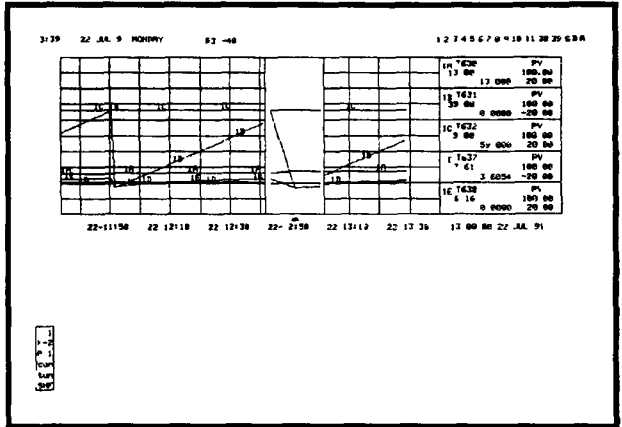


Figure 7-6 Trend Display - Magnifying Glass Enabled

The magnifying glass can be used to highlight a portion of the trend graph. It allows the operator to determine a time and date or value more accurately without having to change the entire display presentation. Once enabled, the operator can move the time cursor within the magnifying glass or zoom the trend lines within the glass for accurate analysis.

The initial amount of trend line displayed in the magnifying glass depends on the zoom factor set for the element. The glass can be zoomed down to show a two-minute segment of the trend graph.

To enable the magnifying glass

1. Position the time cursor at a desired segment of the trend graph. The time cursor movement keys or pan option can be used to position the time cursor. The cursor must be moved from its home position to enable the glass.
2. Press **[ENTER]**. The glass appears at the time cursor position.

3. Press



To fine tune the glass position

Once at the desired position, the magnifying glass must be made active to allow its inside operations Press



The next operations that can be performed are time cursor movement or **negative** zooming. Attempting to positive zoom past the initial presentation of the glass clears it from the screen

Zoom To zoom inside the magnifying glass, press



Performs positive zooming



Performs negative zooming

Time Cursor The time cursor can be moved within the glass by using the normal time cursor movement keys. A pan can be done within the glass, but only with the keys and not the PAN field. The amount of pan depends on the zoom factor of the glass.

Remove Glass Press [ESC] or [HOME] to remove the magnifying glass from the screen. The [HOME] key both removes the glass and returns the display to its original presentation. The [ESC] key removes the glass while leaving the display at its current presentation.

Operator Assignable Trends

The operator assignable trends function allows the operator to create two types of trends. A tag trend that trends variables that are defined as tags in the tag database, and a function block output trend. The block output type can be used to trend function blocks in a PCU module that do not exception report values, which means they cannot be defined as tags.

Operator assignable trends do not require a trending block in the PCU module configuration. Therefore, they do not use data collected by the INFI 90 distributed trending system.

The data collection method and resolution also differ from distributed trends. The console collects and stores the data rather than a PCU module. Data collection occurs every two seconds for each operator configurable trend, which makes trend resolution two seconds. The console can store on its hard disk at least two hours of trended data. Operator configurable trends are also referred to as **fast trends**.

The console provides two operator assignable trend displays, each display having two standard 1/4-screen trend elements. As normal, up to five trends can appear on a single trend element. The operator can create up to 20 operator assignable trends. There are, however, some guidelines that must be followed when creating these trends. The following text provides further explanation. Refer to *Trend Displays* in this section for an explanation of the information presented at operator assignable trend displays.

TREND ASSIGNMENTS

The operator must first define an operator assignable trend before the console begins collecting any data. To call the display used to create an operator assignable trend (see Figure 7-7), first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown

- B OIS Ushntes
 - ↳ E Operator Assignable Trends
 - ↳ F Operator Trend Assignments

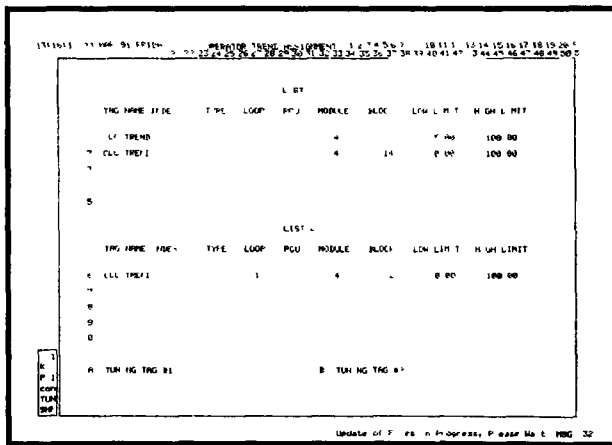


Figure 7.7 Operator Trend Assignments

There are actually two trend assignment displays. The second page can be called by pressing either **NEXT PAGE** or **PREV PAGE**. Both pages are the same except that the first page defines *LIST 1* and *LIST 2* trends, the second page *LIST 3* and *LIST 4*. Each list defines the trends that appear at a specific trend element, five trends per element.

The console can collect, store and display data for up to 20 operator assignable trends. The 20 can be a mix of tag and block output type trends. Each display and trend element can display any combination of trend types. Only six of the 20 can be block output trends. For example, if the operator defines six block output trends, the fourteen remaining can only be tag trends.

During the configuration process, certain fields may or may not be accessible depending on the trend type. The fields to define for each type trend are

Tag trend - TAG NAME/INDEX, TYPE (STATION tag only), LOW LIMIT and HIGH LIMIT.

Block output trend LOOP, PCU, MODULE, BLOCK, LOW LIMIT and HIGH LIMIT.

Tuning Tags

The console uses operator assignable trends in the trend element that is part of a station tuning display. The tuning display trends three variables, which count as three block output trends. If two tuning tags are active, at least one must be cleared to define any block output trends. Both displays must be cleared to define more than three block output trends.

The console may also require deleting some block output trends to call a station tuning display. If there are three or less block output trends, one station tuning display can be active. Four or more and the console will not allow calling a tuning display.

The TUNING TAG #1 and TUNING TAG #2 fields have two purposes. They indicate whether there are active station tuning display tags, and allow clearing or deactivating collection for tuning displays. The only valid operation to perform at these fields is to clear them. This clears a tuning display making room for additional operator assignable trend entries, or another station tuning display.

Define Trends

The operator can configure four lists of trends, five trends per list. Each list defines up to five trends that appear in a single trend element of an operator assignable trends display. Each trend is a separate line on the trend graph identified by its color and associated alphanumeric.

To define or edit a trend

1. Press **[NEXT PAGE]** or **[PREV PAGE]** to select which trend lists to define.

2. The *Select Field* input prompt calls an input cursor to the display and allows positioning it at any desired row. Enter a 1 to 10 selector, then press **[ENTER]**. Key in the number of an existing trend to edit that trend, or the number of a blank row to define a new trend.

Once the input cursor is at the display, additions or modifications to both lists can be performed. Use the cursor control keys to move the input field to any desired row or field.

Press **[ESC]** at any time after the cursor appears, to call the *Select Field* prompt back to the screen.

3 For a tag trend, define the following fields:

TAG NAME/INDEX - enter the tag name or index number of the desired tag to trend. This must match a tag defined in the tag database. If an index number is entered, moving the cursor from this field updates the entry to a tag name. Once a tag name or index number is entered, the console fills in the remaining fields after pressing **[ENTER]** or moving to another field. The console does not allow access to the address fields after entering a tag name or index.

TYPE - the type field can be specified for a STATION tag only. This determines the station variable to trend. Enter either **SP** (set point), **PV** (process variable), **CO** (control output) or **RI** (ratio index).

For a block output trend, define the following fields:

LOOP, PCU, MODULE and BLOCK - enter the function block address of the block output to trend. The **BLOCK** field determines the output that the console trends.

The console checks the function block address entered to see if it matches any configured tags. If a match is found, the console automatically enters a tag name and fills in all of the other fields making the trend a tag trend.

The console automatically fills in the **LOW LIMIT** and **HIGH LIMIT** fields when entering either type of trend. These fields set the scale limits the trend element initially uses. The limits can be adjusted at this display, or later after calling the actual operator assignable trend display. If set here, the display defaults to these limits every time the operator calls the display.

4 Press [ENTER] to save. If required, press [NEXT PAGE] or [PREV PAGE] and repeat Step 2 to define the next two lists.

5 Press [ESC] once to call the Select Field prompt to the display. To exit the page entirely, continue to press [ESC] to exit to the operator trend assignment menu. This menu provides the options for calling the operator assignable trends displays.

The operator must call an operator assignable trend display to see the results of these entries. Separate menu options are available for calling list 1 and 2 trends, and list 3 and 4 trends. Refer

PROCESS MONITORING

to **OPERATOR ASSIGNABLE TRENDS DISPLAY CALL UP** in this section for the procedures.

Delete Block Output Trend

To delete a block output trend

- 1 Clear any one of its address fields
- 2 Move out of the field, then press **[ENTER]** to save the deletion

Delete Tag Trend

To delete a tag trend

1. Clear its **TAG NAME/INDEX** field.
2. Move out of the field, then press **[ENTER]** to save the deletion

Delete Tuning Tag

A tuning tag must be deleted in some cases to define block output trends. Each tuning display counts as three block output trends. If a tag name appears at one of the *Tuning Tag* fields, a tuning display is active for that tag. Refer to **Station Tuning Display** in the **Process Control and Tuning** section for information on station tuning displays.

If two tuning displays are active, a block output trend cannot be defined. To make room for entering block output trends, this display provides a means of deleting any active tuning display trends.

To delete a tuning tag

1. Press **[ESC]** to call the *Select Field* input prompt if it is not currently at the screen. Key in either **A** or **B** depending on which tuning tag to delete.
2. Press **[ENTER]** to position an input cursor at the desired tag field.
3. Press **[CLEAR]**, this is the only valid option for either of these fields.

NOTE If the tuning display is currently called at another display, it cannot be cleared.

4. Press **[ENTER]** to save the deletion and clear the tuning display.
5. Press **[ESC]** to leave the field and call the *Select Field* prompt.

OPERATOR ASSIGNABLE TRENDS DISPLAY CALL UP

The operator can call an operator assignable trends display at any time through menu selections. A display presents each

trended variable defined through trend assignments as a continuous trend line. Two separate trend displays can be called. The first is for trends defined in LIST 1 and LIST 2 during trend assignment, and the second for LIST 3 and LIST 4 trends

To call an operator assignable trend display, press **(GENL FCTNS MENU)**, then select the following menu items in the sequence shown.

```

B OIS Utilities
  |
  |→ E Operator Assignable Trends
      |
      |→ B Trend Display List 1 & 2
  - or
  
```

```

B OIS Utilities
  |
  |→ E Operator Assignable Trends
      |
      |→ C Trend Display List 3 & 4
  
```

Press **(ESC)** or call another display to exit the trend display

XY PLOT OPERATIONS

NOTE XY plots do not currently support enhanced trends

The XY plot function presents pairs of process variables in an x,y graph format The x axis is determined by one process variable, the y-axis another.

The variables that appear at an XY plot depend on a plot index parameter entered during the creation of the display Each plot index defines a single plot, up to 80 indexes can be defined

The process engineer defines the characteristics of a plot during XY plot definition Specifically, this procedure defines

- Data source (tag data or trend data)
- Initial update mode.
- X-axis variable
- Y-axis variable.
- Initial x-axis and y-axis high and low limits
- Conditions that control plot clearing
- Data collection resolution.
- Maximum number of samples

Two types of plot indexes can be created The data source defined for a plot determines whether the data is exception reported tag values (tag source) or distributed trend data (trend source)

Refer to *XY Plot Definition* in the *OIS Configuration* section for further explanation of data source and plot index definition, also for XY plot display configuration requirements

XY Plot Display

The OIS console provides standard XY plot displays that can be incorporated into any process operations. The displays vary in size from one-half screen to a full screen display. An XY plot display is normally called by name or through an assignable function key. Figure 7-8 is an example plot display. The display is the *XYFFLS.DT* source file

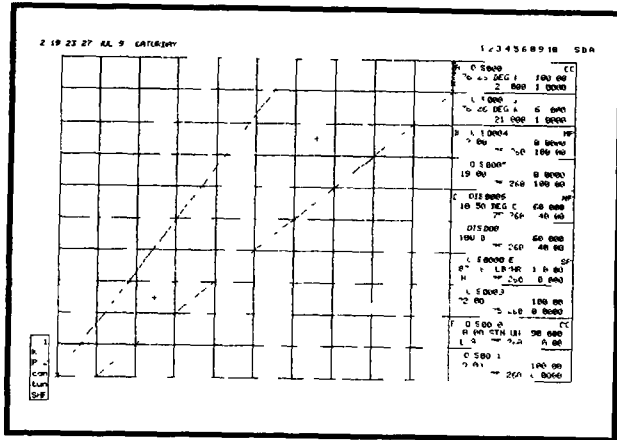


Figure 7-8 XY Plot

TPS0047A

A single XY plot element can present information for up to five separate plot indexes (i.e., five pairs of variables). It presents the plot information as either a single point, a series of dots, or a continuous line on an x,y graph. The console uses a cross hair (+) pointer to indicate the most recent plotted point, and updates the pointer position as the console receives new values. Each plot and its pointer are identified by a specific color on the graph.

The resolution of a plot determines how often the display updates. While an XY plot display is active, the console collects data at the rate set during plot index definition. These definition pages allow activating or deactivating data collection for a plot. For a tag plot, the resolution can range from seconds to days. A trend plot resolution is either 15 seconds or one minute.

The attributes of a plot appear at the right of the display (see Figure 7-8). The color of a plotted point and pointer associates it with the attributes presented in these boxes. For example, a plot in green corresponds to the attributes with a green selector. Each plot has a pair of related attributes, with the top box in the pair being the x-axis attributes, the other being the y-axis attributes.

Plot Attributes Figure 7-9 identifies the attributes that appear for each variable of a trend or tag plot

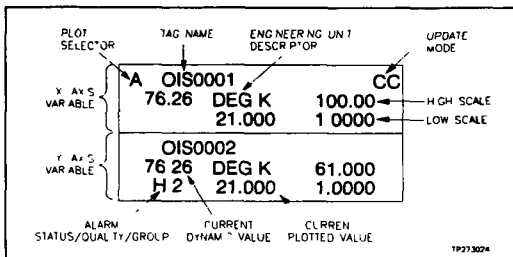


Figure 7-9 Plot Attributes

During plot definition, the process engineer enters two tag names, each relates to either the x axis or y-axis variable. The name is that of the tag referencing the PCU module function block (process variable) for which a plot is collecting data. The console requires these tag names to present real-time attributes associated with each variable of a plot whether trend or tag type.

Update mode - an update mode indicator identifies the current mode for the plot. The initial indication is the update mode set during plot definition. The mode indicator appears as

- SP single point
- MP multipoint
- CC - continuous curve

Alarm status/quality/group the current alarm information received for the variable (tag). All normal alarm indications appear at this field. The operator can acknowledge an alarm using normal alarm processing procedures. Refer to the **Alarm Processing** section for alarm processing, conditions and indications.

Engineering unit descriptor - the unit of measurement being reported for, and associated with the variable. A PCU module reports an index number for an analog value the console uses to determine and display the proper engineering unit descriptor.

Tag name - the name of a tag associated with the plot This is the name of the tag entered during plot definition, which allows the console to associate real-time data and information with a specific plotted variable

Current dynamic value - this is the current value being exception reported for the process point. The field updates to reflect any current changes in the process variable

High and low scale limit - initially, the scale limits are set at the high and low scale values entered during plot definition The operator can change these limits after calling a display to adjust the presentation. These are local display changes only A scale limit change does not affect the plot definition values.

Current plotted value - this is the current plotted value The field updates as each new value is plotted

A legend can be incorporated into a custom XY plot display during its creation if desired The plot definition defines the text of the legend

XY Plot Control

XY plot control options allow adjusting the plot presentation The scale and update mode changes made while a plot display is at the screen are temporary changes After exiting, the display reverts to its original presentation

Scale change (SC) - the scale change command allows adjusting the high and low scale range for each plot individually

Update mode change - a plot defaults to the update mode set during its definition The update mode options allow changing the update mode while the plot is at the display The update modes are:

Single point (SP) The console updates a plot as a single point The current received data is identified by the position of the cross hair (+) pointer Historical points do not appear in this mode

Multipoint (MP) All plotted points remain on the screen as a series of dots The most recent plotted point identified by the cross hair

Continuous curve (CC) All plotted points connect as a line The most recent plotted point identified by the cross hair

For the continuous curve and multipoint plots, up to 480 samples can appear on the graph at one time depending on plot definition Once the maximum is reached, the last plotted points

scroll off the graph. A clear feature can be implemented during definition to clear plotted values after a certain trigger condition is met.

Select Plot The control features are set on a per plot basis. To change the presentation using any of the control commands, select one of the plot elements. Either enter its selector through the keyboard or use an optional method of selection. A *X TARGT MODE*: control prompt appears and the outline of the attributes box highlights after the element has been selected. Refer to **DISPLAY AND CONTROL SELECT OPTIONS** in the *Display System* section for a description of alternate select methods.

The location of the control prompt depends on parameters set during display creation, but normally it appears under the attributes box. The *X* portion of the field indicates the currently selected and active plot for control (e.g., A, B, C, D, E). The following control options can be performed through the *X TARGT MODE* prompt.

To change the *scale limits* for a selected plot:

1. At the *X TARGT MODE* prompt, enter **SC** then press **[ENTER]**. An input field appears at the high scale limit value of the selected plot. This field enables scale range changes.

Once the input field is on the screen, it can be moved to any scale limit of the selected plot by pressing **[TAB]** or **[TAB BACK]**.

2. Enter a new high or low scale limit for each plot to change. Both the high and low scale can be changed, or only one of the limits if desired.

3. Press **[ENTER]**, the display updates to the new scale limits, and both current and historical values for each plot conform to their newly entered range limit.

4. Press **[ESC]** to remove the input cursor.

To change the *mode* of a selected plot:

1. At the *X TARGT MODE* field, type:

SP single point mode

MP - multipoint mode.

CC - continuous curve mode

2. Press **[ENTER]**. The display updates to the new mode as soon as this key is pressed.

Help A help option (HP) is available at any time to call a list of *XY* plot commands that can be entered at the *X TARGT MODE* prompt.

PROCESS MONITORING

Enter **HP** at the **X TARGT MODE** prompt to enable the help option. A list of available operator control actions appears at the bottom of the screen. Press **(NEXT PAGE)** or **(PREV PAGE)** to move between the lists. The list appears as

<i>SC - Scale Change</i>	<i>ED - Edit File</i>
<i>SF - Save into File</i>	<i>SP - Single Point</i>
<i>HP - Help</i>	<i>BF - Background File</i>
<i>CC - Continuous Curve</i>	<i>CL - Clear the Plot</i>
<i>MP - Multi Point</i>	

Plot Data Background Curves

The console provides an option available at XY plots to save a snapshot of the current collected plot data. The data is saved in a hard disk file, with the file having a user-defined name. Once saved, the plot data can then be called back to the display as a background plot at any time by entering its name. Each plot file contains information for a single plot, not the entire display. An option for editing this data or creating this background data is also provided.

Commands for saving, viewing and editing plot data files are entered at the **X TARGT MODE** prompt. The commands include

- SF** - save collected plot coordinates to file
- ED** - edit a file
- BF** - display a background file of plotted coordinates
- CL** - clear background curves from plot display

Save collected plot coordinates to file - a prompt **FILE NAME** appears in the control area after entering **SF** at the **X TARGT MODE** prompt. Enter a file name of up to eight alphanumeric characters. The background files are kept in a single directory on disk (**[DATA.USN59]**) in order to group them for transfer. The names given to the background files should be meaningful. The data coordinates will be saved to the named file after pressing **(ENTER)**. Control returns to the **X TARGT MODE** prompt when this operation is complete.

Edit a file - this function builds or modifies a background file. The prompt **FILE NAME** appears after entering **ED** at the **X TARGT MODE** prompt. Enter the name of an existing file to edit, or a new name to create a background file. If the file exists, it displays on the graph as a background curve. Otherwise, the curve is built from data entered.

The prompt **XY XXXXXX YYYYYY** (where **XXXXXX** and **YYYYYY** are the x-axis and y axis values) appears after entering the file

name. The input field is placed on the x-axis value of the first coordinate pair to allow editing

To edit coordinates of a background file:

1. Press:



To move the input field between the two coordinates Key in a new coordinate value if desired

- 2 Press **TAB** and **TAB BACK** to view the next or previous coordinate pair respectively. The display updates after pressing either of these keys

3. Repeat Steps 1 and 2 for each coordinate pair until the desired presentation is created. Once completed, press **ENTER** to save all changes to a background file, or press **ESC** to abandon the changes and return control to the *X TARGT MODE* prompt.

Display a background file of plotted coordinates - the prompt *FILE NAME* appears in the control area after entering **BF** at the *X TARGT MODE* prompt. Enter the file name that was created using either the **SF** or **ED** commands. After pressing **ENTER**, a continuous curve for this data file is drawn on the screen. The color of the curve is white. A maximum of one background curve can display within the graph element.

A background file can be deleted from the hard disk using a VMS delete file command

Clear background curves from plot display - a background curve is removed from the presentation after entering **CL** at the *X TARGT MODE* prompt

OPERATOR CONFIGURABLE DISPLAYS

The operator configurable displays function allows the operator to create displays as needed through menu selections at the console. This function provides the ability to create a group display containing standard symbol elements without having to use the software oriented display generator (SODG) utility. Up to 25 displays can be created

NOTE The parameters controlling operator configurable displays operation can be seen by sequencing through the *Operator Displays' Faceplates* utility pages

The *Operator Displays' Faceplates* configuration procedure, explained in the *OIS Configuration* section, determines the symbol elements used to create operator configurable displays. The default configuration for this function uses standard control, data acquisition, alarm summary and trend elements to create each group display. These elements are provided as part of the OIS symbol library on hard disk. Each element presents the same

information, and provides the same capabilities as those that are a fixed element of a user-created display

The default symbols used to create the operator configurable displays can be changed through the procedures explained in **OPERATOR CONFIGURABLE DISPLAYS FACEPLATE CONFIGURATION** in the *OIS Configuration* section

The operator can incorporate control elements to control and present information for DD, MSDD, RCM, RMCB, RMSC and STATION tags Data acquisition elements allow viewing process variables referenced by ANALOG, DAANALG, DADIG, DADIGTL, DANG, DIGITAL, INTANG and INTDIG tags A TEXTSTR element allows viewing text strings sent to the console from a PCU module, and entering text strings in response to a question, to verify operator acknowledgment or for historical purposes Refer to the **Process Control and Tuning** and **Data Acquisition** sections for specifics on information and control capabilities available through these display elements

A trend element as part of the display can be used to view distributed trend data Several trend element sizes are available during display creation The operator configurable displays use trend tags defined during trend definition Refer to **Trend Control** in this section for functions available at trend elements

An alarm summary provides all normal summary capabilities The function provides several size options for the summary The format used for each alarm line entry is set during *Operator Displays' Faceplates* configuration Refer to the **Alarm Processing** section for an explanation of alarm summary information and operations

Figure 7-10 is an example display that contains a STATION, ANALOG, DIGITAL, RCM and MSDD tag element, and a trend and alarm summary element Figure 7-11 shows the operator configurable displays setup for this example display

The operator can create a display in any format desired limited only by the available elements. Two main pages are used to create a display The procedures to create a display include

- Defining a display name
- Entering display elements
- Saving the display

Once created, a display can be edited or deleted at any time

The two pages of the operator configurable displays function are the directory page and the editing page The directory page is the initial page when the function is first selected To call this first

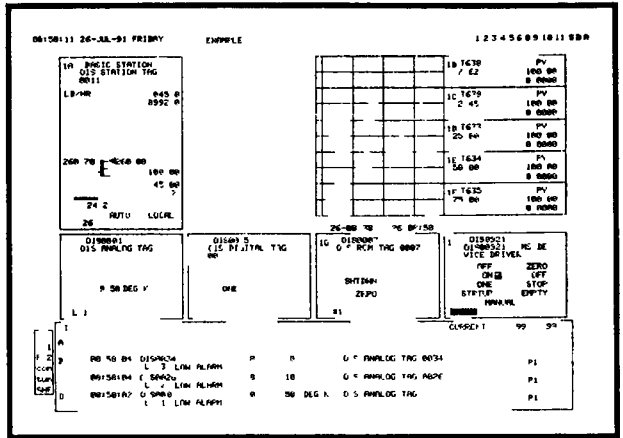


Figure 7-10 Example Operator Configurable Display

TPS0043A


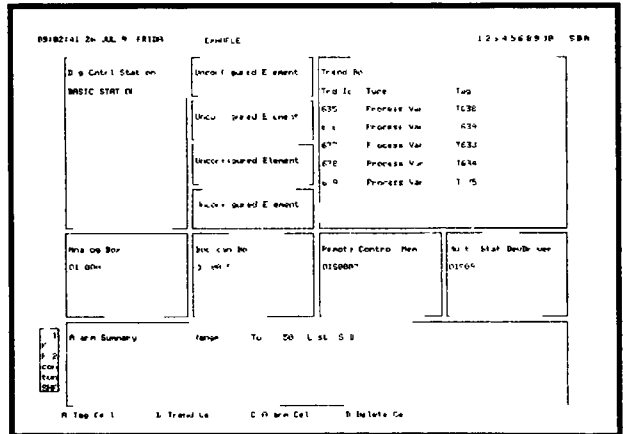


Figure 7-11 Example Display Setup

TPS0042A

page (see Figure 7-12), press [GENL FCTNS MENU], then select the following menu items in the sequence shown

C O/S Operations → F Operator Configurable Displays

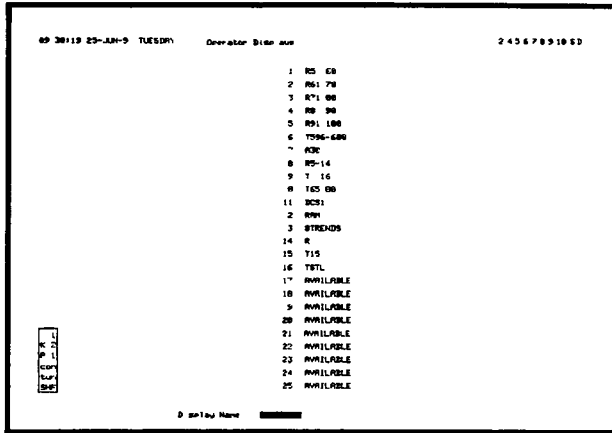

TPS0040A

Figure 7-12 Operator Configurable Displays Directory Page

Directory Page

The directory page provides two functions. The first is a directory listing of both configured and unconfigured displays. The second is to call a configured display to either edit or delete it, or to call a blank page to create a new display.

At this page, a display name appears for each configured display. This name or its associated index number must be entered at the *Display Name* field to call an existing display. An *AVAILABLE* appears for each unconfigured display. After creating then saving a display, its name replaces one of the *AVAILABLE* fields.

Key in the name or index number of a display, then press **ENTER** to modify or delete an *existing* display. The next page that appears reflects the previous configuration for that display, see Figure 7-11 for an example.

Enter a display name that does not already exist, then press **ENTER** to create a *new* display.

The name entered should be meaningful since this name also appears as the display title. In addition, the display name is used to call the configured display to the screen. If the display does not exist, an unconfigured page appears after entering (see Figure 7-13). In either case, the message

Display Requested Not Operator Configurable

appears if the display exists as a user created display (*.DU*), which cannot be operator configured.

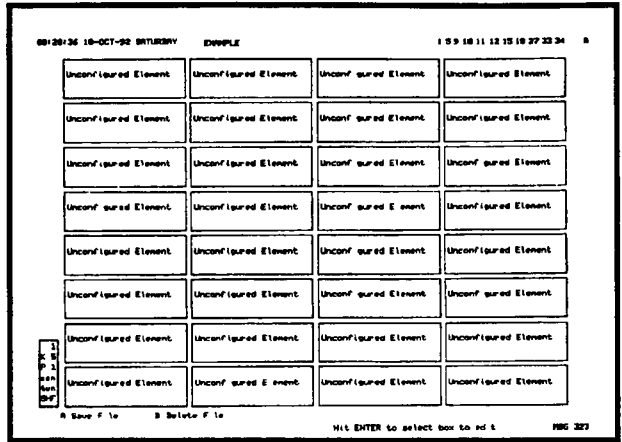


Figure 7-13. Operator Configurable Displays - Editing Page

Press **ESC** at any time to exit this page

Editing Page

The operator performs the actual display creation or editing at the editing page. For a previously unconfigured display, the page appears as shown in Figure 7-13. The page contains 32 *Unconfigured Element* boxes. Each unconfigured box identifies an area of the screen that is available for placing a tag, trend or alarm summary element.

Each element that can be incorporated into a display consumes a specific number of these boxes. The number of elements that can be defined in a single display depends on the number of boxes each element type consumes. For example, the *Dig Cntrl Station* element in Figure 7-11 consumes four vertical *Unconfigured Element* boxes, the *Alarm Summary* element consumes a total of eight *Unconfigured Element* boxes. Most element types come in varying sizes to help maximize the available space.

Selecting a box - a cursor identified as a highlighted outline (cyan) appears and can be moved at this page. Initially, the cursor appears at the left upper corner of the page.

The cursor has two purposes. When creating a display, it allows positioning elements on the page by moving to, then selecting specific boxes. It also allows the operator to redefine or delete an element by positioning the cursor at that element. In either case, options are presented at the bottom of the display to enable defining or deleting elements after making a box selection.

To select a box to edit:

1 Use the cursor control keys to move the cursor to a specific *Unconfigured Element* box, or any configured element box if editing or deleting that element. The selection determines where the console begins to draw a specific element, not the actual size of the element.

2 When the cursor is at the desired box, press [ENTER] to select that box to edit.

A configured box does not have to be deleted to redefine it. The function allows selecting a configured box, then redefining its attributes.

Element definition - the options presented depend on whether the selected box is an *Unconfigured Element* or a previously defined element. The console automatically selects the specific element to use based on user inputs. Figure 7-11 shows the options.

The following options are available after selecting a configured box. The *Delete Cell* option is not available if the selected box is an *Unconfigured Element* box.

Tag Cell Press [A] to select the *Tag Cell* option. A *Tag Name* or *Index* input field appears at the bottom of the screen. This puts a tag element into the display for presenting process information, or allowing process control. The type of the entered tag determines the next prompts that appear.

Trend Cell Press [B] to select the *Trend Cell* option. This puts a trend element into the display to view distributed trend data. Each trend that is to appear in the trend element can be configured by entering either a trend index number, or tag name or index number, then selecting an element size.

Alarm Cell Press [C] to select the *Alarm Cell* option. This puts an alarm summary element into the display for viewing alarm occurrences. Additional options select the element size and alarm groups that appear in the summary.

Delete Cell Press [D] to select the *Delete Cell* option. This option deletes an element making the area available as *Unconfigured Element* boxes.

Each option is explained in more detail in the *Tag Element Definition*, *Trend Element Definition* and *Alarm Summary Element Definition* sections that follow

NOTE The *Save File* and *Delete File* options are available initially and after completely defining an element

Save display to file - once a display is completely defined, it must be saved using the *Save File* option. During a save, the console creates the configuration and display files that make up the display. Press **[A]** when editing is complete to save an operator configured display. The console then begins to construct the display file. The message *Display being constructed, Please Wait* appears.

Do **not** press any keys while the console is constructing the display file. If the operator configurable displays function is exited while the display file is being constructed, the changes are not saved. When construction of the display is complete, the system returns to the directory page.

Press **[ESC]** before saving to abandon any edits. If changes were made to an existing file and the changes were not saved before attempting to exit the page, the message *Change Made <ENTER> to save, <ESCAPE> to abandon* appears. Press **[ENTER]** to save the changes, **[ESC]** to continue the exit.

Delete display file - a *Delete File* option when selected clears the current operator configurable display. The console erases both the configuration files and display file for that particular display. This also removes the display name from the directory list and replaces it with a *AVAILABLE*.

Press **[B]** to delete the current operator configurable display; the current display is removed from the system. It is suggested that any displays no longer in use be deleted. This frees up hard disk space for use by other console functions.

Box Overlap

The size of each element being defined must be considered when creating a display. An overlap may occur when attempting to define an element and the chosen size of that element expands over part or all of another already defined element. The console will not draw one element over another.

The console looks for an open spot to place an element before indicating an overlap. Initially, the console searches down and to the right when placing an element. It will, however, search up and to the left if encountering an existing element. In either case, the search is from the location of the cursor. The cursor determines the starting point for drawing an element and the console cannot reposition this cursor.

If it cannot find an open spot, the console presents an error and options message:

Box Overlap: <ENTER> - accept, <ESC> - reject MSG 319

and draws a red outline showing where the overlap occurs. The outline is the actual size of the element being entered and causing the overlap error. Any configured elements that fall within this red outline are the overlapped elements

Two choices are available to correct the error. The element being defined must either be sized or positioned to eliminate the overlap. Or, the overlapped elements can be overwritten by the overlapping element, then redefined at another *Unconfigured Element* box position. The *Box Overlap* message allows these choices.

Press **[ENTER]** with the message on the display to **accept** the overlap and overwrite any overlapped elements. The screen updates with the new element after accepting. The overlapped elements no longer appear.

Press **[ESC]** to **clear** the overlap without overwriting. If rejected, the screen restores to its previous state.

Tag Element Definition

The operator can define an *Unconfigured Element* box, or redefine a configured element box as a tag element. The function requires a tag name or index input to define a tag element. And in some cases, it also requires selecting an element size. The console automatically selects which symbol source file to use when drawing the particular element based on tag type and selected size. The default source files and corresponding tag types include:

- ANALOG1.DT** - ANALOG, INTANG, DAANALG tags
- ANCB00L1.DT** - DIGITAL, INTDIG, DADIGTL tags (annunciator)
- ANCREAL1.DT** - ANALOG, INTANG, DAANALG tags (annunciator)
- ANLGHF1.DT** - ANALOG, INTANG, DAANALG tags (half size)
- BOOLEAN1.DT** - DIGITAL, INTDIG, DADIGTL tags
- BOOLHF1.DT** - DIGITAL, INTDIG, DADIGTL tags (half size)
- DADIG1** - DADIG tag (full size)
- DCSFULL2.DT** - STATION tag
- DCSHALF1.DT** - STATION tag (half size).
- DEVDR1.DT** - DD tag
- DNGFULL1** - DANG tag (full size)
- DNGHALF1** - DANG tag (half size)

MSDEVDR1.DT - MSDD tag.

RCM1.DT - RCM tag

RCMB1.DT - RMCB tag.

RMSC1.DT - RMSC tag

TEXTSTR1.DT - TEXTSTR tag.

Figure 7-14 and Figure 7-15 show each tag type and the element sizes available

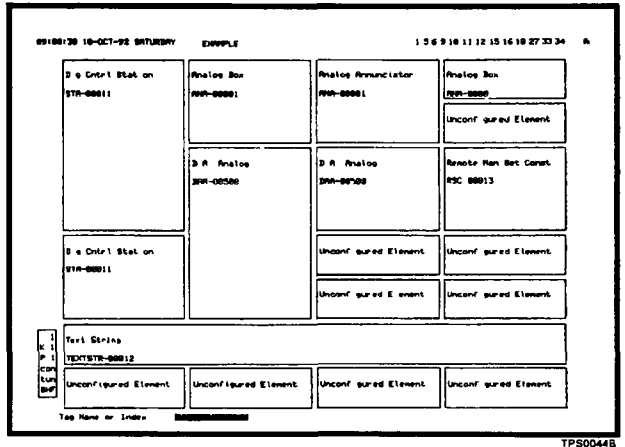


Figure 7 14 Tag Elements

To define a tag element:

- 1 Select an *Unconfigured Element* (or configured) box by positioning the cursor at that box, then pressing **[ENTER]**
- 2 Press **[A]** to select the *Tag Cell* option A *Tag Name or Index* input field appears.
- 3 Key in either a valid tag name or index number, then press **[ENTER]**. The console checks the tag type after entering. If the tag type is not allowed for this function, an error message appears

At this point, one of two things happen. If defining a DADIG, DD, MSDD, RCM, RMCB, RMSC or TEXTSTR tag element, the console draws a configured box that contains an element type descriptor and the tag descriptor (see Figure 7 14 and Figure 7-15) The console requires further input and presents additional options for the remaining tag types

09186144 18-OCT-92 WRTURDPRY		EXAMPLE		1 5 9 10 11 12 15 18 27 33 34 A			
D A Sig tal DID-04665	Remote Control Men RCH-00006	Mu 1 Stat Devtr ver MSB-00107	Device Dr ver Block DID 00130				
Rev Motor Contr Sig RCS-00200	Boolean Box DIO-000 5	D e tal Annunc ator DIO-00015	Boolean Box DIG-00015				
Unconf'gured Element	Unconf'gured Element	Unconf'gured Element	Unconf'gured Element				
Unconf'gured Element	Unconf'gured Element	Unconf'gured Element	Unconf'gured Element				
Unconf'gured Element	Unconf'gured Element	Unconf'gured Element	Unconf'gured Element				
Unconf'gured Element	Unconf'gured Element	Unconf'gured Element	Unconf'gured Element				
Unconf'gured Element	Unconf'gured Element	Unconf'gured Element	Unconf'gured Element				
Unconf'gured Element	Unconf'gured Element	Unconf'gured Element	Unconf'gured Element				

Tag Name or Index: ██████████

TPS0774A

Figure 7-15 Tag Elements

ANALOG, INTANG or DAANALG the console requires first selecting the type of element, then the size. The options are

A Analog B Annunciator

Press **[A]** to select the analog type element, which requires an additional size selection by pressing **[A]** for Full size or **[B]** for Half size. Press **[B]** to select an annunciator type element. Both types can be seen in Figure 7-14.

DIGITAL, INTDIG or DADIGTL - the console requires first selecting the type of element, then the size. The options are

A Boolean B Annunciator

Press **[A]** to select the digital (boolean) type element, which requires an additional size selection by pressing **[A]** for Full size or **[B]** for Half size. Press **[B]** to select an annunciator type element. Both types can be seen in Figure 7-15.

DANG or STATION - the console requires selecting an element size. The options are

A Full B Half

Press **[A]** for Full or **[B]** for Half

After making all option selections for a particular element, the console then draws a configured box that contains an element type descriptor and the tag descriptor

4 Continue to configure all tag elements that are to appear in the final display by repeating Steps 1 through 3. If only tag elements are to appear in this display, continue with the next step. If trend or alarm summary elements are to be defined, skip Step 5 and follow the procedures outlined under *Trend Element Definition* and *Alarm Summary Element Definition* in this section

NOTE If trend or alarm summary elements are to be defined in this display define those elements *before* saving the display

5 Press **[A]** to select *Save File* to create the final display file. Press **[ESC]** to exit without saving or to abandon any edits.

Trend Element Definition

The operator can define an *Unconfigured Element* box, or redefine a configured element box as a trend element. The function requires a tag name or index input, or a trend index input to define a trend element. It also requires selecting an element size. The console automatically selects which symbol source file to use when drawing the particular element based on the type of trended variable (i.e., control output, set point, ratio index, etc.) and the selected size of the element. The default source files for each trended variable type include

TRNDCOFL.DT - control output (full)

TRNDCOHF.DT - control output (half)

TRNDDGFL.DT - digital (full)

TRNDDGHF.DT - digital (half)

TRNDPVFL.DT - process variable (full)

TRNDPVHF.DT - process variable (half)

TRNDRIFL.DT - ratio index (full)

TRNDRIHF.DT - ratio index (half)

TRNDSFFL.DT - set point (full)

TRNDSPHF.DT - set point (half)

NOTE The full and half do not determine the element size but rather the attributes that appear for each trend. When the console uses the half source files the tag descriptor does not appear for a trend.

Figure 7-16 shows some of the available trend element sizes, and the size options. The figure uses the 1/2 screen, 1/2 by 1/2 and 1/4 by 1/2 sizes.

PROCESS MONITORING

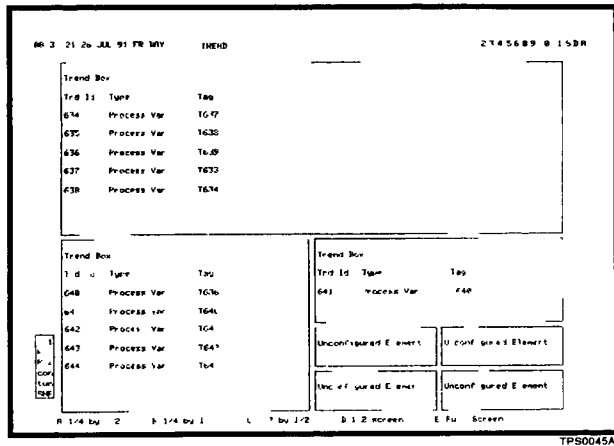


Figure 7 16 Trend Elements

To define a trend element

1 Select an *Unconfigured Element* (or configured) box by positioning the cursor at that box, then pressing **ENTER**

2 Press **B** to select the *Trend Cell* option. A list of size options then appears at the bottom of the screen

A 1/4 by 1/2

B 1/4 by 1

C 1/2 by 1/2

D 1/2 screen

E Full Screen

3 Press either **A**, **B**, **C**, **D** or **E** to select the desired size. After selection, the bottom line options are

A By Tag Name B By Trend Index

4 A trend can be defined by entering a valid trend index number if known, or tag name or index number if the trend index number is not known. In either case, the console searches its database to find a match. Press **A** to select the *By Tag Name* option, a *Tag Name* or *Index* input field then appears. Press **B** to select the *By Trend Index* option, a *Trend Index* input field appears.

5. If the trend element size selected previously is 1/2 by 1/2 or larger, up to five trends can appear at that element. Any smaller trend elements only allow for one trend

Depending on the option chosen in the previous step, key in a tag name or index number, or trend index number. The console initially presents a single input field. To enter additional trends when using either of these options, press **[TAB]** after the initial entry. The console presents up to four additional input fields. Continue to make entries in these fields until all desired trends are entered.

Tag name or index - if using this option, the entry must be a valid tag, and a trend definition must use this tag. The console checks the tag database each time **[TAB]** is pressed when entering multiple (up to five) tags

If a tag entry is a STATION tag, these options appear

- A Process variable
- B Set point
- C Ratio index
- D Control output

Select the specific type of trended variable. The console requires this to determine which trend definition to display since a separate process variable, set point, ratio index or control output trend may be defined for a single STATION tag. The tag subtype is identified during trend definition. If a trend definition with the selected variable type cannot be found an error message appears.

Trend index - the only requirement for this option is that a trend be defined in the trend database. All required information is available in the definition of the trend.

6. Press **[ENTER]** after all inputs have been made. The console draws a configured element box that contains the element type descriptor and a *Tnd Id* (trend descriptor), *Type* (process variable, set point, control output, ratio index or digital) and *Tag* (tag descriptor) for each trend (see Figure 7-14).

7. Continue to configure all trend elements that are to appear in the final display by repeating Steps 1 through 6. If only trend elements are to appear in this display, continue with the next step. If tag or alarm summary elements are to be defined, skip Step 8 and follow the procedures outlined under **Tag Element Definition** and **Alarm Summary Element Definition** in this section.

NOTE If tag or alarm summary elements are to be defined in this display, define those elements **before** saving the display.

8 Press **[A]** to select *Save File* to create the final display file
Press **[ESC]** to exit without saving or to abandon any edits

Colors for trends are set during *Operator Displays' Faceplates* configuration procedures The resolution of the trend display element is the maximum resolution of the configured trends for that element

Alarm Summary Element Definition

The operator can define an *Unconfigured Element* box, or redefine a configured element box as an alarm summary element The function requires defining the alarm groups that are to appear in an alarm summary element, and it also requires selecting an element size

The alarm summary line format selected during *Operator Displays' Faceplates* configuration determines the allowable element size options The maximum number of alarm entries that can appear at a single display page is 16 This also factors into the size options An alarm summary line format defines

Line option number of display lines reserved for each entry in the summary

Line attributes - the specific data items that appear and their location in an entry.

Attribute colors - selects the colors in which attributes of each entry appear.

Refer to **ALARM SUMMARY CONFIGURATION** in the **OIS Configuration** section for further explanation of alarm summary line formats

Figure 7 17 shows some of the available alarm summary element sizes, and the size options The figure uses the *1/2 screen*, *1/4 screen* and *1/8 screen* sizes

To define an alarm summary element


1 Select an *Unconfigured Element* (or configured) box by positioning the cursor at that box, then pressing **ENTER**

2 Press **[C]** to select the *Alarm Cell* option A list of size options then appears at the bottom of the screen The size options that are available for an alarm summary element depend on the line option being used in the chosen alarm summary line format

Line option 0

A 1/8 screen

B 1/4 screen

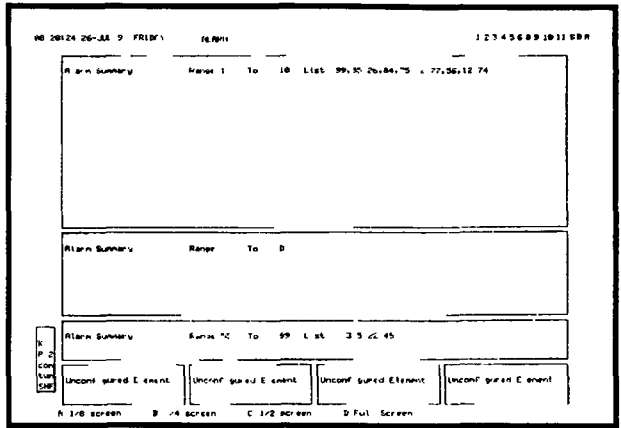

TPS0046A

Figure 7-17 Alarm Summary Elements

- C 1/2 screen.
- D Full Screen

Line option 1

- A 1/4 screen
- B 1/2 screen
- C Full Screen

Line option 2

- A 1/8 screen
- B 1/4 screen
- C 1/2 screen

When using line option 2, the C Alarm Cell option is removed as one of the cell type options after the display has been configured with a half size element. No other alarm summaries can be defined in the display. This is because a half size alarm summary using line option 2 presents the maximum of 16 alarm entries.

Table 7-1 gives a breakdown of the number of line entries each element size presents based on its line option.

3 Press either **A**, **B**, **C** or **D** to select the desired size. After selection, a Range ___ To ___ List ___ input field appears.

Table 7-1. Alarm Summary Entries

Line Option	Number of Alarm Entries			
	1/8	1/4	1/2	Full
0	2	4	8	16
1	N/A	2	4	8
2	4	8	16	N/A

4 The input field allows entering an alarm group range, alarm group list or both Use the cursor control keys to move between each input field

Range the *Range To* ___ portion of the prompt determines which tag alarm indications appear in a summary by specifying an alarm group range The range can include all alarm groups, which is an entered range of 1 to S The range can also limit the number of groups For example, entering 2 and 45 shows only those alarms for tags in alarm groups 2 through 45

List the *List* portion of the prompt allows specifying up to 10 alarm groups Initially, the console presents only one input field Press **[TAB]** after the initial entry to specify up to 9 additional groups

Key in the alarm groups that are to appear in the alarm summary The range and list options can be used in conjunction, or separately if desired

5 Press **[ENTER]** after all inputs have been made The console draws a configured element box that contains the element type descriptor and the entered alarm group range and list (see Figure 7-17)

6 Continue to configure all alarm summary elements that are to appear in the final display by repeating Steps 1 through 5 If only alarm summary elements are to appear in this display, continue with the next step If tag or trend elements are to be defined, skip Step 7 and follow the procedures outlined under **Tag Element Definition** and **Trend Element Definition** in this section

NOTE If tag or trend elements are to be defined in the display define those elements **before** saving the display

7 Press **[A]** to select *Save File* to create the final display file Press **[ESC]** to exit without saving or to abandon any edits

Making an Operator Configurable Display Permanent

The configuration files for each operator configurable display occupy 13 records on the disk along with the display file It is recommended that an operator configurable display not be created

for use as a permanent display as it consumes a considerable amount of disk space. An operator configurable display, however, can be made permanent by deleting its associated configuration file (.CF) from the [DATA.USN53] directory. The display can then no longer be modified through the operator configurable displays function

13 37 04 10 07

Bailey

SECTION 8 - PROCESS CONTROL AND TUNING

INTRODUCTION

The functions of the operator interface station (OIS) give access to INFI 90 process control unit (PCU) modules to monitor automatic control and initiate manual control of the process. Process control can be performed through the console in three separate ways: Device control, loop control and tuning. Device control allows logically turning on or off, setting or resetting, and starting or stopping a control device. The operator performs loop control to change the set point, ratio index or control output of a control loop. Tuning adjusts specific control scheme function block parameters to fine tune PCU control.

NOTE This section explains the process control capabilities using standard OIS faceplate symbols. The console provides these symbols as part of its symbol library on the hard disk. The procedures and operations explained here remain the same for custom symbols designed to provide the same capabilities although they may not and do not have to include all features if not required. The escape commands defined in the symbol file during creation determine the capabilities of the faceplate. Refer to the *Display System* section for further explanation.

This section explains and provides procedures for device and loop control through standard faceplate display elements designed to mimic process devices. It also explains process tuning capabilities available through various displays.

PROCESS CONTROL FUNCTIONS

The control functions of the console provide the operator with both manual and automatic control and with the capability to monitor individual process variables and devices. The control allows changing process conditions by initiating changes to the PCU module control scheme. PCU modules receive input and send output signals to the process through termination units hard wired connected to the process devices and stations. The operator initiates control through display elements (i.e., faceplates) and the keyboard.

NOTE Password security can be defined to limit access to control functions.

Dynamic faceplates which relate to specific types of control tags can be either standard or user created. They can be a fixed element of a display or called as a pop up element. In either case, the operator performs the same control through the device mimic. The console provides a symbol library containing standard symbols and pop ups.

PROCESS CONTROL AND TUNING

Defined control tags provide access to function blocks within a module. The access can be used to manually initiate process changes, and to monitor the results of both automatic and manual control operations. Automatic control refers to process control being performed under PCU module execution. Manual refers to those actions initiated by an operator after taking the process device or loop out of automatic PCU control. Control tags and the function codes (FC) they associate with include:

DD	Device driver, FC 123
MSDD	Multi-state device driver, FC 129
RCM	Remote control memory, FC 62
RMCB	Remote motor control, FC 136
RMSC	Remote manual set constant, FC 68
STATION	M/A station (basic), FC 21, M/A station (cascade), FC 22, M/A station (ratio), FC 23, and control station, FC 80

NOTE Information reported by these function codes can be incorporated into any display. This information is not restricted to faceplate symbols only.

Refer to the *Function Code Application Manual* for a description of these function codes and their specifications.

To initiate control of any of these type of tags, a faceplate element must first be enabled for active control. This is done through keyboard key presses or any optional control select device. Refer to **DISPLAY AND CONTROL SELECT OPTIONS** in the *Display System* section for an explanation of alternate control select methods for this console. Pop up elements are automatically enabled for control when called to a display. Once called, they operate the same as fixed faceplate elements.

Actual control can only be initiated through the keyboard. All control keys are in the station and remote control block section of the keyboard. Refer to the *Keyboard and Peripherals* section for the location of these keys.

Figure 8-1 is an example group display containing the standard faceplate symbols for each type of control tag.

Common Control Element Attributes

The standard faceplate elements shown in Figure 8-1 share some common attributes. These attributes, which can be incorporated into any graphic or custom faceplate, include:

Tag name a name of up to 14 characters entered during tag configuration. This is the name of the tag defined to allow monitoring and control of the process point.

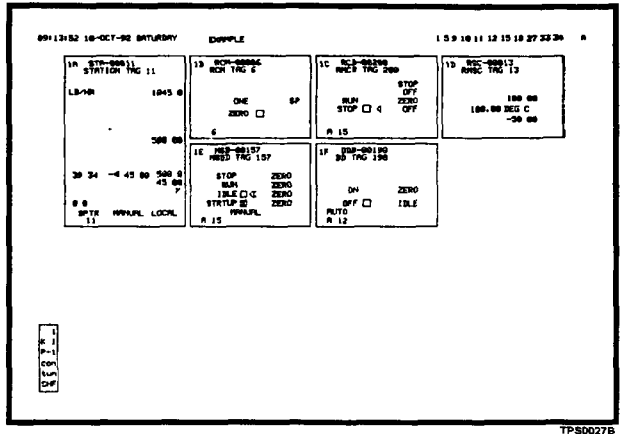


Figure 8-1 Standard Process Control Faceplate Symbols

Tag descriptor - a tag descriptor of up to 32 characters entered during tag configuration. Normally, this descriptor explains the purpose of the tag (process point).

Faceplate selector - a selector is one or two alphanumeric characters used to select and enable control features of an element. The selector characters identify the keyboard keys that must be pressed to enable the element. After pressing the keys, the outline of the element highlights to verify selection, and to easily recognize the element as being enabled. After selection, the control keys function for that element only.

Alarm status/quality/group - this field relates to alarm processing. In standard faceplate symbols, this field accommodates five characters.

From left to right, the first two character positions are the alarm status. An indicator in these positions identifies the last alarm threshold that a point passed as determined and exception reported by the PCU control scheme. Refer to **ALARM STATUS INDICATORS** in the **Alarm Processing** section for a description of the indicators that can appear in this field.

The third character position is the quality field. This field identifies the quality associated with a process value or state, and the operating status for the tag. Refer to **QUALITY INDICATORS** in the **Alarm Processing** section for a description of the quality indicators that can appear in this field.

PROCESS CONTROL AND TUNING

The last two character positions identify the alarm group to which the tag is assigned. The field appears as either blank for no alarm group or 1 through 99.

NOTES

1 Disestablished, substituted and inhibited are initiated at the console through operator actions (e.g. operating parameters functions). PCU modules report good, bad and suspect in exception reports.

2 Control cannot be performed for any tag reporting bad quality or off scan.

Example An alarm status/quality/group field that appears as

2H 10

indicates that the point has passed the two high threshold set in the PCU module, the module has determined that it is receiving good data for the point, and the tag defining the process point is part of alarm group ten.

Refer to the **Alarm Processing** section for an explanation of alarm processing, conditions and indications.

Red tag descriptor - a red tag descriptor (and red outline) identifies a process point as being red tagged. Red tagging performed through PCU management functions at the console does **not** prevent a process device from operating. It can be set to either display red tag status and disable control actions from being performed at the console, or to display red tag status only. The process engineer determines how red tagging operates at the console through system configuration.

NOTES

1 In some cases the source file for a symbol must be modified to enable the red tag status outline feature. Either remove the remark (rm) at the beginning of the line containing the ed 102 escape command or add this command to the source file if not present.

2 The alarm status, quality and red tag indicators presented are default characters. They can be changed through text substitution.

A PCU module reports red tag status as part of an exception report. Red tag status is available through the following tags:

DD
MSDD
RCM
RMCB
STATION

Control prompt/field - the control prompt and input field appears only after selecting an element for control. It contains a **TARGET** prompt and input field. Depending on the tag being controlled, it shows the current mode, state or value of the selected control point when it first appears. It then allows changing that

parameter through keyboard selections. When a change is initiated, the displayed parameter updates to reflect the target mode, state or value. The target is the desired change. The element then updates to reflect the change.

The control *TARGET* prompt may appear somewhere else on the screen other than directly with a display element. The location of the prompt depends on the control select option set for the element during its creation.

Loop Control

A station faceplate element allows the operator to adjust a control loop in the process. This requires both a STATION tag defined for the station function block controlling the loop, and a station display element for control. Once the process engineer configures a STATION tag then a display with a station element, the operator can use the console to monitor, or to take control through keyboard actions.

A station element is a representation of an analog control station. The same functions performed and values displayed at an analog control station physically located in the plant can be performed and viewed by an operator at the console through use of this faceplate element.

STATION ELEMENT ATTRIBUTES

The station control element presents a detailed on line display of a single process loop. A STATION tag is required to acquire current process values from a manual/auto (M/A) station block in a PCU module configuration, and to direct control.

Figure 8-2 details the information presented in a control station element. The display source file for this element is the **DCS-FULL2.DT** symbol file.

The operating state of the block is defined as its level (local or computer), mode (manual or auto) and station mode (basic, cascade or ratio). The operating state determines which values can be adjusted from the console. The station operating mode can be changed through the console.

The station function block exception reports the dynamic values, modes, and alarm status and quality that display at a station element. Attributes that relate to a STATION tag and can be incorporated into any graphic or custom faceplate include:

Process variable (PV) value - displays the current value of the process variable being input to a station function block. The process variable comes from the function block providing control of the station block, usually a PID block.

PROCESS CONTROL AND TUNING

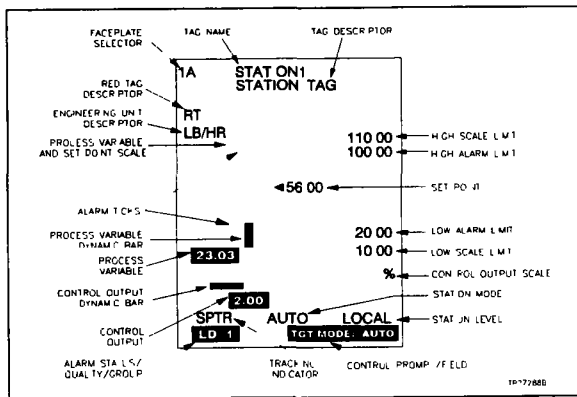


Figure 8.2 Control Station Element

PV dynamic bar - indicates the process variable as an expanding or contracting dynamic bar. The bar expands vertically from the baseline mark on the scale as the process variable increases in value, and contracts back to the baseline mark as the variable decreases

Set point (SP) value the set point value is a dynamic moving value accompanied by a dynamic pointer. The displayed value and the position of the pointer on the scale correspond to the current set point being exception reported by a station function block. This value can always be changed through keyboard actions when the station is in automatic mode and is not in set point track mode. When in set point track mode, the option chosen to put the station in set point track mode determines whether the set point can be adjusted while in manual mode or while in automatic mode.

PV and SP scale the scale is a static display element for reference.

Engineering unit descriptor (EUD) - indicates the unit of measurement associated with the process variable and set point. The station function block reports an EUD index number that the OIS console then cross references against its list of engineering unit descriptors. Station elements indicating the process variable and set point values are referenced to this unit of measurement.

Control output (CO) value displays the current value (in percent of output) of the control output being output from a station function block. The control output can be changed through keyboard actions when the station is in manual mode and not in control output track mode.

CO dynamic bar - indicates the control output as an expanding or contracting dynamic bar. The bar expands horizontally from the baseline mark on the scale as the control output increases in percentage, and shrinks back to the baseline mark as the control output decreases.

CO scale - the scale is a static display element for reference.

High and low scale limits - the limits define the maximum and minimum value associated with the baseline and top line of the static scale respectively. Depending on the configuration of the station element, the limits are the zero and span configured in the station function block for either the process variable or set point.

High and low alarm limits - identify the maximum and minimum alarm level thresholds. These values are set in the station function block configuration. If the process variable reaches or passes either the high or low alarm limit, the station is in an alarm condition. The console monitors these limits to trigger alarm indications at the console.

Alarm ticks - provide a scale reference to easily determine when the PV dynamic bar passes an alarm limit. These tick marks correspond to the high and low alarm limit values.

Station level - indicates the current station level. The station level identifies the device directing the loop control. It can operate at either PCU level (local) or computer level control. The level indicators are:

LOCAL Station under PCU local control. The station must be in local level control to allow changes through the console.

CMPTR Station under computer control. When in computer level control, the operator cannot adjust the loop through console displays and the keyboard.

Station mode - indicates the current operating condition. An indicator shows the current operating mode of the station. The station operates in either manual or automatic mode.

The operator initiates process changes using the station control element and keyboard. During normal, automatic operation, the station mode appears as *AUTO*. In this mode the PCU module automatically controls the process. The station can be set to either cascade or ratio operation while in this mode. The operator can remain in automatic mode to change the set point or ratio index value. *MANUAL* appears when the operator takes the station out of PCU control to manually adjust the control output.

Depending on the station block in a module configuration, a station can be toggled between basic and ratio, or basic and cascade.

PROCESS CONTROL AND TUNING

operation. The station status field indicates *RATIO* or *CASC* if selected through the keyboard keys.

Table 8-1 lists the indicators that can appear in the station mode field. The type of indication depends on the escape command used during creation of the station element.

Table 8-1 Station Modes

Mode	Description
<i>AUTO</i>	Automatic control by a PCU module. Set point and ratio index can be adjusted at the keyboard.
<i>MANUAL</i>	Manual control which allows changing the control output (CO).
<i>BYPASS</i>	Analog control station has been set to bypass mode operation. When in this mode control cannot be initiated through the console.
<i>CASC</i>	Station toggled in cascade operation. Press CASC to toggle between basic and cascade operation.
<i>RATIO</i>	Station toggled in ratio operation. Ratio index can be changed when in automatic mode. Press RATIO to toggle between basic and ratio operation.
<i>/C</i>	Indicates a cascade station. The mode appears, for example, as <i>AUTO/C</i> or <i>MAN/C</i> . NOTE: The <i>/C</i> also appears with a tracking indicator if a separate tracking indicator field is not used in the element. For example: <i>LOCK/C</i>
<i>/R</i>	Indicates a ratio station. The mode appears, for example, as <i>AUTO/R</i> or <i>MAN/R</i> . NOTE: The <i>/R</i> also appears with a tracking indicator if a separate tracking indicator field is not used in the element. For example: <i>SPTR/R</i>

NOTE: A station on element may not have a separate station mode field and tracking indicator field. Depending on the escape commands used during the configuration of the faceplate, the element may display both the tracking and mode indicators in the station mode field.

Tracking indicator indicates the type of tracking being implemented by the station function block in the module control scheme. A station block can employ either control output or set point tracking. Whenever a reference signal to track goes up or down, the station set point or control output value follows it. Also, this field identifies a set condition for the manual mode in terlock in the station function block.

A control output track lock is set by the control logic. A track lock stays in effect until the logic unlocks the tracking. If the station goes into *COTR* mode (refer to Table 8-2), the control output percentage adjusts to changes in its specified reference

signal to track. Control output changes cannot be initiated using the console when the station is in *COTR* mode.

The set point tracks either the process variable or a selected variable when set point tracking is enabled. The configuration of the station function block determines whether the set point is to adjust to the tracking variable while in *MANUAL* mode only or while in either *AUTO* or *MANUAL* mode. The option chosen in the configuration to enable set point tracking also determines whether the operator can adjust the set point for the station while it is in *MANUAL* mode or while it is in *AUTO* mode. When the station block configuration is set to *SPTR* (refer to Table 8-2) and allows set point changes in *AUTO* mode, **[SET]** is functional. Set point tracking can be enabled or disabled through PCU management or block details tuning functions while a PCU module is executing control.

Table 8 2 Tracking Indicators

Mode	Description
<i>COTR</i>	Control output tracking set in PCU control scheme. When the system sets a station operating mode to <i>COTR</i> [OUT] in the station control section of the keyboard can still be used to adjust the output while in <i>MANUAL</i> mode.
<i>SPTR</i>	Set point tracking set in the PCU function block configuration. Depending on the station block configuration, set point control may or may not be permitted through the console for this station.
<i>LOCK</i>	Manual interlock set in PCL control scheme to lock the station in <i>MANUAL</i> mode. The manual interlock holds the station in manual mode, preventing any automatic mode operations. Control output can be adjusted while in <i>MANUAL</i> mode.
blank	No tracking or manual interlock implemented.

NOTE: A station element may not have a separate station mode field and tracking indicator field. Depending on the escape commands used during the configuration of the faceplate, the element may display both the tracking and mode indicators in the station mode field.

The manual mode interlock holds the station in *MANUAL* mode. This is set by the control logic. Until the control logic releases the lockout, the station stays locked and the mode cannot be changed from the keyboard.

STATION CONTROL

There are three types of stations, each controllable through the console: Basic, cascade and ratio. A basic station generates a set point and provides manual/automatic transfers, control output adjustment in manual control mode, and set point adjustments in automatic control mode. A cascade station provides the same functions as a basic station plus an additional mode that allows the set point to be controlled by another process variable. A ratio

PROCESS CONTROL AND TUNING

station also provides the same functions as a basic station, but differs in its method of set point generation. A ratio adjustment factor determines the set point as a ratio of a second uncontrolled (wild) variable. Any station type can operate as a basic station.

Station control allows changing the mode, set point, ratio index and control output of a control station by manipulating a station function block. This function block is part of the configuration in a PCU control module.

To enable a STATION element for control, either enter its face plate selector through the keyboard or use an optional method of selection. A TGT MODE control prompt appears when the station element is first selected. While active, the operator can perform the following station control operations:

Level Change The level determines the device that directs the loop control. The station must be in LOCAL level control to allow PCU automatic loop control, and to initiate changes through the console. A computer directs control when in CMPTR mode.

Press [CMPTR] to toggle the station between computer and local control. A TGT MODE field reflects the targeted level, and the station level field updates when the change is made.

Mode Change A mode change may be required to perform a desired control action. The station must be in MANUAL control mode to adjust the control output. It must be in AUTO mode to toggle the station to ratio or cascade operation.

Press [MAN/AUTO] to toggle the station between manual and automatic mode.

Press [CASC] while the station is in AUTO mode to toggle a station between basic and cascade operation. The station function block must be capable of cascade operation for this key to function for that station.

Press [RATIO] while the station is in AUTO mode to toggle a station between basic and ratio operation. The station function block must be capable of ratio operation for this key to function for that station.

The TGT MODE field reflects any targeted mode changes, and the station mode field updates when the change is made.

Set Point Change The operator can change the set point while the station is in AUTO mode or MANUAL mode when set point track is not enabled. The operator cannot change the set point when the station is in MANUAL mode and set point track is enabled. A change may or may not be allowed when the station is in AUTO mode and set


point track is enabled and depends on the option chosen to put the station in set point tracking.

To change the set point:

1. Verify the station is in the proper mode to allow a set point change. If not, perform a mode change
2. Press **[SET]** This calls a *TRGT SET* control prompt, which reflects the current set point value. The EUD descriptor shows the unit of measurement associated with this value
3. The value can be changed using one of two methods. Key in the desired set point target value and press **[ENTER]**, or press



To effect a slow, ramping set point change. This changes the value 0.2 percent per keystroke.




To effect a fast, ramping set point change. This changes the value 4.0 percent per keystroke.

As soon as the change is made, the display begins to update. The set point value either increments or decrements and the dynamic pointer moves up or down the scale to reflect the entered value.


Ratio Index Change

The operator can change the ratio index while the station is in *RATIO* mode. To change the ratio index:

1. Verify the station is in ratio control mode. The module status field should indicate *RATIO*. If not, perform a mode change.
2. Press **[SET]** This calls a *TRGT RAT* control prompt, which reflects the current ratio index.
3. The value can be changed using one of two methods. Key in the desired ratio index target value and press **[ENTER]**, or press



To effect a slow, ramping ratio index change. This changes the value 0.2 percent per keystroke.



To effect a fast, ramping ratio index change. This changes the value 4.0 percent per keystroke.


Control Output Change

The operator can change the control output while the station is in *MANUAL* mode. To change the control output:


1. Verify the station is in manual control mode. The module status field should indicate *MANUAL*. If not, perform a mode change.
2. Press **[OUT]** This calls a *TRGT OUT* control prompt, which reflects the current output value. The value is in percent of output.

PROCESS CONTROL AND TUNING

3 The value can be changed using one of two methods. Key in the desired output target value and press **ENTER**, or press



To effect a slow, ramping ratio index change. This changes the value 0.2 percent per keystroke.



To effect a fast, ramping ratio index change. This changes the value 4.0 percent per keystroke.

As soon as the change is made, the display begins to update. The control output value either increments or decrements and the dynamic bar expands or contracts to reflect the entered value.

While the station is still active, a tuning display, block details display or operating parameters display can be called by pressing a corresponding keyboard key. Refer to **Block Details Display** and **Station Tuning Display** in this section for an explanation of the functions performed through these displays. Refer to **TAG OPERATIONS** in the **Process Monitoring** section for an explanation of the operating parameters display and its functions.

To **disable** control of the currently selected station, press **ESC** or select another element at any time.

Device Control

The capabilities of the OIS console give the operator access to process devices through its displays and keyboards. The operator can control a device by selecting keyboard keys, which enter a targeted or desired change to a device. These are logical state changes that are put into effect by manipulating the process control scheme in a PCU control module. The display elements related to process control also give feedback while in either PCU automatic control or manual operator control. The feedback verifies the actual change in state of a device.

REMOTE CONTROL MEMORY ELEMENT

The remote control memory (RCM) element represents a remote control memory function block in a PCU module control scheme. This function block provides a set and reset flip flop memory to control a process device. An RCM tag is required to monitor and control the output of this function block.

Figure 8-3 details the information presented in a remote control memory element. The display source file for this element is **RCM1.DT** symbol file.

The remote control memory block exception reports the current output state, feedback state, permissive state, override status, and alarm status and quality that display at the RCM element.

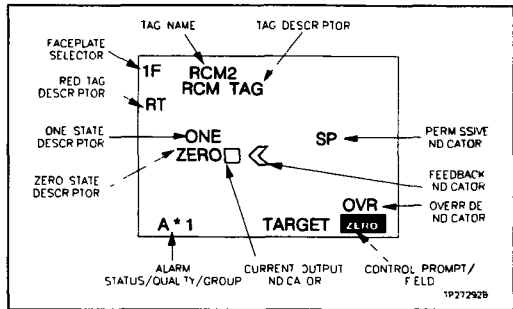


Figure 8-3 Remote Control Memory Element

Attributes that relate to an RCM tag and can be incorporated into any graphic or custom faceplate include

One state descriptor - shows the logic state descriptor related to a one state (logic one) output of an RCM function block. This descriptor is the *ONE* state descriptor set in the tag database for this tag.

Zero state descriptor - shows the logic state descriptor related to a zero state (logic zero) output of an RCM function block. This descriptor is the *ZERO* state descriptor set in the tag database for this tag.

Current output indicator - the position of this indicator identifies the currently requested logic state to be output by the RCM block. When next to the one state descriptor, the requested output is a logic one. The output is a logic zero when it is next to the zero state descriptor.

Permissive indicator - shows the value reported for the permissive input to the function block. The block must be in a permissive state to allow the operator (or control logic) to change the RCM function block to a one state (set). An *SP* identifies the RCM function block as being set to permissive. An *NP* indicates non permissive, not allowing a change to a one state output.

Feedback indicator - provides a feedback indication to verify the actual change in state of a device, and its current state. The arrow positions at either the one or zero state as soon as the console receives a reported feedback indication.

Override indicator - indicates an override condition. An override occurs when the RCM function block is permissive and there is a

conflict between the set and reset inputs to the function block. The output tracks an alternate input if the set and reset signals are both logic one simultaneously.

RCM CONTROL

RCM control allows changing the output of a remote control memory function block. This function block is part of a PCU control module configuration. The remote control memory block provides a set and reset signal to a process device. The RCM function block acts on one of two inputs to develop its output. The block accepts both a control scheme driven input and an input from the console.

The two inputs are also differentiated by the type of input. The control scheme can initiate either a pulsed or sustained command to the block where the console can only input a pulsed command. A sustained input, which remains at a set logic state, overrides any pulsed input. A pulsed input is a one cycle transition used to trigger a state change. In either case, the block maintains its current output even if the input is removed. The output remains at either a set or reset state until another command is received to change the state of the output.

A pulsed set command from the console causes the block to output a logic one, and a pulsed reset command causes a logic zero output. This occurs as long as the control logic is not providing a sustained input to the block. A change to the one state (set) can only occur when the RCM function block is set to permissive.

To **enable** an RCM element to control a remote control memory function block, either enter its faceplate selector through the keyboard or use an optional method of selection. A *TARGET* control prompt appears when the element is first selected.

The RCM function block can only be changed through keyboard actions if *OVR* and *NP* do not appear at the display. The *SP* must be displayed to change the RCM function block to the set state.

To **change** the state, press the following keys:

- Changes the RCM to a one state output
- Changes the RCM to a zero state output

The *TARGET* field changes to the target state after pressing either key. As soon as the change is made, the display begins to update. The current output and feedback indicators move either up or down to reflect the entered change.

While the RCM element is still active, a block details or operating parameters display can be called by pressing a corresponding

keyboard key Refer to **Block Details Display** in this section for an explanation of the functions performed through the block details display. Refer to **TAG OPERATIONS** in the **Process Monitoring** section for an explanation of the operating parameters display and its functions

To **disable** control of the currently selected element, press **[ESC]** or select another element at any time

REMOTE MANUAL SET CONSTANT ELEMENT

The remote manual set constant (RMSC) element represents a remote manual set constant function block in a PCU module control scheme. This function block inserts a constant value used in the process control scheme. An RMSC tag is required to both monitor and change the constant value provided by the block from the console

Figure 8-4 details the information presented in a remote manual set constant element. The display source file for this element is the **RMSC1.DT** symbol file

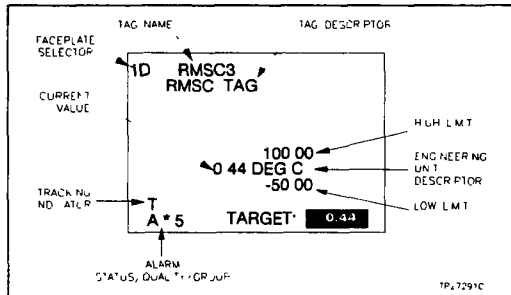


Figure 8-4 Remote Manual Set Constant Element

The remote manual set constant block exception reports the current value, high and low limit, tracking, and alarm status and quality that display at the RMSC element. Attributes that relate to an RMSC tag and can be incorporated into any graphic or custom faceplate include:

Current value - the current, constant value being reported by the RMSC block. This value can be changed through keyboard actions.

Engineering unit descriptor (EUD) - indicates the unit of measurement associated with the constant value. The RMSC function block reports an EUD index number that the console then cross references against its list of engineering unit descriptors.

High and low limits - identify the maximum and minimum acceptable values. The operator can input only values that fall within this maximum and minimum range. An attempt to enter a value outside these limits causes the console to prompt with an error message.

Tracking indicator - appears when an RMSC block has been set to tracking mode. The control logic can force the block to track an alternate process variable. A *T* displays to identify tracking mode. The value cannot be changed when the block is tracking.

RMSC CONTROL


RMSC control allows changing a constant value in a remote manual set constant function block while a PCU module is on-line. This function block is part of a PCU control module configuration. An operator can enter a new value at any time except when the *T* (tracking) indicator is present.


To **enable** an RMSC element to change the constant value of a remote manual set constant block, either enter its faceplate selector through the keyboard or use an optional method of selection. A **TARGET** control prompt appears when the element is first selected.

To **enter** a new value.

1 Press **[SET]**. This calls an input field that appears next to the **TARGET** control prompt. The value in the field is the current value.

2 The value can be changed using one of two methods. Key in a desired target value and press **[ENTER]**, or press

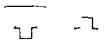 To effect a slow, ramping ratio index change. This changes the value 0.2 percent per keystroke.

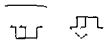 To effect a fast, ramping ratio index change. This changes the value 4.0 percent per keystroke.

The RMSC function block will not accept a value that is outside the high and low limits.

As soon as the change is made, the display begins to update. The constant value either increments or decrements to reflect the entered value.

While the RMSC element is still active, a block details or operating parameters display can be called by pressing a corresponding keyboard key. Refer to **Block Details Display** in this section for an explanation of the functions performed through the block details display. Refer to **TAG OPERATIONS** in the **Process Monitoring** section for an explanation of the operating parameters display and its functions.

To **disable** control of the currently selected element, press **[ESC]** or select another element at any time

DEVICE DRIVER ELEMENT

The device driver (DD) element represents a device driver function block in a PCU module control scheme. This function block provides an on or off signal to control a process device. A DD tag is required to both monitor and change the output provided by the block from the console.

Figure 8-5 details the information presented in a device driver element. The display source file for this element is the **DEVDR1.DT** symbol file.

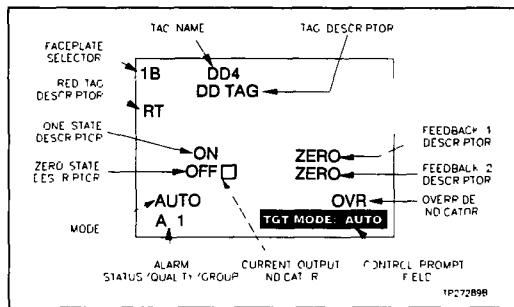


Figure 8-5 Device Driver Element

The device driver block exception reports the current output state, two feedback states, override status, mode, and alarm status and quality that display at the DD element. Attributes that relate to a DD tag and can be incorporated into any graphic or custom faceplate include:

One state descriptor shows the logic state descriptor related to a one state (logic one) output of the DD function block. This descriptor is the **ONE** state descriptor set in the tag database for this tag.

Zero state descriptor - shows the logic state descriptor related to a zero state (logic zero) output of the DD function block. This descriptor is the **ZERO** state descriptor set in the tag database for this tag.

Current output indicator the position of this indicator identifies the currently requested logic state to be output by the DD block. When next to the one state descriptor, the requested output is currently a logic one. The output is a logic zero when it is next to the zero state descriptor.

PROCESS CONTROL AND TUNING

Feedback 1 and 2 descriptors - display the logic state descriptors related to the feedback signals input to the DD function block Both feedback one and feedback two fields can indicate either an on (logic one) or off (logic zero) state The element displays the ZERO and ONE descriptors set in the tag database for feedback one and feedback two

The feedback indications provide a verification of the actual state of the field device When a change is initiated, the descriptors remain the same until the block tests the feedback inputs. This does not occur until after a specified time elapses. The DD block also tests the feedback signals to determine if the output status is either good or bad

Override indicator - indicates an override condition Normally, the device driver block determines the output status by comparing the feedback signals to an expected condition set in its configuration An OVR indication occurs when the DD block is set to override its reported output status The override forces the status to zero (Good)

Mode indicates the current operating condition The block operates in either manual, automatic or remote control mode

A device driver block may be configured to operate in automatic mode only, automatic and manual mode, or remote mode only Parameters set for the device driver function block determine the acceptable operating modes

While in AUTO mode, the control logic sets the state of the device driver output In this case, the block only provides an update to the display MANUAL mode allows the operator to change the output state through keyboard actions If the DD block is in REMOTE control mode, state changes cannot be initiated through the console The output of the block tracks the value of another function block in the process control scheme

DD CONTROL

DD control allows the operator to manually change the output of a device driver function block This function block is part of a PCU control module configuration The device driver block provides an on or off signal to a process device

The DD function block can develop its outputs based on control logic or an input from the console, or be unconditionally set with interlock logic The function block parameters determine which occurs The operating modes also depend on this selection The block can be set to allow automatic mode only, automatic and manual mode, or remote mode only

To enable a DD element to control a device driver function block, either enter its faceplate selector through the keyboard or use an

optional method of selection A *TGT MODE* control prompt appears when the element is first selected

The DD element cannot be controlled if the element displays *REMOTE* in the mode field Manual control may or may not be allowed while the *OVR* indicator is present This depends on the configuration of the device driver block.

To *change* the device driver output

- 1 Press **MAN/AUTO** to toggle the DD element to *MANUAL* mode.
- 2 Once in manual mode, press the following keys to change the output state

Changes the DD to a one state output

Changes the DD to a zero state output

The *TARGET*. field changes to the target state after pressing either key. As soon as the change is made, the display begins to update The current output indicator moves either up or down to position itself next to the requested state The feedback descriptors update after receiving feedback signals from the process

While the DD element is still active, a block details or operating parameters display can be called by pressing a corresponding keyboard key Refer to *Block Details Display* in this section for an explanation of the functions performed through the block details display Refer to *TAG OPERATIONS* in the *Process Monitoring* section for an explanation of the operating parameters display and its functions

To *disable* control of the currently selected element, press **ESC** or select another element at any time

MULTI-STATE DEVICE DRIVER ELEMENT

The multi-state device driver (MSDD) element represents a multi-state device driver function block in a PCU module control scheme. This function block has three separate output signals to provide three-state process device control An MSDD tag is required to both monitor and change the output provided by the block from the console.

Figure 8-6 details the information presented in a device driver element The display source file for this element is the *MS-DEVDR1.DT* symbol file.

The multi-state device driver block exception reports the current output state, four feedback states, override status, mode, and alarm status and quality that display at the MSDD element

PROCESS CONTROL AND TUNING

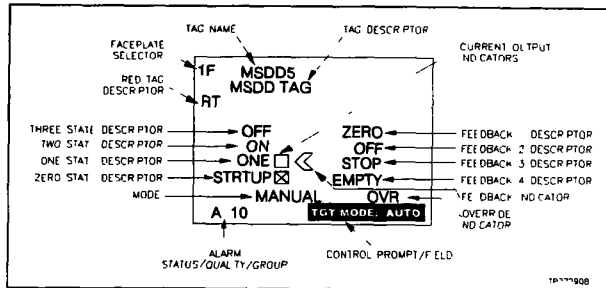


Figure 8-6 Multi State Device Driver Element

Attributes that relate to an MSDD tag and can be incorporated into any graphic or custom faceplate include

Three state descriptor shows the logic state descriptor related to a three state (output mask three) output of the MSDD function block. This descriptor is the *THREE* state descriptor set in the tag database for this tag.

Two state descriptor - shows the logic state descriptor related to a two state (output mask two) output of the MSDD function block. This descriptor is the *TWO* state descriptor set in the tag database for this tag.

One state descriptor - shows the logic state descriptor related to a one state (output mask one) output of the MSDD function block. This descriptor is the *ONE* state descriptor set in the tag database for this tag.

Zero state descriptor - shows the logic state descriptor related to a zero state (default mask) output of the MSDD function block. This descriptor is the *ZERO* state descriptor set in the tag database for this tag.

Current output indicator - the position of this indicator identifies the currently requested output of the MSDD block. When next to the three state descriptor, the requested output is currently output mask three for example. Refer to **MSDD CONTROL** in this section for an explanation of output masks.

Feedback 1, 2, 3 and 4 descriptors - display the logic state descriptors related to the feedback signals input to the MSDD function block. All feedback fields can indicate either an on (logic one) or off (logic zero) state. The element displays the *ZERO* and *ONE* descriptors set in the tag database for feedback one through feedback four.

These feedback indications provide a verification of the actual status of the field device. The MSDD block uses the feedback signals to determine if the output status is either good or bad.

Feedback indicator - the position of this indicator identifies the current output based on feedback from the process. When a change is initiated, the indicator maintains its position until a specified time elapses before testing the feedback inputs. Once the time elapses, the indicator positions itself at the appropriate state.

Override indicator - indicates an override condition. Normally, the multi-state device driver block determines the output status by comparing the feedback signals to an expected condition set in its configuration. An *OVR* indication occurs when the MSDD block is set to override its reported output status. The override forces the status to zero (*Good*). The MSDD can also be configured to default to a specific mode and output when in an override condition.

Mode - indicates the current operating condition. The block operates in either manual or automatic mode.

A multi-state device driver block may be configured to operate in automatic mode only, or automatic and manual mode. Parameters set for the MSDD function block determine the acceptable operating modes.

While in *AUTO* mode, the control logic sets the output state of the multi-state device driver, the block provides an update to the display only. *MANUAL* mode allows the operator to change the output state through keyboard actions.

MSDD CONTROL

MSDD control allows the operator to manually change the output of the multi-state device driver function block. This function block is part of a PCU control module configuration. The multi-state device driver block provides three state control for a process device.

The MSDD function block can develop its outputs based on control logic or an input from the console. In *AUTO* mode, two digital inputs from the control scheme select a mask that drives the outputs. In *MANUAL* mode, the operator selects the output masks by pressing specific keyboard keys. The function block can be set to allow automatic mode only, or automatic and manual mode.

Four separate output masks defined in the MSDD configuration set the output signals that are sent to a process device. Each mask, defined as a three-bit code, specifies the state of each of the three outputs of the MSDD block. The specific output mask is selected by the state of the two inputs to the block.

PROCESS CONTROL AND TUNING

To **enable** an MSDD element to control a multi-state device driver function block, either enter its faceplate selector through the keyboard or use an optional method of selection. A *TGT MODE* control prompt appears when the element is first selected.

The MSDD element cannot be controlled if the element displays *AUTO* in the mode field. Manual control may or may not be allowed while the *OVR* indicator is present. This depends on the configuration of the multi-state device driver block.

To **change** the multi state device driver output

1 Press **MAN/AUTO** to toggle the MSDD element to *MANUAL* mode

2 Once in manual mode, press the following keys to change the output state.

- Changes the MSDD to its three state outputs (output mask three)
- Changes the MSDD to its two state outputs (output mask two)
- Changes the MSDD to its one state outputs (output mask one)

The *TARGET* field changes to the target state after pressing any of these keys. As soon as the change is made, the display begins to update. The current output indicator moves either up or down to position itself at the requested state. The feedback descriptors update after receiving feedback signals from the process.

The MSDD function block may be set up to prevent random output changes while in *MANUAL* mode. This prevents the operator from accidentally upsetting the process. In this case, the operator must follow a sequence defined in the function block configuration. The block identifies which output states can be selected based on the current output state.

While the MSDD element is still active, a block details or operating parameters display can be called by pressing a corresponding keyboard key. Refer to **Block Details Display** in this section for an explanation of the functions performed through the block details display. Refer to **TAG OPERATIONS** in the **Process Monitoring** section for an explanation of the operating parameters display and its functions.

To **disable** control of the currently selected element, press **ESC** or select another element at any time.

REMOTE MOTOR CONTROL BLOCK ELEMENT

The remote motor control block (RMCB) element represents a remote motor control function block in a PCU module control scheme. This function block implements a start and stop logic sequence to direct the start-up or shutdown of a process device. An RMCB tag is required to both monitor and change the output provided by the block from the console

Figure 8-7 details the information presented in a device driver element. The display source file for this element is the **RMCB1.DT** symbol file

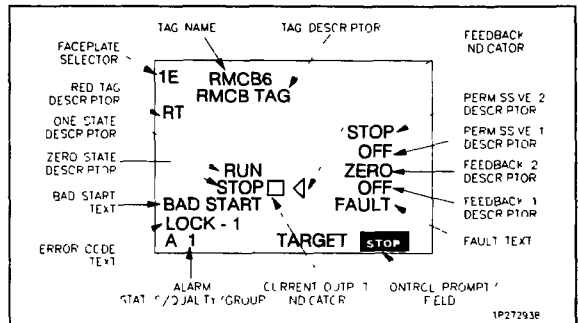


Figure 8 7 Remote Motor Control Block Element

The remote motor control block exception reports the current output state, two feedback states, two permissive states, fault status, error code, and alarm status and quality that display at the RMCB element. Attributes that relate to an RMCB tag and can be incorporated into any graphic or custom faceplate include:

One state descriptor - shows the logic state descriptor related to a one state output of the RMCB function block. A one state for the RMCB block sets a device to a running state. This descriptor is the *ONE* state descriptor set in the tag database for this tag.

Zero state descriptor - shows the logic state descriptor related to a zero state output of the RMCB function block. A zero state for the RMCB block sets a device to a stopped state. This descriptor is the *ZERO* state descriptor set in the tag database for this tag.

Current output indicator - the position of this indicator identifies the currently requested output of the RMCB block. When next to the one state descriptor, the requested output is run.

PROCESS CONTROL AND TUNING

(logic one) The block is set to output a stop state when positioned next to the zero state descriptor

Feedback 1 and 2 descriptors - display the logic state descriptors related to the feedback signals input to the RMCB function block. Both feedback fields can indicate either an on (logic one) or off (logic zero) state. The element displays the ZERO and ONE descriptors set in the tag database for feedback one and feedback two.

The feedback indications provide a verification for the actual status of the field device. The RMCB block uses the feedback signals to determine if the output status is either good or alarm. The feedback signals are also used to determine whether to maintain a run output or force the output to stop.

Feedback indicator the position of this indicator identifies the current output based on feedback from the process. When a change is initiated, the indicator maintains its position until a specified time elapses before testing the feedback inputs. Once the time elapses, the indicator positions itself at the appropriate state.

Permissive 1 and 2 descriptors show the descriptor reported for the permissive inputs to the function block. The element displays the ZERO and ONE descriptors set in the tag database for permissive one and permissive two. Both permissive inputs to the block must be in a permissive status (one state) to allow the operator (or control logic) to change the RMCB to a one state (run).

Bad start text displays when the RMCB block has detected a bad start of the process device. The text that displays is configurable through text substitution functions, refer to the **OIS Configuration** section. The block monitors the feedback signals to determine a bad start.

Error code text - ten different text messages display at this field depending on the error code being sent by the RMCB block. The error codes are:

- 0 - No error
- 1 Stopped
- 2 Interlock 1
- 3 Interlock 2
- 4 - Interlock 3
- 5 - Interlock 4
- 6 Feedback 1 set to zero state.
- 7 Feedback 2 set to zero state

8 - Feedback 1 set to one state.

9 - Feedback 2 set to one state.

NOTE The block sends an interlock error code when an interlock is set to a logic zero

The console associates and displays a text string for each of the error codes. The process engineer must first create a text set that defines a text string for each code, and identify that text set during RMCB tag configuration. Only one text string displays at a time

Fault text - indicates a fault condition. The text that displays is configurable through text substitution functions; refer to the **OIS Configuration** section. A fault indication occurs when one of the four interlock inputs to the block is set to off (logic zero). All interlocks must be on (logic one) to clear a fault

RMCB CONTROL

RMCB control allows changing the output of a remote motor control function block. This function block is part of a PCU control module configuration. The remote control memory block provides a start and stop signal to a process device. The RMCB function block acts on one of two inputs to develop its output. The block accepts both a control scheme driven input and an input from the console

To **enable** an RMCB element to control a remote motor control function block, either enter its faceplate selector through the keyboard or use an optional method of selection. A **TARGET:** control prompt appears when the element is first selected

The RMCB can only be changed through keyboard actions (or control logic) if the permissive descriptors indicate a permissive state (one state). A **FAULT** must also be cleared before a change can occur, the fault being driven by the state of the interlock inputs

To **change** the state of the remote motor control block, press

- Changes the RMCB to a one state output (run).
- Changes the RMCB to a zero state output (stop)

The **TARGET** field changes to the target state after pressing either key. As soon as the change is made, the display begins to update. The current output and feedback indicators move either up or down to reflect the entered change. Certain display elements, explained earlier, will update to indicate a bad start if an unsuccessful start-up occurs

PROCESS CONTROL AND TUNING

While the RCM element is still active, a block details or operating parameters display can be called by pressing a corresponding keyboard key. Refer to **Block Details Display** in this section for an explanation of the functions performed through the block details display. Refer to **TAG OPERATIONS** in the **Process Monitoring** section for an explanation of the operating parameters display and its functions.

To **disable** control of the currently selected element, press **[ESC]** or select another element at any time.

PROCESS TUNING FUNCTIONS

A PCU control module directs process control by executing a series of defined algorithms (function codes). Once loaded into a block address in module memory, these function codes are referred to as function blocks. Each function block has certain parameters that determine which other function blocks provide input and receive output from the block. Other parameters relate to the operation of the specific block.

PCU modules have different operating modes. Normal operating modes include execute and configure. A control module must be in **execute** mode to implement its control scheme and provide automatic control of the process. A module must be in **configure** mode to initially enter or change certain parameters of the control scheme.

Some function block parameters can only be changed while in configure mode. Others can be changed while in either mode. Tuning is the procedure used to change parameters while a module is in execute mode. Parameters that can be changed while the PCU control module is executing are referred to as **tunable**.

NOTE: Tuning operations can be limited to specific personnel by defining password security or using key lock security. A user password security level must enable tuning access rights before any tuning can be initiated. If using key lock security, the key must be in the TUNE position.

The console provides a few functions that allow function block tuning. These include a station tuning display, block details display and menu options available through PCU configuration. This section explains the station tuning and block details display. Refer to **PCU CONFIGURATION** in the **INFI 90 System Configuration** section for tuning options available through PCU configuration.

Block Details Display

The operator can call a block details display to view the parameters set for a PCU module function block. This display can be

PROCESS CONTROL AND TUNING

3 Press **[ENTER]** The block details display for the selected function block then appears.

The operator can also call the block details display for any selected tag on a display. First, select a tag or a tag element using the keyboard or any optional control select method. Press **[DETAILS]** after selection. The block details display for that tag appears without requiring any further input.

Call up another block details display or any other function to exit the display.

BLOCK DETAILS DISPLAY OPERATIONS

The operator can call a block details display for several purposes. From the block details display, an operator can:

- View the parameters set for a function block
- Change tunable parameters
- View the output or outputs of a function block
- Identify the loop, PCU, module or block address of a selected tag

NOTE Refer to *Cursor and Trend Control* in the *Keyboard and Peripherals* section for an explanation of keys used to move the input cursor at a display.

At the top of the screen from left to right, top to bottom are

Display Selector

The display must first be enabled before any operations can be performed. The display selector appears at the upper left corner of the display. Press the letter key corresponding to the display selector to enable the display. The displays outline highlights when selected.

Press **[ESC]** to deselect and disable the display.

Block Address

Displays the current *Loop*, *PCU*, *Module* and *Block* address for the selected tag or block. The block address fields can be changed to call the details for another function block while the display is enabled. To change the block address:

1 Move the input cursor to the address field or fields to change. Refer to *Cursor and Trend Control* in the *Keyboard and Peripherals* section for an explanation of keys used to move the input cursor at a display.

2 Enter the new address attributes.

3 Press **[ENTER]** The display updates to show the details for the block at the entered address.


- Page** A Page *n* of *n* field shows the current page and total number of pages. Press **NEXT PAGE** or **PREV PAGE** to view additional pages. The field updates after each page change.
- Block Function** The page indicates the function code number and noun name for the current block.
- Blocks Outputs** Each function block has one or more outputs. The total number of outputs displays at the *Number of output blocks* field. If a block has more than one output, the address of the first output is the current or *N* block address. Any additional outputs occupy addresses *N*+1, *N*+2, *N*+3, etc. At the far right of the display, another field indicates the value of the current block output.

For example, a function is at block address 20 and has six outputs. The block output field indicates

20. 17 8139648 (R)

The 20 is the block address of the output. The 17 8139648 is the actual value being output. The (R) identifies the output as being a real value. A B displays in brackets if the value is a boolean (digital) output.

To sequence through all outputs of a block, press



in the station and remote control section of the keyboard, not the cursor and trend control section. The output field updates to show the block address and current value of each output. Refer to the **Keyboard and Peripherals** section for the location of these keys.

- Parameters** The parameters controlling the block appear at the lower section of the display. From left to right the columns are

Specification number - the *S_n* is the specification number.

Tune - a *T* identifies a specification as being tunable. A parameter must be tunable to change it through this display.

Value - the current value set for the specification. To change the value of a tunable specification

1. Move the input cursor to the desired parameter to change. The console will only allow moving to a tunable parameter (*T*). Refer to **Cursor and Trend Control** in the **Keyboard and Peripherals** section for an explanation of keys used to move the input cursor at a display.

2. Enter a new value.

PROCESS CONTROL AND TUNING

3 Press **[ENTER]** to write the change to the module

Data type - an *I1* or *I2* appears if the value associated with a specification is an integer. An *R2*, *R3* or *R4* appears if the value is a real value.

Input type - a *Real BX* means that the input to the block comes from a block that outputs a real value. A *Bool BX* means that the input to the block comes from a block that outputs a digital value. In either case, the entered value is a block address. A *Param* indicates that the value is a constant value entered during function block configuration.

Specification description provides a text description explaining the purpose of the specification.

Station Tuning Display

The station tuning display allows adjusting a control loop while viewing the effects of these adjustments on the process variable (PV), set point (SP) and control output (CO). The display can be used to adjust the tunable parameters related to a function block providing loop control.

Figure 8-9 shows the station tuning display. At the top of the screen is a trend element with trend lines for the process variable, set point and control output. A station element appears at the lower right corner of the screen, and a block details element to the left of the station.

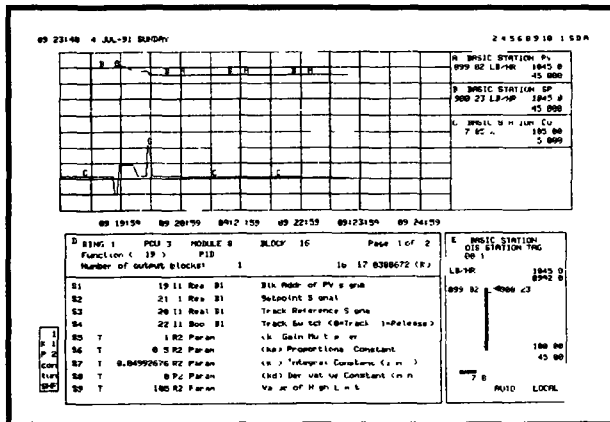


Figure 8-9 Station Tuning Display

DISPLAY CALL UP

The operator can call a station tuning display by pressing **[TUNE]** or selecting the *F Tune* option from the operating parameters display. The *Tune* option is only available at the operating parameters display for a STATION tag. When selected, the tuning display for the current STATION tag appears. **[TUNE]** operates two different ways:

To call a tuning display by tag name or index number:

- 1 Press **[TUNE]**, the key can be pressed at any display at any time. An input field appears at the bottom of the display.
2. Enter a tag name or index number at the *Tag Name or Index* field, and press **[ENTER]**. Either the tuning display appears, or the console presents another input field requiring additional information. If a PID function block is controlling the station function block referenced by the STATION tag, the tuning display appears after entering the tag name or index number.

The tuning display can also immediately display if the STATION tag is not being controlled by a PID block, but this must be set up in the configuration of the tag. The address of the function block controlling the station must be entered during STATION tag configuration. Entering a block address in the *Tuning Block* field during tag configuration enables this immediate call up.

If an input prompt appears, continue with Steps 3 and 4.

3 A *Loop* ___ *PCU* ___ *Module* ___ *Block* ___ field appears if the controlling block is not a PID, and is not specified for the STATION tag. When it appears, the input fields contain the address of the function block providing the PV input to the station block. The operator can change this address to any desired function block. The block details for the entered block appear at the tuning display. Either verify and use the current address, or enter a new address.

4 Press **[ENTER]**. The tuning display for the selected STATION tag appears. The display contains a trend display of the process variable, set point and control output. It also contains a station element for control, and a block details element. The block details element shows the parameters for the loop control function block or a block entered at the *Loop* ___ *PCU* ___ *Module* ___ *Block* ___ field.

The operator can also call a tuning display by selecting a STATION tag or tag element on a display. First, select a STATION tag or a tag element using the keyboard or any optional control select method. Press **[TUNE]** after selection. The same requirements for immediate call up or additional input call up apply after pressing **[TUNE]**, refer to Step 2 explained earlier.

PROCESS CONTROL AND TUNING

Initiate a display call up for another station tuning display or any other function to exit the display

STATION TUNING DISPLAY OPERATIONS

The station tuning display enables tuning operations for a control loop. The operations that can be done include:

- Trend element control
- Station element control.
- Block details element tuning

Trend Element

The trend element in the tuning display provides both real-time and historical data for control loop variables. The process variable, set point and control output of a loop appear as separate trend lines. The purpose of this element is to allow viewing both previous and current values to both analyze and observe the effects of tuning on a process loop.

Initial historical data collection does not occur until the tuning display is called for the first time. Data collection continues and can be accessed until the tuning display is cleared. Only panning can be performed after selection of this element. Refer to **Trend Control** in the **Process Monitoring** section for specifics.

The trend element collection and operation is the same as an operator assignable trend (or fast trend). The OIS console stores up to two hours of historical data, and collects data from the PCU module every two seconds while the tuning display is active.

Two tuning displays can be active at one time. If two are currently active, one must be cleared before another can be called. The number of function block output trends currently active in the operator assignable trends function also affects the number of possible tuning displays. Refer to **Operator Assignable Trends** in the **Process Monitoring** section for procedures to delete or clear an active tuning display (tuning tag), and for procedures to delete active block output trends.

Station Element

The station element displays the exception reported values from a station function block in a PCU module control scheme. The element can be used to monitor and initiate changes to the control loop set point, ratio index and control output. Refer to **STATION ELEMENT ATTRIBUTES** and **STATION CONTROL** in this section for further explanation.

Block Details Element

The block details element displays the controlling parameters for either a loop control function block (PID) or any selected function block. The element also provides the loop tuning capabilities. Refer to **BLOCK DETAILS DISPLAY OPERATIONS** in this section for an explanation of operations and information available through the block details element.

SECTION 9 - DATA ACQUISITION

INTRODUCTION

The operator interface station (OIS) provides data acquisition functions to support both process monitoring and control. The console gives access to INFI 90 process control unit (PCU) modules to acquire, then display values or state changes related to process operations. This section explains the information presented through standard faceplate display elements for data acquisition.

NOTE This section explains the data acquisition capabilities using standard OIS faceplate symbols. The console provides these symbols as part of its symbol library on the hard disk. The type of information presented remains the same whether using these standard symbols or creating custom symbols designed to provide the same information. The escape commands defined in the symbol file during creation determine the capabilities of the faceplate.

DATA ACQUISITION FUNCTIONS

The OIS console receives process information in exception reports from function blocks configured in INFI 90 PCU modules. Data acquisition tags access specific function blocks within the control scheme of a module to display analog values and digital state changes. An analog value can be a process variable such as flow rate, drum level, pressure, temperature, etc. A digital state is either an on or off state for a process device. The tags also allow presenting alarm conditions and quality reported by the function blocks.

NOTE Password security can be defined to limit access to control functions for data acquisition tags.

The data acquisition tags and the function codes (FC) they associate with include:

ANALOG	Analog exception report, FC 30
DAANALG	Control station, FC 21, 22, 23 and 80, or data acquisition analog, FC 177
DADIG	Data acquisition digital, FC 211
DADIGTL	Multi-state device driver, FC 129
DANG	Data acquisition analog, FC 177
DIGITAL	Digital exception report, FC 45
TEXTSTR	User defined data export, FC 194

The data acquisition tags and their related faceplate symbols are for presenting process information only. Process control cannot be initiated through these tags and their symbols. Refer to the *Function Code Application Manual* for a description of the data acquisition function codes and their specifications.

NOTES

- Information reported by the data acquisition function codes can be incorporated into any display. This information is not restricted to faceplate symbols only.
- DAANALG tag type does not implement the complete functionality of FC 177.

Figure 9-1 is an example group display containing the standard faceplate symbols used for data acquisition tag types.

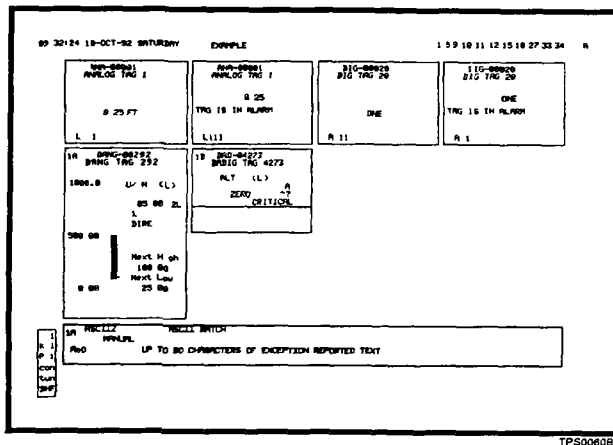


Figure 9-1 Standard Data Acquisition Faceplate Symbols

Common Data Acquisition Element Attributes

The standard faceplate elements shown in Figure 9-1 share some common attributes. These attributes, which can be incorporated into any graphic or custom faceplate, include:

Tag name - a name of up to 14 characters entered during tag configuration. This is the name of the tag defined to allow monitoring of the process point.

Tag descriptor - a tag descriptor of up to 32 characters entered during tag configuration. Normally, this descriptor explains the purpose of the tag (and process point).

Alarm status/quality/group - this field relates to alarm processing. In standard faceplate symbols, this field accommodates five characters.

From left to right, the first two character positions are the alarm status. An indicator in these positions identifies the last alarm threshold that a point passed as determined and exception reported by the PCU control scheme. Refer to **ALARM STATUS INDICATORS** in the **Alarm Processing** section for a description of the indicators that can appear in this field.

The DANG, DADIG and TEXTSTP tags present alarm suppression status in the status portion of the alarm status/quality/group field. An // appears when alarm suppression is enabled for the tag.

The third character position is the quality field. This field identifies the quality associated with a process value or state, and the operating status for the tag. Refer to **QUALITY INDICATORS** in the **Alarm Processing** section for a description of the quality indicators that can appear in this field.

NOTES

1 Disestablished substituted and inhibited are initiated at the console through operator actions (i.e. operating parameters functions). PCU modules report good, bad and suspect in exception reports.

2 Control cannot be performed for any tag reporting bad quality or off scan.

The last two character positions identify the alarm group to which the tag is assigned. The field appears as either blank for no alarm group or 1 through 99.

Example An alarm status/quality/group field that appears as:

2H 10

indicates that the point has passed the two-high threshold set in the PCU module, the module has determined that it is receiving good data for the point, and the tag defining the process point is part of alarm group ten.

Refer to the **Alarm Processing** section for an explanation of alarm processing, conditions and indications.

Red tag descriptor - a red tag descriptor (and red outline) identifies a process point as being red tagged. Red tagging performed through PCU management functions at the console does **not** prevent a process device from operating. It can be set to either display red tag status and disable control actions from being performed at the console, or to display red tag status only. The process engineer determines how red tagging operates at the console through system configuration.

A PCU module reports red tag status as part of an exception report. Of the data acquisition tags, red tag status is available for a DANG, DADIG or TEXTSTR tag.

NOTES

- 1 In some cases the source file for a symbol must be modified to enable the red tag status outline feature. Either remove the remark (rm) at the beginning of the line containing the ed 102 escape command or add this command to the source file if not present.
- 2 The alarm status, quality and red tag indicators presented are default characters. They can be changed through text substitution.

Control prompt/field - the control prompt and input field appears only after selecting an element for control. It contains a TARGET: prompt and input field. Depending on the tag being controlled, it shows the current mode, state or value of the selected control point when it first appears. It then allows changing that parameter through keyboard selections. When a change is initiated, the displayed parameter updates to reflect the target mode, state or value. The target is the desired change. The element then updates to reflect the change.

The control TARGET: prompt may appear somewhere else on the screen other than directly with a display element. The location of the prompt depends on the control select option set for the element during its creation.

Analog Element Attributes

The console provides two different faceplate symbols to present analog tag values. Figure 9-2 details the information presented at a standard analog display element. The display source file for this element is the **ANALOG1.DT** symbol file. Figure 9-3 details the information presented at an analog annunciator display element, which is the **ANCREAL1.DT** symbol file.

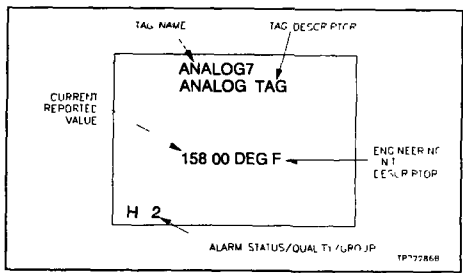


Figure 9-2 Analog Element

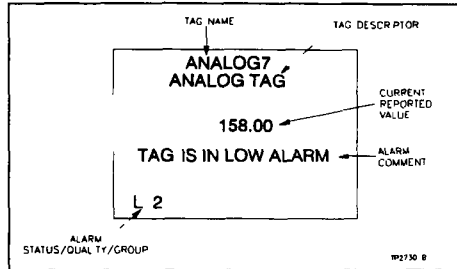


Figure 9-3. Analog Annunciator Element

An analog function block exception reports the current real value, and alarm status and quality that display at these elements. Attributes that relate to an analog type tag and can be incorporated into any graphic or custom faceplate include:

Current reported value - the current value being reported by the analog function block. This value is dynamic and changes as the variable being monitored changes.

Engineering unit descriptor (EUD) - indicates the unit of measurement associated with the value. The analog function block reports an EUD index number that the console then cross references against its list of engineering unit descriptors.

Alarm comment - an alarm comment of up to 64 characters. The alarm comment is entered as part of the tag configuration. The comment can describe, for example, the purpose of the alarm indication, or operator actions required to correct the alarm.

Digital Element Attributes

The console provides two different faceplate symbols to present digital states. Figure 9-4 details the information presented at a standard digital display element. The display source file for this element is the **BOOLEAN1.DT** symbol file. Figure 9-5 details the information presented at a digital annunciator, which is the **ANCB00L1.DT** symbol file.

A digital function block exception reports the current output state, and alarm status and quality that display at these elements. Attributes that relate to a digital type tag, and can be incorporated into any graphic or custom faceplate include:

Current state - the current output state being reported by a digital function block. This state is dynamic and changes as the logic state being monitored changes.

DATA ACQUISITION

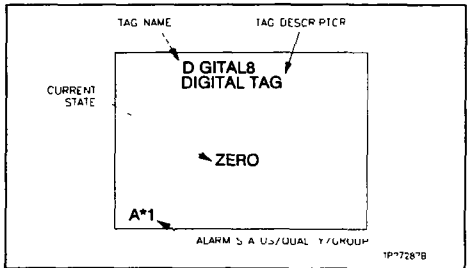


Figure 9-4 Digital Element

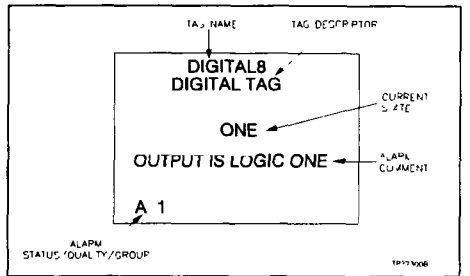


Figure 9-5 Digital Annunciator Element

Alarm comment - an alarm comment of up to 64 characters. The alarm comment is entered as part of the tag configuration. The comment can describe, for example, the purpose of the alarm or operator actions required to correct the alarm.

An alarm for a digital tag is used to identify one of two possible states. The specific state that causes an alarm indication is determined by the function block configuration. A digital alarm may not actually be a problem condition, but instead a digital state transition indicator.

Data Acquisition Analog Element

The data acquisition analog function code (FC 177) provides reporting and multilevel, rate of change and deviation alarm monitoring capabilities for an analog point. It also supports several time based alarming options with time based alarm filtering capabilities. A PCU control module configured with a data acquisition analog function block performs these operations for the process value being monitored by the block. The console gives access to the function block to allow the operator to observe the

process variable being monitored by the block, and its status. Also, it allows the operator to interact with the block to change the input source and enter a user-inserted value if desired. The block stores the user-inserted value in nonvolatile memory.

DANG ELEMENT ATTRIBUTES

The data acquisition analog (DANG) element represents a data acquisition analog function block in a PCU module control scheme. A DANG tag is required to monitor and control the operation of this function block

Figure 9-6 details the information presented in a data acquisition analog element. The display source file for this element is the **DNGFULL1.DT** symbol file.

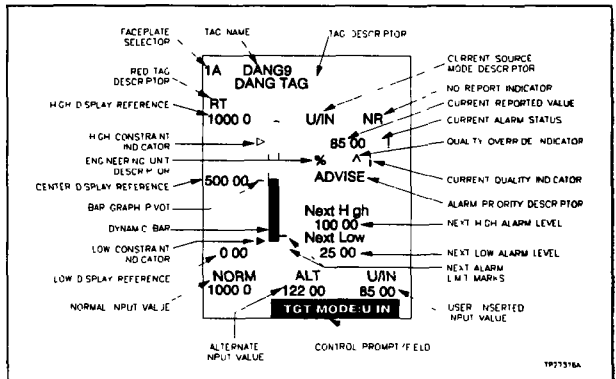


Figure 9-6 Data Acquisition Analog Element

The data acquisition analog block exception reports the current output value, input source mode, and alarm status and quality that display at a data acquisition analog element. Attributes that relate to a DANG tag and can be incorporated into any graphic or custom faceplate include

Current reported value - the current value being reported by the data acquisition analog function block. This is the output of the function block. The output value depends on the input source selection.

During configuration of the data acquisition analog function block, the process engineer can establish constraint limits for the normal, user inserted and alternate values. The maximum and minimum value displayed and reported by the block will always be within the constraint limits even if the variable being

DATA ACQUISITION

monitored exceeds the constrained level. The value is always the true value when within the constrained limits

High display reference - reference point value that establishes the highest value represented by the bar graph and constraint limits. The console displays the dynamic bar representation of the current reported value and the constraint limit indicators proportionally between the high display reference value and the low display reference value

Center display reference - reference point value that establishes the center reference point between the high and low reference points for the bar graph. This shows the value that is the pivot point for the bar graph

Low display reference - reference point value that establishes the low reference point for the bar graph and constraint limits

High and low constraint indicator - marks where the constraint limits fall within the high and low reference range on the bar graph. The indicators do not appear unless constraint limits have been enabled in the function block. The triangular indicator fills when the variable is at or above the constrained limit

Dynamic bar - provides a visual indication of the reported value as an expanding and contracting bar. The bar expands from the center pivot point on the bar graph in either a negative or positive direction as the process variable increases or decreases in value

Bar graph pivot - marks the center reference point on the bar graph

Current source mode descriptor - identifies the current input source selected by the operator, or some other supervisory device. The PCU module reports the current mode of the block. The descriptor also identifies whether the block is locked or not locked in a certain mode. The descriptors are

Source Locked

NORM (L)
U/IN (L)
ALT (L)

Source Unlocked

NORM
U/IN
ALT

No report indicator - shows whether the function block is in a report or no report state. The field appears as NR for a no report condition, or blank for a report condition. Refer to **TAG OPERATIONS** in the **Process Monitoring** section for further explanation and procedures to enable or disable reporting

Current alarm status - presents all normal alarm status indications. The field shows the same information that can be seen in the status portion of an alarm status/quality/group field. Refer to

ALARM STATUS INDICATORS in the *Alarm Processing* section for a list of alarm status indicators

The block also supports automatic alarm suppression and re-alarms. Refer to the *Function Code Application Manual* to determine the effects of these features on the reported alarm status.

Current quality indicator - presents all normal quality indications. The field shows the same information that can be seen in the quality portion of an alarm status/quality/group field. Refer to **QUALITY INDICATORS** in the *Alarm Processing* section for a list of quality indicators.

Quality override indicator indicates whether the block is in an override condition or not. The block allows an external source to override the quality status of the reported value. A caret symbol (^) identifies an override condition.

Engineering unit descriptor (EUD) indicates the unit of measurement associated with the value. The data acquisition analog function block reports an EUD index number that the console then cross references against its list of engineering unit descriptors.

Alarm priority descriptor - gives a text descriptor that corresponds to the priority of an alarm level or bad quality being reported by the function block. The process engineer sets priority levels during configuration of the DANG tag. Refer to **Alarm Priority Descriptors** in the *Alarm Processing* section for an explanation of the descriptors.

Next high alarm level - identifies the value that is with the next high alarm level threshold for the point. Refer to Table 9-1 to determine the criteria for this field.

Next low alarm level - identifies the value that is the next low alarm level threshold for the point. Refer to Table 9-1 to determine the criteria for this field.

Table 9-1. DANG Element Next High and Next Low Alarm Limit Criteria

Current Alarm State	Next High Value	Next Low Value
Blank (no alarm)	H	L
N	H	L
3H	>	3H
2H	3H	2H
H	2H	H
L	L	2L
2L	2L	3L
3L	3L	>

Table 9 1. DANG Element Next High and Next Low Alarm Limit Criteria (continued)

Current Alarm State	Next High Value	Next Low Value
V3H	>	V3H
V2H	V3H	V2H
VH	V2H	VH
VL	VL	V2L
V2L	V2L	V3L
V3L	V3L	>
HD	blank	blank
LD	blank	blank
HR	blank	blank
LR	blank	blank

Next alarm limit marks - mark the next high and next low points on the bar graph. These correspond to the values seen in the next high level field and next low level field.

Normal input value - shows the real input value. Normally, this is the real value being received from the transmitter monitoring the process. The attribute is dynamic and changes as the variable being monitored changes. A value does not appear if the block is in alternate or user-inserted mode.

User-inserted value - shows a numeric value established by the operator at the console, or some other supervisory device. A PCU module stores this value in nonvolatile memory. The user inserted value can be, for example, stored lab data or an interim value if a process value is not available.

Alternate input value - shows a dynamic value preconfigured as a contingency. In this case, the alternate can be developed from one or more other real values received from the process. It also can be the result of a calculation. A value only appears when the block is in the alternate input source mode.

DANG CONTROL

DANG control allows changing the input source selection for a data acquisition analog function block, and entering a user inserted value. Refer to **TAG OPERATIONS** in the **Process Monitoring** section for procedures to change the alarm reporting and exception reporting status of a DANG block.

To **enable** a DANG element to control a data acquisition analog function block, either enter its faceplate selector through the keyboard or use an optional method of selection. A **TGT MODE** control prompt appears when the element is first selected.

Source Selection The input source for the DANG block can only be changed through keyboard actions at the console if the block is not in a locked state. An (L) appearing next to the current source mode descriptor identifies a locked condition

NOTE When the DANG block is in a no report condition any mode change causes the block to output a single exception report

Press **(MAN/AUTO)** to toggle between the normal input source mode and the user-inserted source mode.

Press **(CMPTR)** to select alternate input source mode

As soon as a change is made, the display begins to update. The **TGT MODE** prompt identifies the currently requested target state after pressing any of these keys. The current source mode descriptor identifies the mode being reported by the block

Press **(MAN/AUTO)** to return to normal input source mode from alternate input source mode

Change Value To change the user-inserted value being stored in nonvolatile memory of a PCU module

1 Press **(SET)** This calls a **SET U/IN** control prompt, which shows the current user inserted value. The EUD descriptor identifies the unit of measurement associated with the value.

2 The value can be changed using one of two methods. Key in the desired set point target value and press **(ENTER)**, or press



To effect a slow, ramping set point change. This changes the value 0.2 percent per keystroke.



To effect a fast, ramping set point change. This changes the value 4.0 percent per keystroke.

While the DANG element is still active, a block details or operating parameters display can be called by pressing a corresponding keyboard key. Refer to **Block Details Display** in the **Process Control and Tuning** section for an explanation of the functions performed through the block details display. Refer to **TAG OPERATIONS** in the **Process Monitoring** section for an explanation of the operating parameters display and its functions.

To **disable** control of the currently selected element, press **(ESC)** or select another element at any time.

Data Acquisition Digital Element

The data acquisition digital function code (FC 211) provides reporting and alarm monitoring capabilities for a digital point. A

DATA ACQUISITION

PCU control module configured with a data acquisition digital function block performs the operations for the digital variable being monitored by the block. The console gives access to the function block to allow the operator to observe the state of the point being monitored, and its status. Also, it allows the operator to interact with the block to change the input source and enter a user-inserted value if desired. The block stores the user inserted value in nonvolatile memory.

DADIG ELEMENT ATTRIBUTES

The data acquisition digital (DADIG) element represents a data acquisition digital function block in a PCU module control scheme. A DADIG tag is required to monitor and control the operation of this function block.

Figure 9-7 details the information presented in a data acquisition digital element. The display source file for this element is the **DADIG1.DT** symbol file

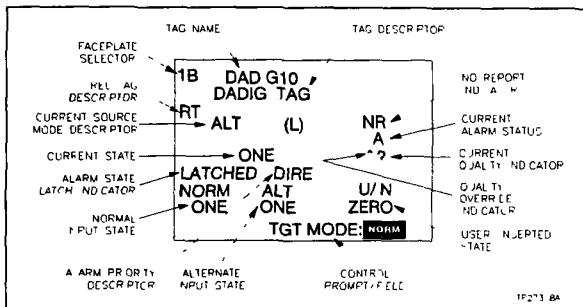


Figure 9-7. Data Acquisition Digital Element

The data acquisition digital block exception reports the current output state, input source mode, and alarm status and quality that displays at a data acquisition digital element. Attributes that relate to a DADIG tag and can be incorporated into any graphic or custom faceplate include

Current state the current output state being reported by the data acquisition digital function block. This is the output of the function block. The output value depends on the input source selection.

During configuration of the data acquisition digital function block, the process engineer has the option of performing input conditioning to develop the output of the function block. Refer to the **Function Code Application Manual** to determine the effects of this conditioning on the reported output.

Current source mode descriptor - identifies the current input source selected by the operator, or some other supervisory device. The PCU module reports the current mode of the block. The descriptor also identifies whether the block is locked or not locked in a certain mode. The descriptors are:

<u>Source Locked</u>	<u>Source Unlocked</u>
NORM (L)	NORM
U/IN (L)	U/IN
ALT (L)	ALT

No report indicator - shows whether the function block is in a report or no report state. The field appears as *NR* for a no report condition or blank for a report condition. Refer to **TAG OPERATIONS** in the **Process Monitoring** section for further explanation and procedures to enable or disable reporting.

Current alarm status - presents all normal alarm status indications. The field shows the same information that can be seen in the status portion of an alarm status/quality/group field. Refer to **QUALITY INDICATORS** in the **Alarm Processing** section for a list of quality indicators.

During configuration of the data acquisition digital function block, the process engineer has the option of using either the unconditioned input or conditioned input for alarming, and one of four modes of alarming. The block also supports automatic alarm suppression and re-alarming. Refer to the **Function Code Application Manual** to determine the effects of these features on the reported alarm status.

Current quality indicator - presents all normal quality indications. The field shows the same information that can be seen in the quality portion of an alarm status/quality/group field. Refer to **Common Data Acquisition Element Attributes** in this section for a list of quality indications.

Quality override indicator - indicates whether the block is in an override condition or not. The block allows an external source to override the quality status of the reported value. A caret symbol (^) identifies an override condition.

Alarm state latch indicator - shows whether the function block has its alarm state latch feature enabled. The field appears as *LATCHED* when enabled, or blank when not. Refer to **TAG OPERATIONS** in the **Process Monitoring** section for further explanation and procedures to reset the alarm state latch if enabled.

Alarm priority descriptor - gives a text descriptor that corresponds to the priority of an alarm or bad quality being reported by the function block. The process engineer sets priority levels during configuration of the DADIG tag. Refer to **Alarm Priority Descriptors** in the **Alarm Processing** section for an explanation of the descriptors.

DATA ACQUISITION

Normal input state - shows the real input to the block. Normally, this is the state being received from the process. The attribute is dynamic and changes as the state of the device being monitored changes. A state condition does not appear if the block is in alternate or user inserted mode.

User-inserted state - shows a descriptor for the user inserted digital state selected by the operator at the console, or some other supervisory device. A PCU module stores this value in non volatile memory. The user-inserted value can be, for example, an interim value if a process device is not available

Alternate input state - shows a dynamic state preconfigured as a contingency. The alternate can be developed from another function block. A value only appears when the block is in the alternate input source mode.

DADIG CONTROL

DADIG control allows changing the input source selection for a data acquisition digital function block, and entering a user inserted value. Refer to **TAG OPERATIONS** in the **Process Monitoring** section for procedures to change the alarm reporting and exception reporting status, and to reset the alarm state latch for a DADIG block

To **enable** a DADIG element to control a data acquisition digital function block, either enter its faceplate selector through the keyboard or use an optional method of selection. A **TGT MODE** control prompt appears when the element is first selected

NOTE When the DADIG block is in a no report condition any mode change causes the block to output a single exception report

Source Selection

The input source for the DADIG block can only be changed through keyboard actions at the console if the block is not in a locked state. An **(L)** appearing next to the current source mode descriptor identifies a locked condition

Press **[MAN/AUTO]** to toggle between the normal input source mode and the user-inserted source mode

Press **[CMPTR]** to select alternate input source mode.

As soon as a change is made, the display begins to update. The **TGT MODE** prompt identifies the currently requested target state after pressing either of these keys. The current source mode descriptor identifies the mode being reported by the block

Press **[MAN/AUTO]** to return to normal input source mode from alternate input source mode.

Change State To change the user-inserted state being stored in nonvolatile memory of a PCU module

1 Press **(SET)** This calls a *SET U/IN* control prompt, which shows the current user-inserted state

2 Press the following keys to change the state:



Changes to a one state output



Changes to a zero state output

While the DADIG element is still active, a block details or operating parameters display can be called by pressing a corresponding keyboard key. Refer to *Block Details Display* in the *Process Control and Tuning* section for an explanation of the functions performed through the block details display. Refer to *TAG OPERATIONS* in the *Process Monitoring* section for an explanation of the operating parameters display and its functions.

To *disable* control of the currently selected element, press **(ESC)** or select another element at any time.

Text String Element

The text string element allows the operator to interact with an application program running in a PCU module. A user-defined data export function code (FC 194) in a PCU module provides the interface between the console and the program. At the console, a *TEXTSTR* tag referencing a data export block in the PCU module allows an operator at the console to interact with the function block. The data export function block can also be driven by another function block rather than directly by an application program.

The text string functionality provides, for example, a means to prompt or question an operator and have the operator respond to the prompt or question in some manner. The response may be to make some type of selection, acknowledge an event or provide an answer to a question. It can also be used to simply allow the operator, through descriptive text, to monitor and verify the progress of a process routine.

The capabilities provided by the text string function are not limited to the uses previously described. A C language program or batch program executing in the PCU module determines the operations performed through the text string block and text string element.

DATA ACQUISITION

TEXTSTR ELEMENT ATTRIBUTES

The text string (TEXTSTR) element gives access to a user-defined data export function block in a PCU module control scheme. A TEXTSTR tag is required to interact with this function block.

Figure 9-8 details the information presented in a text string element. The display source file for this element is the **TEXTSTR1.DT** symbol file

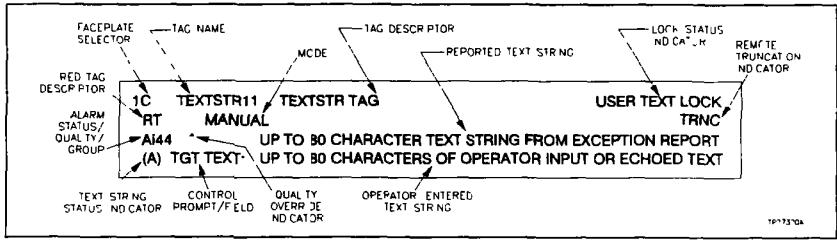


Figure 9 8. Text String Element

The user-defined data export block exception reports the text string message, and alarm status and quality that displays at a text string element. Attributes that relate to a TEXTSTR tag and can be incorporated into any graphic or custom faceplate include:

Lock status indicator - indicates whether the function block is in a locked or unlocked condition. When locked, the block does not accept text string inputs from the console. The default descriptors for this field are **USER TEXT LOCK** when the block is locked and blank when it is not.

Mode indicates the current operating mode of the block. The block operates in either automatic (**AUTO**) or manual (**MANUAL**) mode, which determines how the output of the block is derived.

Quality override indicator - indicates whether the block is in an override condition or not. The block allows an external source to override its quality status. A caret symbol (^) identifies an override condition.

Reported text string shows the text string being exception reported by the user-defined data export function block (FC 194).

The standard text string element (**TEXTSTR1.DT**) provides for a text string length of 80 characters, which is the maximum length for a text string. In a user-defined text string element the process engineer has the option of setting the maximum length allowed for a text string. An option to enable or disable local truncation for a text string is also provided. If enabled and the length of the

reported text string is longer than the length allowed for in the user-defined element, the console indicates local truncation with an ellipsis (. . .) at the end of the text string

Truncation indicator - indicates the presence or absence of remote truncation for the reported text string. Remote truncation is done by a PCU module or the communications interface of the console *TRNC* appears if remote truncation has occurred.

To identify where remote truncation is occurring and to help identify a truncation error, the operating parameters page for a **TEXTSTR** tag provides text string length information. A *Console String Length* field displays the length defined in the tag database for the **TEXTSTR** tag. A *Module String Length* field identifies the length set in the function block. A *Received String Length* field shows the actual length of the text string received in the last exception report for the tag. Refer to **TEXTSTR CONTROL** in this section for procedures to call the operating parameters page from a selected **TEXTSTR** element

Operator entered text string appears only after the element has been selected for control. Depending on configuration, a **TEXTSTR** tag may or may not allow control. The text that initially appears after selecting the element for control is the same as the reported text string.

Text string status indicator - provides two functions. The first is to indicate that there is an alarm associated with the text string being entered if the operator chooses to make this association. For this purpose, the indication is either () for no alarm or (A) for alarm.

The second purpose is to indicate that following an operator entered response to a prompt or question, the initial prompt or question is received again at the console. This occurs when the application program has rejected the response for some reason and has sent the same text string back to the console for another response. If this happens, it is possible for the operator to be prompted again with the same text string without first seeing the entered reply confirmed with a new text string. The console displays a *NAK* (negative acknowledgment) indication to identify that the current reported text string is the same prompt or question that the operator had previously responded to, but regenerated. This requires, however, that the program be specifically written to prompt the operator again after rejecting an input.

NOTE The block also supports re-alarms. Refer to the *Function Code Application Manual* to determine the effects of this feature on the reported alarm status.

TEXTSTR CONTROL

TEXTSTR control allows the operator to respond to a prompt or question introduced by a user written application program.

Control also allows the operator to change the operating mode of the user-defined data export function block to determine the output of the block. Refer to **TAG OPERATIONS** in the *Process Monitoring* section for procedures to change the alarm reporting status for a user defined data export function block (TEXTSTR tag)

To **enable** a TEXTSTR element for control, either enter its face plate selector through the keyboard or use an optional method of selection. A *TGT MODE*: control prompt appears when the element is first selected.

The element can only be enabled for control if the *Control Enabled* field for the tag was set to *YES* during its configuration. If an attempt is made to enable a TEXTSTR element for control when the tag referenced in the element has its *Control Enabled* field set to *NO*, the following message appears

Control is not enabled

The input source for the user-defined data export function block can be either an application program or another function block. Besides these two sources, the block also accepts messages from a console. This allows the operator at the console to toggle the block between automatic and manual mode and to input a text string. The operator can also change the alarm reporting status of the block through the operating parameters function.

The user-defined data export function block only accepts input from the console if the block is not in a locked state. A *USER TEXT LOCK* appearing as the lock status indication identifies a locked condition. If the operator attempts any control while the block is locked, the following message appears

Control Invalid While in String Interlock

Mode Change The operator can change mode to determine the output of the user-defined data export function block. Press **[MAN/AUTO]** to toggle the block between manual and automatic mode.

The block operates in several ways depending on its input source and current mode.

Application driven - when an application program drives the user-defined data export block, it always controls the output of the block. It also always sets the alarm status and quality for the block.

When the block is placed in *AUTO* mode, the application can read any input from the console. Depending on how the program is written, it may or may not update the output of the block based on this input. The block does not exception report a new text string to update the console display unless the application itself

updates the output of the block or changes either the alarm status or quality status of the block. The application does not echo the text string entered by the operator back to the console unless the program is explicitly written to do so. An echo feature like this, which can be used to confirm that the block received the entered text, must be built into the program for it to occur. The block does, however, generate a new exception report automatically even if the application does not change an output when the maximum time for exception reporting expires

When the block is in *MANUAL* mode, the application can still read any input from the console. In this case, the output may either be a new text string generated by the application, or it may be an echo of the operator entered text string. When the block receives an input from the console, it immediately places the input into its output buffer. This text string is output in the next exception report unless the application overwrites it before the block generates a new exception report

Block driven - the user-defined data export block in *AUTO* mode operates basically the same when driven by another block as when it is driven by an application program. The difference is that the function block driving the user-defined data export block sets the alarm status and quality rather than the application program.

When the block is in *MANUAL* mode, only the console controls the output of the block. The block exception reports any text strings entered by the operator at the console. The operator entered text string is echoed back as the reported text string

Table 9-2 summarizes the operation of the user-defined data export function block based on the input source, and current mode and lock status of the block.

Table 9-2 *TEXTSTR* Element Operating Conditions

Input Source	Mode	Lock Status	Operation
App icat on	<i>AUTO</i>	Locked	The app icat ion controls the output of the user defined data export b ock not allowing any nput from the console
	<i>AUTO</i>	Un ocked	The appl icat ion controls the output of the user- def ned data export block a low ng nput from the console. The appl icat ion may or may not update the output of the block based on the input from the console. It depends on how the program is written
	<i>MANUAL</i>	Un ocked	Both the app icat ion and the console contro the output of the user-defined data export b ock. A text str ng received from the console can be read by the appl icat ion. The text str ng received from the con so e becomes the output of the block un ess the program updates the output with a new text string

DATA ACQUISITION

Table 9-2 TEXTSTR Element Operating Conditions (continued)

Input Source	Mode	Lock Status	Operation
Function block	AUTO	Locked	Another function block controls the output of the user-defined data export block not allowing any input from the console
	AUTO	Unlocked	Operates basically the same as a 1 application driven block but another function block controls the alarm status and quality of the user-defined data export block
	MANUAL	Unlocked	The console controls the output of the block. A text string received from the console becomes the output of the block

Text String Input To enter a text string in response to a prompt or question

- 1 Press **[SET]** to enable the text string input field. The control prompt changes to *TGT TEXT* and the current reported text string is echoed in the input field after pressing the key.
2. The maximum number of characters that can be entered is 80. However, the *Text Length* attribute defined for the TEXTSTR tag the element references determines the maximum number of characters displayed and accepted by the element. Key in a response.
- 3 Press **[ENTER]** to enter the text string.

When the module sends an exception report to the console containing a text string, the exception report also contains a sequence number associated with the text. The module uses the sequence number to ensure that the response received from the operator at the console corresponds to the text that was sent. The user-defined data export block increments the sequence number each time the application program updates the output of the block with a new text string.

The message the console sends to the module in response to a prompt or question also contains the sequence number of the message to which the operator is responding. If the module detects a mismatch between the current sequence number and the received sequence number, it ignores the response. This ensures the integrity between the prompt and the answer.

For example, the operator is currently typing in a response to a question and the console updates the display with a new question before the operator finishes his response. This causes a mismatch between the current question, which is the newly generated one, and the response when the operator finishes

typing the entry and presses **[ENTER]** The console displays the message

Answer Is Invalid For Current Question

to identify the mismatch

Alarm State

The operator has the ability to indicate an alarm state to be associated with a response The alarm state can be indicated as either in alarm (A) or no alarm (), the default is no alarm Refer to **TEXTSTR ELEMENT ATTRIBUTES** in this section for an explanation of alarm state indications

To indicate an alarm or no alarm condition for a text string, press:



Indicates alarm



Indicates no alarm

While the TEXTSTR element is still active, a block details or operating parameters display can be called by pressing a corresponding keyboard key Refer to **Block Details Display** in the **Process Control and Tuning** section for an explanation of the functions performed through the block details display Refer to **TAG OPERATIONS** in the **Process Monitoring** section for an explanation of the operating parameters display and its functions

To **disable** control of the currently selected element, press **[ESC]** or select another element at any time

22 14 29 04 10 07

Bailey.

SECTION 10 - ALARM PROCESSING

INTRODUCTION

The operator begins processing alarms after receiving alarm indications at the operator interface station (OIS). The console follows a strategy for alarming established during configuration to indicate alarm occurrences. These indications identify alarm conditions for individual process variables and entire process areas, and also priority alarms.

This section explains the OIS level alarm indications and processing procedures. It also details the information and functions available through any alarm summary, and procedures to manually inhibit alarm indications for an entire process area or group of variables.

NOTE: The operator can inhibit alarm indications for process variables (tags) individually through the operating parameters page. Refer to the *Process Monitoring* section for procedures.

ALARM INDICATIONS

NOTE: This console does not use the device status alarm group which is alarm group D.

The OIS console presents several different indications to notify an operator of an alarm condition. The console monitors exception reports to determine if an alarm condition exists. Some examples of alarm conditions that cause an alarm indication are:

- A process variable passing a certain threshold
- A process device changing to a specific state
- An INFI 90 node or module going off-line or operating in an error condition.

Process Alarms

The console monitors the alarm status for each point within a process that is referenced by a defined tag. The tag allows the console to receive exception reports generated by a process control unit (PCU) module with information specific to that process point. A portion of the exception report is reserved for alarm status information. This information can be alarm levels for analog process variables, or alarm states for digital switching process devices.

The parameters in the control scheme of a PCU module controlling function block operations determine the thresholds or states that trigger alarm indications. The parameters are set during

module configuration. Depending on the function block, alarm indications for analog variables will either be a high or low indication, multilevel alarm indication, high or low deviation, or high or low rate of change alarm. Multilevel alarms range from a three high to three-low level. A change to a specific state triggers digital alarm indications. The specific state that triggers an alarm is set as one of the function block parameters.

INFI 90 Alarms

INFI 90 PCU modules report status information to the console through exception reports. The console monitors the status of each module in the INFI 90 system through an N90STA tag. A module sends status exception reports while in any of its on-line operating modes: execute, configure or error mode. The console indicates an alarm when the message identifies a module in error. An alarm also generates whenever a module goes off-line.

Several indications can appear to identify an alarm condition, and include:

Alarm status field - used mainly to identify the type of alarm, however, if the field is of the five-character type, it also provides quality and alarm area information. A status field flashes until the operator acknowledges the alarm condition.

Alarm status field colors - alarms appear in a standard color (yellow) or a user-designated color for easy recognition.

Title line indicators - presented in a fixed position on the display, these indicators allow the operator to locate a process area or group of variables in alarm. A yellow alarm group indicator (i.e., 1 to 99 or S) flashes until the operator acknowledges all alarm occurrences within the process area or group.

The title line presents two lines of alarm group indicators. If the area fills, an *M* appears to identify that there are more alarms.

Alarm tone - an audible tone can be associated with each process area to identify an alarm occurrence within that area.

Alarm relay - a relay associated with a specific process area will close to trigger an external alarm annunciator when a process variable within that area goes into an alarm condition.

An entry is also made in the alarm summary list to identify an alarm event. The console presents the same indications if the process variable returns to its normal condition from an alarm. The only difference is that the alarm status characters turn green to indicate a normal state when using standard colors. All or only some of these indications may be associated with a given process alarm.

An *Alarm Quality Option* configuration procedure can be used to override any existing color scheme set in both standard console provided displays and user-created displays. This option sets the colors used for the alarm status field. Refer to **ALARM QUALITY OPTION** in the *OIS Configuration* section for procedures to view the color scheme set for both alarm status and quality indications for your console

Alarm Status Fields

An alarm status field as an element of a display presents alarm status information to an operator. The status field appears at most OIS standard displays, and can be incorporated as an element of any user-created display. This field can appear in two different ways, either a five-character alarm status/quality/group field (e.g., 2H125), or a single character field showing alarm status only (e.g., H). From left to right, the five-character status field contains

- Two-character alarm status indicator
- One-character quality indicator
- Two-character alarm group number

The alarm status indicator that appears in the first two positions depends on the type of tag. For an analog point, the characters identify the last alarm threshold that the point passed as determined and exception reported by a PCU module control scheme. The two characters also identify a change in the digital state of a device, and an N90STA or TEXTSTR tag alarm.

The quality field applies to a process value or state being exception reported. The field also shows the current operating status of a tag when it has been taken off scan, has alarm inhibiting implemented, or the value or state shown is a substituted value or state.

The last two character positions identify the alarm group to which the tag is assigned. The field appears as either blank for no alarm group assignment, or 1 through 99 or S (system).

ALARM STATUS INDICATORS

NOTE: The characters used to identify each alarm condition are default text characters. Each indicator can be redefined through text substitution.

The alarm status indicators that can appear for a tag depend on its type. Table 10-1 describes the indicators that appear as the first two characters of the five-character element. Table 10-2 describes the indicators that appear if the display element is of the single character field type.

Table 10-1. Alarm Status Indicators for the Alarm Status/Quality/Group Field

Indication	Description	Tag Type
Blank	No alarm	A
3H	Three-high alarm	DAANALG DANG ¹
2H	Two-high alarm	DAANALG DANG ¹
H	High alarm	ANALOG INTANG, DAANALG DANG ¹ STATION
L	Low alarm	ANALOG INTANG DAANALG DANG ¹ STATION
2L	Two-low alarm	DAANALG DANG ¹
3L	Three low alarm	DAANALG DANG ¹
HD	High deviation alarm	STAT ON DANG
LD	Low deviation alarm	STAT ON DANG
HR	High rate of change alarm	DANG
LR	Low rate of change alarm	DANG
N	Return to normal from alarm	A I
A	Digital	DIGITAL INTD G DAD GTL RCM RMCB DD MSDD DAD G N90STA TEXTSTR
*	Bad quality NOTE The console must be set to handle bad quality as an alarm	A
//	Alarms suppressed	DANG DAD G TEXTSTR

NOTE 1 The DANG element uses a variable alarm type indicator field (ed 110) to identify a variable alarm condition. The default indicator is V which appears to the left of the alarm status/quality/group field. This indicator is positioned to look like it is part of the alarm status/quality/group field.

Table 10-2. Alarm Status Indicators for the Alarm Status Field

Indication	Description	Purpose
H	High analog alarm	Appears when a tag passes a three-high, two-high, or high threshold
L	Low analog alarm	Appears when a tag passes a three-low, two-low, or low threshold
D	Deviation analog alarm	Appears for either a high deviation or low deviation alarm

Table 10-2. Alarm Status Indicators for the Alarm Status Field (continued)

Indication	Description	Purpose
R	Rate of change analog alarm	Appears for either a high rate of change or low rate of change alarm
A	Alarm	Indicates a digital N90STA or TEXTSTR alarm
*	Bad quality	Appears when a tag is reported as in bad quality NOTE The console must be set to handle bad quality as an alarm
i	Alarm suppression	Indicates that alarm suppression is active for a tag

QUALITY INDICATORS

The quality position (third character) of an alarm status/quality/group field presents point quality, alarm inhibit, off scan and substituted value indications. The indicators include:

- Blank - good
- ? - suspect
- * - bad
- i - alarm inhibited
- x - off scan.
- s - substituted.

The i, x and s indicators appear after performing certain operations at the operating parameters page of the console. These indicators identify changes the operator has made that affect console operations only, **not** PCU module control operations. The operating parameters display can be viewed at any time to see the current operating status of a tag, and to perform operations that cause or remove these indications. Refer to *Operating Parameters Display Operations in the Process Monitoring* section for the information presented and operations performed at the operating parameters display that relate to the i, x and s indicators.

Alarm Inhibit The alarm inhibit indication (i) appears when either automatic or manual alarm inhibiting is in effect. Automatic alarm inhibiting occurs when another process variable or device defined as an alarm inhibit tag is in a specific alarm condition or changes to a specific state. Manual inhibiting is done through either the operating parameters or alarm group inhibit functions. In either case,

the console does not make any entries in the alarm summary and events log, display a title line indicator, sound a tone, or set a relay when an inhibited tag goes to an alarm condition. Also, the alarm summary field does not flash for an inhibited tag. The alarm status field still changes to its alarm color and shows any alarm indications (e.g., 2L, 3H, A, etc.) even while a tag is alarm inhibited.

- Off Scan** The off scan indication (x) appears when a tag is disestablished on the loop. The console does not process exception reports for any off scan tags. The quality position of the status field will show the x indicator, and any value or state fields related to the tag will contain a bad quality string.
- Substituted** The substituted indication (s) appears when the operator has forced a tag to a particular value or state. A substitution disestablishes a tag and replaces any exception reported value or state with a substitute value or state. The console uses a substitution in all operations as it would an exception reported value or state.
- Bad or Good** Each exception report received by the console contains point quality information. A function block generating an exception report determines the quality of the value or state it is reporting. It then sets the reported quality to either bad or good. An alarm indication does not mean a point is in bad quality.

The quality of a point is good when the function block determines that its output or outputs are valid. The bad quality indicator (*) appears for a tag if the reported quality is bad.

A bad quality indication also appears if the console cannot communicate with an entire PCU or an individual PCU module that contains the point referenced by a tag. In this case, the console marks all points (tags) associated with the off line PCU or PCU module as being in bad quality. A bad quality string defined through text substitution appears for all dynamic fields associated with a tag in bad quality.

- Suspect** The suspect indication (s) appears when the function block referenced by the tag performs a calculation to derive the value being sent to the console and at least one value used in the calculation was in bad quality.

Title Line Indicators

The console presents alarm indications at its title line. The title line elements are fixed and appear at all displays whether standard or user-created. This allows the console to present alarm indications while viewing any display page. Refer to **TITLE LINE DISPLAY ELEMENTS** in the *Display System* section for a description of fixed display elements, and the area of the window reserved for presenting alarm indicators.

The alarm indications presented at the title line are alarm group indicators (e.g., 1 to 99 or S) These indicators allow the operator to narrow a problem down to a process area. If a tag assigned to an alarm group goes into an alarm condition, the alarm group number of the group that the tag is assigned to appears. The indicator flashes until the operator acknowledges all alarms within that process area or group.

Alarm Priority Descriptors

The process engineer can assign a priority level to each alarm condition or state of a tag during tag configuration. The console can present a text descriptor associated with each priority level. A display or element must use the alarm priority escape command (ed 113) to present the text string. The default text descriptors and the priority level associated with each include:

- | | |
|---------------------|--------------------|
| (1) <i>DIRE</i> | (5) <i>WARNING</i> |
| (2) <i>CRUCIAL</i> | (6) <i>ADVISE</i> |
| (3) <i>CRITICAL</i> | (7) <i>NOTIFY</i> |
| (4) <i>ALERT</i> | (8) <i>INFORM</i> |

BAD QUALITY ALARMING

The console can be configured to treat bad quality reports for process variables as alarms. A PCU module reports bad quality for a point in an exception report. If bad quality alarming is set, the console presents all normal alarm indications for a process variable being reported as in bad quality. In addition, an asterisk (*) appears in the alarm status position of the alarm field to identify a bad quality alarm. The console also presents bad quality indications when it cannot communicate with a PCU module or a node defined as an N90STA tag.

When the console is operating on the Plant Loop communication highway, all bad quality alarms for tags appear in the alarm summary and the events log. In this case, the console makes entries in the summary and log for all tags referencing function blocks within a PCU module or node that goes off line.

For INFI-NET systems, the console filters out certain bad quality alarms to prevent an excessive number of entries from being made in the alarm summary and the events log. The console does not make an entry for a tag that is in bad quality due to a PCU module or a node being off-line. Only an entry for the N90STA tag defining the affected PCU module or node is made. All other alarm indications (bad quality indications) remain the same for any tags referencing function blocks within the off-line PCU module or node.

The process engineer configures bad quality alarming through the *Alarm Quality Option* configuration. Refer to **ALARM QUALITY OPTION** in the *OIS Configuration* section for specifics.

ALARM PROCESSING

ALARM PROCESSING PROCEDURES

Alarm processing concerns steps required to acknowledge alarm indications, then initiate operator actions to correct the alarm conditions. Alarm acknowledgment is an OIS level operation. An alarm must first be acknowledged by an operator to stop some of the indications the console uses to identify the alarm occurrence. After that, the actions taken to correct an alarm affect the process control responsibilities of the PCU module. For example, to maintain the control output of a process loop below a maximum limit may require the operator to initiate manual control actions through a station element.

The procedures and requirements for correcting alarms vary for each process, therefore, this section covers the alarm processing requirements at the OIS level only. The steps required to perform alarm processing include:

- 1 Silencing an alarm tone.
- 2 Acknowledging an alarm
- 3 Initiating actions to correct the problem

Alarm Tone Silence

A tone may or may not be associated with an alarm occurrence. A tone sounds on a per tag alarm basis; however, a tag must be part of an alarm area or group to have an assigned tone. When a tag that is part of an alarm group goes into an alarm condition, the tone assigned to that group sounds.

The console can sound only one tone at a time. Each tone has a set logical priority, pitch, volume and duration. A triggered tone normally continues to sound until it completes its entire duration, the operator manually silences it, or the tone is overridden by a higher priority tone.

When alarms in different groups occur simultaneously, the console checks the logical priority of the tone assigned to each of the groups in alarm. It does this to determine which tone of an alarm group it is to sound. Once the console has determined which is the highest priority tone, it then activates that tone. If an alarm occurs in another group with a higher priority, the current tone automatically silences and that higher priority tone sounds. A lower priority tone does not affect a higher priority tone.

Other factors within an alarm group also affect alarm tones. If multiple tags within a single group go into alarm at the same instant, only one tone sounds to identify the entire group. If there is a delay between tag alarms in a single group, each alarm occurrence triggers a new alarm indication. A new alarm resets the duration counter of the current tone to zero, then the counter

begins to increment until reaching its duration before turning off the tone

Press **SILENCE** to manually silence a tone. A tone also silences after being acknowledged.

Alarm Acknowledge

The operator must perform alarm acknowledgment to stop certain alarm indications at the console. Specifically, these include a flashing alarm status field and title line alarm group indicator, and an alarm tone before completing its duration.

Alarm acknowledgment can only be performed at displays that present an alarm status field, either five-character or single character type. Examples of displays that include an alarm status field include the operating parameters, alarm summary, trend, XY plot and operator configurable group displays.

NOTE: The NF 90 system status pages do not present alarm status fields but still provide the capability to acknowledge system alarms.

The standard displays of the console incorporate a five-character alarm status/quality/group field. The faceplate symbols provided as part of the symbol library also include this five-character field. Any user-created display can be created to present either the five-character or single character type of status field.

The operator must acknowledge the alarm to turn off the flashing indicators. Besides stopping the flashing, the acknowledgment is also recorded in the events or operator actions log.

Acknowledge Keys

Two choices are available for acknowledging alarms, either individually or an entire page. Press **PAGE ACK** to acknowledge all alarms on a single, displayed page. To acknowledge alarms individually:

- 1 Press **ACK ALARM**. This calls a cross hair (+) alarm cursor to the screen that positions at the first alarm status field.
- 2 Press either **TAB** or **TAB BACK** to position the cursor at a specific alarm field.
- 3 Press **ACK ALARM** to acknowledge that alarm. The field stops flashing once acknowledged.
4. Repeat Steps 2 and 3 for each alarm to be acknowledged on the current page. Once all acknowledgments are completed, press **CANCEL** then **CURSOR** to clear the alarm cursor from the screen.

As other variables within a process area go into alarm, the group number for that area continues to flash until all alarms or return to normals for that group are acknowledged by the operator.

Correcting Alarm Conditions

As stated previously, the actions that an operator performs to correct an alarm condition depend on the requirements of the process. The console, however, does provide the capability to access the specific display at which the operator performs these corrective actions. This display is the primary display of the tag.

The primary display for a tag can be called up in three different ways. The first is to select the tag or tag element on a page, then press **[DISPLAY]**. The second method requires using a selector that is part of an alarm summary; refer to **ALARM SUMMARY** in this section for further explanation. The third way is to call the primary display for a tag through the operating parameters page. A tag must be assigned a primary display during tag configuration to enable the display call up feature.

ALARM SUMMARY

An alarm summary contains a list of up to 1,000 of the most recent acknowledged or unacknowledged alarms, and unacknowledged return to normals. A summary can appear as an element of a user-created or operator configurable display, and also as its own display page.

The console provides a standard full page alarm summary. This standard summary or a user-created summary can be incorporated into OIS operations. In either case, a summary can be assigned to a dedicated alarm summary key to allow single-key access to a complete list of active acknowledged and unacknowledged alarms. Once assigned, pressing **[ALARM SUMM]** at any time directly displays an alarm summary. The operator calls other displays that contain summary elements by using the *Display by Name* option or pressing assigned keys.

Alarm management at the console can be set up in a variety of ways. Part of alarm management configuration is to set up how the console processes and records alarms in its alarm summaries. In particular, the setup determines whether alarms are recorded in chronological order as alarms occur, or grouped by priority then chronologically within the priority levels. Once the setup is established, it applies to all summaries.

Alarm management configuration also determines how the console handles return to normal alarms. One of two methods can be used. A fixed position change to a return to normal status or a new return to normal entry. Using fixed position, the initial alarm entry in the summary maintains its current position in the list if a process variable returns to its normal condition. The entry changes to its return to normal colors, and the status updates to show a return to normal (N) condition. The initial alarm entry clears and a new return to normal entry is added at the beginning of the list if using the new entry option. Refer to **OIS System**

Configuration in the *OIS Configuration* section for an explanation of the *Alarm Management Type* field, which determines the management option.

Priority sorting requires assigning a priority from one to eight to each type of alarm condition a tag may enter. Depending on tag type, a priority can be assigned to each analog alarm level or digital alarm state, and bad quality and return to normal conditions. These are also the conditions that trigger OIS alarm indications. The console references the priority level of an alarm to determine where it locates an entry in the alarm summary list when using priority sorting. The console also references the priority of an alarm condition to determine the foreground and background color of the entry. Entries appear in priority colors whether using chronological or priority sorting.

One of the indicators the console uses to identify a status alarm for a PCU module is an alarm entry in the alarm summary. A *System Status I/O Error Filter* option available through OIS system configuration gives the option of preventing alarm entries for status alarms caused by certain types of module errors. If the option is enabled, the console filters out any status alarms caused by a remote I/O error or local I/O error.

The console allows creating summaries in varying sizes ranging from a full page presentation to a one-eighth page. Entries in the summary can be for all alarm groups or priorities, or limited to only specific alarm groups or priorities.

A maximum of 16 entries can appear at a single alarm summary page or element. The information presented in each alarm summary entry depends on the line format configured for the particular summary. Element size and the format can vary from summary to summary. A single entry can include all or only some of the following attributes:

Date of alarm - date of alarm occurrence

Time of alarm - time of alarm occurrence

Tag name name of the alarming tag

Current value - current value, state and status of tag in alarm

Exceeded limit value - violated alarm limit for analog value reporting tag types

Engineering units engineering unit associated with an analog value.

Tag description - tag description entered in the tag database

Alarm condition - alarm status, quality and alarm group of the alarming tag.

Alarm comment - comment entered in the tag database for the alarming tag

Latched alarm time - used to latch the time of occurrence to the alarming tag. This allows displaying the time of occurrence in a return to normal alarm summary entry for the alarming tag.

Latched alarm date - used to latch the date of occurrence to the alarming tag. This allows displaying the date of occurrence in a return to normal alarm summary entry for the alarming tag.

Priority two-character indicator that shows the priority assigned to the alarming tag (set in the tag database)

Text string - text string associated with a TEXTSTR tag (with or without local truncation indication)

Remote truncation status - indicates the presence or absence of remote truncation. Remote truncation is done by a PCU module or the communications interface of the console.

In short, the console allows for flexibility when creating an alarm summary. The overall purpose of the summary determines the data and alarms presented. The type of information and how this information is presented depends on OIS system, tag database and alarm summary format configuration, along with the parameters set during creation of the summary. Refer to **Alarm Management Configuration** in the **OIS Configuration** section for procedures to view the current settings controlling alarm summary operations, and additional information about alarm processing.

Figure 10-1 shows a standard, full page alarm summary. The display source file for this summary page is the **ALMSUMFL.DT** source file.

Alarm Summary Element Attributes

An alarm summary element, no matter how it is configured, contains some standard display attributes. These attributes can be identified in Figure 10 1.

Alarm summary selector - an alphanumeric in the upper left corner of the element is its selector. A summary must be made active by using this selector before the operator can perform any operations. The selector characters only appear at an alarm summary in an operator configurable display. If a full page summary is called using **[ALARM SUMM]**, it automatically comes up in the active mode.

Page indicator - a page indicator appears as either **CURRENT** or **PAGING**. **CURRENT** appears when the summary is at its first page.

1110133 14-JUL-91 0400V		1 2 4 5 6 7 8 9 10 11 30 83A	
			CURRENT 3 3
A			
B			
C			
D			
E	16143186 0188881 M 4	900 900 DEC F	OIS RWLOG TAG 8861 PB
F	16143189 0188873 SS 4	888000	OIS DIGITAL TAG 8853 PB
G	16143188 0188852 SS 4	888000	OIS RWLOG TAG 8852 PB
H	16143188 0188851 SS 4	888000	O S RWMC TAG 8851 PB
I	16143185 0188838 SS 4	888000	O S RWMC TAG 8838 PB
J	16143183 0188827 SS 4	888000	OIS DIG TAG 8827 PB
K	16143185 0188845 SS 4	888000	OIS RWLOG TAG 8824 PB
L	16143183 0188820 SS 4	888000	OIS RWLOG TAG 8825 PB
M	16 42184 0188854 SS 4	888000	OIS RWLOG TAG 8854 PB
N	16142 47 0188842 A 4	901 900	O S RWLOG TAG 8842 PB
O			
P			

Figure 10-1. Alarm Summary Page

TPS0219B

PAGING appears after the next page or subsequent pages are at the screen.

Alarm count - next to the page indicator are two fields that present alarm count information. From left to right, the first field shows the number of current alarms. This is the total number of acknowledged, unacknowledged and return to normal entries being saved by the console. This does not necessarily reflect the number of alarms in the current list unless the alarm summary shows the alarms for all of the alarm groups. The second field shows the number of these total alarms that have not been acknowledged by the operator. Each field increments or decrements as alarm conditions change.

Primary display selectors - the letters along the left edge of the element are for calling the primary display associated with a tag in the list. A primary display must have been defined for a given tag in the list for its adjacent selector to function.

Alarm Summary Operations

Alarm summary operations allow viewing, acknowledging and calling the primary display for each process variable that is in alarm or has returned to normal. These operations are standard for all summary elements.

The top four lines of the *CURRENT* (or first) page are reserved for new entries. A new alarm entry initially appears in this area until being repositioned in the list.

ALARM PROCESSING**ACTIVATING AN ALARM SUMMARY**

If a full page summary (*ALMSUMFL.DT*) is called using (**ALARM SUMM**), it automatically comes up in the active mode. An alarm summary in an operator configurable display must be made active by selecting it using key selects

Press (**ESC**) to deactivate control for an alarm summary. This deactivates control for a summary that is part of an operator configurable display, and also the full page alarm summary called by pressing (**ALARM SUMM**).

Use the touch point display select built into the display to reactivate an alarm summary called with (**ALARM SUMM**). Or, exit the page then press (**ALARM SUMM**) to call the display again. Key select characters are not available at this type of summary.

Key in the selector characters again to reactivate an alarm summary that is part of an operator configurable display.

PAGING THROUGH THE ALARM SUMMARY

A single alarm summary element may have several pages of alarm entries. The number of pages depends on the size of an element and total number of process alarms.

Press (**NEXT PAGE**) or (**PREV PAGE**) with the summary element activated to page through the entire list of entries. Press (**HOME**) to quickly move back to the first page.

ALARM SUMMARY ALARM ACKNOWLEDGE

The operator acknowledges alarms at an alarm summary element in the normal way. An alarm status field as part of each alarm entry allows this acknowledgment. Two choices are available for acknowledging alarms, either individually or an entire page. Press (**PAGE ACK**) to acknowledge all alarms on a single, displayed page. To acknowledge alarms individually:

- 1 Press (**ACK ALARM**). This calls a cross hair (+) alarm cursor to the screen that positions at the first alarm entry.
- 2 Press either (**TAB**) or (**TAB BACK**) to position the cursor at a specific entry.
- 3 Press (**ACK ALARM**) to acknowledge the alarm. The field stops flashing once acknowledged.
- 4 Repeat Steps 2 and 3 for each alarm to be acknowledged on the current page. Once all acknowledgments are completed, press (**CANCEL**) then (**CURSOR**) to clear the alarm cursor from the screen.

As other variables go into alarm, additional entries are made in the alarm summary list. An alarm entry remains in the list while a process variable is in an alarm condition. A return to normal entry clears from the list as soon as the operator acknowledges it.

PRIMARY DISPLAY SELECT

The operator can call a primary display for any alarming tag in the summary list by pressing a single key. For this function to work, a tag must have a primary display assigned. Press the key corresponding to the letter adjacent to the alarm entry information of a tag to call the primary display for that tag.

ALARM GROUP INHIBIT

The alarm group inhibit page provides several capabilities. The operator can use this function to

- Inhibit tag alarming for an entire process area or group
- View the number of tags in each alarm group
- Determine the total number of tags in alarm
- Determine the total number of those tags in alarm that have not been acknowledged
- Find out the number of tags in alarm within each alarm group.
- Find out the number of those tags in alarm that have not been acknowledged for each alarm group

The alarm group inhibit page can be used to manually inhibit certain alarm indications for an entire area or group of process variables. The console does not make any entries in the alarm summary, display a title line indicator, sound a tone, or set a relay when an inhibited tag goes into an alarm condition. Also, the alarm status field does not flash for an inhibited tag. The alarm status field still changes to its alarm color and shows alarm indicators (e.g., 2L, 3H, A, etc.) even while a tag is alarm inhibited.

The operator can inhibit each alarm group from 1 to 99 or S individually or by specifying a range. To call the alarm group inhibit page (see Figure 10-2), first press GENL FCTNS MENU, then select the following menu items in the sequence shown

C OIS Operations → D Alarm Group Inhibit

The fields at this page provide both alarm information, and the capability of changing alarm group inhibit status. The fields and their purpose include

Group The group column lists up to 30 alarm groups on a single page.

ALARM PROCESSING

14:20:53 07-AUG-91 MESSAGE# ALARM GROUP INHIBIT 123456789101152A

Group	Inhibit	Tags	In Alarm	Unacked	Group	Inhibit	Tags	In Alarm	Unacked	
1	NO	121	27	23	16	NO	0	0	0	
2	NO	24	5	6	17	NO	0	0	0	
3	NO	17	1	1	18	NO	0	0	0	
4	NO	16	6	6	19	NO	0	0	0	
5	NO	15	3	3	20	NO	0	0	0	
6	NO	16	8	8	21	NO	0	0	0	
7	NO	16	15	15	22	NO	0	0	0	
8	NO	16	4	4	23	NO	0	0	0	
9	NO	7	17	3	24	NO	0	0	0	
10	NO	18	3	3	25	NO	0	0	0	
11	NO	8	-	-	26	NO	0	0	0	
12	NO	7	8	8	27	NO	0	0	0	
13	NO	8	8	8	28	NO	0	0	0	
14	NO	8	8	0	29	NO	0	0	0	
15	NO	8	8	8	30	NO	0	0	0	
Total Tags in Alarm			122	Total Unacknowledged Alarms			122			

1 Inhibit Individual Group
 2 Inhibit Range of Groups
 3 Start no Group to Over by

TPS0081A

Figure 10-2 Alarm Group Inhibit

Inhibit The inhibit column reflects the current alarm inhibit status of each group on the page. A YES in this field identifies a group as being inhibited, a NO appears for uninhibited.

Tags The tag column is the total number of tags in the group.

In Alarm This column indicates the total number of tags in a group that are currently in an alarm condition. This includes both acknowledged and unacknowledged alarms.

Unacked This column shows the total number of tags in alarm that have not been acknowledged.

Total Tags in Alarm This field increments or decrements to the total number of tag alarms for all alarm groups that are not inhibited.

Total Unacknowledged Alarms This field increments or decrements to the total number of tag alarms that have not been acknowledged for all alarm groups that are not inhibited.

The alarm group inhibit page is capable of displaying the information for up to 30 alarm groups at a time. Press **NEXT PAGE** or **PREV PAGE** to page through all alarm groups.

The options at the bottom of the page:

- Enable an input cursor, and position the cursor at a specific group to inhibit or enable.
- Enter a single or range of tag groups to inhibit or enable.
- Enter a starting group number that becomes the first entry in the displayed list of 30 groups

To inhibit or enable *individual* groups

1. Press **[A]** to select the *Inhibit Individual Group* option. This calls an *Enter Group Number* input prompt to the screen.

2. Enter any group number from 1 to 99 or S, then press **[ENTER]**. This positions an input field at the *Inhibit* column of the indicated group. Once the input field is at the page, it can be repositioned to any group by using the cursor control keys.

3. Key in **YES** to inhibit a group. Key in **NO** to enable a group. At this point, the change can either be put into effect by continuing with the next step, or additional groups can be inhibited or enabled. Either move the input field to each alarm group using the cursor control keys, or press **[ESC]** to call the *Enter Group Number* prompt back to the page then repeat Step 2. Continue to enable or disable all desired groups by setting their inhibit status to **YES** or **NO**.

4. Press **[ENTER]** to put all desired inhibits or enables into effect. The message *Group Inhibit change queued* appears after entering.

To inhibit or enable a *range* of groups

NOTE: Enter a range of 1 to S to specify the entire alarm group range. Group S is the last group.

1. Press **[B]** to select the *Inhibit Range of Groups* option. This calls a *Starting Alarm Group* __ *Ending Alarm Group* __ *Inhibit* __ input prompt to the screen.

2. Key in a starting group from 1 to 99 or S at the *Starting Alarm Group* portion of the prompt.

3. Move to the *Ending Alarm Group* portion of the prompt and key in the last group to enable or inhibit. The ending group must be a higher numbered group than the starting group.

4. Move to the *Inhibit* portion of the prompt. Key in **YES** to inhibit the range or **NO** to enable the range.

5. Press **[ENTER]** to put all desired inhibits or enables into effect. The message *Group Inhibit change queued* appears after entering.

ALARM PROCESSING

To change the first entry displayed at the page to another alarm group:

- 1 Press **C** to select the *Starting Group to Display* option. This calls an *Enter Group Number* input prompt to the screen.
- 2 Key in any desired alarm group from 1 to 99 or S.
- 3 Press **ENTER**; the display updates and the entered group number then becomes the first in the list of 30 entries.

SECTION 11 - OIS OPERATIONAL INFORMATION

INTRODUCTION

The operator interface station (OIS) provides display pages that show information specific to its operation. These pages identify both current successful operations and operations that require some action to continue. This section explains the *Operator Request for Action* page and *Operator Information* page.

NOTE: Currently the majority of information presented at these pages relates to archival storage and retrieval. The operator actions requests page also provides printer and keyboard failure indications.

OPERATOR ACTION REQUESTS

The OIS console uses an operator action requests page to inform the operator that some action must be performed to continue processing for a certain operation. The action indicated at the display identifies the attempted action, and once selected, provides options to respond to the action request.

An *A* appears at the title line to alert the operator that at least one action request is outstanding. The *A* blinks if any of the requests have not been acknowledged. The indicator remains on the screen until all actions listed at the operator requests for action page have been cleared.

When the *A* appears at the screen, the operator must perform the following steps to process a request for action.

- 1 Call the operator requests for action page
- 2 Acknowledge the request.
- 3 Respond to the request

Display Call Up

The operator processes all new or outstanding action requests through the operator request for action page (see Figure 11-1). To call this page, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown:

C OIS Operations → *B Operator Action Requests*

The display contains:

Display selector - a red *Q* at the upper left corner is the display selector. While the page is at the screen, additional action requests may appear. The selector both enables the page for

OIS OPERATIONAL INFORMATION

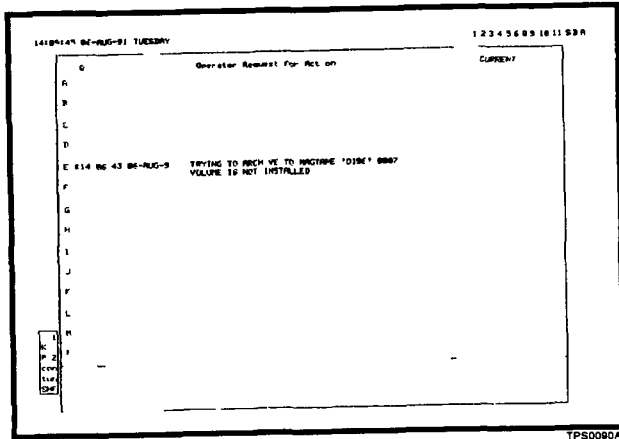


Figure 11-1 Operator Action Request Display

TPS0090A

operation and freezes it to prevent additional entries from appearing in the list. If any additional action requests occurred during the time the page was frozen, they appear in the list as soon as the operator disables (unfreezes) the page.

Page indicator - the operator request for action page maintains a list of all outstanding actions. A page indicator appears at the right upper corner of the page to show whether the displayed actions are the most current or older requests

The indication will be either *CURRENT* or *PAGING CURRENT* appears when at the first page of actions *PAGING* appears after the next or subsequent pages are at the screen

Action selectors - down the left side of the page are action item selectors. The selectors are used to enable a request on which to act. They cannot be accessed until the page is frozen. Initially, these selectors appear in cyan when the page is not frozen, and change to red after display select.

Unacknowledged indicator - a yellow asterisk (*) appears next to an action item and blinks if the operator has not acknowledged the action. The asterisk is removed after selecting an action item.

When at the *CURRENT* page, the top four lines of the page are reserved for new requests that occur after the page has been called to the screen. As these lines fill, the page scrolls the oldest action item off the page and displays the ten most recent messages.

Processing Action Requests

The purpose of an action request is to identify a step or procedure that the console requires before it can continue with a certain operation, and to get an acknowledgment from the operator before performing an operation. For example, the console may require the operator to install a new medium for archiving, to give approval to initialize a medium, or to initiate a retry. Until a request is acknowledged then acted upon, the console cannot continue with an identified, attempted operation.

For example, the console presents the message:

*TRYING TO ARCHIVE TO MAGTAPE 'OIS6' 0007
VOLUME IS NOT INSTALLED*

if an attempt to archive data to magnetic tape was unsuccessful. After acknowledging the problem, the following message appears.

Press ENTER when volume is installed

The console continues with the archive after a magnetic tape medium has been installed and the operator then presses **ENTER**.

Enabling the Action Request Page

The operator request for action page must first be enabled to perform any acknowledgment or action request processing. Once enabled, the page becomes frozen and no additional action requests will appear until the page is disabled (unfrozen).

Press **Q** to enable the page. The outline of the page highlights and the action selectors along the left edge of the page change to red. The display selector (O) disappears.

Press **ESC** at any time to disable the page. If any additional operator requests for action occurred during the time the page was frozen, they appear in the list as soon as the operator disables (unfreezes) the page.

Paging Through Entries

The operator request for action page function may have several pages of entries. The number of pages depends on the number of outstanding action items. Press **NEXT PAGE** or **PREV PAGE** after freezing the page to view additional pages. Press **HOME** to return to the *CURRENT* page.

Acknowledging a Request

The first step in processing requests is to acknowledge the request. Once the operator acknowledges all action requests, the

OIS OPERATIONAL INFORMATION

title line indicator stops flashing. Two choices are available for acknowledging requests, either individually or an entire page. The unacknowledged indicator (*) for each new request clears from the page after being acknowledged

Press **PAGE ACK** with the request for action list enabled to acknowledge all requests at the current page. This can be done if the requests have been viewed, but no action will be taken at this time. To acknowledge and process a single action request, first enable the list then:

- 1 Select the request to process by pressing the key corresponding to the action selector adjacent to the desired request. As soon as the key is pressed, the action selector changes to yellow to identify it as being selected

A response prompt appears at the bottom of the page that identifies the action to perform. In some cases, the console only requires an acknowledge, retry or continue response to proceed. The type of response required to clear an action item depends on the type of request. Some examples are:

Press ENTER to acknowledge

- or

Press ENTER to initialize magtape

Press **ESC** at any time to cancel. The request remains in the list as an outstanding action. The action selector for the request returns to its red color after pressing **ESC**.

2. Respond to the action request, then press the key indicated in the message. The action request then clears from the list. At this point, either continue processing requests by repeating Step 1, or go to the next step.


- 3 Press **ESC** to disable the page

If the actions taken to clear a request were not sufficient to allow the console to continue processing, the request will appear again as a new request in the list.

OPERATOR INFORMATION EVENTS

The operator information events function provides a chronological, running list of operations performed by the console. To call the operator information events page (see Figure 11-2), first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown.

C OIS Operations → C Operator Information Events

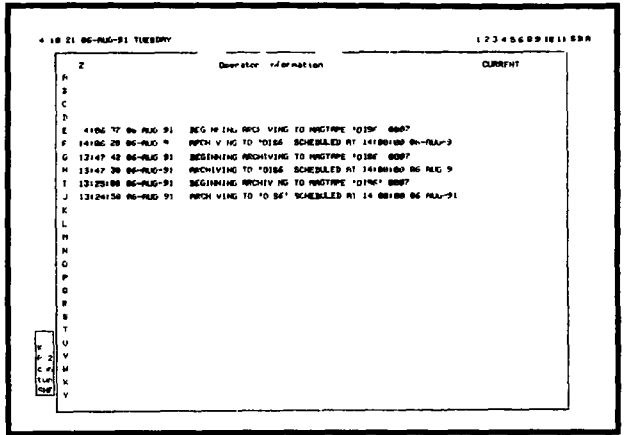

TPS0221A

Figure 11-2 Operator Information Events Display

The display contains.

Display selector - a red Z at the upper left corner is the display selector. While the page is at the screen, additional information events may appear. The selector both enables the page for operation and freezes it to prevent additional entries from appearing in the list. If any additional information events occurred during the time the page was frozen, they appear in the list as soon as the operator disables (unfreezes) the page.

Page indicator - a page indicator appears at the right upper corner of the page to show whether the displayed events are the most current or older events. The indication will be either *CURRENT* or *PAGING*. *CURRENT* appears when at the first page. *PAGING* appears after the next or subsequent pages are at the screen.

Selectors - down the left side of the page are selectors used to delete events. They cannot be accessed until the page is frozen. Initially, these selectors appear in cyan when the page is not frozen, and change to red after display select.

When at the *CURRENT* page, the top four lines of the page are reserved for new events that come in after the page has been called to the screen. As these lines fill the page scrolls the oldest event item off the page and displays the most recent messages.

OIS OPERATIONAL INFORMATION

Enabling the Operator Information Events Page

The operator information events page must first be enabled to perform any operations. Once enabled, the page becomes frozen and no additional information events will appear until the page is disabled (unfrozen).

Press **[Z]** to enable the page. The outline of the page highlights and the action selectors along the left edge of the page change to red. The display selector (**Z**) disappears.

Press **[ESC]** at any time to disable the page. If any additional information events occurred during the time the page was frozen, they appear in the list as soon as the operator disables (unfreezes) the page.

Paging Through Entries

The operator information page may have several pages of entries. Press **[NEXT PAGE]** or **[PREV PAGE]** after freezing the page to view additional pages. Press **[HOME]** to return to the *CURRENT* page.

Deleting Entries

The only operation to perform at this page is to delete event entries. Two options are available for deleting entries, either individually or an entire page. In either case, the page must first be enabled.

Press **[PAGE ACK]** to delete all entries at the current page.

Press the key corresponding to the selector adjacent to the desired entry to delete that entry. The entry clears from the list as soon as the selector key is pressed.

AP 14 53 04 10 07

SECTION 12 - RECORDING PROCESS DATA

INTRODUCTION

The operator interface station (OIS) provides the capability to record process related information. The information records as a hard copy process log, or digitally on a storage medium.

A printout of a log normally occurs at a set schedule or after a certain process event occurs. The console provides a means of storing and printing additional copies of these logs. It also provides a means to initiate a printout containing the current data for a log prior to completion of a collection period and printing schedule. This section explains the procedures to initiate a printout of a log using the *Log by Name* function.

Archival Storage/Retrieval functions give the capability to digitally store both process information, and INFI 90 and OIS operational information. This section explains data archiving, the data types that can be stored, and the procedures to retrieve stored data. Refer to *Archival Storage* in the *OIS Configuration* section for procedures to set up data storage.

LOGGING

The logging function available through the console provides automatic collection capabilities for recording data. Once set up through log configuration procedures, a log begins its scheduled collection period after being activated. Depending on configuration and the type of log, a log normally prints after completing its collection period or at a specific time. There are three types of logs.

System Events Logs

A system events log continuously collects data once activated. The information recorded in this type of log relates to OIS operations.

Depending on configuration, events print continuously as they occur or save to disk for later scheduled printing. The console prints each event report and saves up to 1,000 events to disk continuously as long as the system events log remains activated. A printout occurs at defined intervals set during configuration. A system events log is enabled through configuration procedures. Refer to **SYSTEM EVENTS LOG CONFIGURATION** in the *OIS Configuration* section for more information, and procedures to enable and disable events log collection and periodic printing.

NOTE The system events log may be divided into a separate events log and operator actions log during configuration.

RECORDING PROCESS DATA

Custom Logs Custom configured logs begin their data collection at a schedule set during configuration. These type of logs collect process related information such as analog values, digital states and trend data

A custom log generates at a scheduled time or time intervals, after a specific process event occurs, or as soon as the operator activates it. Printing can also take place after the same type of occurrences or immediately after a log has completed its collection period. In any case, a log must be activated to begin any data collection and printing. A log can be made *ACTIVE* either at the time of its creation or later using the *Log Status* function.

For each custom log, up to nine of the most recently generated can be retained on the hard disk for later printing. This is also determined by log configuration.

Refer to **CUSTOM LOG CONFIGURATION** in the *OIS Configuration* section for further explanation of custom logs.

SOE Logs The console provides the capability to receive and print data collected by sequential events recorders. The recorders are capable of collecting data for several different types of sequence of events (SOE) logs. These include standard, summary, pre-fault, post-fault and snapshot type logs.

For each type except summary, data collection and printing is automatic after activating a log. A log can be made *ACTIVE* either at the time of its creation or later using the *Log Status* function.

The multi-function processor (MFP) module or multi function controller (MFC) module directing the operation of a recorder reads data from the recorder and notifies the console when it has data to send. The console then collects this data, formats a log and directs it to one of its printers. The operator initiates data collection for a summary log by manipulating a specific RCM tag associated with the log.

For each SOE log, up to nine of the most recently generated can be retained on the hard disk for later printing. This is set up through SOE report definition.

Refer to **SOE LOG CONFIGURATION** in the *OIS Configuration* section for further explanation of SOE logs.

Printing and Displaying Log Reports

The system events, custom and SOE logs created with the logging functions of the console can all be set up to automatically print after completing their data collection. A *Log by Name* function allows printing any of these logs again if a copy of the log has been retained on the hard disk. It can also be used to print the initial log if a particular log does not implement the automatic print feature (i.e., DEMAND print type).

A log may or may not be configured to retain a copy or copies of previously generated logs. This is required, however, to print additional copies of a previously generated log. In the case of custom logs and SOE logs, the *Number of Retentions* configured for the log determines if and how many generations of the log the console is to retain a copy. This must be set to at least one to save a copy of a log for later printing and viewing. The console saves a log on the hard disk only after the log completes its entire collection period. For the system events log, the number of events that can be printed or displayed depends on the number of events being saved to disk. The *Total Number of Events/Actions Saved To Disk* attribute of events log configuration determines this number.

The operator gains access to the *Log by Name* function in two different ways: either through the miscellaneous functions menu or the command line menu. Perform either of the following to access the function.

To access the *Log by Name* function through the miscellaneous menu

- 1 Press **MISC MENU**.
2. Select *B Log by Name*.

To access the *Log by Name* function through the command line menu

- 1 Press **COM'D LINE MENU**
- 2 Select *E LOG/NAME*

In either case, the console presents the following prompt

Log Name/Index ___ *Retention* ___ *Print/Display* _____

Use the cursor control keys to move between the fields when entering data. An index number can only be entered to identify a specific custom log or the events log, not SOE logs or the operator actions log. Refer to the sections that follow for further explanation. Use the *Log Status* function to determine the current configured custom logs and SOE logs. For any log type, a printout occurs at the logical printer defined during configuration of the log.

Display Log Operations

When using the display option, a log appears in the same format as the printed version of the log. The console displays only previously collected data for SOE logs and custom logs. For display purposes, the console does not separate the system events log into an events log and operator actions log. Search criteria, however, can be set to select the type of data to display. The events log can display in either a real-time mode or snapshot mode.

RECORDING PROCESS DATA

The screen of the console supports a maximum width of 300 characters in cases when the console cannot display the entire contents of the log, the screen presentation must be repositioned

Press the double arrow keys or single arrow keys in the cursor and trend control block of the keyboard to change the display presentation. And, press **[NEXT PAGE]** or **[PREV PAGE]** to change the presentation. Each press of a double arrow key moves the presentation ¼-screen. The operator can define the number of horizontal columns or vertical rows each press of a single arrow key is to shift the presentation

To define the single arrow keys

1. Select the *A Define Single ARROW Key* option
2. Enter a number from 1 to 18; default is 10
3. Press **[ENTER]**.

When moving the presentation, the console identifies the end of the log with *End of File*. Since the console presents the same data in a display log as in the printed version of the log, the order in which entries appear at the screen is the same as in the printed version. The initial information displayed for a log is the same as the first page of the printed log (i.e., oldest information).

Press **[NEXT PAGE]** to view newer data. Continue to press **[NEXT PAGE]** until the *End of File* appears to view the most recent entry in the log

CUSTOM CONFIGURED LOGS

For custom logs, the *Log by Name* function gives the capability to

1. Demand a printout of a retained log
2. Initiate a print for a log having a DEMAND print type
3. Print the data currently collected for a log before it has completed its collection period.
4. Display the contents of custom logs retained on the hard disk

The console saves custom log retentions in individual files for each configured log. The file name identifies the log and retention of that log. The file name format is *LOG_{index}.L_n*. For example, the log file *LOG0012.L0* identifies custom log index number 12 and retention one. The most recently completed log is retention number one (e.g., *.L0*). The retention number increases to correspond to chronologically older retentions, maximum of nine (e.g., *.L8*). The console removes the oldest saved copy as it creates new ones.

The console automatically makes a hard copy printout of all logs that have either TIME, EVENT or COLLECTION print types. Logs that have a DEMAND print type require using the *Log by Name* option to get the initial hard copy printout.

A printout of the data currently collected by an ACTIVE log can be printed at any time during its collection period. The printout contains only the data the console can currently get or that has already been collected up to the current time and date. The log resumes with its normal scheduled collection after processing any demanded print.

To print or display a custom log:

1 After selecting the *Log by Name* option, the following input prompt appears:

Log Name/Index ___ *Retention* ___ *Print/Display* _____

Key in a name or index number of a log at the *Log Name/Index* field. Use the log status function to find the name or index number of a custom log. Refer to *Log Status* in this section.

Enter the name defined for the log during custom log configuration. A log name must be completely spelled out. Enter an index number from 1 to 300, the number corresponds to the *Log Number* assigned to the log during its configuration.

2 Enter a number from 0 to 9 at the *Retention* field to determine which log to print or display. Enter 0 to print the current data collected for the log, or if the log has a DEMAND print type. The log must be ACTIVE to obtain the current data. Enter 1 to print the most recently saved copy, or any number from 2 to 9 for older saved copies. The maximum number that can be entered here depends on the number of retentions being saved for the particular log.

3 At the *Print/Display* field enter either PRINT or DISPLAY.

4. Press **ENTER** to initiate the request. A printout occurs at the printer designated in the configuration of the log.

GENERATING SEQUENCE OF EVENTS SUMMARY LOGS

There are several different types of SOE logs. The standard, pre-fault, post-fault and snapshot SOE logs are all automatically generated once set up through SOE log configuration. Generation of an SOE summary log, however, must be operator initiated.

A defined RCM tag associated with a particular log allows the console to automatically collect data and generate a log, and an operator to manually initiate data collection for a summary log. In this case, an RCM element using the specific tag must be part

RECORDING PROCESS DATA

of either a user-created display or operator configurable display. The tag references an SOE log function block within the control scheme of an MFP or MFC module.

To generate an SOE summary log

1. Call the display containing the RCM element for the desired report to generate.
2. Select that RCM element for control
3. Set the RCM to its one state. Refer to **RCM CONTROL** in the **Process Control and Tuning** section for procedures

NOTE If using a multi-function controller module having firmware revision 0.0, set the target state to its zero state. In this case, the state changes identified in the following explanation should be reversed.

The RCM tag changing to show a one state indicates a response from the module. If the RCM tag remains in the zero state while the *Target* is a *ONE*, check the module configuration. When the module completes the summary report and all data is sent to the console, the RCM tag goes back to its zero state. A summary report is in progress while the RCM remains in its one state.

Data collection ends for a report after the age time set in the module elapses. The time in the age specification of an SOE log function block sets this age time. It determines when the RCM tag goes back to the zero state, and how much data is expected from the recorder for a summary report. The longer the age time, the more data the module handles. The console does not print the log until the module sets the RCM tag back to a zero state. Therefore, the longer the age time, the longer the wait for data.

The SOE log function block only responds to a control command initiated from the console (or some other host) to initiate data collection. This block cannot be directly changed to trigger data collection. After transferring data, the function block clears itself to allow another summary report request.

When a summary report is in progress and the module accepts another summary report request, the report initiated by the new request is appended to a report already in progress. The age timer for the report is reset every time the module accepts a summary report request. The console does not print the log until the age time elapses.

Guidelines Normally, request a summary report only when none are already in progress. The RCM tag in a zero state identifies this condition. Do not set an RCM target state to zero if it is currently set to a one state while the module is processing a requested report.

SEQUENCE OF EVENTS LOGS

The *Log by Name* function gives the capability of printing or displaying those SOE logs that are retained on the hard disk. An SOE log, no matter what type, is identified by the file name assigned to it by the console. The console saves SOE logs in individual files for each configured log

The file name identifies the log and retention of that log. The file name format is *SOECLnnn.Ln*. For example, the log file *SOECL012.L0* identifies SOE log index number 12 and retention one. The most recently completed log is retention number one (e.g., *.L0*). The retention number increases to correspond to chronologically older retentions, maximum of nine (e.g., *.L8*). The console removes the oldest saved copy as it creates new ones

To print or display an SOE log.

1. After selecting the *Log by Name* option, the following input prompt appears

Log Name/Index ___ *Retention* ___ *Print/Display* ___

Enter the log name at the *Log Name* field. The log name must be completely spelled out. It must also follow the format *SOECLnnn* where *nnn* is the log number to print. For example, enter *SOECL012* for SOE log number 12

2. Enter a number from 1 to 9 at the *Retention* field to determine which retained log to print or display. Enter 1 to print the most recently saved copy, or any number from 2 to 9 for older saved copies. The maximum number that can be entered here depends on the number of retentions being saved for the particular log

3. At the *Print/Display* field enter either **PRINT** or **DISPLAY**

4. Press **ENTER** to initiate the request. A printout occurs at the printer designated in the configuration of a log

PRINTING THE EVENTS AND OPERATOR ACTIONS LOG

The console saves both system events and operator actions on its hard disk if configured during events log configuration. Events must be saved to hard disk for either periodic printing or *Log by Name* printing. The configuration also allows dividing events and operator action items into a separate events log and operator actions log for printing purposes.

The events saved to disk capacity is approximately 1,000 of the most recent events (minimum of 1,000 events). An option available during events log configuration allows scheduling an automatic print cycle for the events log and operator actions log. Use

RECORDING PROCESS DATA

the *Log by Name* function at any time to print a current list of saved events even if the logs are scheduled to print automatically. The *Log by Name* function prints the most recently saved events

To print the events log

1 After selecting the *Log by Name* option, the following input prompt appears.

Log Name/Index ___ *Retention* ___ *Print/Display*

Enter a 0 or the name **EVENT** at the *Log Name/Index* input field. These are reserved to identify the events log

2 At the *Retention* field, key in the number of most recently saved events to print. This number is an approximation. At a minimum, that many events appear in the printout if that many were saved. If the entered number is greater than the actual number of saved events, all saved events print. Enter 0 to print all saved events if desired.

3. At the *Print/Display* field enter **PRINT**

4 Press **(ENTER)**; the printout occurs at the printer designated in the events log configuration

Enter **ACTION** at Step 1 to print the operator actions log if the system events log has been divided into a separate events log and operator actions log. The remaining steps apply.

DISPLAYING SYSTEM EVENTS LOG

The *Log by Name* option also provides a display option for the system events log. The display can operate in two modes to present events: Real-time and snapshot. System events log configuration determines the types of events that can appear in the display. Only those events defined to print or save to disk appear in the display of the events log.

NOTE The system events log can be separated into an events log and operator actions log during configuration. If this option was chosen, operator actions do not appear in the display of the events log even if enabled in the search criteria.

Real-Time Mode When in real time mode, the screen updates with new events only as events occur. Similar to the continuously printing events log, the console presents the events on a single screen, with each new event occupying one or two lines on the display. Once the screen becomes full, new events begin to scroll older events.

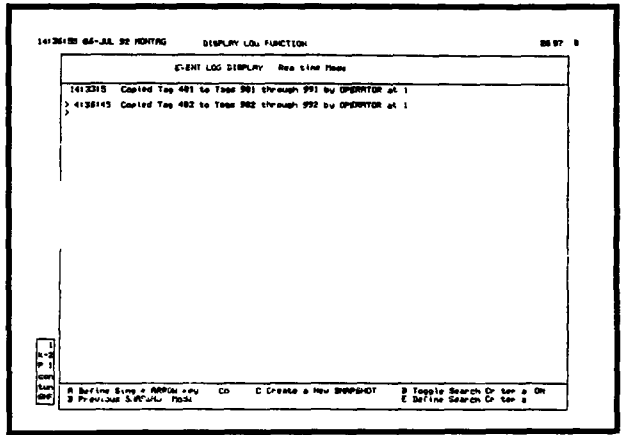


Figure 12-1 Events Log Display - Real-Time Mode

off of the screen. A new event can be identified by the greater than (>) symbol appearing in the margin. Figure 12-1 shows the display log function in real-time mode.


Snapshot Mode

A snapshot mode presents both the current events at the time of the request, and all events currently saved on the hard disk. The console creates a snapshot file of the events log when the display is called or switched to snapshot mode. The console does not update the initial snapshot file created unless the operator chooses the **C Create a New SNAPSHOT** option, or calls the display up in the new snapshot mode. Refer to **Display Call Up and Mode Selection** in this section for procedures to call the events log display in the new snapshot mode. Figure 12 2 shows the display log function in snapshot mode.

In snapshot mode, the initial information displayed is the oldest information chronologically. Press **[NEXT PAGE]** to view newer entries. Continue to press **[NEXT PAGE]** until the *End of File* appears to view the most recent entry in the log.

Search Criteria

The console allows specifying search criteria. The search criteria can be used to limit the displayed information to only a single type of event, or multiple types. The search criteria affect the data presented in both the real-time mode and snapshot mode. The search criteria can be turned on or off through an option available while the screen is in real time mode (see Figure 12-1).

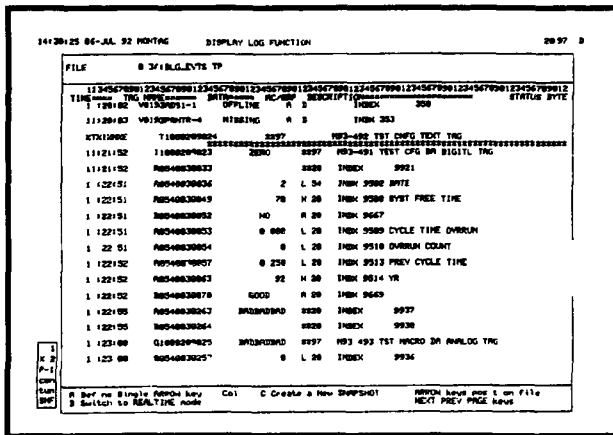

TPS0768A

Figure 12 2 Events Log Display - Snapshot Mode

Display Call Up and Mode Selection

To display the events log:

1. After selecting the *Log by Name* option, the following input prompt appears.

Log Name/Index ___ Retention Print/Display

Enter a 0 or the name *EVENT* at the *Log Name/Index* input field. These are reserved to identify the events log.

2. At the *Retention* field, key in one of the following depending on the desired mode for the display log.

R - real-time mode

P - calls a previous snapshot of the events log. Use this to call the initial or last updated version of the snapshot file.

S - initiates a new snapshot of the events log. Use this to update the snapshot file and call the new version to the screen.

Leaving the *Retention* field blank calls the display log in real-time mode. Entering a non-zero retention number calls the display log in previous snapshot mode.

3. At the *Print/Display* field enter **DISPLAY**.

4. Press **ENTER**.

Select Mode

Choose option *B* after calling the display log in either mode to switch between real-time mode and previous snapshot mode. Choose option *C* while in either real-time mode or snapshot mode to update the snapshot file and switch to new snapshot mode.

Search Criteria

The operator can define search criteria for the events log display function to limit the presented information to only certain types of events. Search criteria can be turned on or off at any time. It can only be turned off, however, while viewing the log in real-time mode. Search criteria does not affect the printed version of the events log. Choose *D Toggle Search Criteria ON/OFF* to turn search criteria on or off.

To specify search criteria:

1. Put the display log in real-time mode. Refer to *Display Call Up and Mode Selection* in this section for procedures.
2. Choose *E Define Search Criteria* Figure 12-3 shows the screen that appears next
3. Use the cursor control keys to move between the fields when entering data. Refer to Table 12-1 when defining the fields of the search criteria screen

```

14122132 04 JUL-92 MONTRG      DISPLAY LOG FUNCTION      20 97  0
                                     Search Cr ter a

From  [REDACTED]
To    001000 00 01-000-92

Tag Name :  2
Tag Index :  Lo
Alarm Group :  Lo
Tag Type :

R no      Mode      Find      Block
-----
---EVENT TYPE---
State Change  YES      Operator Action  YES
Alarm Event   NO       Operator Notes   NO
Information   YES

---ALARM STATE---
N. Alarm      YES      High      YES      Good      YES
Dist. Al. Alarm  YES      Low       YES      Bad       YES
Bad Due to    YES      Too High  YES      B. Instab. l.  YES
High Seve. Al. YES      Too Low  YES      Subst. l. ude  YES
Low Seve. Al.  YES      Three High  YES      Suspect      YES
              YES      Three Low   YES      Alarm In. l.  YES
    
```

1
2
3
4
5
6
7
8

TP50768A

Figure 12-3 Events Log Display Search Criteria

RECORDING PROCESS DATA

4 Press **ENTER** to update the search criteria, then press **ESC** to return to the previous screen

Table 12-1 Events Retrieval Page Fields

Field	Description
From	Starting time and date at which to begin a search for events
To	Ending time and date at which to stop a search for events
Tag name ¹	Name of the tag for which to retrieve events Wild card characters (e , * and ?) can be used when specifying a tag name Enter an asterisk or clear the field to not use tag name as a search constraint An asterisk specifies all tag names
Tag index ___ to ___ ¹	Range of tag index numbers to retrieve Valid entry is from 1 to the number of tags set during system configuration (maximum 30 000) Enter the maximum range or clear the fields to not use tag index number as a search constraint
Alarm group ___ to ___ ¹	Range of alarm groups to retrieve Valid range entries are 1 to 99 and S The complete alarm group range is from 1 to S Enter the maximum range of 1 to S or clear the fields to not use alarm group as a search constraint
Tag type	Enter any valid tag type Clear the field or leave it blank to not use tag type as a search constraint
Ring ___ node ___ mod ___ block ___	Enter a valid loop node module and block address to which to limit the search Clear the fields or leave them blank to not use tag address as a search constraint
Event type	The console searches for and retrieves each event type that is set to YES It does not retrieve any event types set to NO NOTE At least one event type field must be set to YES
Alarm state	The console searches for and retrieves each state change, a arm or operator action event that has an alarm condition matching any of the alarm state conditions set to YES It does not retrieve any of these events having an alarm condition matching those set to NO
Tag quality	The console searches for and retrieves each state change a arm or operator action event that has a quality condition matching any of the tag quality conditions set to YES It does not retrieve any of these events having a quality condition matching those set to NO

NOTE ¹ At least one of these fields must have an entry

Log Status

The *Log Status* function provides a status overview of both configured custom logs and SOE logs. It also allows changing the status and canceling queued prints for individual or a group of these type of logs Each entry in a log status page details the information pertaining to a single log

A log must be turned on or made *ACTIVE* to begin its data collection When to activate a log depends on its purpose A log can be

activated as the last step when configuring if desired. It also can be left *INACTIVE* at the time of configuration and made *ACTIVE* later using log status functions.

Taking a log from an *ACTIVE* status to an *INACTIVE* status ceases any further data collection. When data collection is no longer required or a log is to be reconfigured, it must be made *INACTIVE*.

The console provides several different methods for changing log status. It can be done directly at the *TARGET STATUS* field of a status page for a custom log or SOE log. It can also be done through an action menu.

The action menu appears after making a menu selection at the opening page of the log status function, or by pressing **[ESC]** while at any of the log status pages. The action menu provides the following capabilities.

Activate - changes status to *ACTIVE*, which turns data collection on

Deactivate - changes status to *INACTIVE*, which turns data collection off

Cancel reports waiting to print - cancels queued prints

All log status operations start at the log status display menu (see Figure 12-4). To call log the status display menu:

1. Press **[MISC MENU]**.
2. Select *A Log Status*

Options *A* through *D* call a status page for all or a specific type of custom logs, and options *E* through *J* for all or a specific type of SOE logs. After selecting any of these options, a status page containing a list of the requested logs appears. The status page allows directly activating or deactivating individual logs, or calling an action menu to activate or deactivate collection and to cancel queued printing for a log in the list.

Options *K* and *L* call an action menu to the screen. The menu provides the status change and queued print cancel functions without having to call a status page. Refer to **ACTION MENU OPERATIONS** in this section for an explanation of operations performed through this menu. Refer to **SELECT START LOG** for a description of option *M*.

The log status function can show the status of up to 300 custom logs or 160 SOE logs. Each status page for a custom log displays eight log entries, each status page for a SOE log displays 16.

RECORDING PROCESS DATA

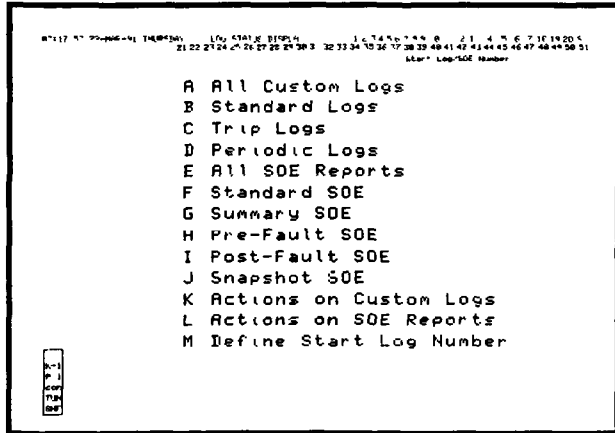


Figure 12-4 Log Status Display Menu

TPS0181A

SELECT START LOG

The console provides an option for selecting which log is to appear as the first entry at a status page. This prevents having to press the paging keys several times to find a desired entry. To set the start log for the log status page:

1. At the opening page of the log status function, select *M Define Start Log Number*. A Select the Start Log Name/Index in put prompt appears.
2. Enter the name of a custom log or its log number from 1 to 300. Or, enter the log number of an SOE log from 1 to 160. Enter a name for a custom log only. If an undefined log name is entered, an error message requesting valid log name or number appears.
3. Press **[ENTER]**.

The *Start Log/SOE Number* field at the top of the log status display menu page (see Figure 12-4) updates to the entered number. Initially, the log status function defaults to 1. When selecting items A through E, the first entry that appears at the status page is the one shown in this field. If the number is greater than the 160 limit for SOE logs, the status page defaults to entry number one.

CUSTOM LOGS STATUS PAGE

A status page for a custom log contains the same information whether selecting the *All Custom Logs* or one of the specific log type options. Figure 12-5 shows an example of a custom logs status page. Select any of the custom log options to call a display similar to the one shown in this figure. The log status functions performed at this page are explained in *Log Status* in this section.

LOG NUMBER	TARGET STATUS	CURRENT STATUS	LOG NAME	LOG DESCR	PRIORITY	COLLECTION PERIOD	LOG TYPE
1	INACTIVE	INACTIVE	LOG 1	SNAPSHOT LOG OF 3 DIGITAL P-4 3	PERIODIC	1 HOURS	BEHND
2	INACTIVE	INACTIVE	LOG 2	SNAPSHOT LOG OF DIGITAL P-4 3	PERIODIC	1 HOUR	BEHND
3	INACTIVE	INACTIVE	LOG 3	SNAPSHOT LOG OF DIGITALS P-4 3	PERIODIC	1 HOURS	BEHND
4	INACTIVE	INACTIVE	LOG 4	SNAPSHOT LOG OF 3 DIGITALS P-4 2	PERIODIC	1 HOURS	BEHND
5	INACTIVE	INACTIVE	LOG 5	SNAPSHOT LOG OF DIGITALS P-4 3	PERIODIC	1 HOURS	BEHND
6	INACTIVE	INACTIVE	LOG 6	SNAPSHOT LOG OF DIGITAL P-4 3	PERIODIC	1 HOUR	BEHND
7	INACTIVE	INACTIVE	LOG 7	SNAPSHOT LOG OF DIGITALS P-4 3	PERIODIC	1 HOURS	BEHND
8	INACTIVE	INACTIVE	LOG 8	SNAPSHOT LOG OF DIGITALS P-4 3	PERIODIC	1 HOURS	BEHND
9	INACTIVE	INACTIVE	LOG 9	SNAPSHOT LOG OF DIGITALS P-4 3	PERIODIC	1 HOURS	BEHND

Figure 12-5 Log Status Display - Custom Logs Status

The top lines of the page provide an explanation of the information detailed in each log entry. From left to right, top to bottom the information for each entry includes:

LOG NUMBER - corresponds to the *Log Number* assigned to the log during its configuration. The log numbers range from 1 to 300. Enter this number when using the *Log by Name* function. Refer to *Printing and Displaying Log Reports* in this section.

TARGET STATUS - updates to show any requested status change. A log status change can be made directly at this field, or through the activate or deactivate options of the action menu.

CURRENT STATUS updates to reflect the actual status of the log. The field remains at its current indication after a status change has been made until the console completes its processing of the change request. The field normally updates after a short time to show the targeted status change.

RECORDING PROCESS DATA

LOGNAME - a name assigned to the log during its configuration. Enter this name when using the *Log by Name* function. Refer to *Printing and Displaying Log Reports* in this section.

LOG DESCRIPTOR - provides a description of the log as defined during log configuration.

LOG TYPE - gives the log type as defined during configuration. The types are either STANDARD, PERIODIC or TRIP.

COMPLETION TIME - shows the estimated time of log completion. The console references either a start time defined for a log or the time a log was triggered and the collection period of the log to determine the completion time. If a log is set to repeat its collection cycle, this field updates as each new collection period starts.

COLLECTION PERIOD - shows the collection period defined during configuration. The collection period is the amount of time the log collects data. This field is not used for TRIP logs.

AA - indicates whether the *Repeat Collection Cycle?* is set to YES or NO in the configuration of a log. If the repeat cycle is YES, a log performs its data collection repeatedly. A log stops collecting data after completing its initial collection period if set to NO.

BB - shows the number of logs waiting to print. If a designated printer is currently busy, this field will identify the number of logs that are queued but not printed.

CC - identifies at which logical printer a printout occurs. This is defined in the configuration of a log.

PRINT TYPE - identifies the print type as either COLLECT, EVENT, DEMAND or TIME. The print type shown corresponds to the print type defined for a log.

A COLLECT type log prints as soon as it completes its collection period. An EVENT type prints after being triggered by a specific process event. A DEMAND type does not print until initiated through the *Log by Name* function; refer to *Printing and Displaying Log Reports* in this section. A TIME type prints at a defined time.

SOE LOG STATUS PAGE

An SOE log status page contains the same information whether selecting the *All SOE Reports* or one of the specific log type options. Figure 12-6 shows an example of an SOE logs status page. Select any of the SOE logs options to call a display similar to the one shown in this figure. The log status functions performed at this page are explained in *Log Status* in this section.

RECORDING PROCESS DATA

10:42:06 19-APR-79 THURSDAY ALL SOE REPORTS 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21
 2 22 23 24 25 26 27 28 29 30 3 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 51

SOE NUMBER	TARGET STATUS	CURRENT STATUS	REPORT TITLE	REPORT TYPE	SER REPORTS 0	PRINTER 0
1	DEACTIVATED	ACTIVE	SOE SLURRY REPORT	SUMMARY	2	0 1
2				UNDEF		
3				UNDEF		
4				UNDEF		
5				UNDEF		
6				UNDEF		
7				UNDEF		
8				UNDEF		
9				UNDEF		
10				UNDEF		
11				UNDEF		
12				UNDEF		
13				UNDEF		
14				UNDEF		
15				UNDEF		
16				UNDEF		

1 1
 A 1
 P 1
 W 1
 TUN
 END

TPS01838

Figure 12-6. Log Status Display - SOE Logs

The top lines of the page provide an explanation of the information detailed in each log entry. From left to right, top to bottom the information for each entry includes:

SOE NUMBER - shows the Report Number assigned to the SOE log during its definition. The SOE numbers range from 1 to 160.

TARGET STATUS - updates to show any requested status change. A log status change can be made directly at this field, or through the activate or deactivate options of the action menu.

CURRENT STATUS - updates to reflect the actual status of the log. The field remains at its current indication after a status change has been made until the console completes its processing of the change request. The field normally updates after a short time to show the targeted status change.

REPORT TITLE - displays the title defined for the log during its definition. The title also appears in a printout.

REPORT TYPE - gives the type of log as defined during configuration. The type appears as either *STANDARD*, *SUMMARY*, *PRE_FAULT*, *POST_FAULT* or *SNAPSHOT*.

SER # - shows the SER number assigned to a log during its definition. An SER number associates a list of tags to a particular recorder. This is required to link each SER input to a specific tag.

RECORDING PROCESS DATA

The console can then present tag database data in a printout of the log

REPORTS WAITING - shows the number of logs waiting to print. If a designated printer is busy, this field will identify the number of logs that are queued but not printed

PRINTER # - identifies at which logical printer a printout occurs. This is defined in the configuration of a log.

STATUS PAGE OPERATIONS

Options *A* through *J* at the log status display menu call the status page for all or a selected group of custom logs or SOE logs (see Figure 12-4) Press **(NEXT PAGE)** and **(PREV PAGE)** to view additional pages after selecting any of these options

The status page provides two options for changing log status. The first is by changing the *TARGET STATUS* column of a log entry to either *ACTIVE* or *INACTIVE*. The second is through an action menu.

After calling a status page, an input cursor appears in the *TARGET STATUS* column of the first log entry. The input cursor allows changing the status of the log at which it is positioned.

To change the status

1. Use the cursor control keys to move the cursor within the *TARGET STATUS* column. Once at the desired log, key in *ACTIVE* or *INACTIVE* to change the status.

2. Press **(ENTER)** after making all status changes to initiate the change request. As soon as the console has completed the request, the *CURRENT STATUS* column for the log updates to the targeted status.

Press **(ESC)** to call the action menu to the screen. Refer to **ACTION MENU OPERATIONS** in this section for an explanation of the action menu items.

ACTION MENU OPERATIONS

An action menu appears at the screen by selecting one of two options. At the log status menu page, select *K Actions on Custom Logs* or *L Actions on SOE Reports* (see Figure 12-4). Press **(ESC)** while at any status page to call the action menu.

The action menu is the same for both custom logs and SOE logs. The only difference is that the custom log menu items use the term *Log(s)* and the SOE log menu items use the term *SOE(s)*. The action menu options include

- A Activate Log(s)
- B Deactivate Log(s)
- C Cancel reports waiting to print
- D Activate all Logs displayed
- E Deactivate all Logs displayed

Options D and E do not appear when calling the action menu from the log status display menu.

Activating Logs

To activate custom logs or SOE logs

- 1 Call the action menu to the screen Refer to **ACTION MENU OPERATIONS** in this section for methods
- 2 Enter A at the input field, then press **[ENTER]** Depending on the type of log the action is performed on, the following input prompt appears

Activate Log Number ___ thru ___

- or -

Activate SOE Number ___ thru ___

The prompt allows either specifying a single or range of logs to activate.

- 3 Use the cursor control keys to move between the fields. Key in the starting log number in the first input field If a single log is being activated, skip the next step
- 4 Key in an ending log number in the second input field.
5. Press **[ENTER]**; the following message appears as the console processes each status change request for each log in the entered range:

Activation Submitted for log/SOE # nnn

A status change request can be seen at the **TARGET STATUS** column of a status page. The **CURRENT STATUS** column verifies the completion of a requested status change

To activate the eight currently displayed custom logs or 16 SOE logs while at a status page:

1. Press **[ESC]** to call the action menu to the screen

RECORDING PROCESS DATA

2. Enter **D** to select *Activate all Log(s) displayed*, then press **ENTER**

Deactivating Logs

To deactivate custom logs or SOE logs

- 1 Call the action menu to the screen Refer to **ACTION MENU OPERATIONS** in this section for methods

- 2 Enter **B** at the input field, then press **ENTER** Depending on the type of log the action is performed on, the following input prompt appears

Deactivate Log Number ___ thru ___

- or -

Deactivate SOE Number ___ thru ___

The prompt allows either specifying a single or range of logs to activate

- 3 Use the cursor control keys to move between the fields Key in the starting log number in the first input field. If a single log is being activated, skip the next step.

- 4 Key in an ending log number in the second input field

- 5 Press **ENTER**, the following message appears as the console processes each status change request for each log in the entered range.

Deactivation Submitted for log/SOE # nnn

A status change request can be seen at the *TARGET STATUS* column of a status page The *CURRENT STATUS* column verifies the completion of a requested status change

To deactivate the eight currently displayed custom logs or 16 SOE logs while at a status page

- 1 Press **ESC** to call the action menu to the screen
- 2 Enter **E** to select *Deactivate all Log(s) displayed*, then press **ENTER**

Canceling Waiting Log Prints

The *Cancel reports waiting to print* option cancels all or selected reports waiting to print for a specific log. The *BB* column for custom logs or *REPORTS WAITING* column for SOE logs identifies the number of logs waiting to print The cancel print function can be

used to both abort any prints currently in process, and any number of older reports waiting to print.

To cancel queued print jobs for a log:

- 1 Call the action menu to the screen. Refer to **ACTION MENU OPERATIONS** in this section for methods
- 2 Enter **C** at the input field, then press **(ENTER)**

The following input prompt appears

Cancel from Report # ___ to Report # ___ for Log # ___

3. Use the cursor control keys to move between the input fields. At the first input field, enter the number of the first waiting log to cancel
4. At the second input field, enter the number of the last waiting log to cancel
5. Enter the log name (custom logs only) or the log number of the log for which to cancel waiting prints
- 6 Press **(ENTER)** to initiate the cancellation

For example, a status page indicates a 4 in the report waiting column for log number five. Of the four, the oldest three waiting to print are to be canceled. Enter a 2 in the first input field and a 4 in the second field. This specifies all waiting reports from two to four. Enter a 5 in the last field to designate log number five. After entering, reports two through four clear leaving report one as the only queued report waiting to print.

ARCHIVING

NOTE This O S console does not support arch v ng to or retrieving data from 9-track magnetic tape or floppy disk

The archiving function available at the console provides an integrated method for storing and retrieving process data, and both console and INF 90 operational information. The archival function can be categorized into two separate types of operations: Archive data storage and archive data retrieval. The data types that can be archived include

- Logs (after completion of the collection period)
 - STANDARD type.
 - TRIP type.
 - PERIODIC type
 - Sequence of events log

RECORDING PROCESS DATA

- Trends
 - Raw trend data on a per trend basis
- Events (list of system events and operator actions)
- Tag data
 - Analog tag snapshots
 - Digital tag exceptions
 - Alarms
- PCU configuration

Archiving extends normal console storage of logs, PCU configurations, system events, trends and tag data indefinitely. Once archiving is set up, the console collects data and automatically stores it to an archive medium or an open access system (OAS). The medium is either magnetic tape (i.e., TK50 cartridge) or optical disk.

The *Archival Storage/Retrieval* option gives access to both archive data storage configuration and archive data retrieval functions. The archive data storage functions turn on storage for individual data types, and automatically direct archiving of data to specific storage medium or an open access system. In some cases, the operator may be required to perform a manual store of data or a manual use new volume action during archival storage to prevent data loss. The archive data retrieval functions provide directory and retrieve data options. A directory of either an archive volume of data or retrieved data can be viewed. A retrieve data option provides a method of retrieving any type of data from a medium for display and printing.

The operator information and operator request for action pages work directly with the archiving functions. The operator information page provides a running list of archival operations including both storage and retrieval request operations. Refer to **OPERATOR INFORMATION EVENTS** in the *OIS Operational Information* section for specifics.

The console prompts the operator at the operator request for action page if some action is required before it can continue processing a requested archiving operation. An operator action request indication (flashing A) appears at the title line to indicate a request for action. The console uses the operator request for action page to inform the operator of the attempted operation, and to allow the operator to perform a specific action to continue processing. Refer to **OPERATOR ACTION REQUESTS** in the *OIS Operational Information* section for procedures to process a request.

Archive Data Storage

The setup of archival storage directs several different operations. The first is to allocate hard disk space used for temporary storage.

of archived data. The console stores any data that it is to archive in an archival storage directory. The data remains in this directory until being transferred to a storage medium or an open access system. The console begins to overwrite data that was previously stored for transfer to an archive medium with new data after it completely transfers all of the stored data. It does this in preparation for its next archive to medium.

Archival storage also enables each data type that is to be eventually archived. However, it enables an entire type of data for storage rather than specific data. The specific data that archives depends on the configuration of individual functions or tag historian configuration. These configurations determine the specific data that archives. For example, each configured custom log can be set to either archive or not archive based on its *To Be Archived?* attribute

Log configuration procedures enable the storage of individual custom, SOE and system events logs. Trend definition procedures enable trend data storage. PCU management functions store PCU configurations that are to be archived. The tag historian function provides the capability to store tag data (i.e., exception reports and tag database data).

The last responsibility of archival storage is to schedule when the console transfers stored data, and to which type of medium. Data transfer can occur anywhere from every four hours to every 99 weeks. Scheduling depends on the amount of data being stored. Some data types, such as tag data, consume a large amount of hard disk space and require a shortened archive to medium schedule.

Once archival storage is set up, it becomes automatic except for an occasional requirement to install a new storage medium. The operator actions function prompts for any archival requirements such as installing or initializing a new medium, disk space allocation reaching maximum capacity, a failed attempt to archive, etc. Refer to *Archival Storage* in the *OIS Configuration* section for procedures to set up archival storage.

Data stores to media in volumes of data. A volume name defined during data type to volume definition identifies information stored on a medium. The console assigns a hexadecimal sequence number to the volume of data being archived to a particular medium. The sequence number increments for each new medium installed for storage of a given volume of data. For example, the medium storing a volume named TAGS becomes full. The console had assigned a sequence number of 0003 to that medium. The new medium installed to continue with the archival storage of volume TAGS will be assigned a sequence number of 0004.

NOTE The sequence number also increments when using the *Use New Volume* option at the archival menu. This function is explained later in this section.

RECORDING PROCESS DATA

The sequence number and volume name do not apply for data being archived to an open access system. The open access system does not use nor require either. The volume name defined during archival storage is therefore only informational, but still required by the console. The open access system assigns a volume name and sequence number to data it stores to archival storage medium. The data stored to an archive medium by an open access system can be retrieved from a medium at the console by specifying its sequence number and volume name.

In cases where data has been stored by an open access system or any other console and the data is to be retrieved at this console, the volume name and sequence number must be known to retrieve the data. Use the *Directory of Archive Volume* option to acquire this information from an installed medium.

Although data archiving is normally automatic, there may be some instances when forcing data to store to medium or an open access system, or forcing the console to use a new medium is required. The *Store Data* and *Use New Volume* options provide these capabilities.

STORE DATA

The operator uses the *Store Data* function to initiate a data archive to medium or an open access system. Once archiving is properly configured, this function should not be necessary at any time unless forced data storage is desired.

The console does not normally require the operator to use this function as long as archiving configuration has been set up to allow for enough archival storage space on the hard disk, and the time span between archives to medium is not too great. Both must be considered when initially setting up archiving to medium. Archiving to an open access system only requires considering the hard disk space available for archiving. Some data types require more temporary archive data storage space on the hard disk than others. Refer to *Archival Storage* in the *OIS Configuration* section for further explanation.

One example of when this function would be required is if the message:

ARCHIVAL: APPROACHING CONFIGURED DISK SPACE ALLOTMENT

appears at the operator information events page. This message indicates that the hard disk space allocated during storage configuration has reached a certain fullness level. If this occurs, the data must be stored immediately or soon after to prevent data loss.

Another example of a possible use for the *Store Data* option is when archiving PCU configurations. Since PCU configurations cannot be set to save automatically through PCU management, a

scheduled archive to medium may not always be desired. In this case, any configurations saved for archiving can be forced to store to medium immediately after being saved through PCU management actions.

A store data menu provides options for storing either events, logs, tag data, trend data or PCU configurations (see Figure 12-7). To call this menu, first press **[GENL FCTNS MENU]**, then select the following menu items in the sequence shown

B OIS Utilities → F Archival Storage/Retrieval → E Store Data

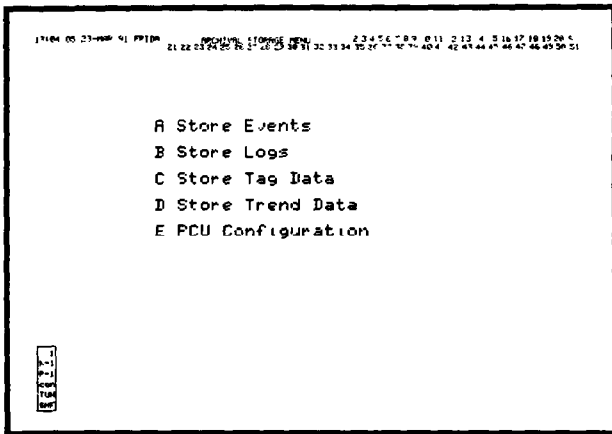


Figure 12-7. Store Data Menu

TP50184A

To store data:

- 1 Select any option A through E depending on the desired data type to store. The console presents the message *Press ENTER to archive data* after making a selection
2. Press **[ENTER]** to confirm the store data request, or **[ESC]** to cancel Archive data storage activates for the selected data type and all other types that archive to the same volume.

If desired, call the operator information page to view the progress of the store data selection

USE NEW VOLUME

The operator uses the *Use New Volume* option to request that archiving for the selected data type be done on a new volume (or

request will be to initialize a new installed medium. The request also identifies the name and sequence number that will be assigned to the volume of data upon initialization. The operator request for action must be processed completely before an archive to that medium occurs

Archive Data Retrieval

The console provides archive data retrieval functions to allow viewing or printing data previously archived to medium through archival storage operations. The pages used to define data retrieval determine which data type and specific data to retrieve.

The console can retrieve data from a medium to which it had previously archived data, or from a medium archived to by another console. Data archived to an open access system cannot be directly retrieved from the open access system. It can, however, be retrieved from the medium to which the open access system archived the data. In this case, the console may require identifying the volume name and sequence number of the stored data.

For some data types, the console transfers data back to its hard disk. It stores the retrieved data in archival retrieval directories. The OIS functions used to view or print retrieved data reference these directories. The data types transferred to the hard disk include:

- Tag data** Requires further retrieval through the tag historian
- Trend data** Viewed through a configured trend display.
- PCU configurations** Used in PCU management functions to download or verify configurations. PCU management also provides the ability to print retrieved configurations.

The console prints any retrieved events or logs at the printer assigned to the keyboard. It does not store the retrieved data on its hard disk.

DIRECTORY OF ARCHIVE VOLUME

The console provides an archive directory function to allow viewing the contents of a volume of data stored on a particular medium. The information presented identifies the volume name and sequence number stored on an installed medium. For each archive to medium, it also indicates the time span of data collected, and the number of events, logs, trends, tags and PCU configurations stored during that time span. The information is helpful and in some cases required when retrieving any data. The console either displays or prints a directory listing after a directory request.

volume of data, the message *Retrieval: No Valid Archive Volume is Installed* appears at the operator information events page.

Figure 12-10 is an example of a displayed directory. The directory provides information necessary when performing archive data retrieval. The same information appears in a printout of the directory. Specifically, the information provided includes:

Archive medium type - the *Archive Media* field reflects the type of medium chosen from the directory menu. The type appears as *MAGTAPE* or *OPTICAL*

```

14123134 13-OCT-91 TUESDAY          RETRIEVE ARCHIVE DATA      7 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21
                                     DIRECTORY OF ARCHIVE VOLUME

Archiv Med a  MAGTPE
Volume instal of 0151 0001

Begin Time      End Time      Number  Number  Number  Number  Number
               of Day           Events   Logs    Transf   Tapes   PDU
               of Month                   1000    1000    1000    1000    1000
000100 00 14-OCT-91 00010000 15 OCT-91 20      5      17     125      9
001000 00 15-OCT-9 10100000 15 OCT-91 10      3      15     120      3
10 001000 15-OCT-91 10122100 15-OCT-91 3        0      10     50       2
13 22 00 15-OCT-91 13122100 15-OCT-91 3        0      0      10       0
    
```

1
 2
 3
 4
 5
 6
 7
 8
 9
 10
 11
 12
 13
 14
 15
 16
 17
 18
 19
 20
 21

TP80226A

Figure 12-10 Sample Archive Volume Directory

Volume name and sequence number - the *Volume installed* field shows the volume name and sequence number of data stored on a particular medium. The console searches for this name and number when retrieving data

Archive time - the *Begin Time* and *End Time* columns indicate the time that data collection began and ended for the data stored. Refer to this information when entering a from and to time constraint for data retrieval.

The time span shown normally reflects the time span defined for data collection. This is set through volume to media definition. The exceptions to this are the initial data collection period and any forced data storage

RECORDING PROCESS DATA

The initial data collection in most cases does not contain data for an entire defined time span. Data can be forced to store to medium prior to completion of a defined time span using the *Store Data* option. In this case, the time range reflects the beginning and ending times based on the time that data was stored through the *Store Data* option.

Number stored - the number of events, logs, trends, tags and PCU configurations columns indicate the number of each data type stored during the time span.

DATA TYPE RETRIEVAL

Archival retrieval functions allow directly printing archived logs and system events, or transferring archived tag, trend and PCU configurations back to the hard disk for use in other OIS functions. All data types compete for the hard disk space reserved for archival retrieval. The amount of space reserved is set during *Miscellaneous Definitions*. Refer to **Archival Storage** in the *OIS Configuration* section for further information on disk space allocations.

Once data is transferred to the hard disk, it resides in an archival retrieval directory. Each data type stores in its own directory. The functions that allow printing or viewing any retrieved archive data stored on hard disk reference one of these directories to get any desired data. The archival retrieval function provides a directory function to view the contents of these hard disk directories.

The console retrieves each data type individually. Each data type has a separate retrieve data selection at the retrieve archived data menu (see Figure 12-11). To call this menu, first press **(GENL FCTNS MENU)**, then select the following menu items in the sequence shown:


```

B OIS Utilities
  └── F Archival Storage/Retrieval
        └── D Retrieve Data
  
```

The console searches an archive medium based on constraints set at retrieve data pages. The operator calls the page for a specific data type through a menu selection. Entered search constraints limit retrieval to certain types or ranges of stored data. The console does not retrieve any data that does not match or fall within the set constraint limits.

To retrieve data:

1. Select any of options A through E. The selection determines which type of data to retrieve. A retrieve data page for the selected data type appears after selection. The page allows entering the constraints the console uses when retrieving data.

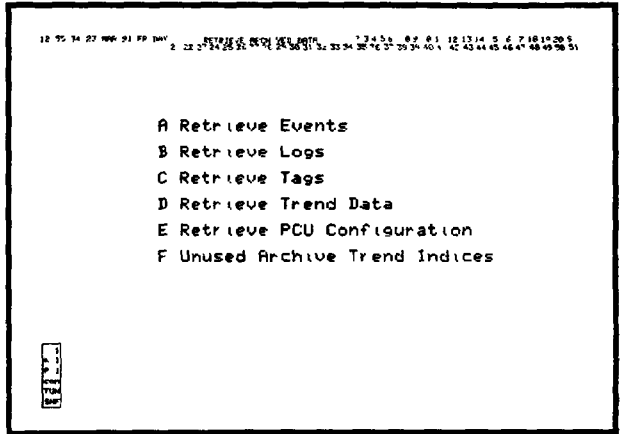

TPS0187A

Figure 12-11. Retrieve Data Menu

Use the *Directory of Archive Volume* option to determine the time span, volume name and sequence number associated with data stored on a particular medium if unknown Refer to **DIRECTORY OF ARCHIVE VOLUME** in this section for procedures

2 Use the cursor control keys to move between the fields at these pages Each data type has its own page Each page has different input requirements that specify how the console is to search and retrieve data

Refer to **Retrieving System Events, Retrieving Logs, Retrieving Tag Data, Retrieving Trend Data or Retrieving PCU Configurations** in this section for an explanation of each input field when entering data at a specific retrieval page

NOTE Entry in the *Media Type Label* and *Number* fields is only necessary when the installed medium to search is from another console Leave these fields blank if retrieving data from a medium that contains data stored by this console The console references its own archival configuration attributes when this field is left blank An entry must be made in all three fields or all must be left blank

3. Press **ENTER** to initiate a retrieval request Do not press **ENTER** until all constraint fields have been defined. The message *Retrieve Archive Data request queued* appears to indicate the start of a retrieval. The console searches a medium for data based on the entered constraints Retrieval takes several minutes to complete.

RECORDING PROCESS DATA

Press **[ESC]** at any time before pressing **[ENTER]** to exit the page without initiating a retrieval request.

NOTE The retrieval operation initiated here can take a variable amount of time depending on the request and system load. The retrieval function runs as a background program. This allows exiting the page to perform other operations while the console processes a retrieval request.

4. Press **[ESC]** to exit the page.

If all inputs are valid, the console processes a request. If not, the console positions the input cursor at the field in error. The status of a retrieval request can be seen at the operator information page. The console uses the operator request for action page to indicate any required operator actions necessary to complete processing of an archive data retrieval request.

Use the *Directory of Retrieved Data* function to view a list of retrieved data. Refer to **DIRECTORY OF RETRIEVED DATA** in this section for procedures.

After the console searches through an installed medium, it may attempt to search the next or previous sequence numbered volume. An operator action request message appears at the operator request for action page to identify the attempt. If this occurs, access the operator request for action page. A message indicating which volume and sequence number the console is attempting to retrieve from appears at the page. When processing the action request, two options are available to continue the retrieval request. Either install the indicated volume then press **[ENTER]**, or cancel the action request. Canceling clears the action request and causes the console to store the data on the hard disk that was retrieved from the currently installed medium onto the hard disk.

Retrieving System Events

When system events are set to archive, all events archive. Archival storage does not allow storing only selected types of events. The archival retrieval function does, however, provide the capability to retrieve only specific types of events. The events related to a single or group of tags can be retrieved.

NOTE Retrieved system events print only. They do not store in an archive retrieval directory.

Each retrieval request requires entering a time range, tag name, range of tag indexes, range of alarm groups, tag type, and tag address. The retrieve events page also requires selecting which event types, and alarm conditions and qualities reported with each tag event to retrieve. The alarm condition and quality can be used to limit the state change, alarm and operator action events.

RECORDING PROCESS DATA

the console retrieves. An archived event must match or fall within all entered constraints for the console to retrieve it.

Figure 12-12 shows the page used to retrieve events, which appears after selecting *A Retrieve Events* from the retrieve archived data menu. Table 12-2 explains each field of the retrieve events page.

```

MONDAY OCT 26, 1982 12:13:07 RETRIEVE ARCHIVED DATA

                                RETRIEVE EVENTS
From                               [REDACTED]
To                               SEP 24, 1982 13:00:00
Media Type                        Label      Number
Tag Name
Tag Number: 1      1000  000
Alarm Group: 1     1000  000
Tag Type
Misc:             Mode      Pol      Block
Save Events: NO           Print Events: YES
                                Event Type
State Change: YES        Operator Action: YES
Alarm Event: YES         Change of Value: YES
Information: YES

The attributes for these Event Types associated with a tag
                                Alarm State      Tag Quality
Ap. Alarm: YES High     YES      OK
Digital Alarm: YES Low   YES      Bad
Bad Quality: YES Too High YES      Deteriorated
High Deviation: YES Too Low YES      Deteriorated
Low Deviation: YES Three High YES      Suspect
                                Three Low YES      Alarm Inhibited
  
```

TPS0188B

Figure 12-12 Retrieve Events Page

Table 12-2 Events Retrieval Page Fields

Field	Description
From	Starting time and date at which to begin a search for events
To	Ending time and date at which to stop a search for events
Media type ¹	Valid media type is MAGTAPE or OPTICAL. Entry in this field is required only if retrieving events from a medium that was archived to by another console.
Label ¹	Volume name assigned to the events data type during <i>Volume to Media Definition</i> . Entry in this field is required only if retrieving events from a medium that was archived to by another console.
Number ¹	Sequence number the console assigns to a volume of data when storing data. Entry in this field is required only if retrieving events from a medium that was archived to by another console.
Tag name ²	Name of the tag for which to retrieve events. Wild card characters (* and ?) can be used when specifying a tag name. Enter an asterisk to not use tag name as a search constraint. An asterisk wild card character specifies all tag names.

RECORDING PROCESS DATA

Table 12-2 Events Retrieval Page Fields (continued)

Field	Description
Tag number ___ thru ___ ²	Range of tag index numbers to retrieve Valid entry is from 1 to the number of tags set during system configuration (maximum 30 000) Enter the maximum range to not use tag index number as a search constraint
Alarm group thru ___ ²	Range of alarm groups to retrieve Valid range entries are 1 to 99 and S The complete alarm group range is from 1 to S Enter the maximum range of 1 to S to not use alarm group as a search constraint
Tag type	Enter any valid tag type Clear the field or leave it blank to not use tag type as a search constraint
Ring ___ node ___ mod ___ block ___	Enter a valid loop node module and block address to which to limit the search Clear the fields or leave them blank to not use tag address as a search constraint
Save events	Default is NO, leave this field at its default
Print events	Default is YES leave this field at its default
Event type	The console searches for and retrieves each event type that is set to YES It does not retrieve any event types set to NO NOTE At least one event type field must be set to YES
Alarm state	The console searches for and retrieves each state change alarm or operator action event that has an alarm condition matching any of the alarm state conditions set to YES It does not retrieve any of these events having an alarm condition matching those set to NO
Tag quality	The console searches for and retrieves each state change alarm or operator action event that has a quality condition matching any of the tag quality conditions set to YES It does not retrieve any of these events having a quality condition matching those set to NO

NOTES

1 If retrieving from a medium archived by another console, the console requires a media type volume name and sequence number entry If retrieving from a medium that this console archived to leave all three fields blank unless changes have been made to the volume names set during data type to volume definition

2 The tag name and range entries can be used in conjunction or separately For example a tag index range and alarm group range can be set to limit a search while the tag name can be set to the wildcard asterisk, which does not limit a search

Retrieving Logs

The console archives custom and sequence of events (SOE) logs as log images. A log image is a completely formatted report ready for printing Archives are on a per log basis The console does not archive a log until the log has completed its entire collection period.


When retrieved, a log prints in the same format as a normal log output, with the format being determined by log definition for custom logs, or a standard format for SOE logs Log configuration procedures determine if the console is to archive a log or not.

The archival retrieval function provides the capability to retrieve either a single or range of stored custom and SOE logs Each log

retrieval request requires entering a time range, log type, log name and range of log numbers. An archived log must match or fall within all entered constraints for the console to retrieve it

NOTE Retrieved logs print only. They do not store in an archival retrieval directory.

Figure 12-13 shows the page used to retrieve log images, which appears after selecting **B Retrieve Logs** from the retrieve archived data menu. Table 12-3 explains each field of the retrieval page.

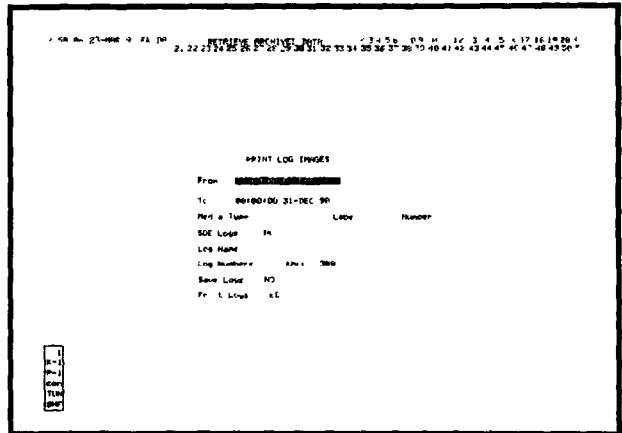

TP50188A

Figure 12-13 Print Log Images Page

Table 12-3. Log Image Retrieval Page Fields

Field	Description
From	Starting time and date at which to begin a search for log images
To	Ending time and date at which to stop a search for log images
Media type ¹	Valid media type is MAGTAPE or OPTICAL. Entry in this field is required only if retrieving events from a medium that was archived to by another console.
Label ¹	Volume name assigned to the events data type during Volume to Media Definition. Entry in this field is required only if retrieving events from a medium that was archived to by another console.
Number ¹	Sequence number the console assigns to a volume of data when storing data. Entry in this field is required only if retrieving events from a medium that was archived to by another console.
SOE logs	The console retrieves SOE logs if set to YES. It retrieves custom logs if set to NO.

RECORDING PROCESS DATA

Table 12-3 Log Image Retrieval Page Fields (continued)

Field	Description
Log name ²	Name of a log for which the console s to search When retrieving custom logs enter the name defined for a log during log configuration Enter a name in the format SOECLnnn where nnn is the report number for SOE logs Wild card characters (i.e. , * and ?) can be used when specifying a log name Enter an asterisk to not use log name as a search constraint An asterisk w d card character specifies all log names
Log numbers ___ thru ___ ²	Range of log numbers to retrieve Each log is assigned a log number during configuration Valid range entries are from 1 to 300 for custom logs or 1 to 160 for SOE logs Enter the maximum range to not use og number as a search constraint
Save logs	Default is NO leave this field at its default
Prnt ogs	Default s YES leave this fie d at ts defau t

NOTES

- 1 If retrieving from a medium archived to by another console the console requre a med a type volume name and sequence number entry If retr ev ng from a medium that th s console arch ved to leave a three fields bank un ess changes have been made to the volume names set during data type to volume definition
- 2 The log name and log number range entries can be used in conjunct on or separate y For exam e a log number range can be set to lim t a search while the og name can be set to the wild card aster sk which does not lim t a search

Retrieving Tag Data

The tag data that archives to storage medium depends on tag historian configuration The retrieval function transfers the tag data from the medium to the hard disk of the console From there, further retrieval procedures performed through the tag historian function determine the exact data to retrieve for printing Refer to **Tag Historian** in this section for an explanation and procedures to perform tag data retrieval through the tag historian function

The archival retrieval function provides the capability to retrieve tag data by entering a time range Archived tag data must fall within the entered time constraint for the console to retrieve it

Figure 12-14 shows the page used to retrieve tag data, which appears after selecting **C Retrieve Tags** from the retrieve archived data menu. Table 12-4 explains each field of the retrieval page

Table 12-4 Tag Data Retrieval Page Fields

Field	Description
From	Starting time and date at which to begin a search for tag data
To	Ending time and date at which to stop a search for tag data
Media type ¹	Val d med a type is MAGTAPE or OPTICAL Entry n this field s required only if retr ev ing events from a medium that was archived to by another console
Label ¹	Volume name assigned to the events data type dur ng Volume to Media Definition Entry in this field is required only if retrieving events from a med um that was archived to by another console

Table 12-4. Tag Data Retrieval Page Fields (continued)

Field	Description
Number ¹	Sequence number the console assigns to a volume of data when storing data. Entry in this field is required only if retrieving events from a medium that was archived to by another console.

NOTE 1 If retrieving from a medium archived to by another console the console requires a media type, volume name and sequence number entry. If retrieving from a medium that this console archived to leave all three fields blank unless changes have been made to the volume names set during data type to volume definition.

```

      01 02 03 04 05 06 07 08 09 10 11 12 13 14 15 16 17 18 19 20 21
      22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42
      43 44 45 46 47 48 49 50

      RETRIEVE TAG DATA

      From: [REDACTED]
      To: 5918, 23-PMR 90

      Media Type      Line #      Number

      1
      2
      3
      4
      5
      6
      7
      8
      9
      0
      F
      E
      D
      I
      T
      P
      R
      I
      N
      T
      S
      C
      R
      E
      E
      N
      D
  
```

Figure 12-14. Retrieve Tag Data Page

TPSD190A

Retrieving Trend Data

The console archives trend data on a per trend basis. During trend definition, the *Trend Usage* field for each defined trend determines whether its data stores for archiving or not. The data stores at the same resolution as set for a defined trend. The data can be retrieved, however, at a different resolution.

A trend does *not* have to be defined at the console to retrieve trend data and have it store in an archival retrieval directory. The console does, however, require a defined trend to view the data at a trend display. Once a trend is retrieved and stored on the hard disk, it is known as a retrieved trend.

The actual information stored for a trend depends on its configuration. The information relates directly to the attributes defined for a particular trend during its definition.

RECORDING PROCESS DATA

Tag name - name of the tag associated with a trend The tag references the actual process variable being trended

Tag subtype - relates to station trends only The subtype identifies which station variable is being trended, either PV (process variable), SP (set point), CO (control output) or RI (ratio index)

Trend mode - either average, minimum, maximum, sample or sum.

Trend resolution - resolution of the stored trend data

The archival retrieval function provides the capability to retrieve either a *single or range of trends*

Figure 12-15 shows the page used to retrieve trend data, which appears after selecting *D Retrieve Trend Data* from the retrieve archived data menu

```

3 04 11 27 000 4 000000  RECALLS ARCHIVED DATA 1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21
21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51

      RETRIEVE TREND DATA
      From 00:00:00 00/00/80
      To 00:00:00 15-MAR 80
      No. of TRENDS 1 LABEL 1 NUMBER
      Resolution of 1 MINUTES
      Points of Retrieved Trend Index 100
      Clear Information on 14 out of 80
  
```

Retrieval and Tag	Tag Name	Tag Sub- Type	Trend Mode	Resolution Trend Index	Tag Name	Tag Sub- Type	Trend Mode
1	MS01010020070		SAMPLE	11	MS01010040070		SAMPLE
2	MS01010010031		SAMPLE	2	MS01010010071		SAMPLE
3	MS01010010032		SAMPLE	3	MS01010040077		SAMPLE
4	MS01010020083		SAMPLE	4	MS01010040078		SAMPLE
5	MS01010020087		SAMPLE	5	MS01010040077		SAMPLE
6	MS01010030070		SAMPLE	16	MS01010040070		SAMPLE
	MS01010030031		SAMPLE	17	MS01010040077		SAMPLE
8	MS01010030032		SAMPLE	17	MS01010040077		SAMPLE
9	MS01010030036		SAMPLE	19	MS01010040083		SAMPLE
10	MS01010030037		SAMPLE	20	MS01010040080		SAMPLE

TPS0101A

Figure 12-15 Retrieve Trend Data Page

Trend Retrieval List

The first step in trend data retrieval is to determine which stored trends to retrieve. Up to 80 trends can be retrieved and stored on the hard disk at one time. When a trend is retrieved, the console stores it in its own file. Each trend is identified by a retrieved trend index number.

The fields at the bottom of the retrieve trend data page (see Figure 12-15) define which trends will eventually be retrieved. Each trend in this list must correspond to a trend that has previously been archived. The trend retrieval list can be created at any time.

The index number assigned to a retrieved trend depends on its position in the trend retrieval list. The retrieved trend index number is only used by the archived data retrieval function, and is *not* the same as the trend index number assigned to a trend during its definition.

One way to define the retrieval list is to set it up at the same time as trend data storage. In this way, the trend retrieval list would contain all trends (up to 80) that have their *Usage Type* field set to *ARCHIVED*. The trends can then be retrieved at any desired time.

The *Print Trend List* utility allows printing a list of all trends having their *Usage Type* field set to *ARCHIVED*. This function provides a list of trends that can be referenced when initially defining or adding trends to the retrieval list. All information required to define the list appears in the printout.

To enter a trend into the retrieval list

1. An input cursor positions at the *From* field after initially selecting the *Retrieve Trend Data* option. Use the cursor control keys to move the cursor. Move the input cursor down the page to access the trend list fields.

Only 20 trend index numbers appear at a single page. Press **NEXT PAGE** or **PREV PAGE** to view the next or previous 20 entries.

2. Enter the name of the tag associated with the trend in the *Tag Name* column. The name entry must be the same as the tag name defined for a trend during its definition. Enter a tag name, not a tag index.

3. Enter the subtype in the *Tag Subtype* column if the trend is a station trend. Enter either *PV* (process variable), *SP* (set point), *CO* (control output) or *RI* (ratio index). The console does not give access to this column if the trend is not a station trend.

Each variable related to a station block can be trended. A single station block may have several trends defined just for that block. The console requires the subtype entry to determine which trended variable of a station block to retrieve. In the case of a station trend, the trend list may contain several entries each having the same *Tag Name*, but each having a different *Subtype* entry.

4. Enter the mode of a trend in the *Trend Mode* column. Enter either *AVERAGE*, *MINIMUM*, *MAXIMUM*, *SAMPLE*, or *SUM*. Repeat Steps 1 through 4 for each trend to retrieve.

The *Tag Name*, *Tag Subtype* and *Trend Mode* entries must match a stored trend exactly for the trend data to be retrieved.

RECORDING PROCESS DATA

Clear Retrieval List The trend retrieval list can be cleared at any time This allows clearing the previous entries to redefine a new retrieval list To clear the retrieval list

1. Move to the *Clear Information Below* field
2. Enter **YES**.
- 3 Press **(ENTER)** to initiate the clear.

Retrieve Trend Data After the trend retrieval list has been defined, the procedures described in **DATA TYPE RETRIEVAL** in this section can be performed. A single, range or all trends defined in the trend retrieval list can be retrieved in a *single* retrieval request

After initiating a retrieval request, the console deletes any previous retrieved data files residing on the hard disk The files that delete are only those for trends currently being retrieved in the current request All other data files remain intact

The console also deletes any previously retrieved data files if a *Retrieved Trend Index* entry is made blank and that index number is then requested for retrieval.

Define a new trend to retrieve in any unused *Retrieved Trend Index* number to leave data file containing trend data from a previous retrieval request intact An *unused index number* is any that has not been part of a previous retrieval request, and does not have data stored in a data file on the hard disk Refer to **Unused Archive Trend Indices** in this section for procedures to obtain a list of unused, available trend index numbers

Table 12-5 explains the remaining retrieve trend data page fields Each trend data retrieval request requires entering a time range, resolution and range of trend indexes Archived trend data must match or fall within all entered constraints for the console to retrieve the data

Table 12-5 Trend Data Retrieval Page Fields

Field	Description
From	Starting time and date at which to begin a search for trend data
To	Ending time and date at which to stop a search for trend data
Media type ¹	Valid media type is MAGTAPE or OPTICAL Entry in this field is required only if retrieving events from a medium that was archived to by another console
Label ¹	Volume name assigned to the events data type during <i>Volume to Media Definition</i> Entry in this field is required only if retrieving events from a medium that was archived to by another console

Table 12-5 Trend Data Retrieval Page Fields (continued)

Field	Description
Number ¹	Sequence number the console assigns to a volume of data when storing data. Entry in this field is required only if retrieving events from a medium that was archived to by another console.
Resolution # unit ²	<p>Determines the resolution of the retrieved data. This does not have to match a trends defined resolution, but must be a resolution time span greater than and a multiple of the resolution of the stored data.</p> <p>Valid entry is an integer from 1 to 99 and either SECONDS, MINUTES, HOURS or DAYS. If using SECONDS valid integers are 15, 30 or 45 only.</p>
Range of retrieved trend indices __ thru __	<p>Range of trend indexes from the trend retrieval list at the bottom of the page for which the console is to retrieve data. Valid entry is from 1 to 80.</p> <p>Enter the same index number in both fields if retrieving data for only one trend. The range can include blank, undefined index numbers.</p> <p>Leave these fields blank to retrieve all trends defined on the current page of the trend retrieval list.</p> <p>NOTE: The console deletes any existing retrieved data files within this range and replaces them with the new requested data.</p>

NOTES

1 If retrieving from a medium archived to by another console, the console requires a media type, volume name and sequence number entry. If retrieving from a medium that this console archived to, leave all three fields blank unless changes have been made to the volume names set during data type to volume definition.

2 The console trend displays cannot display unit fields of HOURS and DAYS. Also, the trend element resolution time span must be equal to or greater than the resolution of the data retrieved. For example, the display used to present trend data retrieved at five-minute resolution must be set up for five-minute resolution or higher (e.g., ten minutes). A resolution of less than five minutes cannot be defined.

Retrieving PCU Configurations

The console archives only those PCU configurations that have been saved through PCU management functions. Archives are on a per module configuration basis. A retrieved PCU configuration can be used to verify or load the configuration of a module. PCU management functions also allow printing a retrieved configuration.

The archival retrieval function provides the capability to retrieve either a single or range of stored configurations. Each PCU configuration request requires entering a time range and loop, PCU and module address range. An archived PCU configuration must match or fall within all entered constraints for the console to retrieve it.

Figure 12-16 shows the page used to retrieve PCU configurations, which appears after selecting *E Retrieve PCU Configurations* from the retrieve archived data menu. Table 12-6 explains each field of the retrieval page.

RECORDING PROCESS DATA

```

10 13 38 25-APR-91 THURSDY      RETR EVE ARCHIVED DATA      1 2 3 4 5 6 8 9 10 83

                                RETRIEVE PCU CONFIGURATIONS
From                               
To                               001000 31 DEC-99
Media Type                       Label      Number
Loop Number                       1 thru 250
PCU Number                         1 thru 249
Module Number                      1 thru 31
  
```

1
 2
 3
 4
 5
 6
 7
 8
 9
 10

TPS0192A

Figure 12-16 Retrieve PCU Configurations Page

Table 12-6. PCU Configurations Retrieval Page Fields

Field	Description
From	Starting time and date at which to begin a search for PCU configurations
To	Ending time and date at which to stop a search for PCU configurations
Media type ¹	Valid media type is MAGTAPE or OPTICAL. Entry in this field is required only if retrieving events from a medium that was archived to by another console.
Label ¹	Volume name assigned to the events data type during Volume to Media Definition. Entry in this field is required only if retrieving events from a medium that was archived to by another console.
Number ¹	Sequence number the console assigns to a volume of data when storing data. Entry in this field is required only if retrieving events from a medium that was archived to by another console.
Loop number	Range of loop addresses for which the console is to search. Valid entries from 1 to 250. Enter the same address in both fields to search for a single loop address.
PCU number	Range of PCU addresses for which the console is to search. Valid entry is from 1 to 250. Enter the same address in both fields to search for a single PCU address.
Module number	Range of module addresses for which the console is to search. Valid entries from 0 to 31. Enter the same address in both fields to search for a single module address.

NOTE 1 If retrieving from a medium archived to by another console the console requires a media type, volume name and sequence number entry. If retrieving from a medium that this console archived to leave all three fields blank unless changes have been made to the volume names set during data type to volume definition.

GENL FCTNS MENU, then select the following menu items in the sequence shown.

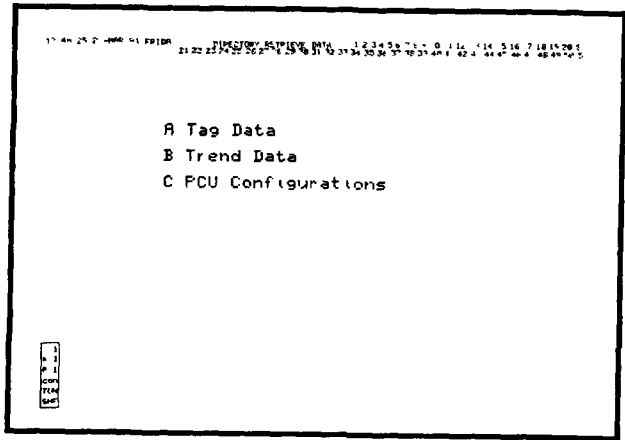



Figure 12-18 Directory of Retrieved Data Menu

Delete Retrieved Data

A directory page for each data type appears after selecting any of the directory options. Each entry in the list has a time range that corresponds to a previously initiated retrieval request. The directory page has two options used to delete entries in the listing: *X Delete Selected* and *Y Delete Page*.

To select and delete individual data files

1. Select *X Delete Selected*. The letters along the left edge of the page change to red. These letters are used to select files to delete.
2. Press a key corresponding to the selector letter adjacent to a directory entry to delete. The letter at the screen changes to green to identify an entry as being selected for deletion.
3. Repeat Step 2 selecting all desired entries to delete, then press **ENTER**. The console removes all selected entries from the list and deletes the corresponding retrieved data files.
4. Press **ESC** to exit delete mode.

Select *Y Delete Page* to delete all entries on the page. A prompt appears to allow confirming the deletion. The console removes all entries at the current page from the list and deletes the corresponding retrieved data files

Directory of Retrieved Tag Data

A tag data directory listing appears after selecting *A Tag Data* from the retrieved data directory menu (see Figure 12-19). Each entry in the directory contains the time range of data stored during a retrieval request, number of tag data files retrieved, and the amount of hard disk space the files occupy. The number of retrieved tag data files cannot exceed 240. The entries are arranged chronologically by the retrieval starting time shown at the *From Time* field. A maximum of 15 directory entries display per page. Press **(NEXT PAGE)** or **(PREV PAGE)** to view additional pages.

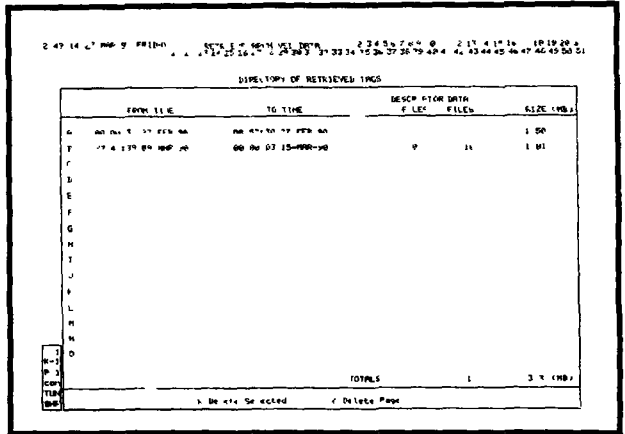


Figure 12-19 Directory of Retrieved Tags

Directory of Retrieved Trend Data

A trend data directory listing appears after selecting *B Trend Data* from the retrieved data directory menu (see Figure 12-20). Each directory entry contains

ARCHIVE TREND INDEX - corresponds to the trend retrieval list index number, not the index number assigned to a trend during its definition

TAG NAME - name of the tag associated with the trended variable.

RECORDING PROCESS DATA

0105 04 11 000 3 TRF5104 2 24 35 7 0 11 2 7 4 5 8 17 18 9 20 7
 11 2 24 25 26 27 28 29 30 2 3 23 34 35 7 3 38 39 40 41 4 42 44 45 46 4 48 49 50 7

D I R E C T O R Y O F R E T R I E V E D T R E N D S

TRND NO	TRND D	TRND MODE	TRND TAG	TRND RES	TRND FROM	TRND TO	TRND TIME	TRND DATE
1								
2								
3								
4								
5								
6								
7								
8								
9								
10								
11								
12								
13								
14								
15								
16								
17								
18								
19								
20								
21								
22								
23								
24								
25								
26								
27								
28								
29								
30								
31								
32								
33								
34								
35								
36								
37								
38								
39								
40								
41								
42								
43								
44								
45								
46								
47								
48								
49								
50								

X Deletr file Y Deletr page

Directory has nothing to be updated PGC 3 3

TPS0198A

Figure 12-20 Directory of Retrieved Trends

TAG SUBTYPE PV, SP, RI or CO, appears only if the trend is a STATION tag trend

TREND MODE - SAMPLE, MAXIMUM, MINIMUM, AVERAGE or SUM collection mode of the trend

FROM/TO time span of the retrieval request

RESOLUTION - retrieved data resolution as determined by the retrieval request ranging from seconds to days

The number of retrieved trend data files cannot exceed 80. The entries appear chronologically by index number. The trends that are retrieved depend on the trend retrieval list defined at the trend data retrieval page. A maximum of 15 directory entries display per page. Press **(NEXT PAGE)** or **(PREV PAGE)** to view additional pages.

Directory of PCU Configurations

A directory listing of retrieved PCU configurations appears after selecting **C PCU Configurations** from the retrieved data directory menu (see Figure 12-21). Each retrieved configuration resides in a separate file. Each directory entry contains the loop, PCU, and module address of the configuration, and a retrieval request time. Each entry is for a single file containing the configuration of a single module. Directory entries are in numerical order by the

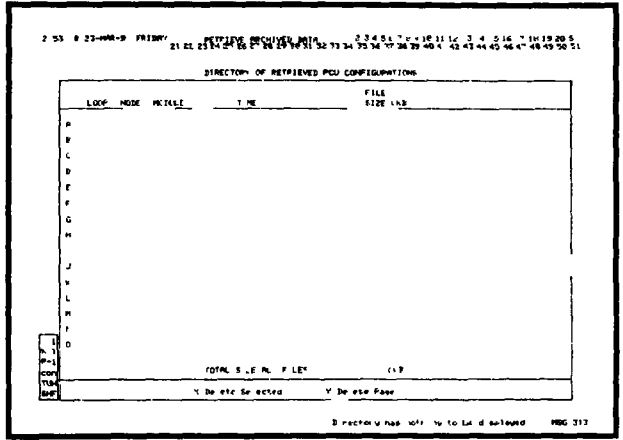


Figure 12-21. Directory of PCU Configurations

loop, PCU and module address. A maximum of 15 directory entries display per page Press **NEXT PAGE** or **PREV PAGE** to view additional pages

VIEWING OR PRINTING RETRIEVED ARCHIVE DATA

In certain cases, other console functions must be used to either print or view retrieved data Specifically, these include

- Tag historian for further retrieval, then printing of selected tag data
- Trend displays for viewing trend data
- PCU management for PCU configurations

Tag Data

Operations performed through the tag historian allow further retrieval capabilities after transferring the data to the hard disk. Specifically, the tag historian allows retrieving individual or a group of tags from the files stored in the archival retrieval directory. When retrieving a group of tags, the retrieval is based on alarm group, tag historian group or tag name. The tag historian function takes the desired data and stores it in another file in a dedicated tag historian directory. From there, it can then be printed through other tag historian options

Tag data can be retrieved at any console whether that console archived the data or not When tag data stores for archiving, each

RECORDING PROCESS DATA

tag contains both exception reported values or states and configuration data. This allows the data to be retrieved at other consoles, or at this console even if any database changes have been made.

Trend Data When panning to historical data at a trend display, the console first displays any data collected from a PCU module and stored on its hard disk. The amount of trend data that remains on the hard disk depends on trend definition, and can be up to 92 days of data. After panning a trend display past any maintained data, the console looks for additional trend data in an archival retrieval directory.

Use the pan options available at a trend display to move the presentation of the display back to a time within the time range of retrieved trend data to view any retrieved trend data. Refer to **Trend Control** in the **Process Monitoring** section for an explanation of panning.

PCU Configurations PCU management allows printing retrieved PCU configurations. The configurations can also be used to verify an existing configuration or to download a configuration. Refer to **PCU Management** in the **INFJ 90 System Configuration** section for an explanation and procedures.

Tag Historian

The tag historian function defines the data collected and stored by the console for tag data archiving. Functions available through the tag historian also provide the capability to recover specific tag data from a retrieved tag data file, then print the data. Tag historian functions can be classified into two separate categories: Tag data storage and tag data retrieval.

The operator accesses tag historian functions through a tag historian menu (see Figure 12-22). To call this menu, first press **[GENL FCTNS MENU]**, then select the following menu items in the sequence shown:

B OIS Utilities → *J Tag Historian*

The operator performs three different operations through the tag historian menu:

Historian Group Configuration - determines the tag data that stores in the archival storage directory for eventual transfer to storage medium. Refer to **CONFIGURING TAG DATA TO BE ARCHIVED** in the **OIS Configuration** section for further explanation and procedures.

Tag Historian Retrieval - creates a retrieved data file (RDF) containing specific tag information recovered from a retrieved tag data file. The retrieved tag data file resides in an archival retrieval directory, and contains the data transferred back to the

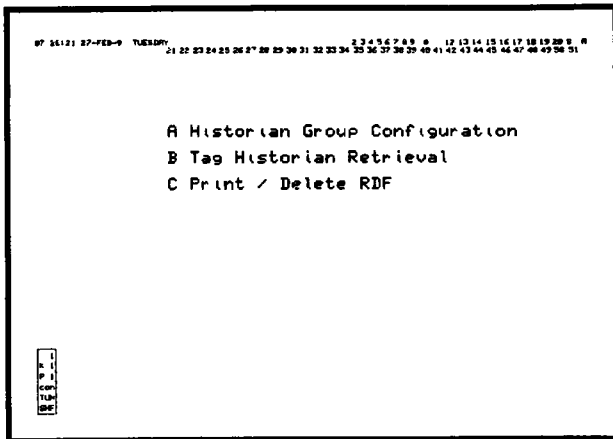


Figure 12-22. Tag Historian Menu

hard disk using the *Retrieve Tags* function. Refer to **Retrieving Tag Data** in this section for additional explanation.

Print/Delete RDF - presents a directory listing of all RDF files, and allows either printing information from these files or deleting them.

To retrieve and print tag data

- 1 Create an RDF file that contains the desired retrieved data. Select the *Tag Historian Retrieval* options to perform actions that initiate a retrieval and create this file. The console creates an RDF file and stores it in the tag historian directory. The file can be identified by the *RDF Name* entered at one of the retrieval pages.

- 2 Use the *Print/Delete RDF* function to view a directory listing of RDF files, and to print data or delete data files.

TAG HISTORIAN DATA RETRIEVAL


The *Tag Historian Retrieval* function provides the capability to recover data from retrieved tag data files residing in an archival retrieval directory. After retrieving and storing tag data to the hard disk using tag data retrieval procedures, this option must be selected to perform a second retrieval. The archive data retrieval function retrieves data based on an entered time range. The console recovers any desired data by searching the retrieved tag data files using search constraints entered through the tag historian.

RECORDING PROCESS DATA

The result of this second retrieval transfers data for a single or range of tags to an RDF file. A maximum of 50 RDF files can be maintained on the hard disk. RDF files reside in a dedicated tag historian directory, and are identified by a user-defined name. The information in these files depends on an entered time range and one of the following.

- Alarm group or alarm group range.
- Tag historian group
- Tag name or wild card tag name.
- Defined list of up to 100 individual tags

The console searches a retrieved tag data file based on constraints set through a tag historian retrieval menu (see Figure 12-23). Select *B Tag Historian Retrieval* from the tag historian menu to call this menu.

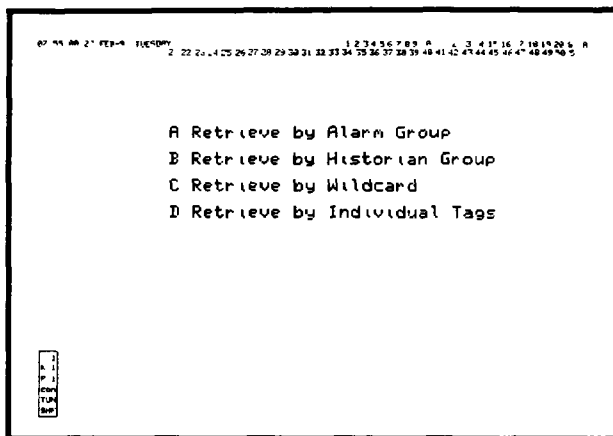

TPS0199A

Figure 12 23. Tag Historian Retrieval Menu

The menu page provides separate options to select the tag attributes for which the console is to search. Constraints entered through the options presented at this menu page limit data retrieval to a specified time range, and to certain tag attributes. The console does not retrieve any data that does not match or fall within the set constraint limits.

Select any one of the options presented. Refer to either *Retrieve by Alarm Group*, *Retrieve by Historian Group*, *Retrieve by Tag*

Name or Retrieve by Tag List in this section for a detailed explanation when creating an RDF file and defining search constraints that determine the data to retrieve

Use the *Directory of Retrieved Data* option available through archival storage and retrieval functions to determine the time span associated with tag data stored on the hard disk. Refer to **DIRECTORY OF RETRIEVED DATA** in this section for procedures

Retrieve by Alarm Group

Figure 12-24 shows the page that appears after selecting **A Retrieve by Alarm Group** from the tag historian retrieval menu. To retrieve tag data by alarm group

1. An input cursor appears at the *From* field when the page appears. Use the cursor control keys to move the cursor between input fields. At the *From* field, enter a starting time and date at which to begin a search for data.

```

07:55 47 27-FEB 9 TUESDAY          2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 5  A
2 02 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 4 42 43 44 45 46 47 48 49 50 51
RETRIEVAL BY ALARM GROUP

From          █
To            07 5 143 27-FEB 90
RDF Name
Alarm Group   █

1
K
F
G
T
U
Q
  
```

TPS0200A

Figure 12-24 Retrieve by Alarm Group Page

2. Enter an ending time and date at which to stop a search for data at the *To* field.
3. Enter a name the console is to assign to the RDF file created after completing a search. The name can be up to eight characters. After creating an RDF file, this name is used in other tag historian functions to identify the retrieved data

RECORDING PROCESS DATA

4 Enter an alarm group search constraint at the *Alarm Group* __ to __ field. This limits any search to a specific set of tags identified by their alarm group. The field identifies either a single or range of alarm groups to retrieve. Valid entry is 1 to 99 or S. The complete alarm group range is from 1 to S. Enter the same alarm group number in both fields to designate a single alarm group.

5 Press **[ENTER]** to initiate a retrieval request. Do not press **[ENTER]** until all fields have been defined. Retrieval takes several minutes to complete. Press **[ESC]** at any time before pressing **[ENTER]** to exit the page without initiating a retrieval request.

NOTE: The retrieval operation initiated here can take a variable amount of time depending on the request and system load. The retrieval function runs as a background program. This allows exiting the page to perform other operations while the console processes a retrieval request.

6 Press **[ESC]** to exit the page.

If all inputs are valid, the console processes a request. If not, the console positions the input cursor at the field in error. The operator information events page provides informational messages to indicate the current operations being performed to process a retrieval request. The *Print/Delete RDF* function also provides retrieval request status information.

Retrieve by Historian Group

Figure 12-25 shows the page that appears after selecting *B Retrieve by Historian Group* from the tag historian retrieval menu. To retrieve tag data by historian group:


1 An input cursor appears at the *From* field when the page appears. Use the cursor control keys to move the cursor between input fields. At the *From* field, enter a starting time and date at which to begin a search for data.

2 Enter an ending time and date at which to stop a search for data at the *To* field.

3 Enter a name the console is to assign to the RDF file created after completing a search. The name can be up to eight characters. After creating an RDF file, this name is used in other tag historian functions to identify the retrieved data.

4 Enter a tag historian group search constraint at the *Tag Historian Group* field. This limits any search to a specific set of tags defined in a historian group. Valid entry is from 1 to 10, and must correspond to a defined group.

5 Press **[ENTER]** to initiate a retrieval request. Do not press **[ENTER]** until all fields have been defined. Retrieval takes several

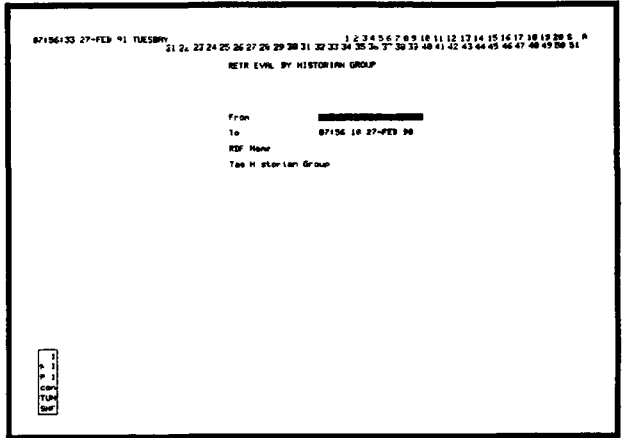

TPS0201A

Figure 12-25 Retrieve by Historian Group Page

minutes to complete Press **[ESC]** at any time before pressing **[ENTER]** to exit the page without initiating a retrieval request.

NOTE The retrieval operation initiated here can take a variable amount of time depending on the request and system load. The retrieval function runs as a background program. This allows exiting the page to perform other operations while the console processes a retrieval request.

6 Press **[ESC]** to exit the page.

If all inputs are valid, the console processes a request. If not, the console positions the input cursor at the field in error. The operator information events page provides informational messages to indicate the current operations being performed to process a retrieval request. The *Print/Delete RDF* function also provides retrieval status information.

Retrieve by Tag Name

Figure 12-26 shows the page that appears after selecting *C Retrieve by Wildcard* from the tag historian retrieval menu. To retrieve tag data by tag name:

1 An input cursor appears at the *From* field when the page appears. Use the cursor control keys to move the cursor between input fields. At the *From* field, enter a starting time and date at which to begin a search for data.

```

071571 @ 27-FEB-9 TUESDAY
1 2 3 4 5 6 7 8 9 10 11 12 3 4 15 16 17 18 19 20 5 6
21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51
RETRIEVE BY TAG WILDCARD

From
To 00100100 @ J91 00
RDF Name
Wildcard Pattern

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51

```

TPS0202A

Figure 12-26 Retrieve by Tag Wild Card Page

2 Enter an ending time and date at which to stop a search for data at the To field

3 Enter a name the console is to assign to the RDF file created after completing a search The name can be up to eight characters. After creating an RDF file, this name is used in other tag historian functions to identify the retrieved data

4 Enter a tag name search constraint at the Wildcard Pattern field This limits any search to only those tags whose name matches either a specific or wild card tag name The wild cards are the asterisk (*) or question mark (?) characters

The * represents multiple characters, the ? a single character. For example, ABC*XYZ retrieves any tags beginning with ABC and ending with XYZ with any number of characters in between ABC?XYZ retrieves any tags beginning with ABC and ending with XYZ and only one character in between The system supports multiple occurrences of ? Multiple occurrences of * are treated as ? after the first *.

5 Press **ENTER** to initiate a retrieval request Do not press **ENTER** until all fields have been defined Retrieval takes several minutes to complete Press **ESC** at any time before pressing **ENTER** to exit the page without initiating a retrieval request

RECORDING PROCESS DATA

Define Individual Tags - defines a list of tags by individual tag name or index number entry This option provides an empty tag retrieval list to define individual tags.

Send Retrieval Request initiates a retrieval request This option should be selected as the last step to initiate a retrieval request

The complete list of 100 individual tags spans three separate pages Press **NEXT PAGE** or **PREV PAGE** to view the complete tag list. The *Page* field updates to show the number of the currently displayed page

To create a list of tags using the *Select Tag Historian Group* option, then initiate a retrieval of the tags:

1 Press **A** to select the option An *Enter Tag Historian Group Number* input prompt appears

2 Enter a tag historian group number from 1 to 10, then press **ENTER** The console fills in the tag list with tag names after referencing the specified group. The group must be defined for an entered group number to be valid If not the page remains blank After pressing **ENTER**, an input cursor appears at the *From* field

Press **ESC** at any time to abort any edits

3 Use the cursor control keys to move the cursor between input fields At the *From* field, enter a starting time and date at which to begin a search for data

4. Enter an ending time and date at which to stop a search for data at the *To* field

5 Enter a name the console is to assign to the RDF file created after completing a search The name can be up to eight characters After creating an RDF file, this name is used in other tag historian functions to identify the retrieved data

6 If desired, move the cursor to the tag definition area of the page to modify the list of tags Continue with the next step if modifications are not required

To remove or redefine a tag in the list, move to the name of that tag and either press **CLEAR** or enter a new name or index number Move to an available, undefined tag definition field and enter a tag name or index number to add an additional tag The *Tag Count* field updates as tags are removed or added

7 Press **ENTER** to save any edits made and to return control to the menu at the bottom of the page

8 Select *C Send Retrieval Request* to initiate the retrieval. The message *Retrieval Request Queued* appears to verify the action

Press **[ESC]** to leave the list defined without initiating a retrieval request. This must be done, however, before selecting option C.

NOTE The retrieval operation initiated here can take a variable amount of time depending on the request and system load. The retrieval function runs as a background program. This allows exiting the page to perform other operations while the console processes a retrieval request.

9. Press **[ESC]** to exit the page.

To create a list of tags using the *Define Individual Tags* option, then initiate a retrieval of the tags

1 Press **[B]** to select the option. An input cursor initially appears at the *From* field. Press **[ESC]** at any time to abort any edits.

2 Use the cursor control keys to move the cursor between input fields. At the *From* field, enter a starting time and date at which to begin a search for data.

3. Enter an ending time and date at which to stop a search for data at the *To* field.

4 Enter a name the console is to assign to the RDF file created after completing a search. The name can be up to eight characters. After creating an RDF file, this name is used in other tag historian functions to identify the retrieved data.

5. Move the cursor to the tag definition area of the page to define the list of tags to retrieve. Move to an available, undefined tag definition field and enter a tag name or index number to add a tag. Continue to enter tags until the list of tags is complete. The *Tag Count* field updates as tags are added.

6. Once completed, press **[ENTER]** to save any edits made and to return control to the menu at the bottom of the page.

7 Select *C Send Retrieval Request* to initiate the retrieval. The message *Retrieval Request Queued* appears to verify the action.

Press **[ESC]** to leave the list defined without initiating a retrieval request. This must be done, however, before selecting option C.

NOTE The retrieval operation initiated here can take a variable amount of time depending on the request and system load. The retrieval function runs as a background program. This allows exiting the page to perform other operations while the console processes a retrieval request.

8 Press **[ESC]** to exit the page.

If all inputs are valid, the console processes a request. If not, the console positions the input cursor at the field in error. The operator information events page provides informational messages to indicate the current operations being performed to process a

RECORDING PROCESS DATA

retrieval request The *Print/Delete RDF* function also provides retrieval request status information.

PRINTING OR DELETING TAG DATA

The *Print/Delete RDF* option provides the capability to print the data in a selected RDF file. The option also provides the capability to delete or abort processing of RDF files. Three types of information from each RDF file can be printed in any combination

Retrieval request data - relates to the retrieval constraints defined during data retrieval. The information identifies the retrieval criteria defined through the alarm group, tag historian group, wild card and individual tags retrieval options

Tag configuration data - provides database information as defined for a tag during tag configuration. The information consists of both general and specific tag related attributes

Exception reports - details the values or states exception reported for the process variable referenced by the tag The information includes tag name, tag type, tag value or state, engineering unit of measurement, quality, alarm state, and date and time of the exception reported data

The operator initiates a data printout or deletion through an RDF print/display page (see Figure 12-28). Select *C Print/Delete RDF* from the tag historian menu to call the page The page provides a directory of RDF files Each entry in the list reflects the status of a previous retrieval request including:

RDF Name - name assigned to retrieved data at one of the retrieval request pages

Time From - corresponds to the starting time of a retrieval request

Time To - corresponds to the ending time of a retrieval request

Status - identifies the current processing status of both a retrieval, and print or delete request for a selected RDF file The status can appear as.

- COMPLETE** No current processing
- FORMATTING** Formatting a requested print
- BUILDING** Building an RDF file after a retrieval request
- DELETING** Deleting an RDF file after a delete request
- ABORTING** Aborting the current retrieval or print request

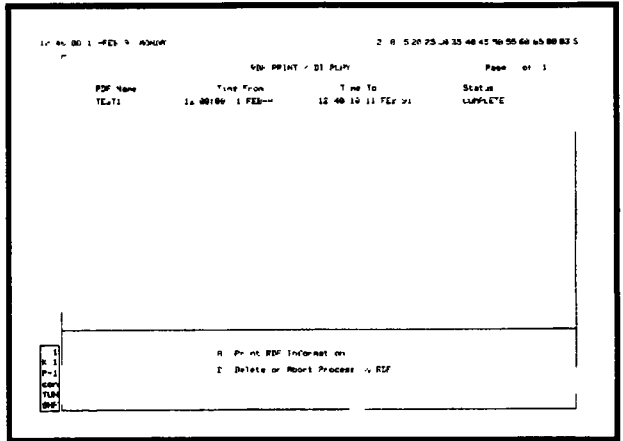


Figure 12-28 Print/Delete RDF Page

TP80204A


ABORT/DEL Aborting the current retrieval or print request, and deleting an RDF file

The options at the bottom of the page provide the ability to print or delete RDF file data, and abort any retrieval or print processing currently in progress. These options are explained in the following paragraphs

Printing RDF Tag Data

The operator prints data contained in RDF files, and selects the type of data to print through the *Print RDF Information* option (see Figure 12-28) To print tag data contained in an RDF file.

1. Press **A** to select the option **A Select RDF Name to Print** prompt and selector letters adjacent to the *RDF Name* column appear at the page.
2. At this point, press **NEXT PAGE** or **PREV PAGE** to call the next or previous page of up to 13 additional RDF file names. This is only required if the desired RDF file to print is not currently at the page.
3. Select an RDF file to print by selecting the letter to the left of the file name A menu with data type options appears at the bottom of the page (see Figure 12-29) The menu provides the

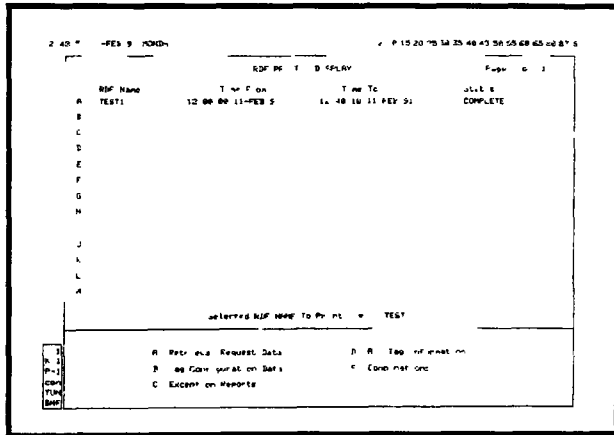

TP50205A

Figure 12 29 Print RDF Tag Data Options Page

capability to select the type of information to retrieve and print from the selected RDF file Press **ESC** to deselect the RDF file and make another selection

4. Select one of the options from the menu The console begins processing a print request immediately after selection Press:

- A** To print only retrieval request data
- B** To print only configuration data
- C** To print only exception reported data
- D** To print all data in the RDF file
- E** To allow selecting a combination of the three data types This option requires additional input before the console begins processing the print request

Retrieval Request Data (Y/N) ___
 Tag Configuration Data (Y/N) ___
 Exception Reports (Y/N) ___

After selecting, choose whether the console is to gather and print a certain type of data by entering either **YES** or **NO** in the input field associated with each data type. Press **ENTER** to initiate the request

NOTE A print operation initiated here can take a variable amount of time depending on the amount of data to format and system load. The tag historian print function runs as a background program. This allows exiting the page to perform other operations while the console processes a print request once a print is queued.

5 Press **[ESC]** to exit the page.

The status of a print request for an RDF file can be seen at the Status column for that RDF file. The column shows *FORMATTING* while processing a print request.

Figure 12-30 is an example of an RDF file printout. The example shows the data that prints when selecting the *All Tag Information* option.

RDF: TAGBAT		OCT 18,1992 07:27:00 - OCT 26,1992 10:26:37		Page 1		
JOB SUMMARY						
RETRIEVAL OPERATION STARTED AT DEC 00 1992 10:11:05						
COMPLETED AT DEC 00,1992 10:14:30						
NO ERRORS ENCOUNTERED						
SEARCH CRITERIA						
DATA REQUESTED FROM : JUL 27,1992 18:00:00 TO NOV 01,1992 00:00:00						
RETRIEVAL CRITERIA : ALARM GROUP 1 TO 5						
TAG CONFIGURATION DATA						
RCM-00215	Tag Index - 215	Tag Descriptor - Loop PCU Red Block	SOE1 ISN STANDARD REPORT			
	Tag Type - RCM		2 5 9 200			
	Alarm Group - 5					
	Alarm Comment - ZERO	One Status - ZERO				
	Zero Status - ZERO					
	Conf garab on Time - OCT 14,1992 12:02:16					
RCM 00216	Tag Index - 216	Tag Descriptor - Loop PCU Red Block	SOE7 ISN SUMMARY REPORT			
	Tag Type - RCM		2 5 9 201			
	Alarm Group - 4					
	Alarm Comment - ZERO	One Status - ZERO				
	Zero Status - ZERO					
	Conf garab on Time - OCT 14,1992 12:02:16					
RCM 00217	Tag Index - 217	Tag Descriptor - Loop PCU Red Block	SOE3 ISN PRE-FAULT REPORT			
	Tag Type - RCM		2 5 9 202			
	Alarm Group - 5					
	Alarm Comment - ZERO	One Status - ZERO				
	Zero Status - ZERO					
	Conf garab on Time - OCT 14,1992 12:02:17					
RCM 00218	Tag Index - 218	Tag Descriptor - Loop PCU Red Block	SOE4 ISN POST FAULT REPORT			
	Tag Type - RCM		2 5 9 203			
	Alarm Group - 5					
	Alarm Comment - ZERO	One Status - ZERO				
	Zero Status - ZERO					
	Conf garab on Time - OCT 14,1992 12:02:17					
EXCEPTION REPORT DATA						
TAG NAME	TAG TYPE	TAG VAL/STATE	ENS UNIT	QUALITY	ALARM STATE	TIME
RCM-00215	RCM	ZER0		0	0	OCT 18,1992 07:27:00
	RCM	ZER0		0	0	OCT 18,1992 08:13:07
	RCM	ZER0		0	0	OCT 18,1992 09:18:19
	RCM	ZER0		0	0	OCT 18,1992 10:12:00
	RCM	ZER0		0	0	OCT 18,1992 11:00:24
	RCM	ZER0		0	0	OCT 18,1992 12:03:00
	RCM	ZER0		0	0	OCT 18,1992 12:07:46
	RCM	ZER0		0	0	OCT 18,1992 13:02:13
	RCM	ZER0		0	0	OCT 18,1992 14:07:19
	RCM	ZER0		0	0	OCT 18,1992 10:42:00

TPSO2068

Figure 12-30. Example Retrieved Tag Data Printout

Delete or Abort RDF Tag Data Processing

The operator deletes and aborts processing of RDF tag data files through the *Delete or Abort Processing RDF* option (see Figure 12-28) To delete an RDF file, or to abort processing of an RDF file

1 Press **[B]** to select the option. A *Select RDF to Delete/Abort* prompt and selector letters adjacent to the *RDF Name* column appear at the page.

2 At this point, press **[NEXT PAGE]** or **[PREV PAGE]** to call the next or previous page of up to 13 additional RDF file names This is only required if the desired RDF file to delete or abort is not currently at the page

3 Select an RDF file to print by selecting the letter to the left of the file name One of two things happens Either an *Are You Sure?* prompt or a new menu appears at the bottom of the page depending on the current processing status for the selected RDF file Press **[ESC]** to deselect the RDF file and make another selection

If the RDF file status is *COMPLETE* or *BUILDING*, the *Are You Sure?* prompt appears

If the RDF file status is *FORMATTING*, the following options appear.

A Abort Processing and Delete RDF Stops processing and deletes the RDF file

B Abort Processing Stops processing only

Select either *A* or *B* The *Are You Sure?* confirmation prompt appears

4 Answer **YES** in response to the *Are You Sure?* to continue with the request or **NO** to cancel, then press **[ENTER]**

The status of the RDF file changes to *DELETING* after confirming a delete request. It changes to *ABORT/DEL* after confirming an abort processing and delete RDF request It changes to *ABORTING* after an abort request

5 Press **[ESC]** to exit the page

On the next call up of the *Print/Delete RDF* page, the status should return to *COMPLETE* or a deleted RDF file should not appear as an entry in the directory listing

SECTION 13 - UTILITIES

INTRODUCTION

This section explains the utilities available through the operator interface station (OIS). The utilities relate to both process operations and OIS operations. This section explains and provides operating procedures

SET DATE AND TIME

The *Set Date and Time* option provides system and local time maintenance capabilities. It performs two functions:

1. Sets the local displayed time of the console. This determines the date and time that is associated with data collected by OIS functions such as logging and archiving.
2. Establishes a system time to synchronize all nodes on the loop.

PCU modules use a system date and time for functions that provide a time stamp along with collected data, an example being trend data. System date and time refers to the date and time that is set for the communication highway and available to all nodes on the loop. Refer to *OIS TRENDING* in the *INFI 90 System and OIS Overview* section for further explanation of time-stamp as it applies to trending.

NOTE In the following discussion, any reference to time also infers date and time.

For the INFI-NET system, the system time is normally set to Greenwich Mean Time (GMT). It can, however, be set to any time that is common to your system. In either case, the console requires some type of absolute time to properly initialize its time synchronizing variables and offset. By using GMT as an absolute time and setting the system time to GMT for this and all other systems, for example, it becomes possible to transfer data that is time-stamped between different sites even if the sites are in different time zones. The time of occurrence in local time can be derived from the system time associated with a piece of data. The console automatically does this by calculating an offset between the system time and local time then adding the difference to the time-stamp of the data.

The Plant Loop system does not use an absolute time. The system time on the loop is always the local time, or the time entered as the local time. A console that operates on Plant Loop system, however, still needs an absolute time that it uses internally.

Only one node on the communication highway controls time synchronization for all nodes connected to the loop. That node is the time-sync master. Specifically, the communications interface unit of a single node provides a time sync message that synchronizes the communication modules of other nodes. For the INFI-NET system, the message establishes a common system time and local time on the loop. The time sync message establishes a local time on the loop for the Plant Loop system to be used as the system time.

The console can become the time-sync master on a loop. Normally, the console becomes the master when the *Set Time and Date* function is used. If there is more than one console in the system, the consoles perform an arbitration process to establish a time-sync master. Since some external clocks are considered more accurate than others, this allows the console with the most accurate external clock to assume the responsibility of maintaining system time. An external clock, for example, is a satellite clock or a battery-backed clock.

For the INFI-NET system, it is suggested that only one console be used to set date and time, preferably the console with the most accurate external clock. After initially setting the system time at this console, the time then only needs to be accepted at the remaining consoles on the loop. The console provides an option to accept the system time and local time on the loop without making any changes to them. Using this method prevents the consoles from having to perform the arbitration process, which begins each time the system time (GMT) or local time (wall-clock) is set at a console.

Since the local time is the system time for the Plant Loop system, the local time must be set at each console individually to establish time synchronization. After this initial setting to establish time synchronization, however, the time can be adjusted for all consoles through a single console. Control of time synchronization transfers as the time is set at each console. The consoles perform the arbitration process to return control to the console with the most accurate external clock. In this case, it may be better to set the time for the console with the most accurate external clock last.

The first page of the INFI-NET diagnostics function identifies the current time-sync master for the loop; refer to *INFI-NET DIAGNOSTICS* in the *INFI 90 and OIS Diagnostics* section for further explanation.

Once the time-sync master has been established either through setting time or through arbitration, a console maintains the system time through its communication interface unit. The interface unit sends a set time command on the loop every two minutes to

maintain the system time. To ensure that the interface has an accurate time, the console that is the time-sync master initiates a set time command to its communication interface unit at least once every half hour. If the system does not use a satellite clock, the console sets the time for its battery-backed clock to GMT (or the common time established for the system if not using GMT as the absolute time).

For the INFI-NET system, a time-sync message contains both the system time and the local time. When a console that is not the time-sync master accepts a time-sync message, it synchronizes its local displayed time to the local time received in the message. If the console is not equipped with a satellite clock receiver, it sets its battery-backed clock to the system time received.

For the Plant Loop system, a time-sync message contains only the system time, which is also the local time. When a console that is not the time-sync master accepts a time-sync message, it calculates the time it sets in its battery-backed clock as an offset from the local time received in the message. The console does this because it still needs some type of absolute time to properly initialize its time synchronizing variables and offsets.

The operator uses the *Set Date and Time* function to set both the system time and local time. Once done, the console can calculate its offsets to properly display any times associated with collected data. The console either adds or subtracts the calculated offset for the local time to the system time associated with a piece of data. It does this to present the time in displays or printed reports referenced to local time.

The operator accesses the time maintenance functions through the *Set Date and Time* page (see Figure 13-1). To call this display, first press GENL FCTNS MENU, then select the following menu items in the sequence shown.

B OIS Utilities → *B Set Date And Time*

The set date and time page provides several time maintenance options. Which option to use depends on the current time-sync status of the system. Options *A, B, C, E, H, I* and *J* adjust the local time (wall-clock). Options *E, F, G, H, I* and *J* change the system time (absolute time). The function of option *D* depends on the type of communication highway on which the console operates.

For the INFI-NET system, option *D* accepts the current local time and system time of the loop at this console. This allows initializing the local time and system time at the console without affecting the current local time and system time already established on the loop. Option *D* allows entering a start and end date and time

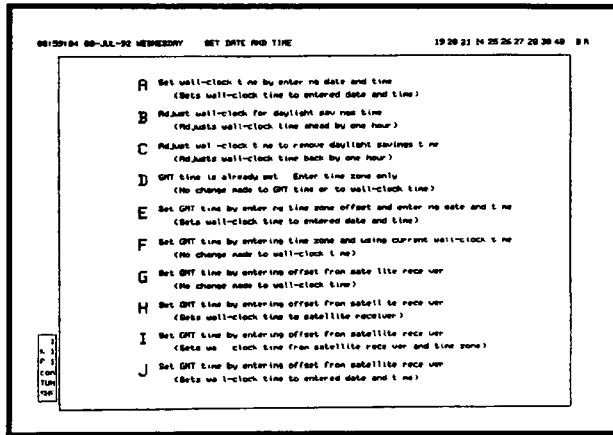


Figure 13-1 Set Date and Time Display

TPS0770A

of daylight savings time for Plant Loop system. The console requires this information to properly calculate an offset from the local time to set the time for its battery backed clock if using daylight savings times.

To set the date and time.

NOTE Caution should be taken when using this function to set or change the system time for the loop. If the date or time is radically changed, existing trend data will be reinitialized, causing trend data loss. A change could also create gaps in collected trend data. Normal time changes such as going to daylight savings time do not cause any loss of trend data.

1 Choose the appropriate time maintenance option for your requirements. The page that appears next depends on the option chosen.

2 Make any required entries. Refer to *Setting the Time for INFI-NET System* or *Setting the Time for Plant Loop System* in this section for information about the various *Set Date and Time* options. Refer to the appropriate paragraph for the option chosen for a description of the entries required.

When entering an hour, minute and second offset, indicate whether the offset is a positive or negative offset value in the first position of the *HOUR* entry, for example, -05 or +01.

3 Press **ENTER** to initiate the option and time change.

4 Press **ESC** to exit.

The time maintenance options work slightly different for INFI-NET system than Plant Loop system

Setting the Time for INFI-NET System

When setting the time for INFI-NET system, it is important to remember that the time-sync message sent on the loop contains both the system time and the local time. The system time should be set to some common time such as GMT. This common time does not have to be Greenwich Mean Time, although it is suggested. The common time can be, for example, the time at some main site to which all remote sites are to synchronize. In any case, this common time must be propagated to all other systems that are to share data. The local time, in most cases, should be the local time according to the time zone in which the system operates.

NOTE Caution should be taken when initially setting system time (GMT). Trend data collection for an OIS console with software release C n or less and a management command system (MCS) console with software release Q n or less operating on the same loop as an OIS console with software release E 1 or greater and an MCS console with software release R 1 or greater can be affected by this change. On each C n or less console or Q n or less console, archive any trend data already collected before setting the system time to prevent loss of data. After setting the time, delete the *TRNDHRD TR* file from the [DATA USN14] directory, then reset the console.

TIME MAINTENANCE OPTIONS

NOTES

- 1 In the *Set Date and Time* options, GMT can also be interpreted as absolute time if Greenwich Mean Time is not being used.
- 2 When entering an hour, minute and second offset, indicate whether the offset is a positive or negative offset value in the first position of the *HOUR* entry, for example -05 or +01.

- | | |
|----------|---|
| Option A | <i>A Set wall-clock time by entering date and time</i> - allows setting or adjusting the local time at the consoles. This option updates the local time being sent to all other consoles on the loop without affecting the system time. This function directly sets the local time for the consoles to the date and time entered as the <i>Wall-Clock Date and Time</i> . |
| Option B | <i>B Adjust wall-clock for daylight savings time</i> - advances the local time at the consoles by one hour. |
| Option C | <i>C Adjust wall-clock time to remove daylight savings time</i> - retards the local time at the consoles by one hour. |
| Option D | <i>D GMT time is already set. Enter time zone only</i> - allows entering the time zone offset from GMT in hours, minutes and seconds. The entry is strictly for reference and simply allows entering the value so it does not have to be calculated or looked up repeatedly. The importance of the option is that it initializes time. |

synchronization for a console without affecting the system time or local time previously set

- Option E *E Set GMT time by entering time zone offset and entering date and time sets the system time to GMT and sets the local time. This function directly sets the local time for the consoles to the date and time entered as the Wall-Clock Date and Time. It sets the system time based on a time zone offset from the current local time*

entered local time + Time Zone Offset from Greenwich Mean Time
system time

The *Time Zone Offset from Greenwich Mean Time* entry determines the amount of offset.

The *Daylight Savings Time Effective* field identifies whether the local time being entered is or is not a daylight savings time to allow the console to adjust system time accordingly. Enter YES if the time is a daylight savings time, NO if not

- Option F *F Set GMT time by entering time zone and using current wall-clock time - sets the system time to GMT without affecting the current local time. Option A must be used to set the local time first. This sets the system time based on a time zone offset from the current local time*

local time set with option A + Time Zone Offset from Greenwich Mean
Time system time

The *Time Zone Offset from Greenwich Mean Time* entry determines the amount of offset

The *Daylight Savings Time Effective* field identifies whether the current local time is or is not a daylight savings time to allow the console to adjust the system time accordingly. Enter YES if the time is a daylight savings time, NO if not

- Option G *G Set GMT time by entering offset from satellite receiver (No change made to wall-clock time) - sets the system time to GMT without affecting the local time. This sets the system time based on a time zone offset from the current local time, and any calculated difference in time between the satellite receiver time and GMT*

(local time set with option A + Time Zone Offset from Greenwich Mean
Time) + (Difference between the Satellite Receiver and GMT) system
time

The *Time Zone Offset from Greenwich Mean Time* entry determines the amount of offset from the current time zone time. The *Difference between the Satellite Receiver and GMT* entry allows adjusting for any difference in time between GMT and the satellite time

The *Satellite Receiver Date and Time* shows the time being reported by the satellite receiver for reference

Option H *H Set GMT time by entering offset from satellite receiver (Sets wall-clock time to satellite receiver) - sets the system time to GMT and sets the local time. This sets the local time for the consoles to the time being reported by the satellite receiver.*

satellite receiver time = local time

This sets the system time based on a time zone offset from the current local time, and any calculated difference in time between the satellite receiver time and GMT.

(local time + *Time Zone Offset from Greenwich Mean Time*) + (satellite receiver time + *Difference between the Satellite Receiver and GMT*) - system time

The *Time Zone Offset from Greenwich Mean Time* entry determines the amount of offset from the current time zone time. The *Difference between the Satellite Receiver and GMT* fields allow adjusting for any difference in time between GMT and the satellite time.

The *Satellite Receiver Date and Time* shows the time being reported by the satellite receiver for reference

Option I *I Set GMT time by entering offset from satellite receiver (Sets wall-clock time from satellite receiver and time zone) - sets the system time to GMT and sets the local time*

This option sets the local time for the consoles based on a time zone offset from the satellite receiver, and any calculated difference in time between the satellite receiver time and GMT. The final calculated local time is derived directly from the satellite time.

(satellite receiver time + *Difference between the Satellite Receiver and GMT*) + *Time Zone Offset from Greenwich Mean Time* - local time

The *Time Zone Offset from Greenwich Mean Time* entry determines the amount of offset from the current time zone time.

This option sets the system time based on any calculated difference in time between the satellite receiver time and GMT.

satellite receiver time + *Difference between the Satellite Receiver and GMT* = system time

The *Difference between the Satellite Receiver and GMT* fields allow adjusting for any difference in time between GMT and the satellite time.

The *Satellite Receiver Date and Time* shows the time being reported by the satellite receiver for reference

The *Daylight Savings Time Effective* field identifies whether the local time is to be a daylight savings time or not to allow the console to adjust accordingly. Enter YES if the local time is to be a daylight savings time, NO if not

Option J *J Set GMT time by entering offset from satellite receiver (Sets wall clock time to entered date and time) - sets the system time to GMT and sets the local time. This function directly sets the local time for the consoles to the date and time entered as the Wall-Clock Date and Time*

entered time - local time

This sets the system time based on a time zone offset from the current local time, and any calculated difference in time between the satellite receiver time and GMT

(local time + *Time Zone Offset from Greenwich Mean Time*) + (satellite receiver time + *Difference between the Satellite Receiver and GMT*)
system time

The *Time Zone Offset from Greenwich Mean Time* entry determines the amount of offset from the current time zone time. The *Difference between the Satellite Receiver and GMT* fields allow adjusting for any difference in time between GMT and the satellite time

The *Satellite Receiver Date and Time* shows the time being reported by the satellite receiver for reference

DATE AND TIME REQUIREMENTS FOR INFI-NET SYSTEM

For a system having only one console operating on INFI-NET system, set GMT and local time (wall clock) at the console. This establishes time synchronization for the loop.

For a system having more than one console operating on INFI-NET system, setting GMT (or some absolute time) at only one of the consoles is required to set the system time for the entire loop. It is suggested that a single console be designated for setting the system time. Even though the system time has been set for the loop, the operator must still accept the loop time at each of the other consoles. The console requires this to establish the relationship between its local time and system time, and to properly initialize its time synchronizing variables and offsets. If this is not done, the message.

Greenwich Mean Time Must Be Initialized

appears as an operator request for action. The message can be cleared after using any one of options D through J. Refer to

OPERATOR ACTION REQUESTS in the *OIS Operational Information* section for procedures to process an action request.

One sequence for initially establishing time synchronization might be:

- 1 Set the initial system time (GMT or some type of absolute time) and the local time at one console.
2. Initialize time synchronization at all other consoles by choosing option *D*.

After initially establishing time synchronization, the local time can be adjusted at any time. Use the console with the most accurate external clock to make any time adjustments

Choose option *E, F, G, H, I* or *J* to initially set the system time for the loop. Options *E, H, I* and *J* also set the local time for the consoles. If using option *F* or *G*, the local time must first be set with option *A*. Choose the best option for your particular requirements

To initialize the time at all other consoles on the loop.

- 1 Select the *Set Date and Time* function after setting the initial time for the loop from any one console
- 2 Choose option *D* to initialize the time at other consoles without affecting the system time set previously

Any one of options *E* through *J* can also be used to initialize time-syncing, but these options either cause this console to become the time-sync master, or start the arbitration process to determine the time-sync master. After completing any one of these options, the *Greenwich Mean Time Must Be Initialized* message can be processed and removed from the operator action requests function

Choose option *A, B* or *C* to adjust the local time only for this and all other consoles on the loop.

Setting the Time for Plant Loop System

When setting the time for Plant Loop system, it is important to remember that the time-sync message sent on the loop contains only the system time, which in this case is also the local time. A console still requires some type of absolute time such as GMT to properly initialize its time synchronizing variables and offsets. This absolute time is used internally by the console. The system time, in most cases, should be the local time according to the time zone in which the system operates

TIME MAINTENANCE OPTIONS
NOTES

1 In the *Set Date and Time* options *GMT* can be interpreted as the absolute time

2 When entering an hour minute and second offset indicate whether the offset is a positive or negative offset value in the first position of the *HOUR* entry for example *-05* or *+01*

Option A *A Set wall-clock time by entering date and time* - allows setting or adjusting the system time at the consoles This option updates the system time being sent to all other consoles on the loop without affecting the absolute time for the console This function directly sets the system time for the consoles to the date and time entered as the *Wall-Clock Date and Time*

Option B *B Adjust wall-clock for daylight savings time* advances the system time at the consoles by one hour

Option C *C Adjust wall-clock time to remove daylight savings time* - retards the system time at the consoles by one hour

Option D *D Configure beginning and end of daylight-savings time* identifies the dates and times for daylight savings time to the console The console requires this to properly set its battery-backed clock The *Daylight-savings time used* field determines whether or not daylight savings time is being used for the system

Set the field to **YES** if the system uses daylight savings time Enter a starting day, month and year, and hour, minute and second for daylight savings time Enter the same information for the end of daylight savings time. The entry in the *YEAR* field must match for both the start and end date If not, the console does not accept the entries This must be done once a year

The field defaults to **NO**, and if it is not changed to **YES**, no further action is required now or at any time in the future

Option E *E Set GMT time by entering time zone offset and entering date and time* sets the absolute time used by the console to GMT and sets the system time on the loop. This function directly sets the system time for the consoles to the date and time entered as the *Wall Clock Date and Time* It sets the absolute time based on a time zone offset from the current system time

entered system time + *Time Zone Offset from Greenwich Mean Time*
absolute time

The *Time Zone Offset from Greenwich Mean Time* entry determines the amount of offset.

The *Daylight Savings Time Effective* field identifies whether the system time being entered is or is not a daylight savings time to

allow the console to adjust absolute time accordingly. Enter YES if the time is a daylight savings time, NO if not

- Option F** *F Set GMT time by entering time zone and using current wall-clock time* - sets the absolute time used by the console without affecting the current system time on the loop. Option A must be used to set the system time first. This sets the absolute time based on a time zone offset from the current system time

system time set with option A + *Time Zone Offset from Greenwich Mean Time* = absolute time

The *Time Zone Offset from Greenwich Mean Time* entry determines the amount of offset

The *Daylight Savings Time Effective* field identifies whether the current system time is or is not a daylight savings time to allow the console to adjust the absolute time accordingly. Enter YES if the time is a daylight savings time, NO if not.

- Option G** *G Set GMT time by entering offset from satellite receiver (No change made to wall-clock time)* - sets the absolute time used by the console to GMT without affecting the current system time on the loop. This sets the absolute time based on a time zone offset from the current system time, and any calculated difference in time between the satellite receiver time and GMT

(system time set with option A + *Time Zone Offset from Greenwich Mean Time*) + (*Difference between the Satellite Receiver and GMT*) - absolute time

The *Time Zone Offset from Greenwich Mean Time* entry determines the amount of offset from the current time zone time. The *Difference between the Satellite Receiver and GMT* entry allows adjusting for any difference in time between GMT and the satellite time

The *Satellite Receiver Date and Time* shows the time being reported by the satellite receiver for reference

- Option H** *H Set GMT time by entering offset from satellite receiver (Sets wall-clock time to satellite receiver)* - sets the absolute time used by the console to GMT and sets the system time on the loop. This sets the system time for the consoles to the time being reported by the satellite receiver

satellite receiver time - system time

This sets the absolute time based on a time zone offset from the current system time, and any calculated difference in time between the satellite receiver time and GMT

(system time + *Time Zone Offset from Greenwich Mean Time*) + (satellite receiver time + *Difference between the Satellite Receiver and GMT*) - absolute time

The *Time Zone Offset from Greenwich Mean Time* entry determines the amount of offset from the current time zone time. The *Difference between the Satellite Receiver and GMT* fields allow adjusting for any difference in time between GMT and the satellite time

The *Satellite Receiver Date and Time* shows the time being reported by the satellite receiver for reference

Option I *I Set GMT time by entering offset from satellite receiver (Sets wall-clock time from satellite receiver and time zone) - sets the absolute time used by the console to GMT and sets the system time on the loop*

This option sets the system time for the consoles based on a time zone offset from the satellite receiver, and any calculated difference in time between the satellite receiver time and GMT. The final calculated system time is derived directly from the satellite time

$(\text{satellite receiver time} + \text{Difference between the Satellite Receiver and GMT}) + \text{Time Zone Offset from Greenwich Mean Time}$ system time

The *Time Zone Offset from Greenwich Mean Time* entry determines the amount of offset from the current time zone time

This option sets the absolute time based on any calculated difference in time between the satellite receiver time and GMT

$\text{satellite receiver time} + \text{Difference between the Satellite Receiver and GMT} - \text{absolute time}$

The *Difference between the Satellite Receiver and GMT* fields allow adjusting for any difference in time between GMT and the satellite time

The *Satellite Receiver Date and Time* shows the time being reported by the satellite receiver for reference

The *Daylight Savings Time Effective* field identifies whether the system time is to be a daylight savings time or not to allow the console to adjust accordingly. Enter YES if the system time is to be a daylight savings time, NO if not

Option J *J Set GMT time by entering offset from satellite receiver (Sets wall clock time to entered date and time) sets the absolute time used by the console to GMT and sets the system time on the loop. This function directly sets the system time for the consoles to the date and time entered as the Wall-Clock Date and Time*

$\text{entered time} - \text{system time}$

This sets the absolute time based on a time zone offset from the current system time, and any calculated difference in time between the satellite receiver time and GMT

(system time + *Time Zone Offset from Greenwich Mean Time*) +
 (satellite receiver time + *Difference between the Satellite Receiver and
 GMT*) = absolute time

The *Time Zone Offset from Greenwich Mean Time* entry determines the amount of offset from the current time zone time. The *Difference between the Satellite Receiver and GMT* fields allow adjusting for any difference in time between GMT and the satellite time.

The *Satellite Receiver Date and Time* shows the time being reported by the satellite receiver for reference.

DATE AND TIME REQUIREMENTS FOR PLANT LOOP SYSTEM

For a system having only one console operating on Plant Loop system, set GMT and local time (wall-clock) at the console. Setting the local time establishes a system time for time synchronization of the loop. Setting GMT initializes internal time synchronization for the console.

For a system having more than one console operating on Plant Loop system, GMT must be set at each one of the consoles individually. A console requires this to properly initialize its time synchronizing variables and offsets. If this is not done, the message

Greenwich Mean Time Must Be Initialized

appears as an operator request for action at each console for which the time has not been set. The message can be cleared after using any one of options E through J. Refer to **OPERATOR ACTION REQUESTS** in the *OIS Operational Information* section for procedures to process an action request.

The sequence for setting the time at each console is

1. Set the local time and GMT at the console
2. Enter the start and ending date and time for daylight savings time

After initially setting the time at a console, the local time can be adjusted at any time. Use the console with the most accurate external clock to make any time adjustments.

Even though the time-sync message sent on the Plant Loop system does not contain an absolute time, the console still internally requires an absolute time to calculate any offsets.

Choose option E, F, G, H, I or J to initially set the local time and establish an absolute time (as GMT or some other common time) for the console. If using option F or G, the local time must first be set with option A. Choose the best option for your particular requirements.

UTILITIES

Using any one of these options causes this console to become the time-sync master, or starts the arbitration process to determine the time-sync master. After completing any one of these options, the *Greenwich Mean Time Must Be Initialized* message can be processed and removed from the operator action requests function.

Choose option *D* to identify the dates and times for daylight savings time. The console requires this to properly set its battery-backed clock. This must be done once a year.

Choose option *A*, *B* or *C* to adjust the local time only for this and all other consoles on the loop.

TAG SUMMARIES

The console provides the capability to both display and print summaries of process information. The information in each entry of a summary reflects values exception reported for a particular process point. Specifically, the information is the current analog value or digital state of a process variable being referenced by a defined tag. The value or state displays or prints with additional information including:

<i>TAG INDEX</i>	Tag database index number
<i>TAG NAME</i>	Name of the tag as defined in the tag database
<i>TAG DESCRIPTION</i>	Description for the tag as defined in the tag database
<i>TAG TYPE</i>	Type of tag
<i>LOOP-NOD-MOD-BLK</i>	Hardware loop, node (PCU) and module address, and software block address of the function block in a PCU module the tag references
<i>ALM/QUAL</i>	All normal alarm status and quality indications in a five-character alarm status/quality/group field
<i>MODE</i>	Identifies the input source selection for a DANG or DADIG tag. Refer to <i>Data Acquisition Analog Element</i> and <i>Data Acquisition Digital Element</i> in the <i>Data Acquisition</i> section for an explanation of the indications presented
<i>PRIORITY</i>	Descriptor that identifies the priority level of an alarm condition. Refer to <i>Alarm Priority Descriptors</i> in the <i>Alarm Processing</i> section for further explanation.

STATUS	Provides the following indications for DANG, DADIG and TEXTSTR tags V - variable alarming enabled for DANG tag ^ - quality override condition for DANG, DADIG or TEXTSTR tag. @ - constrained value for DANG tag. L - alarm state latch enabled for DADIG tag N - no report condition for a DANG or DADIG tag
VALUE	Current value or state For all options except <i>A General Tags</i> , the values are snapshots.
ENGUT	Unit of measurement associated with an analog value
LOW LMT	Zero or minimum limit for an analog value.
HIGH LMT	Span or maximum limit for an analog value.

NOTE The engineering unit high limit and low limit fields remain blank for digital variables

TRNC	Indicates the presence or absence of remote truncation for a text string Remote truncation is done by a PCU module or the communications interface of the console. <i>TRNC</i> appears if remote truncation has been done for the displayed text string
-------------	---

NOTE The display allows for a 37-character text string The console indicates local truncation of a text string with an ellipsis () at the end of the text string

The operator both views and prints tag summaries through the *Tag Summaries* menu page (see Figure 13-2) To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown.

B OIS Utilities → *C Tag Summaries*

The tag summaries menu has choices for on-screen presentation (options *A* through *J*) or printer output (options *M* through *U*) of tag summaries. It also has options for specifying a start and end tag range, and tag name search pattern The summaries can be for all tags or only those tags in a specific condition identified by the menu items.

```

16120136 00-JAN-92 MONDAY          TAG SUMMARIES          3 1
-----
Tag: ( 311) 000-00011          to ( 000 )
Search Pattern of             *
-----
CRT PRT FUNCTION
A  M  General Tags
B  N  Acknowledged Tags
C  O  Unacknowledged Tags
D  P  Alarms
E  Q  Tags by Quality
F  R  Red Tags
G  S  Uncleared Tags
H  T  Suppressed Tags
I  U  Tags by Attribute
X          Enter Summary Start Tag
Y          Enter Summary End Tag
Z          Enter Search Pattern
-----

```

1
P
1
100
700
500

TPS0105B

Figure 13.2. Tag Summaries Menu

The fields at the top of the page indicate the current tag range and search pattern. The operator sets the tag range through options X and Y. The search pattern is set through option Z. Initially, the console defaults to the entire tag range and a search pattern of *, which is a wild card character that specifies all tag names.

The steps required to display or print a summary include:

- 1 Set tag range
- 2 Set search pattern
- 3 Select a screen (CRT) or print (PRT) option for presenting the summary. Refer to **Summary Options** in this section for a description of the available options and the summaries they produce.

Set Range and Search Pattern

NOTE: All CRT or PRT options reference the range and search pattern when computing summary data.

The tag range allows limiting the displayed or printed listing to only tags within a certain tag index range. This procedure is only necessary if the current range shown at the top of the page is not the desired range. To specify a range:

- 1 Select X Enter Summary Start Tag, a Tag Name or Index input prompt appears

2 Key in either the tag name or index number of the first tag that is to appear in the summary list, then press **[ENTER]**. The starting index number and associated tag name appear in the first range field.

3 Select *Y Enter Summary End Tag a Tag Name or Index* input prompt appears

4 Key in either the tag name or index number of the last tag that is to appear in the summary list, then press **[ENTER]**. The console does not allow entering an index number less than the starting number. The ending index number and its associated tag name appear in the second range field after pressing **[ENTER]**.

A search pattern allows limiting the displayed or printed list even further. The console uses the entered pattern to search through the tag names within the specified range of tags. Only tags having names that match the search pattern appear in the list.

Wild card characters can be used when entering a search pattern. The asterisk (*) represents multiple characters, the question mark (?) a single character. For example, ABC* limits the list to only those tags with tag names having ABC as their first three characters. Any combination of * and ? can be used. The console supports multiple occurrences of ?. Multiple occurrences of * are treated as ? after the first *

To enter the search pattern.

1. Select *Z Enter Search Pattern;* a *Search Pattern* input prompt appears

2. Key in a search pattern from 1 to 14 characters, then press **[ENTER]**. The *Search Pattern of* field at the top of the page updates to the entered pattern. The console defaults to * for an unrestricted search

Summary Options

The tag summaries page provides several options when creating a process summary listing. The options determine which tags based on their current operating condition appear in the summary list. All reference the range and search pattern entries when creating the summary. The following options are available through the tag summaries function.

General Tags The *General Tags* option does not restrict the summary to any specific operating state. Using this option, a displayed summary updates to show current process values while at the screen. A printout contains snapshot values.

Acknowledged Tags The *Acknowledged Tags* summary contains tags that are currently in an alarm or return to normal condition and have been

acknowledged by the operator. An entry in the *ALM/QUAL* column denotes a tag in an alarm condition where no entry in this column identifies a return to normal

Unacknowledged Tags The *Unacknowledged Tags* summary contains tags that are currently in an alarm or return to normal condition but have not been acknowledged by the operator. An entry in the *ALM/QUAL* column denotes a tag in an alarm condition where no entry in this column identifies a return to normal. The alarm status/quality/group field in the *ALM/QUAL* column flashes for tags in alarm

Alarms The *Alarms* summary contains a list of all tags in an alarm condition whether acknowledged or unacknowledged. Return to normals do not appear in this type of summary

Tags by Quality The *Tags by Quality* summary contains a list of all tags in a certain quality state. A submenu of options that allows selecting the type of quality to create a summary for appears after choosing this option. The submenu options include

A Inhibited Tags the summary lists all tags that have alarm inhibiting implemented either manually or automatically. An inhibit indication (i) appears in the quality position of the *ALM/QUAL* column. Manual inhibiting is done through the operating parameters or alarm group inhibit functions

B Off Scan Tags - the summary lists all tags that are currently disestablished or off scan on the loop. A tag is set to an off scan condition through the operating parameters function. An off scan indication (x) appears in the quality position of the *ALM/QUAL* column

C Bad Quality Tags - the summary lists all tags being exception reported with bad quality. All fields for these tags contain a defined bad quality string. An asterisk (*) in the quality position of the *ALM/QUAL* column, and in the alarm status position if the console is set to process bad quality as an alarm, also identifies a bad quality condition.

D Substituted Tags the summary lists all tags that currently have substituted values. These tags have been taken off scan and forced to a certain value or state. Substitutions are made through the operating parameters function. A substitute indication (s) appears in the quality position of the *ALM/QUAL* column

E Suspect Tags - the summary lists all tags being exception reported with suspect quality. A question mark (?) in the quality position of the *ALM/QUAL* column identifies a suspect condition

Red Tags The *Red Tags* summary contains a list of all tags that are currently red tagged. Red tagging is done through module configuration functions

- Uncleared Tags** The *Uncleared Tags* option does not function for this console.
- Suppressed Tags** The *Suppressed Tags* summary contains a list of all tags having alarm suppression enabled. Alarm suppression can be enabled or disabled for a tag through the operating parameters function.
- Tags by Attribute** The *Tags by Attribute* summary contains a list of all tags in a particular alarm group, having a certain tag type, or having a certain address. Additional options available after selecting this option determine the type of attribute. The options include.
 - A Tags by Alarm Group* - enter an alarm group number for which to compile a summary list. Valid entry is 1 to 99 or S
 - B Tags by Type* - enter a tag type for which to compile a summary list. Any valid tag type can be entered
 - C Tags by Address* - enter the loop, PCU and module address for which to compile a summary list.

Selecting an Option

Select any of the tag summary options from the tag summary menu (see Figure 13-2) to initiate a display or print of a tag summary. As soon as an option is selected, the console either displays the desired summary, or begins processing the print request.

Options *A* through *I* display a summary at the screen. Up to 24 tags can appear at a single page. Press **NEXT PAGE** or **PREV PAGE** to view additional summary pages.

NOTE All options except *A General Tags* are snapshots.

Press **ESC** at any time to exit a summary page.

The displayed summaries present all normal alarm indications. Refer to the **Alarm Processing** section for a description of these indications. Alarm acknowledgment **cannot** be done through these summary pages. See Figure 13-3 for an example of a displayed summary page.

Options *M* through *U* initiate a printout of a tag summary. The message *Processing page n* appears while the console creates the requested, printed summary. If **ESC** is pressed while the processing message displays, the console terminates the print request.

A printout occurs at the printer assigned to the keyboard. Look at the keyboard status block to determine which printer. A maximum of 60 tags appear at a single printed page. Each page contains the same information as the displayed version.

Each printed summary contains snapshot values or states. A time added to the page shows the time at which the summary page was created. The summary title and page number also appear at

THE INDEX	THE NAME	THE DESCRIPTION	THE TYPE	LOOP	NOB	NOB-BLK
	PLC/PLM	PROG	PROG	PROG	PROG	PROG
ED7	APR-00217	FORWARD REV LIM.	APVALD	1	-206	-30 - 48
ED8	APR-00218	FORWARD SWATHN	APVALD	1	-206	-30 - 48
	14.28	DATE	0.148			
ED9	APR-00219	FORWARD CYCLE TIME	APVALD	1	-206	-20 - 53
	14.28	DATE	0.148			
ED0	APR-00220	FORWARD INDEWLIM CLANT	APVALD	1	-206	-20 - 54
ED1	APR-00221	FORWARD CPU UTILIZATION	APVALD	1	-206	-20 - 55
	14.28	DATE	0.148			
ED2	APR-00222	FORWARD CURRENT CYCLE TIME	APVALD	1	-206	-20 - 56
	14.28	DATE	0.148			
ED3	APR-00223	FORWARD PREV CYCLE TIME	APVALD	1	-206	-20 - 57
	14.28	DATE	0.148			
ED4	APR-00224	FORWARD VIEW	APVALD	1	-206	-20 - 53
	14.28	DATE	0.148			
ED5	APR-00225	FORWARD EDWPL GEN MVL	APVALD	1	-206	-20 - 171
	14.28	DATE	0.148			
ED6	APR-00226	FORWARD EDW MVE	APVALD	1	-206	-20 - 181
ED7	APR-00227	FORWARD EDW MVE	APVALD	1	-206	-20 - 183
ED8	APR-00228	FORWARD EDW MVE	APVALD	1	-206	-20 - 188
ED9	APR-00229	FORWARD EDW MVE	APVALD	1	-206	-20 - 188
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						
ED1						
ED2						
ED3						
ED4						
ED5						
ED6						
ED7						
ED8						
ED9						
ED0						

12:21:36	21-JAN-1993	*** GENERAL TAGS			***			PAGE	001
TAB INDEX	TAB NAME	TAB DESCRIPTION	PRIORITY	STATUS	VALUE	TAB TYPE	LOOP-MOD-MOD BLK	LOW LMT	HIGH LMT TRNC
	ALH/GUAL	MODE				ENS UF			
100	ANA 00100	ANALOG TAG 0100			32	A	2 3 2 -	504	
101	ANA-00101	ANALOG TAG 0101			32	A	2 3 - 2 -	505	
102	ANA-00102	ANALOG TAG 0102			1	A	2 - 3 -11 -	320	
103	ANA-00103	ANALOG TAG 0103			34	A	2 - 1 8 -30 -	176	
104	ANA 00104	ANALOG TAG 0104			33	A	2 - 8 -30 -	177	
105	ANA-00105	ANALOG TAG 0105			34	A	2 - 1 8 30 -	178	
106	ANA 00106	ANALOG TAG 0106			80	A	2 3 -11 -	31	
107	ANA-00107	ANALOG TAG 0107			7	A	2 - 3 -11	47	
108	ANA-00108	ANALOG TAG 0108			35	A	2 3 -11 -	49	
		WARNING					0	100	

TPS0106A

Figure 13-4 Example Tag Summary Printout

```

04:23:28 27-04-88  FFIDRY          TAG LIST TO PRINTER          2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 6
2 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51

Tag / 13 000101000000          To 10000 0049102131020
Search Pattern of B

A Print All Tags in Range
B Print All Defined Tags in Range
C Print All Undefined Tags in Range
D Enter Start Tag
E Enter End Tag
F Enter Search Pattern

1
2
3
4
5
6
7
8
9
0
DEL
CLR
END

```

TPS0106A

Figure 13-5. Tag List to Printer

The tag list menu has three separate choices for selecting which tag indexes to print. The listing can be for all tags, or only defined or undefined tags. Also, the menu provides options for specifying a starting and ending tag range, and tag name search pattern. The tag list printout occurs at the printer currently assigned to the keyboard. Look at the keyboard status block to determine which printer.

The fields at the top of the page indicate the current tag range and search pattern. The operator sets the tag range through

options *D* and *E* The search pattern is set through option *F* Initially, the console defaults to the entire tag range and a search pattern of *, which is a wild card character that specifies all tag names

The steps required to print a tag list include

- 1 Set tag range
- 2 Set search pattern.
3. Select tag types to print

Set Tag Range

The tag range allows limiting the printout to only tags within a certain tag index range This procedure is only necessary if the current range shown at the top of the page is not the desired range. To specify a range

- 1 Select *D* Enter Start Tag, a Tag Name or Index input prompt appears
- 2 Key in either the tag name or index number of the first tag that is to appear in the summary list, then press **ENTER** The starting index number and associated tag name appear in the first range field
- 3 Select *E* Enter End Tag, a Tag Name or Index input prompt appears The end range value to enter to print a complete tag list depends on the size of the tag database
- 4 Key in either the tag name or index number of the last tag that is to appear in the summary list, then press **ENTER** The console does not allow entering an index number less than the starting number. The ending index number and its associated tag name appear in the second range field

Set Search Pattern

A search pattern allows limiting the printed list even further The console uses the entered pattern to search through the tag names within the specified range of tags Only tags with names that match the search pattern print.

Wild card characters can be used when entering a search pattern The asterisk (*) represents multiple characters, the question mark (?) a single character For example, ABC* limits the list to only those tags with tag names having ABC as their first three characters. Any combination of * and ? can be used The console supports multiple occurrences of ? Multiple occurrences of * are treated as ? after the first *.

To enter the search pattern.

1. Select **F** Enter Search Pattern; a Search Pattern input prompt appears
2. Key in a search pattern from 1 to 14 characters, then press **ENTER**. The Search Pattern of field at the top of the page updates to the entered pattern. The console defaults to * for an unrestricted search

Select Tag Type

Options A, B and C determine which tags appear in the listing. The console compiles the tag list by checking the Tag Type field configured for each tag when using options B and C. It also references the range and search pattern entries when creating any tag list. The options include

Print All Tags in Range - press **A** to print all tags within the defined range and matching the search pattern

Print All Defined Tags in Range - press **B** to print all tags that have been defined through tag configuration. A defined tag is of any tag type except **UNDEF**

Print All Undefined Tags in Range - press **C** to print all tags that have an **UNDEF** tag type. The printout provides a complete list of available tag index numbers

After making any of these selections, the console collects then formats the pages of the list for printing. The current page number being processed displays in the message:

Processing page n

Exiting the display after making a selection, but while the *Processing page n* is displaying causes the printout to stop

If the console cannot find any tags within the range that match the desired tag type, this message appears:

Nothing in Range to Print w/this Option

PRINT TREND LIST

The console provides a print trend list utility to print a complete or partial list of defined trends. The utility has several options to select which trends are to appear in the printed list. The options identify the trend definition attributes the console is to search for when compiling the trend list. Depending on the selection made, the trend list can be based on

Tag name - process tag associated with a trend

Trend type - normal (one-minute standard trends), fast (15-second standard trends), enhanced trends, or all available, undefined trend indexes.

Collection mode - sample, average, minimum, maximum, sum or range

Trend usage display only, save to disk, archived or external source trends

Module address - all trends within a single module.

Tag type - either analog or digital trends

A trend list printout occurs at the printer currently assigned to the keyboard. Look at the keyboard status block to determine which printer.

The operator initiates a trend list printout through the *Trend List to Printer* page (see Figure 13-6). To call this display, first press GENL FCTNS MENU, then select the following menu items in the sequence shown:

B OIS Utilities → *G Print Database List* → *B Trend List*

The trend list menu has options for specifying a starting and ending trend index range. The fields at the top of the page indicate the current trend index range and search pattern. The

```

14126:10 00 32-02 MEMORY          TRENDS LIST TO PRINTER          1 5 7 9 10 11 12 15 20 2 24 25 26 27 28 33 34 35
                                                                                                     30 40

Start Trend Index  1                End Trend Index  50

A List by Tag Name
B List by Trend Type
C List by Collection Mode
D List by Trend Usage
E List by Module Address
F List by Tag Type
G Enter Start Trend Index
H Enter End Trend Index

A=1
P 1
CON
TIME
OFF
  
```

TPS0107B

Figure 13-6. Trend List to Printer

operator sets the tag range through options *G* and *H* Initially, the console defaults to the entire trend index range.

Set Range

The trend index range allows limiting the printout to only trends within a certain trend index range This procedure is only necessary if the current range shown at the top of the page is not the desired range. To specify a range.

- 1 Select *G* Enter *Start Trend Index*. This positions an input cursor at the *Start Trend Index* field
- 2 Key in the index number of the first trend definition that is to appear in the listing, then press **ENTER**
3. Select *H* Enter *End Trend Index* This positions an input cursor at the *End Trend Index* field The end range value to enter to print a complete trend list depends on the size of the trend database
- 4 Key in the index number of the last trend definition that is to appear in the summary list, then press **ENTER** The ending trend index must have an index number greater than the starting number

Select Trends

Options *A* through *F* determine which trends appear in the listing The console compiles a trend list by checking the attributes configured for each trend when using any of these options. It also references the range entries when creating any trend list The options include:

List by Tag Name - press **A**, a *Tag Name or Index* input prompt appears at the bottom of the display Enter a tag name or index number, then press **ENTER**. The console searches the trend database for all trends defined with the entered tag name

List by Trend Type - press **B**, a submenu appears at the screen. The menu items determine the trends that print by type of trend.

- A** To print all normal trends (one-minute standard trends)
- B** To print all fast trends (15 second standard trends)
- C** To print all enhanced trends.
- D** To print all undefined trends

[ESC] To return to the trend list menu without selecting a resolution

List by Collection Mode - press **[C]**, a submenu appears at the window. The menu items determine the trends that print by selecting a collection mode.

- [A]** To print all trends with a sample collection mode
- [B]** To print all trends with an average collection mode
- [C]** To print all trends with a minimum collection mode
- [D]** To print all trends with a maximum collection mode.
- [E]** To print all trends with a sum collection mode
- [F]** To print all trends with a range collection mode
- [ESC]** To return to the trend list menu without selecting a collection mode

List by Trend Usage - press **[D]**, a submenu appears at the screen. The menu items determine the trends that print by selecting a trend usage.

- [A]** To print all trends with a display only usage type
- [B]** To print all trends with a save to disk usage type
- [C]** To print all trends with an archived usage type
- [D]** To print all trends with an external source usage type
- [ESC]** To exit and return to the trend list menu without selecting a trend usage

List by Module Address - press **[E]**; a *Loop PCU Module* input prompt appears. Use the cursor control keys to move between and enter data into these fields. Enter the desired module address, then press **[ENTER]**. A listing of all trends having the entered module address then begins to print.

List by Tag Type - press **[F]**, a submenu appears at the screen. The menu items determine the trends that print by selecting a tag type.

[A] To print all trends with analog tag types. Analog tag types include:

ANALOG RMSC
 DAANALG STATION
 DANG

[B] To print all trends with digital tag types. Digital tag types include:

DADIG MSDD
 DD RCM
 DIGITAL RMCB

[ESC] To exit and return to the trend list menu without selecting tag type

After making any of these selections, the console collects then formats the pages of the list for printing. The current page number being processed displays in the message.

Processing page n

Exiting the display after making a selection, but while the *Processing page n* is displaying causes the printout to stop

If the console cannot find any trends within the range that have attributes that match the selection type, this message appears

Nothing in Range to Print w/this Option

CANCELING QUEUED PRINT JOBS

A *Cancel Print* option gives the operator the ability to cancel a print job currently queued to be printed. It also provides a directory listing of currently queued prints. The operator can cancel any of the following print jobs:

- Periodic print of the events log or operator actions log
- Periodic print of the alarm summary report
- Directory of an archive volume
- Events retrieved from an archive volume
- A log image retrieved from an archive volume
- Tag summary
- Tag or trend list printout
- Demand print of a retained log (*Log by Name* function)
- Demand print of a log template (custom log configuration).

For most of the print jobs, the function that generates the file to be printed waits for the entire contents of the queued file to complete printing before making another request of the same type. This is not always true such as in the case of tag summaries. A single tag summary may generate several files to be printed.

The print jobs that cannot be canceled through this function include

- Continuously printing events log
- Continuously printing operator actions log
- SOE logs
- Custom logs
- Copy screen printout

The operator can cancel any queued SOE logs or custom logs through the *Log Status* function. Refer to *Log Status* in the *Recording Process Data* section for procedures. Refer to *COPY SCREEN* in the *Window Operations* section for procedures to cancel a copy screen printout.

The operator cancels print jobs through the *Directory of Queued Prints* page (see Figure 13-7). To call this display, first press GENL FCTNS MENU, then select the following menu items in the sequence shown:

B OIS Utilities → K Cancel Print

16/10/29 00-JAN-92 MONDAY CANCEL QUEUED PRINT DA

DIRECTORY OF QUEUED PRINTS

NUMBER	FILE NAME	FILE SIZE (KB)	FILE CONTENTS
A	CPSCREEN 01	400	Copy Screen for Haracopy Print
B	CPSCREEN 0	400	Copy Screen for Haracopy Print
C	CPSCREEN 01	400	Copy Screen for Haracopy Print
D			
E			
F			
G			
H			
I			
J			
K			
L			
M			
N			
O			

K Cancel Selected Y Cancel Page

TPS0771A

Figure 13-7. Directory of Queued Prints

The console gives the following information for each directory entry

<i>PRINTER NUMBER</i>	Identifies the physical printer that the print job is queued to for printing
<i>FILE NAME</i>	Shows the file name the console assigned to the job to be output
<i>FILE SIZE (KB)</i>	Gives the size of the file in kilobytes
<i>FILE CONTENTS</i>	Presents a general description of the contents of the file

The page can show up to 15 print job entries Press NEXT PAGE or PREV PAGE to view additional pages

To cancel a single queued print job

1. Press X to select the *Cancel Selected* option Once selected, the letters at the left margin associated with each entry change to red
- 2 Press the letter key that corresponds to the letter adjacent to the print job entry to cancel
- 3 Press ENTER to initiate the cancel and clear the job from the directory listing. Press ESC before pressing ENTER to abort the cancelation request

To cancel all queued print jobs

- 1 Press V to select the *Cancel Page* option
- 2 Press ENTER to initiate the cancel and clear all the print jobs from the directory listing Press ESC before pressing ENTER to abort the cancelation request

15 21 04 10 07

Bailey

SECTION 14 - INFI 90 AND OIS DIAGNOSTICS

INTRODUCTION

The operator interface station (OIS) provides the capability to monitor the operating status of each node or module in the INFI 90 system, and the status of the communication highway connecting the individual nodes of the system for communication. These capabilities allow the console to be a central platform that can be used to diagnose system problems ranging from plant communications failures to individual module problems. The console also gives the ability to trace problems encountered at the console through diagnostic error messages, refer to *Diagnostic Log* in the *Terminal Utilities* section for more information.

Any node connected to the communication highway reports its status. In general, the modules that report status include communication and control modules. The console also has the capability to monitor its own peripherals.

The console presents alarm indications for module status errors. Module status pages provide the capability to acknowledge these alarms and to display the status reports for individual modules. The status pages can also be viewed for those modules not in an error condition. This section explains how to call up the status pages. It also details the information presented and procedures to acknowledge alarms at these pages.

NOTE This section explains INFI 90 diagnostics using standard templates provided for status displays. The console provides these templates as part of its symbol library on hard disk. The information presented in these displays can also appear in any user-created displays to show status information. The escape commands defined in the display during its creation determine the capabilities of the display. Refer to the *Display System* section for further explanation.

INFI 90 SYSTEM STATUS DISPLAYS

The OIS console receives INFI 90 node and module status in exception reports. The console receives status exception reports for each node or PCU module that has a defined N90STA tag. Each exception report contains at a minimum the module error status (either an error exists or no errors), mode and module type. Other information in these reports is specific to the type of module reporting its status. Refer to *Database Configuration* in the *OIS Configuration* section for a list of node and module types from which the console can receive status reports.

The console provides a series of templates for status displays that can be used to communicate node and PCU module status. During OIS configuration, these standard displays or user-created status pages can be incorporated into process operations. The

INFI 90 AND OIS DIAGNOSTICS

provided templates contain all the necessary display elements to access, and to show status information such as

- Node and module type
- Node error indications
- Module operating mode
- Module status bytes.
- Module problem reports.

Before a template can be used in operations, however, the process engineer must modify it to contain the index numbers of N90STA tags for which the display is to present status information. The same type of information can also be incorporated into a user-created status page

Status Display Call Up

When the process engineer defines each N90STA tag, the OIS console automatically assigns the tag to a system (S) alarm group. Any time an N90STA defined node or module goes off-line or into an error condition the S indicator appears at the title line. Other indications may occur depending on the alarm group configuration. The indication notifies the operator that a problem exists in the INFI 90 system. One option available to determine the problem is to view the status pages.

NOTE The operating parameters page called for an N90STA tag also provides status information.

The console provided displays use a three-level hierarchy to communicate equipment status. The hierarchy follows a sequence that starts at a loop overview level and ends at the module status bytes and problem reports for a specific module. Normally the highest level page is assigned to SYSTEM STATUS for single key access to status reports. Once the initial page is on the screen, selections made within that and each subsequent page sequence to the desired status level.

A status page can also be called using the *Display by Name* option to enter the name of the status page, or the page can be assigned to one of the keyboard assignable function keys. The operating parameters page for an N90STA tag provides an option for calling a module problem report page directly. The problem report page provides the most detailed view of the exception reported status information.

Using the provided status pages, the hierarchy levels include

System level - overviews the operational status of INFI 90 equipment on a communication highway. This page displays both normal and error conditions.

Node level - reviews the status of each module within a node selected from the system level page. This page also displays both normal and error conditions.

Module level - details the status of a single module selected from the node level page. It monitors and displays the status bytes and problem reports of individual modules

SYSTEM STATUS OVERVIEW PAGE

The system status overview page provides information related to specified nodes. The nodes that appear in the list depend on the N90STA tag index numbers assigned to the display during its creation.

Figure 14-1 is the standard system status overview page. The display source file for this display is the *N90STAT1.DT* file. This file provides an empty display template. The page uses a *NOD-LINE.DT* symbol file to define each node and its related attributes that appear in the list

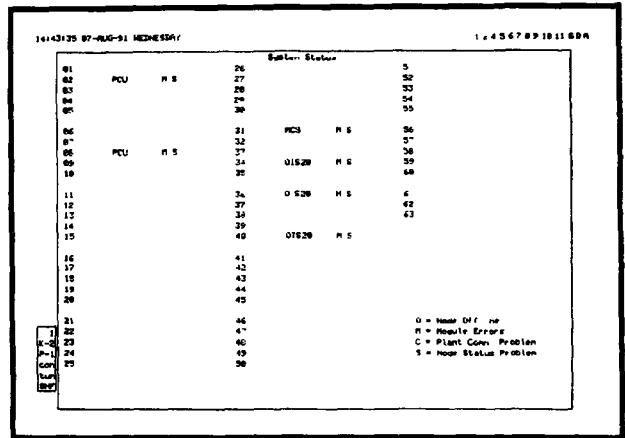


Figure 14-1. System Status Overview Page

The following information appears at the page:

Node selector - the numbers 01 through 63 are selectors for calling the next level status page for a specific node. Normally, these numbers are also the loop address of the nodes in the list, although this is not a requirement

Node type - a node type appears next to each node selector number. The nomenclature that appears depends on the tag definition. For proper indications, each N90STA tag in the list must define a node rather than a module.

A yellow asterisk (*) appears if a node type configured in the database does not match a node type received in an exception report. The indication also appears if a module within that node has the same problem. The indicator displays to the left of the node type for each incorrect node. This node type configuration error causes an alarm.

Error indicators - up to four different indicators can appear for a single node in error. Each indicator identifies a different type of error. Each type of error triggers an alarm. The indicators are:

- O Node off-line; displays when a node is completely off line. The console does not receive any exception reports for off-line nodes or modules within a node.
- M Module errors; displays when at least one module in a node is in error. The *M* also appears if any module in a node is not in execute mode.
- C Plant communication problem; displays when a communication module for a node is in error. Each node has communication modules to interface with the communication highway. A communication problem exists when one of these modules has a problem related to its transmit or receive capabilities or some internal error.
- S Node status problem; displays when a node is having power problems. A node having a system status error reports this condition through its interface unit. The actual problem may be caused by a faulty power supply or fan.

Key in a node selector number to access a node status summary page for a node in the list. For example, [1-]3 for node number 13. The node status summary page can be called for any node whether it is in a normal or error condition. Refer to **NODE STATUS SUMMARY PAGE** in this section for information presented at the next page.

NODE STATUS SUMMARY PAGE

The node status summary page provides information related to a specific node. Which node the console presents information for depends on the node selection made at the system status overview page. The node status summary page provides the type and operating mode for individual modules within a given node. A general error indication also appears to identify any modules in error.

INFI 90 AND OIS DIAGNOSTICS

<i>Module</i>	Displays as <i>error</i> or <i>ok</i> depending on the presence or absence of the <i>M</i> indicator at the system status overview page
<i>Communication System</i>	Appears as <i>error</i> or <i>ok</i> depending on the presence or absence of the <i>C</i> indicator at the system status overview page
<i>Node Status</i>	Appears as <i>problem</i> or <i>normal</i> depending on the presence or absence of the <i>S</i> indicator at the system status overview page

Module selector - the numbers 00 through 31 are selectors for calling the next level status page for a specific module. Normally these numbers are also the module address, although, this is not a requirement. The number also does not necessarily reflect the physical location of a module within a cabinet.

Module type - a module type appears next to each module selector number. This is an abbreviated nomenclature, and is the same as the module type defined during tag definition. For proper indications, each N90STA tag in the list must define a module

A yellow asterisk (*) appears if a module type configured in the database does not match a module type received in an exception report. The indicator displays to the left of the module type for each **incorrectly configured module**. This module type configuration error causes an alarm.

Module mode the summary indicates the current operating mode for each module in the list. The modes appear as

<i>execut</i>	Module is on-line and in execute mode
<i>config</i>	Module is on-line and in configure mode
<i>error</i>	Module is on-line and in error mode. Generally, this indication normally occurs when a module configuration error exists.
<i>stndby</i>	Appears for a backup or redundant module. The mode of the backup module is the same as the primary module unless the primary fails and the backup assumes the responsibilities of the primary.
<i>failed</i>	Module is off-line, or some internal problem exists.

Error indicator - an *ERR* appears for each module that is in error.

Key in a module selector number to access a module status summary page for a module in the list. For example, ①-③ for

module number 13. The module status summary page can be called for any module whether it is in a normal or error condition. Refer to **MODULE STATUS SUMMARY PAGE** in this section for information presented at the next page

Press **BACK** to return to the system status overview page

MODULE STATUS SUMMARY PAGE

The module status summary page provides information related to a specific module. Which module the console presents information for depends on the module selection made at the node status summary page. The page provides both the status bytes and module problem reports for a selected module. Figure 14-3 is the standard module status summary page.

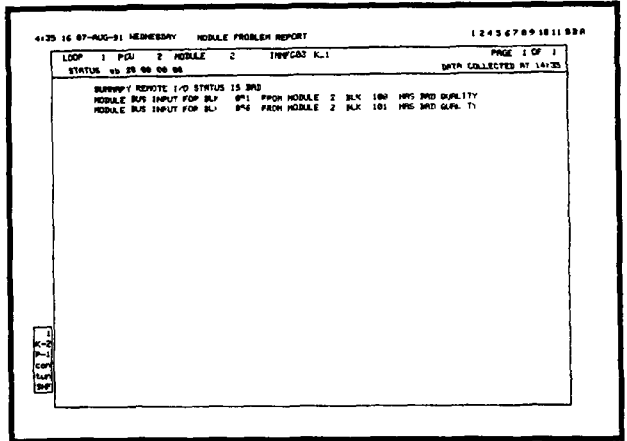


Figure 14-3 Module Status Summary Page

When the operator calls the module status summary page, the console initiates both a read module status and read module problem report message. The selected module then replies with the requested information.

The summary page has two sections. The information at the top of the page includes from left to right, top to bottom:

Address - indicates the hardware **LOOP nnn PCU nnn MODULE nn** address of the selected module

INFI 90 AND OIS DIAGNOSTICS

Type - this is the exception reported module type. The full nomenclature of the selected module appears at the page (e.g., IMMFC03)

Revision - a module revision level may or may not appear for a particular module. If the module is capable of reporting its revision level, the console will present the appropriate level. An N/A appears for any module that does not report revision level

Page the PAGE n OF n indicates the number of pages used to present problem report information, and the current page. The field updates as each problem report page is viewed

Status bytes - the STATUS field presents the module status bytes reported by a PCU module. Depending on the module type, the number of bytes a module returns can range from five to 16 bytes. Each byte is a hexadecimal value

Refer to the product instruction for a specific type of module to interpret the status byte presentation. The **Function Code Application Manual** also provides some status byte information

Time - the DATA COLLECTED AT field shows the time at which the status and problem report was read. The time updates if the operator initiates an update while at the page, or the page is exited and then called again

The lower section of the page presents module problem reports. These reports give a detailed module status report using descriptive text. A single module report may span several pages. Press **(NEXT PAGE)** or **(PREV PAGE)** to view additional pages

Press **(NEXT PAGE)** while at the last page of the module problem report page to cause another snapshot of the reports to be read from the module. This also returns to the first page of the new report

Press **(BACK)** to return to the node status summary page

Module Status Bytes

As stated previously, the number of status bytes that display depends on the type of module selected. A particular module may report from five to 16 bytes. If any of these bytes do not apply for a given module, they are set to zero to show a good status. Of these bytes, the first two are common for most type of modules. The remaining bytes are specific to a particular module

Table 14-1 details the information presented in bytes one and two. Convert the hexadecimal value to a binary value then refer to Table 14-1 to interpret the status bytes

Table 14-1. Module Status Bytes

Byte	Bit								
	7	6	5	4	3	2	1	0	
1	ES	MODE			TYPE				
2	FTX	BAC	RIO	LIO	CFG	NVF	NVI	DSS	

The abbreviations are defined as

- ES** Error summary, 0 = ok, 1 = error exists. If there is an error indicated in any status byte, the bit is set to 1.
- MODE** Module mode, 00 = configure, 01 = failed, 10 = error, 11 = execute.
- TYPE** Module type; each INFI 90 module has a different type identifier. The module status summary page provides a module type field that references these bits.
- FTX** First time in execute mode, 0 = no, 1 = yes
- BAC** Backup status, 0 = ok, 1 = bad
- RIO** Summary of remote input status, 0 = ok, 1 = bad.
- LIO** Summary of local input status, 0 = ok, 1 = bad
- CFG** On-line configuration changes being made, 0 = no, 1 = yes
- NVF** Nonvolatile memory failure, 0 = no, 1 = yes
- NVI** Nonvolatile memory initialized, 0 = no, 1 = yes
- DSS** Station status, 0 = ok, 1 = bad

Module Problem Reports

A module problem report message details information on the status of a module. The report provides the same type of data that is presented in module status bytes, but provides a higher level of detail. The problem reports cover a wide range of system problems. The console associates descriptive text with any reported problems.

Depending on the type of report, the returned information can identify, for example, the actual station, or remote or local module and the function block address within that module causing an error. The information will also identify individual I/O modules in error, and the type of error condition for that module.

INFI 90 AND OIS DIAGNOSTICS**Acknowledging System Status Alarms**

The operator acknowledges system (S) alarms through the summary pages in the normal way. Both the system status overview and node status summary pages provide alarm indications. All normal (good) status indications appear in green at these pages. Any fields that identify a node or module status error appear in yellow. These error indications also cause system alarms. The console presents all normal alarm indications. Since the pages do not use an alarm status field, the fields that indicate a status error flash instead when an alarm has not been acknowledged.

Normally, the console indicates a remote I/O error or local I/O error with a system status alarm. A *System Status I/O Error Filter* option available through OIS system configuration gives the option to prevent these type of module errors from causing a system status alarm. If the option is enabled, the console filters out any remote I/O error or local I/O error and does treat them as status alarms.

Two choices are available for acknowledging alarms at the system status overview page or at the node status summary page: either individually or an entire page. Press **[PAGE ACK]** to acknowledge all alarms at a page. To acknowledge individual alarms at a page:

- 1 Press **[ACK ALARM]**. This calls a cross hair (+) alarm cursor to the screen that positions at the first error indication.
- 2 Press either **[TAB]** or **[TAB BACK]** to position the cursor at a specific error field.
- 3 Press **[ACK ALARM]** to acknowledge that alarm. The field stops flashing once acknowledged. The S indicator at the title line stops flashing after all system alarms are acknowledged. It remains at the title line, however, until correcting all system alarms.
- 4 Repeat Steps 2 and 3 for each alarm to be acknowledged on the current page. Once all acknowledgments are completed, press **[CANCEL]** then **[CURSOR]** to clear the alarm cursor from the page.

Acknowledging a node status alarm at the system status overview page acknowledges all related module alarms at the node status summary page for that node. Acknowledging all alarms at the node status summary page acknowledges the related node status alarm at the system status overview page. Leaving at least one alarm unacknowledged at the node status summary page causes the node status alarm at the system status overview page to remain unacknowledged.

MODULE FIRMWARE REVISION DISPLAY

The module firmware revision page provides a list of modules within a given node, and the mode and revision level for each.

module. The page gives the capability to both print and display this information. An N90STA tag must be defined for both the node and individual modules within that node to display at this page. To call the firmware revision page

- 1 Press **MISC MENU**
- 2 Press **C** to select the *Display by Name* option
3. Enter **FIRMWARE** at the *Display Name* prompt, then press **ENTER**. The module firmware revision display then appears at the screen.

The display can also be assigned to, and called by pressing an assignable function key

Figure 14-4 is an example of a module firmware revision display after a specific node has been selected. The page normally appears blank with only the options presented at the bottom of the page. The display source file for this page is the **FIRMWARE.DT** display file

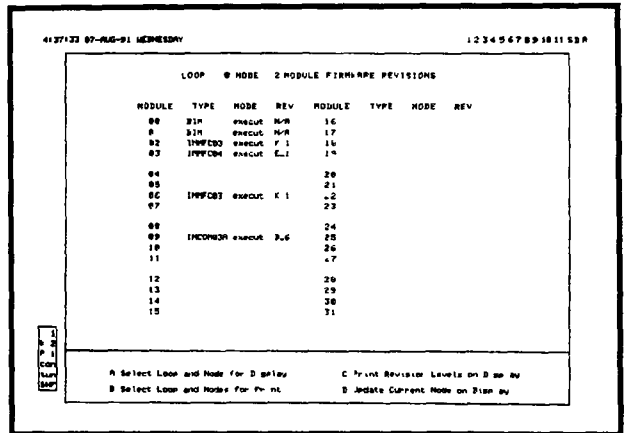


Figure 14-4 Module Firmware Revision Display

Page Attributes

The attributes that appear at the module firmware revision page relate to each module within a selected node.

MODULE - this column lists module numbers 00 through 31, which correspond to the Controlway or module bus address of

INFI 90 AND OIS DIAGNOSTICS

each control or communication module within the node. This does not necessarily reflect the physical position of the module within a cabinet

TYPE - this column shows the module type, which is either the full or abbreviated nomenclature that identifies the module

If a communication error occurs, it is shown in the *TYPE* column in the format *Ennn*, where *nnn* is an error code integer number. Refer to the *Operator Interface Station, Hardware Manual* for a list and description of these error codes

MODE - this column indicates the current operating mode for a module.

<i>execut</i>	Module is on-line and in execute mode.
<i>config</i>	Module is on line and in configure mode
<i>error</i>	Module is on-line and in error mode. Generally, this indication occurs when a module configuration error exists
<i>standby</i>	Appears for a backup or redundant module. The mode of the backup module is the same as the primary module unless the primary fails and the backup assumes the responsibilities of the primary
<i>failed</i>	Module is off-line, or some internal problem exists

REV the revision column is the firmware revision level of the module. Not all modules are capable of reporting revision level. The type of module and its revision level determine whether the console can display a revision level for that module. If a module is not capable of reporting its revision level, the display shows *N/A* in the *REV* column

A plus sign (+) indicator is shown after the revision level if the module firmware is newer than the information in the *MODULE.RV* file. This file resides in the [DATA USN02] directory of the hard disk. The function uses information from the *MODULE.RV* file to translate a revision level received in an exception report to an ASCII character string

Operations

Some modules are required to be in execute or configure mode to report their status. In this case, the console reads a fixed function block in the module to acquire the revision level. Other modules report revision level as part of their module status exception report while in any of their on-line modes

Table 14-2 identifies which INFI 90 modules can and cannot report their firmware revision levels. The console can display the levels for modules with revision levels equal to or greater than those listed in the availability column.

Table 14-2 Module Revision Level Availability

Module Type	Availability
IMAOM01 NAOM01	not available
NAMM01	not available
NAMM02	available with revision E 0
NAMM02A	available with revision A 0
IMAMM03 NAMM03	available with revision A 0
NCOM02	not available
NCOM02A	not available
NCOM02B	not available
IMCOM03, NCOM03	not available
IMCOM03A NCOM03A	available with revision B 0
MCOM04 NCOM04	not available
IMCOM04A NCOM04A	available with revision A 0
IMQRC01 NQRC01	not available
IMQRC01A NQRC01A	available with revision B 0
NLMM01	available with revision F 1
NLMM01A	available with revision A 0
IMLMM02, N_MM02	available with revision A 0
NMFC01	available with revision D 0
NMFC02	available with revision B 0
IMMFC03 NMFC03	available with revision B 0
IMMFC04 NMFC04	available with revision A 0
IMMFC05 NMFC05	available with revision A 0
IMMFP01 ¹	available
IMMFP02 ¹	available
IMMFP03 ¹	available
IMMPC01 NMPC01	available with revision F 0
CBC01	available with revision A 0
CSC01	available with revision A 0
CLC01	available with revision B 0
CLC02	available with revision A 0
CLC03	available with revision C 0
CLC04	available with revision C 0
INBIM02 NBIM01/02	not available
INICT01 ¹ , NSSM01 ¹	available
IN T01 ¹ , NBCM01 ¹	available
INIIT02 ¹ , NGCM03 ¹	available
INIPT01 ¹ , NGCM04 ¹	available
INNPM01 ¹	available
NSBM01 ¹	available
NSCM01 ¹	available
NPIM01	not available
NCTM01	not available
PBUG01 ¹	available

NOTE 1 Revision level reported in module status except on report

INFI 90 AND OIS DIAGNOSTICS

The options at the bottom of the page allow selecting, and either displaying or printing revision levels for modules in a specified node. The valid loop and node ranges for all of these options are

Plant Loop system - loop defaults to 0. The only required entry is a node number from 1 to 63.

INFI-NET system - loop range is from 0 to 250; node range is from 1 to 250.

Options For the print options, a printout occurs at the printer assigned to the screen. Look at the keyboard status block on the screen to determine which printer. The format of all printed information is the same as what is seen at the screen, except a time of collection appears on the printout.

Select Loop and Node for Display - displays the revision information for a single node

1. Press **[A]** to select the option, a **LOOP NODE ___** input prompt appears. Use the cursor control keys to move between the input fields.

2. Key in a loop and node address, then press **[ENTER]**

Select Loop and Nodes for Print - prints the revision information for a single or range of nodes without having to display the information.

1. Press **[B]** to select this option; a **LOOP NODE ___ TO** input prompt appears. Use the cursor control keys to move between each input field.

2. Key in a loop and node range, then press **[ENTER]**. If a loop number is entered without specifying a range, pressing **[ENTER]** starts a printout of all nodes on the entered loop.

Print Revision Levels on Display - prints the currently displayed revision information. A loop and node must first be selected using option **A** before using this option. Press **[C]** to choose the option. After selection, the console begins to print the information currently displaying at the screen.

Update Current Node on Display - updates the information currently displaying; in particular, the mode or any error indications that may have occurred since the node information first displayed. Select this option prior to initiating any prints to assure that the most up to date information appears in a printout. Press **[D]** to choose the option. This updates the information for all modules at the current module revision display.

Press **[NEXT PAGE]** or **[PREV PAGE]** to display the firmware information for the next or previous node on the currently selected loop

INFI-NET DIAGNOSTICS


The INFI-NET diagnostics function can be used to facilitate the diagnosis of communication related problems. The functions provide diagnostics information on a system-wide basis. The function enables maintenance personnel to:

- Display a graphic that provides a complete overview of all nodes connected to a single communication loop. The function gives the capability to change to any desired loop.
- Determine the types of modules in a single node, and the module address, revision level and current operating mode for each module.
- Display the module details for the communication interface modules of a selected node. The information presented includes the loop and node address, type for each module that makes up the interface, revision level for each module, and memory utilization of the host module (e.g., INICT01 module).
- View a snapshot of event and error counters for the communications modules of a selected node. The information automatically updates every 30 seconds or after an operator request to update the information.
- View a snapshot of exception report statistics for the communications modules of a selected node. The information automatically updates every 30 seconds or after an operator request to update the information.
- Print a listing that overviews the entire plant communication system.

Display Call Up

The first page of the INFI-NET diagnostics function is the options menu. This page allows selecting any desired loop and node in the system, and viewing the details related to the individual nodes on the selected loop. It also allows choosing the various diagnostic functions.

To access the INFI-NET diagnostics menu (see Figure 14-5), first press **[GENL FCTNS MENU]**, then select the following menu items in the sequence shown:



```

SYNCHRON NOV 14 1992 11 28:08 INFI-NET DIAGNOSTICS 1 234 998 R
-----
Loop 0 installed self      LOOP 0  NODE 0  Sync Master NO
Node 0 installed all nodes

R Select Loop/Node/Sort
B Loop Topology
C Node Topology
D Communication Module Details
E Event and Error Counters
F Event and Error Counters (Resettable)
G Reset Event and Error Counters
H Exception Statistics
I Reset Exception Statistics
J Performance Statistics
K Print Network Topology

  12
  11
  10
  9
  8
  7
  6
  5
  4
  3
  2
  1

TIME SYNC MASTER:      LOOP 1  NODE 247
TIME SYNC MASTER:      LOOP 1  NODE 154  ACCURACY RATING 9

```

TPS0838A

Figure 14-5 INFI-NET Diagnostics - Options Menu

When the display is first called, the boxed area at the top of the page shows the last selected loop and node. The sort option being used also appears.

At the bottom of the page are fields that show the loop and node address of this console, the node that is the current time sync master, and the accuracy rating of the clock being used by the time-sync master. The accuracy rating ranges from zero to 12, 12 is the most accurate. A satellite clock, for example, has an accuracy rating of 12. Refer to **SET DATE AND TIME** in the *Utilities* section for an explanation of time synchronization and the time sync master.

Selecting a Loop and Node

There are a few different methods for selecting a loop and node for which to display diagnostics information.

- The **A Select Loop/Node/Sort** option can be used before selecting any of the diagnostics options (i.e., B through J).
- While at the node topology page, the event and error counters pages, and the exception statistics page, the operator can switch to another loop and node directly without having to exit the page. The **A Select Loop and Node for Display** option provides this capability.

- At the loop topology display, the operator can enter a loop number to change the presentation to another loop.
- Pressing **[NEXT PAGE]** or **[PREV PAGE]** while at the node topology page or event and error counters page calls the same information for the node physically located on the loop after or before the current node respectively.

Select Loop/Node/Sort

The *Select Loop/Node/Sort* option allows selecting any desired loop and node in the system. Choose this option before selecting any of the diagnostics functions. The information presented by options *B* through *I* is for the loop and node chosen through the *Select Loop/Node/Sort* option

The *Select Loop/Node/Sort* option also sets the sort option. The sort option determines the order in which information presented at the various pages of the function is to appear. To make a loop and node selection and set the sort option:

- 1 Press **[A]** to choose the *Select Loop/Node/Sort* option. This enables the input cursor at the *Loop* field at the top of the page.
- 2 Key in the number of any desired loop. Valid entry is 0 for self or all depending on the function selected, or 1 to 250.
- 3 Move to the *Node* field and key in the number of any desired node. Valid entry is 0 for self or all depending on the function selected, or 1 to 250.
4. Move to the *Sort Nodes* field and enter YES to have the node information presented by a function appear in chronological order by node address. Or, enter NO to have it appear in order by the physical location of the node on the loop starting with the selected node. If the entry does not need to be changed, skip to the next step.

NOTE The sort option does not affect loop topology or node topology.

5. Press **[ENTER]** to save the changes and return control to the options menu.

Select Loop and Node for Display

The *Select Loop and Node for Display* option available at most diagnostic pages can be used to display information for another node without having to exit the current page. To make a loop and node selection when the *Select Loop and Node for Display* option is available.

1. Press **[A]** to choose the option, a *LOOP ___ NODE ___* input prompt appears.
- 2 Key in the number of any desired loop. Valid entry is 0 for self, or 1 to 250.

INFI 90 AND OIS DIAGNOSTICS

- 3 Move to the *NODE* field and key in the number of any desired node. Valid entry is 0 for self, or 1 to 250
4. Press **ENTER**.

Options

NOTE The *J Performance Statistics* option is not supported in this software release

The INFI-NET diagnostics function provides a wide range of information to aid in diagnosing communication problems

- Loop topology
- Node topology
- Communication module details
- Event and error counters
- Exception report statistics


The INFI NET diagnostics functions are intended to help diagnose INFI-NET communication problems. On a Plant Loop system, only the *Node Topology* and *Print Network Topology* functions can be used

LOOP TOPOLOGY

The *Loop Topology* option calls up a graphic overview of a selected loop. Press **[E]** to choose the *Loop Topology* option (see Figure 14-5)

The selected communication loop is depicted as a continuously connected series of circles (see Figure 14-6). Each circle symbol represents a single node connected to the loop. The node at the top center of the display is always the selected node. The graphic always shows the nodes in their relative position on the loop, not in numerical sequence regardless of the status of the sort option. The arrows at the display indicate the direction of data flow. The display automatically updates every 30 seconds or when operator requested, but only if there has been a change in the status of the loop. Refer to *Updating Diagnostics Information* in this section for further explanation.

Inside the large circle, or the innermost circle depending on the number of nodes depicted, is information that shows the number of the selected loop and time at which a snapshot of the loop was taken. Each known node on the loop is represented by a filled node symbol that contains the hardware address and category of the node. An unknown or off-line node displays as an empty node symbol with a hardware address of 0, and with a *U* for unknown category.

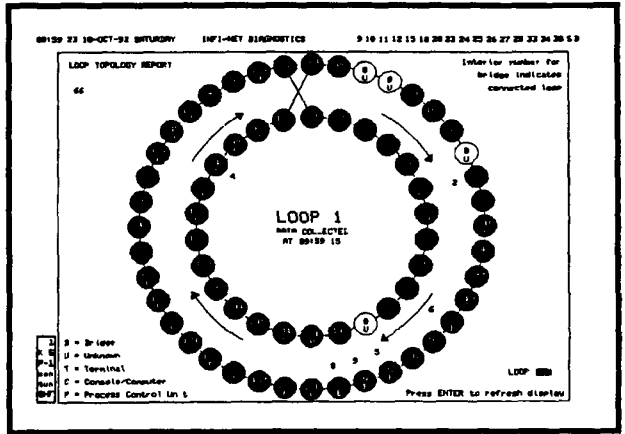

TP20045A

NOTE The display and data collect on time do not update unless there is a change in the loop status even after the 30 seconds expires or the operator attempts to update the display

Figure 14-6 INFI-NET Diagnostics Loop Topology

The node categories include:

- B Bridge
- C Console or computer.
- P Process control unit
- T Terminal
- U Unknown.

The number at the upper left of the display is the total number of nodes for the loop

For a bridge, the loop number the bridge is providing connection to displays adjacent (towards the center) to the node symbol. The number of the connecting loop and hardware address of the bridge do not necessarily have to match

NOTE A maximum of 85 node symbols can display before the symbols begin to overlap making the node information unreadable

Loop Failure Normally, the node symbols appear in green. If there is a loop failure (e.g., broken cable), the display shows a snapshot of the loop just prior to the failure. The node immediately downstream from the fault location will appear as an empty, red node symbol. All of the nodes not communicating that are between the selected node and the node nearest the fault appear in cyan. These are

INFI 90 AND OIS DIAGNOSTICS

the node symbols downstream from the selected node and upstream from the node nearest the fault

Operations The *LOOP* input field appearing at the lower right of the display allows calling a loop topology display for another loop. Key in a loop number from 1 to 250, then press **[ENTER]** to change to another loop. Alternatively, the loop number associated with a bridge node symbol is a touch point that can be used to request the loop topology for the connected loop.

Each node symbol at the loop topology display is defined with a touch point. This allows the operator to call the node topology display for a node directly from the page. Refer to **DISPLAY AND CONTROL SELECT** in the *Display System* section for more information on touch points.

Press **[ESC]** at any time to exit the page.

NODE TOPOLOGY

NOTE Each node symbol at the loop topology display is defined with a touch point to allow calling the node topology display for the node

The *Node Topology* option calls up a display that details all of the modules in a selected node or nodes. The information displayed is a snapshot of node details. The display automatically updates every 30 seconds or when operator requested, refer to **Updating Diagnostics Information** in this section for further explanation.

Press **[C]** to choose the *Node Topology* option (see Figure 14-5). The display shows the hardware address, module type, revision level and operating condition for each module in the node (see Figure 14-7).

The information displayed at the node topology page includes

MODULE - lists module numbers 00 through 31, which correspond to the Controlway or module bus address of each control or communication module within the node. This does not necessarily reflect the physical position of the module within a cabinet.

TYPE - shows the module type, which is either the full or abbreviated nomenclature that identifies the module.

If a communication error occurs, it is shown in the *TYPE* column in the format *Ennn*, where *nnn* is an error code integer number. Refer to the *Operator Interface Station, Hardware Manual* for a list and description of these error codes.

REV - shows the firmware revision level of the module. Not all modules are capable of reporting revision level. The type of module and its revision level determine whether the console can display a revision level for that module. If a module is not capable of

INF90/90V NOV 14, 1992 11:16:22 INF1-NET DEPENDENCIES

NODE TOPOLOGY REPORT				LOOP 1	NODE 5	Node 6 of 88	
MODULE	TYPE	REV	MODE	MODULE	TYPE	REV	MODE
00	INXET02	8.0	failed	16			
01	INXET02	8.0	execut	17			
02	INXET02	8.0	execut	18			
03				19			
04				20			
05				21			
06				22			
07				23			
08				24			
09				25			
10				26			
11				27			
12				28			
13				29			
14				30			
15				31			

X-1
 X-2
 P-1
 P-2
 P-3
 P-4
 P-5

R Select Less and Mode for Display C Print Information on Display
 S Select Less and Mode for Print D Update Information on Display

TPS0838A

Figure 14-7 INFI-NET Diagnostics - Node Topology

reporting revision level, the display shows *N/A* in the *REV* column

A plus sign (+) indicator is shown after the revision level if the module firmware is newer than the information in the *MODULE.RV* file. This file resides in the [DATA USN02] directory of the hard disk. The function uses information from the *MODULE.RV* file to translate a revision level received in an exception report to an ASCII character string

Some modules are required to be in execute or configure mode to report their status. In this case, the OIS console reads a fixed function block in the module to acquire the level. Other modules report revision level as part of their module status exception report while in any of their on-line modes.

Table 14-2 identifies which INFI 90 modules can and cannot report their firmware revision levels. The console can display the levels for modules with revision levels equal to or greater than those listed in the availability column

MODE - indicates the current operating mode for a module.

- execut* Module is on-line and in execute mode
- config* Module is on-line and in configure mode
- error* Module is on-line and in error mode. Generally, this indication occurs when a module configuration error exists

standby Appears for a backup or redundant module. The mode of the backup module is the same as the primary module unless the primary fails and the backup assumes the responsibilities of the primary.

failed Module is off-line, or some internal problem exists.

Press **[ESC]** at any time to exit the page.

COMMUNICATION MODULE DETAILS

The *Communication Module Details* option calls up a display that details the communication modules of a selected node. The information displayed is a snapshot of the module details. The information does not update until the operator requests it or at the next display call up. Refer to *Updating Diagnostics Information* in this section for further explanation.

Press **[D]** to choose the *Communication Module Details* option (see Figure 14-5). The display shows the hardware address, type, revision level, memory utilization and switch settings for each module that comprises the communications interface of the node (see Figure 14-8).

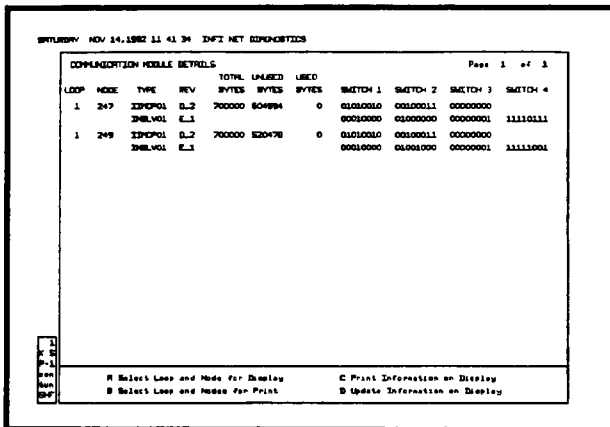


Figure 14-8 INFI-NET Diagnostics - Communication Module Details

The information displayed at the communication module details page includes:

LOOP - hardware loop address of the communication module

NODE - hardware node address of the communication module

TYPE - shows the module type, which is either the full or abbreviated nomenclature that identifies the module

REV - firmware revision level of the module.

TOTAL BYTES - total number of memory bytes available for the module, normally associated with the host communication module only

UNUSED BYTES - total number of unused memory bytes available for the module, normally associated with the host communication module only.

USED BYTES - total number of temporary memory bytes allocated, normally associated with the host communication module only

SWITCH n - switch settings for the module. A 1 indicates open (off), 0 indicates closed (on)

Press **[ESC]** at any time to exit the page

EVENT AND ERROR COUNTERS

The *Event and Error Counters* options call up a display containing a snapshot of the event and error counters for a selected node (see Figure 14-9) There are two different event and error counters displays: *Resettable* and *nonresettable*. The display automatically updates every 30 seconds or when operator requested; refer to *Updating Diagnostics Information* in this section for further explanation.

Nonresettable Press **[E]** to choose the *Event and Error Counters* option (see Figure 14-5) to call the *nonresettable* event and error counters display for a node. The values returned represent the number of events and errors that have occurred since the most recent manual restart of the node.

Resettable Press **[F]** to choose the *Event and Error Counters (Resettable)* option (see Figure 14-5) to call the *resettable* event and error counters display for a node. The values returned represent the number of events and errors that have occurred since the most recent manual restart of the node, or the most recent manual reset of the counters using the *Reset Event and Error Counters* option.

To reset the event and error counters

1. Exit the current page to return to the diagnostics option menu (see Figure 14-5). If already at the options menu, go to the next step

Updating Diagnostics Information in this section for further explanation. The counters of the exception statistics function can be reset to zero at any time.

Press **[H]** to choose the *Exception Statistics* option (see Figure 14-5). The display shows the hardware address of the selected node or nodes, elapsed time for the counters, and exception reporting characteristics (see Figure 14-10).

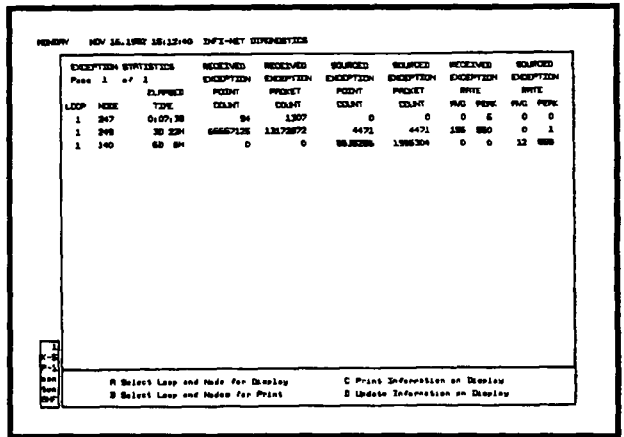


Figure 14-10 INFI-NET Diagnostics - Exception Statistics

Specifically, the information displayed at the exception statistics page includes

Page n of n - shows the current page and total number of pages.

LOOP - hardware loop address of the communication module.

NODE - hardware node address of the communication module

ELAPSED TIME - total amount of time elapsed since the last reset of the counters. The counts displayed at the page are the total number of events that occurred during the elapsed time

RECEIVED EXCEPTION POINT COUNT - total number of exception report messages received by the node

RECEIVED EXCEPTION PACKET COUNT - total number of exception report packets received by the node. A packet can contain one or more exception report messages.

INFI 90 AND OIS DIAGNOSTICS

SOURCED EXCEPTION POINT COUNT - total number of exception report messages sent by the node.

SOURCED EXCEPTION PACKET COUNT - total number of exception report packets sent by the node. A packet can contain one or more exception report messages

RECEIVED EXCEPTION RATE - gives the average (AVG) number of exception report messages received per second by the node during the entire elapsed time. It also shows the maximum (PEAK) number of exception report messages received by the node within a one-second period. This is the maximum seen at some time during the entire elapsed time

SOURCED EXCEPTION RATE gives the average (AVG) number of exception report messages sent per second by the node during the entire elapsed time. It also shows the maximum (PEAK) number of exception report messages sent by the node during a one second period. This is the maximum seen at some time during the entire elapsed time

Press **NEXT PAGE** or **PREV PAGE** to view additional pages

Press **ESC** at any time to exit the page

To reset the exception statistics counters

1 Exit the current page to return to the diagnostics option menu (see Figure 14-5). If already at the options menu, go to the next step

2 Press **I** to select the *Reset Exception Statistics* option. The message

Exception statistics were reset

appears when the counters have been successfully reset to zero. In most cases, the reset may not be readily apparent since the counters normally begin to increment again immediately after the reset completes

If the loop address and node address are set to 0 when the reset option is chosen, the event and error counters for all nodes on all loops are reset. If the loop address specifies the address of a single loop and the node address is set to 0, the counters for all nodes on the selected loop are reset

Printing Diagnostics Information

This section explains the methods used to create a hard copy of diagnostic information. It explains the methods used to print diagnostic information displayed at the screen. The method to use depends on the option chosen.

- Screen Print** For the *Loop Topology* option, use the screen print option to print the displayed information. Refer to *COPY SCREEN* in the *Window Operations* section for procedures
- Print Options** The *Print Information on Display* option available at the node topology, communication module details, event and error counters, and exception statistics displays allows printing the current diagnostics information presented at the screen. Also, the *Select Loop and Nodes for Print* option at these pages can be used to select any desired loop and node for which to print the same type of information. This option can be used to print information for a single or range of nodes without having to display the information.

For both print options, a printout occurs at the printer assigned to the keyboard. Look at the keyboard status block of the page to determine which printer. The format of all printed information is the same as what is seen at the screen except that a time of collection appears on the printout.

To use the *Select Loop and Nodes for Print* option

- 1 Press **[B]** to select the option when it is available at the screen
A *LOOP ___ NODE ___ TO ___* input prompt appears
2. Key in a loop number Use the cursor control keys to move between each input field.
- 3 Key in a single node address or range of node addresses If a loop number is entered without specifying a node address or range of node addresses, the printout contains the information for all nodes on the loop
- 4 Press **[ENTER]**

Press **[C]** to select the *Print Information on Display* print option when it is available. The console begins to print the information currently displaying at the screen

It is a good idea to update the information at the display before initiating a print of the information to guarantee that the most up to date information appears in the printout. Refer to *Updating Diagnostics Information* in this section

Updating Diagnostics Information

The method used to update diagnostics information depends on the option chosen. For the loop topology display, the event and error counters displays, and the exception statistics display, the information displayed automatically updates every 30 seconds. The information can also be updated prior to the 30 seconds through operator actions

INFI 90 AND OIS DIAGNOSTICS

Press **[ENTER]** at any time to update information while at the loop topology display. The display and data collection time do not update even after pressing **[ENTER]** or the 30 seconds expires, however, unless there has been.

- A change in the loop status since the initial call up of the display
- A change in the loop status since the last update of the display

The *Update Information on Display* option available at the node topology display, the communication module details display, the event and error counters displays, and the exception statistics display can be used to update the information currently displaying. Select this option prior to initiating any prints to ensure that the most up to date information appears in a printout. Press **[D]** to choose the option. This updates the information for all nodes at the current display.

Print Network Topology

The *Print Network Topology* option can be used to print a complete list of all nodes and modules in the entire system. The printout contains the hardware address, module type, revision level and current mode for each module in the system. The hardware address consists of the loop, node and module address.

The information collected for printing may span several pages. Each page of the printout contains a page number, and start and completion date for the information printed on that page.

Press **[K]** to choose the *Print Network Topology* option (see Figure 14-5). The message *Print in progress, please wait* and *LOOP nnn NODE nnn MODULE nn* fields appear to indicate the current status of the print request.

The printout can take a variable amount of time depending on the complexity of the system. The console polls each module in each node on each loop in the system to acquire the information for the printout. The *LOOP nnn NODE nnn MODULE nn* fields increment to show the address of the current module being polled.

Do **not** exit the page while the console is processing the request. Exiting the page by pressing **[ESC]** or calling another display cancels the request in progress. The console still, however, prints any data it has already collected.

A printout occurs at the printer assigned to the keyboard. Look at the keyboard status block of the page to determine which printer. The format of all printed information is the same as what is seen at the screen except that a time of collection appears on the printout.

SECTION 15 - INFI 90 SYSTEM CONFIGURATION

INTRODUCTION

A configuration loaded into memory defines the operating performance limits for a control module in the INFI 90 system. A control module executes this configuration to perform its process control responsibilities. INFI 90 system configuration capabilities available at the operator interface station (OIS) give access to these PCU module control schemes (i.e., configurations).

This section provides an explanation and procedures for using INFI 90 configuration utilities available at the console. The process engineer or technician can change module mode, and configure, view, modify red tag status or tune a PCU module directly from the console using module configuration functions. A control module configuration can be saved, verified and restored using PCU management utilities.

NOTE Configuration of PCU modules can be performed using a configuration and tuning terminal (CTT), operator interface station or optional on a persona computer software.

PCU CONFIGURATION

The PCU configuration functions are accessed through menu selections. To access the PCU configuration menu (see Figure 15-1), first press GENL FCTNS MENU, then select the following menu items in the sequence shown:


B OIS Utilities → *A PCU Configuration*

Module Configuration

Select *A Module Configuration* from the PCU configuration menu (see Figure 15-1) to access module configuration functions. This brings up the menu display shown in Figure 15-2.

The status box at the top of the page provides current information such as module type, operating mode and status of a selected module. This information updates every five seconds. The configuration functions available are explained in the following paragraphs.


All module configuration options except *F Tune a Block* require configuration security access to perform. Tuning requires tuning security access. The security key lock must be in the proper position, or password security set to allow configuration or tuning if password security is being implemented. An error message appears if these conditions are not met.

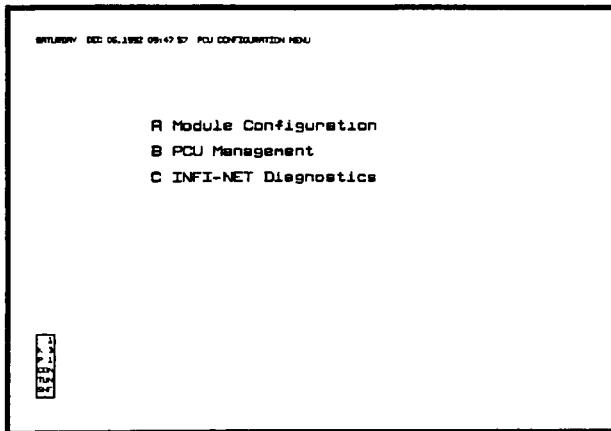

TPS0028B

NOTE Refer to *INFI-NET DIAGNOSTICS* in the *INFI 90 and OIS Diagnostics* section for information about the *C INFI-NET Diagnostics* option.

Figure 15-1. PCU Configuration Menu

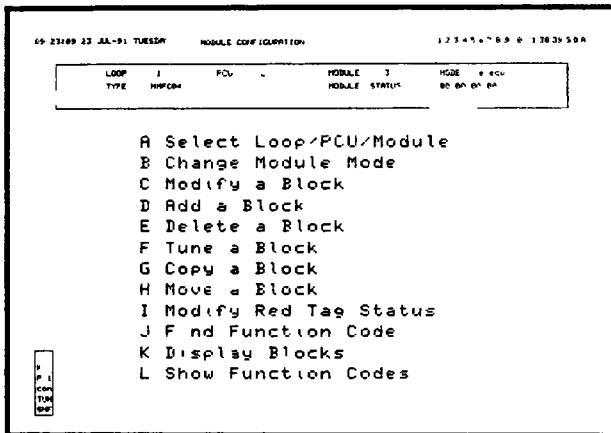

TPS0038A

Figure 15-2. Module Configuration Menu

A module must be in configure mode to perform any of the available configuration options, or execute mode for tuning or red tag modification. An error message appears if an attempt to perform a

configuration option is made while a module is in the wrong mode

Since the configuration options directly affect PCU module operations, the console requires confirmation for most of the options before it performs the selected operation. The console presents a *Press ENTER for action; ESC to cancel message* to allow either confirming or canceling an action. Once **[ENTER]** is pressed, the console sends a command to the selected PCU module to perform the desired action. Pressing **[ESC]** abandons an operation before the command is sent to the PCU module.

After making any of the configuration selections, use the cursor control keys to move between displayed input fields to enter data. Press **[ESC]** to exit the current page after completing or canceling an operation, and to return to the module configuration menu page.

Valid entries for loop, PCU, module and block address include

- Loop** 0 or 1 for Plant Loop system, 1 to 250 for INFI-NET system.
- PCU** 1 to 63 for Plant Loop system, 1 to 250 for INFI-NET system.
- Module** 0 to 31
- Block address** Depends on the module type, the maximum range is from 0 to 9999

SELECT A LOOP, PCU AND MODULE

The *A Select Loop/PCU/Module* option allows the operator to access a module both to view its current mode and status, and to configure or tune its operating parameters.

1. Select *A Select Loop/PCU/Module*. This option allows selecting any desired module in the INFI 90 system by entering its address. A module must be selected through this function before any module specific operations can be performed.
2. Enter a module address in the *LOOP nnn PCU nnn MODULE nn* input fields.
3. Press **[ENTER]**. The status box fields at the top of the page update to reflect the mode, status and type of the entered module. Select this option at any time to change to a different module.

CHANGE MODULE MODE

The *B Change Module Mode* option allows the operator to change the mode of operation for the selected module. A module must be

INF1 90 SYSTEM CONFIGURATION

in *execute* mode to perform any tuning or red tag status modification, or configure mode to make configuration changes. Selecting *Initialize* clears the current configuration from the memory of a module to allow downloading another. Selecting *Reset* initiates a module circuitry reset. In any case, the console requires confirmation before performing the selected operation.

NOTE Care should be taken when using the *Initialize* function since it erases module memory. A configuration must then be downloaded for the module to resume its control responsibilities.

To use the option:

1. Select *B Change Module Mode*. The mode can be set to either *execute* or *configure*. The module can also be initialized or reset.
2. Select one of the options.
3. Confirm the action by pressing **[ENTER]**. Press **[ESC]** to cancel the action. The *MODE* field in the status box updates to verify the mode change.

MODIFY A BLOCK

The *C Modify a Block* option allows the operator to make changes to the parameters controlling the operation of a specific function block.

1. Select *C Modify a Block*.
2. Enter a block address at the *Block number* input field, then press **[ENTER]**. The current specification values for that block display and can be edited.
3. Modify all desired specifications, then press **[ENTER]**.
4. Press **[ENTER]** again to confirm the action, or press **[ESC]** to cancel the action.

ADD A BLOCK

The *D Add a Block* option allows the operator to add a function block to the current configuration of the selected module.

1. Select *D Add a Block*.
2. Both a block address and function code are required to create a function block. Enter a block address at the *Block number* input field and a function code number at the *Function code* input field for the function block to add, then press **[ENTER]**. Use the *Show Function Codes* option to determine valid function code entries.

The console does not allow adding a function block over an existing function block. If the block address already has a configured function code, an error message displays. To add the new block at the address of an existing block, the existing function block must first be deleted. If the address is available, the default specification values for the added block display with specification one highlighted for editing.

3. Editing is performed in the same manner as in the *Modify a Block* function. Enter all specification values, then press **[ENTER]**.

4. Press **[ENTER]** again to confirm the action, or press **[ESC]** to cancel the action.

DELETE A BLOCK

The *E Delete a Block* option allows the operator to delete a function block from the current configuration of the selected module.

1. Select *E Delete a Block*.

2. Enter the address of the block to delete at the *Block number* input field, then press **[ENTER]** to have the console send the delete command to the module. An error displays if the block does not exist, otherwise it is deleted from the configuration.

TUNE A BLOCK

The *F Tune a Block* option allows the operator to tune the specifications of a function block in the configuration of the selected module.

1. Select *F Tune a Block*.

2. Enter the address of the block to tune at the *Block number* input field. An error message displays if the module is not in execute mode, otherwise the current specification values of the selected block display. A tunable parameter is identified by a *T*. The console does not allow moving to specifications that are not tunable.

3. Perform all desired tuning changes, then press **[ENTER]**.

4. Press **[ENTER]** again to confirm the action, or press **[ESC]** to cancel the action.

COPY A BLOCK

The *G Copy a Block* option allows the operator to copy a configured block to another block address.

1. Select *G Copy a Block*.

2 Enter the address of the source block at the *Copy block* input field and destination block address at the *To block* input field, then press **ENTER**. The source block is read and copied to the destination address after entering.

The console does not allow copying a function block over an existing function block. If the destination block address already has a configured function code, an error message displays. To copy the source block to the address of an existing block, the existing function block must first be deleted. If the destination address is available, the copy executes.

MOVE A BLOCK

The *H Move a Block* option allows the operator to move a function block from its current address to another.

- 1 Select *H Move a Block*. This is different than *Copy a Block*.
- 2 Enter the address of the function block to move in the *Move block* input field and its destination address to move to in the *To block* input field, then press **ENTER**. The source block is read and copied to the destination address, then the source block is deleted.

The console does not allow moving a function block to an address of an existing function block. If the destination block address already has a configured function code, an error message displays. To move the source block to the address of an existing block, the existing function block must first be deleted. If the destination address is available, the move executes.

After issuing a *Move a Block* command, the console searches a module configuration for all function blocks that reference the old address of the block being moved. It then automatically changes the specifications for these blocks to the new block address. Some function blocks have more than one output with a separate block address for each output. In this case, the console performs the same check for all block addresses, and changes the required specifications.

MODIFY RED TAG STATUS

NOTE The red tag status function does *not* lock out the power source for the actual equipment. The user must de-energize the power source and implement red tagging in compliance with the ANSI Z244.1 specification. Red tag status reported to the console is for display purposes only.

The *I Modify Red Tag Status* option allows the operator to either indicate red tag status for a function block or to remove the red tag status indication from a function block.

The following tags and their associated function codes (FC) allow for red tagging:

- DANG Data acquisition analog, FC 177
- DADIG Data acquisition digital, FC 211.
- DD Device driver, FC 123
- MSDD Multi-state device driver, FC 129
- RCM Remote control memory, FC 62
- RMCB Remote motor control FC 136
- STATION M/A station (basic), FC 21, M/A station (cascade), FC 22, M/A station (ratio) FC 23.
- STATION Control station, FC 80.
- TEXTSTR User-defined data export, FC 194

To modify the red tag status for a function block:

- 1 Select *1 Modify Red Tag Status* A module must be in *execute* mode to modify the red tag status
- 2 Enter either a tag name or index number, or block address at the *Enter Tag Name/Index _____ or Block _____* input field, then press **ENTER** Figure 15-3 shows the modify red tag status page.

If a tag name or index is not known, enter a block address. The specific module must first be selected through the *Select*

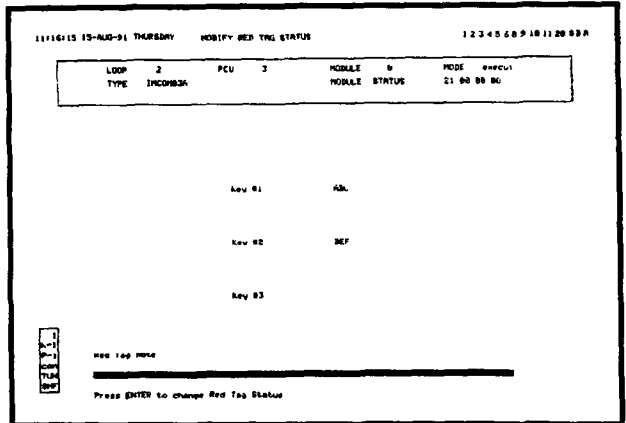


Figure 15-3 Modify Red Tag Status

Loop/PCU/Module option If using this method to select the block, any red tag modification is done on a function block in the module shown in the status box at the top of the page

Enter a 14-character tag name or an index number at the input field if known Red tag modification can then be performed on the function block defined by the tag Entering a tag name automatically selects the loop, PCU and module The console references the module and block address defined in the tag to automatically select the correct module and function block After entering a tag name or index number, the status box updates to show the address, type, mode and status of the module whose address is defined in the tag

Using tag name or index entry temporarily overrides any previous module selections made through the *Select Loop/PCU/Module* option. This selection is only temporary, and the information in the status box returns to the module selected previously through option A after exiting the modify red tag status page Any configuration operations are also performed on this previously selected module.

After the block has been selected, the display shows the current red tag status If the *Key* fields are blank, the block is not currently red tagged If any of the three *Key* fields has alphanumeric characters in them, the block is red tagged. The three *Key* fields allow for three different red tag keys to be applied to the block

To **indicate** a red tag status for the selected block

1 Enter from one to three characters in any or all of the three *Key* fields, then press **[ENTER]** Entry in only one field is required to red tag a block Valid *Key* field characters are A through Z (uppercase only), 0 through 9, colon (:), dollar (\$), period (.) and space

2 Press **[ENTER]** again to confirm the action, or press **[ESC]** to cancel the action The action is successful if the *Key* fields show the desired key entries after confirming Any faceplate element or display that provides a red tag indication displays the *RT* indicator as soon as the change is made

To **remove** a red tag status indication from the selected block:

1 Clear all fields with characters in them, then press **[ENTER]**

2 Press **[ENTER]** again to confirm the action, or press **[ESC]** to cancel the action The action is successful if the *Key* fields are blank after confirming Any faceplate element or display that provides a red tag indication removes the *RT* indicator as soon as the change is made

In addition to the *RT* indicator, a display element can indicate red tag status by changing the color of the outline for a display element to red. The source file for a symbol, however, must be modified in some cases to enable the red tag status outline feature. Either remove the remark (rm) at the beginning of the line containing the `ed 102` escape command, or add this command to the source file if not present

The note field at the bottom of the page can be used to enter red tag notes in the events or operator actions log. Eighty characters can be entered in this field. It can be used to indicate the reason the device was red tagged or for any additional information pertaining to the application or removal of red tag status.

FIND FUNCTION CODE

The *J Find Function Code* option allows the operator to find a specific function code within the configuration of a module. This can be used to find a function block when the function code is known but the block address is not

- 1 Select *J Find Function Code*
- 2 Enter a starting block number at the *Search from block* input field and a function code to search for at the *Function code* input field, then press **[ENTER]**. The console reads each block beginning at the start address until finding a block with the desired function code. The block parameters then display at the screen. Use the *Show Function Codes* option to determine valid function code entries.

To continue the search:

1. Press **[ESC]** to exit the parameters page for a found block. This exits back to the input page for the *Find Function Code* option.
 2. Press **[ENTER]** to continue the search starting at the last found block.
-

DISPLAY BLOCKS

The *K Display Blocks* option allows the operator to display each block configured in a module

1. Select *K Display Blocks*
2. Enter a starting block address at the *Search from block* input field, then press **[ENTER]**. The parameters for the block at the starting address or the first block found after the starting address appear at the screen.

To continue and view the next configured function block

- 1 Press **[ESC]** to exit the parameters page for a found block. This exits back to the input page for the *Display Block* option
- 2 Press **[ENTER]** to continue the search starting at the last found block

SHOW FUNCTION CODES

The *L Show Function Codes* option allows the operator to view a complete list of available INFI 90 function codes. The list provides a noun name along with the function code number. The list spans several pages, each page containing 64 codes. Press **[NEXT PAGE]** or **[PREV PAGE]** to move between the pages.

PCU Management

PCU management allows saving, loading, verifying and printing module configurations. Select *B PCU Management* from the PCU configuration menu (see Figure 15-1) to call the PCU management menu (see Figure 15-4).

The screenshot shows a terminal window titled "PCU MANAGEMENT" with a status box at the top and a list of options below. The status box contains the following data:

LOOP	PCU	MODULE	LN	1
	3	1	1	1
MEDIA	MINDIST	VALUE NAME	SEQUENCE NUMBER	

Below the status box, the menu options are listed:

- A Select Loop/PCU/Modules/Media
- B Change Mode of Modules
- C Save Configuration to Media
- D Load Configuration from Media
- E Verify Configuration against Media
- F Print Configuration from Media
- G Print Configuration from Module
- H Display Directory of Configurations

On the left side of the terminal window, there is a vertical column of function keys: **[ESC]**, **[F1]**, **[F2]**, **[F3]**, **[F4]**, **[F5]**, **[F6]**, **[F7]**, **[F8]**, **[F9]**, **[F10]**, **[F11]**, **[F12]**, **[END]**, **[HOME]**, **[PAGE UP]**, **[PAGE DOWN]**, **[DEL]**.

Figure 15-4 PCU Management Menu

TP50038B

The status box above the menu items presents data fields that contain the values last entered at the console. The address shown is the last entered while in one of the PCU configuration displays, either module configuration or PCU management. All management options reference the modules defined through the

Select *Loop/PCU/Module/Media* option. Make any changes through this option before initiating any other management functions

NOTE This console does not support saving PCU configurations to floppy disk

Most PCU management functions can be performed on either a single or range of modules in a PCU cabinet. The top line fields in the status box identify which modules. The bottom line fields show the medium being used to store, restore, verify or print configurations. The *Volume Name* and *Sequence Number* fields are not used by this console.

Since the management options directly affect PCU module operations, the console requires confirmation for most of the options before it performs the selected operation. The console presents a *Press ENTER for action; ESC to cancel* message to allow either confirming or canceling an action. Once **[ENTER]** is pressed, the console sends commands to the selected PCU modules to perform the desired action. Pressing **[ESC]** abandons an operation before any commands are sent to the PCU modules.

Most management options only require making a selection without having to enter any further data. The selector character of an option changes to cyan to identify the option as selected. The console provides informational messages at the bottom of the page to identify the current status of the operation. The selector returns to its original red color after the operation completes for all modules, and the following message appears:

Processing of modules n thru n complete

The only exception to this is the *A Select Loop/PCU/Modules/Media* option. All other management functions reference the selections made here. Use the cursor control keys to move between displayed input fields to enter data.

Valid entries for loop, PCU and module address include

Loop 0 or 1 for Plant Loop system, 1 to 250 for INFI NET system

PCU 1 to 63 for Plant Loop system, 1 to 250 for INFI-NET system

Module 0 to 31

SELECT LOOP, PCU, MODULES AND MEDIA

The operator can choose a module or range of modules to perform PCU management functions through the *A Select Loop/PCU/Modules/Media* option. This option also specifies the type of media and version to use when initiating these functions. Select

INFI 90 SYSTEM CONFIGURATION

this option at any time to change to a different process control unit and modules.

The operator can select any process control unit in the INFI 90 system and modules within that process control unit. A process control unit and module must be selected through this function before performing any management operations. All PCU management functions affect only one process control unit at a time, most can be performed on a range of modules within that process control unit.

To use the option:

1. Select *A Select Loop/PCU/Modules/Media*. Figure 15-5 shows the select loop, PCU, module and media page.

07:24:45 (7-FEB-91) TUESDAY PCU MANAGEMENT 2 3 4 5 6 7 8 9 10 11 12 13 4 15 16 17 18 19 20 5 8 A
21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 4 42 43 44 45 46 47 48 49 50 51

LOOP	PCU	MODULES	MEDIA	VERSION
18	18	2 thru 4	WINCHEST	CURRENT

LOOP: 18
 PCU: 18
 MODULES: 2 thru 4
 MEDIA: WINCHEST (WINCHEST, FLOPPY, >)
 VERSION: CURRENT (CURRENT, HISTORICAL, >)

[]
 []
 []
 []
 []
 []

TPS0030A

Figure 15-5. Select Loop/PCU/Modules/Media

2. Enter the address of a specific process control unit in the *LOOP* and *PCU* fields.
3. Enter a single or range of modules in the *MODULES* thru fields.
4. The *MEDIA* field defaults to *WINCHEST*. Leave this field at its default.
5. The *VERSION* field determines whether the data is current PCU module data (*CURRENT*) or archived data (*HISTORICAL*). Enter the desired version as either *CURRENT* or *HISTORICAL*.

6 After defining all fields, press **[ENTER]**. The status box at the top of the page updates to reflect the entered address and media.

Version The *VERSION* field determines where the console is to save configurations to, and from where it is to load, verify or print configurations. The console saves configurations to two separate directories on its hard disk, a current directory or archival storage directory, based on this entry.

The current directory is used to store data that is to remain on the hard disk of the console. The configurations in this directory reside on hard disk until deleted through PCU management functions. This saved data can be loaded, verified or printed at any time.

The archival storage directory provides temporary storage of PCU configurations until a scheduled archive to medium occurs. The console automatically stores all saved configurations to this directory when archival storage has been turned *ON* for PCU configurations. After the console archives all configurations in this directory to a medium, it then overwrites the data with any new archived data.

Archived configurations can only be loaded, verified and printed after first being retrieved through archival retrieval functions. Retrieved configurations store in an archival retrieval directory; this directory is separate from the archival storage directory.

Refer to *Archive Data Storage* and *Archive Data Retrieval* in the *Recording Process Data* section for further explanation.

A current directory contains only those configurations that are saved while the version is set to *CURRENT*. Configurations automatically save to both the current and archival storage directories while the version is *CURRENT* as long as archival storage has been turned *ON* for PCU configuration data. When the version is *HISTORICAL*, no configurations store to the current directory. They store to the archival storage directory only, and only if archival storage has been turned *ON* for PCU configurations.

The *VERSION* field also determines where the console is to look for configuration data when performing load, verify and print operations. If set to *CURRENT*, the console references configurations saved in the current directory. It looks for configurations in the archival retrieval directory when the version is set to *HISTORICAL*.

CHANGE MODE OF MODULES

The *B Change Mode of Modules* option allows the operator to change the mode of operation for the selected modules. A module must be in execute mode to perform its control responsibilities. A module must be in configure mode to load a configuration. Selecting *Initialize* clears the current configuration from memory of

a module to allow downloading another. Selecting *Reset* initiates a module circuitry reset. In any case, the console requires confirmation before performing the selected operation.

Only one module at a time can be put into *configure* mode using this utility. If a range of modules is specified, attempting to put the modules in *configure* mode causes the console to present the message

Limited to one module at a time

To use the option:

NOTE Care should be taken before using the *Initialize* function since it erases module memory. A configuration must then be downloaded for the module to resume its control responsibilities.

- 1 Select *B Change Mode of Modules*. The mode can be set to either *execute* or *configure*. A module can also be initialized or reset.
- 2 Select an option.
- 3 Press **ENTER** to confirm the action, or press **ESC** to cancel the action.

SAVE CONFIGURATION TO MEDIA

The *C Save Configuration to Media* option allows the operator to save configurations. Each configuration stores in a separate file containing only one configuration. The console overwrites existing configurations when saving. A configuration file for a specific module can be identified by its loop, PCU and module address.

- 1 Select *C Save Configuration to Media*.
- 2 Press **ENTER** to confirm the action, or press **ESC** to cancel the action. The data stores in a directory determined by the *VERSION* field entry.

LOAD CONFIGURATION FROM MEDIA

The *D Load Configuration from Media* option allows the operator to download a configuration to a selected module from a selected medium. A module that the configuration is being downloaded to must be in *configure* mode. If specifying a range of modules, an informational message identifies which modules are not in *configure* mode.

- 1 Select *D Load Configuration from Media*.
- 2 Press **ENTER** to confirm the action, or press **ESC** to cancel the action.

VERIFY CONFIGURATION AGAINST MEDIA

The *E Verify Configuration against Media* allows the operator to verify the downloaded configuration against a stored configuration. The first error encountered terminates the verification process. The console identifies the error with a message on the screen. After correcting an error by either repeating a download or modifying the configuration in the module, the verify can be attempted again. If the same or another error occurs, it is again identified.

- 1 Select *E Verify Configuration against Media*.
2. Press **ENTER** to confirm the action, or press **ESC** to cancel the action.

PRINTING CONFIGURATIONS

The management functions provide two options for printing configuration data *F Print Configuration from Media* and *G Print Configuration from Modules*. A printout occurs at the printer currently assigned to the keyboard. Look at the keyboard status block to determine which printer. Configurations print in a standard format

From Media The *Print Configuration from Media* option initiates a printout of configurations residing on a specific medium.

- 1 Select *F Print Configuration from Media*. The *VERSION* field entry determines whether the data is from the current directory or the archival retrieval directory.
- 2 Press **ENTER** to confirm the action, or press **ESC** to cancel the action

From Modules The *Print Configuration from Modules* option initiates a printout of each configuration that currently resides in memory of the selected modules. This option references only the loop, PCU and module address selections

- 1 Select *G Print Configuration from Modules*
- 2 Press **ENTER** to confirm the action, or press **ESC** to cancel the action

After choosing either print option, the console collects the configuration information, then formats pages for printing. The current page number being processed displays in the message

Processing page n

NOTE Exiting the page after making a selection but while the *Processing page n* message is displaying causes the printout to be canceled

INFI 90 SYSTEM CONFIGURATION

The console presents other informational messages that identify which module configuration is currently being processed, and when processing is complete for all modules.

DISPLAY DIRECTORY OF CONFIGURATIONS

The *H Display Directory of Configurations* option allows the operator to view a directory display that lists the PCU configurations stored in the current directory on the hard disk. The listing is for the current directory only. The console ignores the *MEDIA* and *VERSION* field entries for this selection. The archival storage and retrieval function provides a directory function for viewing retrieved (*HISTORICAL*) PCU configurations. Refer to *Archive Data Retrieval* in the *Recording Process Data* section for specifics.

Select *H Display Directory of Configurations* to view a directory (see Figure 15-6). Each directory entry contains a loop, PCU and module number, and a storage time. These attributes identify a file that contains the configuration of a single module. Directory entries are in numerical order by loop, PCU and module number. A single directory page can show 22 entries. Press **[NEXT PAGE]** or **[PREV PAGE]** to view additional pages.

At the bottom of the display are two options for deleting saved configuration files from the hard disk: *X Delete Selected* or *Y Delete Page*.

07126149 27-FEB 91 TUESDAY PCU IMMERSION 1 2 3 4 5 6 7 8 9 0 1 2 13 14 15 16 17 18 19 20 5 4
21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 4

DIRECTORY OF CURRENT PCU CONFIGURATIONS										PAGE 1
Loop	Node	Module	Time		Loop	Node	Module	Time		
R	1	32	6	091424	22-FEB-90	L				
P	1	132	7	09132156	22-FEB-90	H				
C	1	132	8	091511	0" 22-FEB-90	H				
D	1	132	10	15115125	22-FEB-90	D				
Z	1	132	1	15	31156	22-FEB-90	P			
F	1	132	12	15140142	22-FEB-90	D				
G						R				
H						S				
I						T				
J						U				
K						V				

X Delete Selected Y Delete Page

TPS0032A

Figure 15-6 Display Directory of Configurations



To delete only designated configurations from the medium:

- 1 Select the *X Delete Selected* option The letters corresponding to each configuration listed in the directory turn red to indicate that the page is in delete mode
- 2 Select a configuration to delete by pressing its corresponding letter key Once pressed, the selector character changes to green to identify a deletion designation
- 3 After all files have been identified, press **[ENTER]** to initiate the deletion Press **[ESC]** at any time before pressing **[ENTER]** to exit delete mode

To delete all configurations on the page

- 1 Select the *Y Delete Page* option, the border of the page then highlights
- 2 Press **[ENTER]** to erase all of the configurations listed at the current page from the hard disk

SECTION 16 - OIS CONFIGURATION

INTRODUCTION

This section describes the configuration procedures of the operator interface station (OIS). The OIS console must be configured *before* it is put into operation (initialization is done at the factory). Careful planning should be done before completing any configuration. Do *not* operate the console before reading and clearly understanding this section. Complete only the specific configuration procedures required for operation in your plant.

NOTE The TUNE/CONFIG key lock and password security when configured limit access to configuration options. Before password security configuration on the key lock prevents unauthorized access. Password security configuration can be set to limit access to configurations by using both password security and key lock.


In this document, main console refers to an HIOIS401, HIOIS402, or HIOIS403. An HIOIS40A or HIOIS40D driver cabinet is also a main console, but it requires an auxiliary terminal. Auxiliary terminal refers to an HIOIC401, HIOIC4021, HIOIC4022, HIOIC4023, HIOIC403, or HIOIC404 console. The same configurations can be done while at any one of these types of consoles.

GENERAL INFORMATION

The *General Functions Menu* provides access to configuration functions (see Figure 16-1). Press **[GENL FCTNS MENU]** to call this display from any other display. All configuration procedures in this section start at the *General Functions Menu*, and use either *A OIS Configuration* or *B OIS Utilities* options. Refer to the *Menu Structure* section for a tree structured view of the *General Functions Menu* options.

The configuration resides on the hard disk mostly in .CF files. Each configuration option uses a separate display page. Except for display creation, these configuration pages are interactive, fill-in-the-blank type displays. The process engineer can both initially configure and edit an existing configuration on the same configuration pages. The procedures and input fields for both purposes are the same.

The console automatically checks each input and presents an error message when an attempt to enter invalid data has been made. Once the console identifies a field in error, it positions the input cursor at that field until it is corrected, cleared, or reset to its original entry.

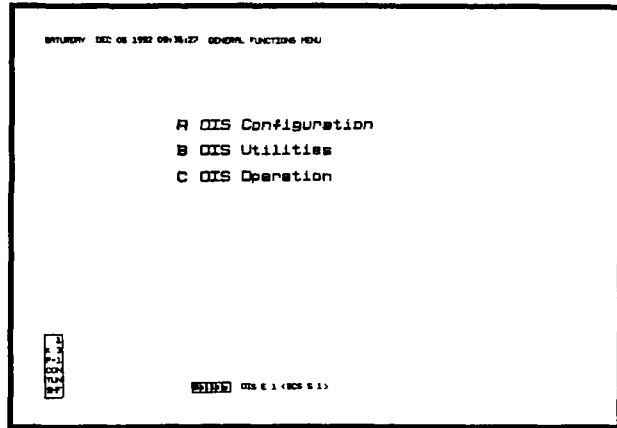

TPS0752B

Figure 16-1 General Functions Menu

This section explains the configuration procedures as if performing the initial console configuration. Some procedures may not apply for your particular operation and can be skipped. If modifying an existing configuration, some steps may not be required. Valid entries for display fields are given in either the configuration procedures or tables related to the procedures.

NOTE The text substitution function can provide a list of valid text entries for most configuration pages. If unsure of an entry or text has been changed through text substitution, reference this function. For example, to find the valid tag types that can be entered during tag configuration, call the text configuration function then enter *9 Tag Type*. Refer to *Text Definition and Substitution* in this section for procedures.

Usually, configuration of the console is performed off-line using the software, logging, database and graphics (SLDG) configuration tools, then transferring required configuration files to the console. This is the preferred method. The SLDG program, however, does not support all OIS configuration requirements. Configuration options available through the console can be used to modify or make additions to the current configuration, or a configuration created on a SLDG work station and uploaded to the console. SLDG work station refers to an engineering work station running the SLDG program.

The SLDG program also provides tools and an easier method for creating displays. The console provides a display editing capability. Refer to the *Personal Computer Software, Logging,*

Database and Graphics instruction for additional information. If changes are made at the console, it is suggested that the configuration files affected be copied back to the SLDG work station. This will maintain the integrity of the configuration files.

The process engineer can configure the console using either the standard mylar keyboard or an auxiliary engineering keyboard. Both provide the same functions, although it may be easier and faster to perform configuration procedures using the auxiliary engineering keyboard. The layout of the mylar keyboard is set up to facilitate process control and monitoring operations where the auxiliary engineering keyboard layout is a QWERTY style keyboard better suited for data input. Refer to Appendix A to cross reference functions of the mylar keyboard keys to auxiliary engineering keyboard keys.










Keys used in configuration procedures are located in the alphabetic character block, cursor control block and numeric keypad block sections of the mylar keyboard. Refer to the **Keyboard and Peripherals** section for their location. Table 16-1 lists the specific keys used for configuration and their functions.

NOTE When using the key lock for security switching the key lock back to the LOCK position before saving the current configuration page causes the console to discard any and all modifications. Saving occurs after selecting a save option or pressing **ENTER** or **NEXT PAGE** or **PREV PAGE** in some cases.

Table 16-1 OIS Configuration Keys

Key	Function
A-Z, 0-9 Punctuation	Enters alphanumeric data and values ASCII characters and punctuation
SPACE	Flips a character position in a field with a blank space
ENTER	Enters current data into the console to update the configuration files. In most cases this key must be pressed after completing a line at a configuration page.
ESC	Returns to previous menus and eventually the General Functions Menu from the current page. Any data keyed in may be lost unless ENTER is pressed before ESC . At some displays this key calls a Select Field input prompt that can be used to specify then move the input cursor to a specific display field that also provides an abort option. Prompts explain additional use of this key.
CLEAR	Erases keyboard entry errors or old data from input fields.

Table 16-1. OIS Configuration Keys (continued)

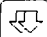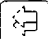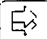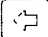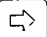Key	Function
	Moves the input cursor to the next logical field determined by the console. If there is an error, the cursor stays on the input field in error, and the system displays an error message. Tabbing also enters data for the field from which the cursor was tabbed.
	Performs the same functions as TAB but moves to the previous logical input field.
	Resets the current field to the text string held when the display was first called. To reset a field, press HOME while at the field but before moving to the next field or pressing any other key.
   	Moves the input cursor one field in the direction of the arrow. Use these keys to randomly move about a display.
 	Moves the cursor within an input field one position in the direction of the arrow.

OIS SUBSYSTEMS CONFIGURATION

During configuration, the process engineer defines information necessary for the console to collect and display INFI 90 process data, and to initiate operator manual control actions. The engineer also designs the desired display formats to show all necessary information, and sets up window, security, alarm management and data recording capabilities.

The sections of the instruction that describe the configurations required to completely set up the console for any particular application are:

OIS System Configuration - defines the operating parameters for the console, and enables and accounts for supported peripherals. This section gives the procedures to set the maximum number of exception reports the console processes in a one second cycle, and the order that the console is to perform its remaining processing responsibilities after processing these exception reports. It also explains time and date format configuration.

Window Management - gives the procedures for making window assignments locally using the *X Device Definition* function, or remotely through the OISWIN account.

Password Security - sets console security features. These include:

- Security options
- Security level
- User password definitions.
- Display mask configuration
- Tag security level and group assignment
- Log security level assignment

Database - provides procedures for entering or editing tags in the tag database, engineering unit descriptors and logic state descriptors. It also explains tag database broadcasting.

Display Generation - explains display and symbol creation options using either the EDT function for line editing, or associated engineering tools. Also, it explains procedures to assemble displays from source files into a usable OIS format, and to view errors encountered during this final assembly process.

Keyboard - gives procedures for assigning displays, key macros and user tasks to keyboard keys and annunciator display panel (ADP) pushbuttons. Also, it explains key macro definition, and alarm tone and relay configuration.

Alarm Management - sets standard console indications that notify an operator of an alarm condition, and console responses such as triggering alarm annunciators. It provides procedures and requirements for configuring:

- Alarm groups
- Alarm quality options (both good and non good quality)
- Automatic alarm inhibiting
- Alarm summary.
- Alarm summary reports
- Alarm tones and relays
- Global alarm acknowledge and silence
- Remote alarm acknowledge

Open Access System Configuration - identifies the open access system (OAS) network node responsible for storing trend data and custom logs. Trend data stored by the open access system can be viewed at trend displays by defining remote trends during trend definition. Custom logs can be archived to an open access system through archival storage procedures.

Trend - establishes requirements and procedures for defining trends. A trend definition identifies a trend for which the console is to collect and present data in displays and logs. Also, it explains additional configuration requirements for using this collected data in trend displays and XY plots.

Logging gives instruction for creating and enabling process data recording capabilities. These include the system events log (and operator actions log), custom logs and sequence of events (SOE) logs. Some standard custom logs include trend, trip and snapshot logs.

Archival Storage - describes the procedures to set up the console to store collected process data. Archiving extends normal console storage of logs, PCU configurations, system events, trends and tag data indefinitely.

Peripherals - provides a list of available printer types and explains printer configuration requirements. It also explains console definition and logical CRT assignments required for password security.

Display Configuration - provides additional configuration requirements for displays and symbols used in console specific operations. These include faceplate elements for operator configurable displays, XY plot definition and alarm summary requirements. This section also gives procedures to define a display or pop up element to automatically appear at the screen when a certain process condition occurs.

Text Definition and Substitution - presents steps to change default console presented text strings to user-defined text strings. Almost all text can be substituted through this configuration.

Trend Pen Cluster Configuration gives procedures for enabling trend pen recorders, and selecting process variables to track. This sets up the interface logic required between recorders and the console.

User Task - associates a user-written program enabled through the user task interface (UTI) with an index number. The index number is used in other configurations to allow executing that task by pressing a designated keyboard key or ADP pushbutton.

The order in which this instruction presents the configuration procedures may or may not be the best order for your specific needs. Some of these configurations may not apply to your operations at all. System, database and display configuration are the minimum configuration requirements. Once the console is completely configured, a backup copy of the configuration on

hard disk can be made using a tape drive. Refer to the *Terminal Utilities* section for procedures to back up (save) the configuration

Network Definitions

The console requires access to the DECnet network to perform some of its functions. For the console to perform its process management responsibilities, the access allows the console to:

1. Direct windows to auxiliary terminals on the network
2. Print logs at either shared or private printers connected to the network. Printers connect either through a terminal server or an auxiliary terminal.
3. Print a copy of a screen at a printer connected to the network. Printers used for printing screens connect through a terminal server only, not an auxiliary terminal.
4. Archive custom configured logs and system events to an open access system.
5. Display trended data collected by an open access system.

Any system connected to the network, whether it is an auxiliary terminal or a printer connected through a terminal server, for example, is a network node. Each node on the network has a unique name to identify it to other nodes. The configuration procedures at the console that enable the previous network capabilities require entering a node name as one of the attributes of a configuration.

Through the SYSTEM account, the process engineer defines the node names for those nodes the console is to access. This is done during initial software installation. The procedures associate a node name to the hardware address of a network system. The SYSTEM account also allows renaming, adding and removing node names, and also viewing a list of current node name assignments. Refer to the *Operator Interface Station, Hardware Manual* for further explanation and procedures.

The configuration procedures in this section requiring network node name input include:

Window Management - auxiliary terminals do not have direct access to the INFI 90 communication highway. Because of this, they use and operate through windows generated at a main console. The console requires window management to direct windows to an auxiliary terminal (or other network nodes). The console references node names defined in window management procedures to send windows.

Keyboard Definitions - an auxiliary terminal can use either an IIMKM02 keyboard interface to connect a mylar and auxiliary engineering keyboard, or a keyboard can connect directly to the VAXstation of the terminal without use of an IIMKM02 interface. Performing keyboard definitions defines the keyboard type for the main console and those auxiliary terminals that receive windows from the main console. It also identifies the type of keyboard interface being used by the network node receiving a window. A node name must be entered while defining keyboard types if a terminal to which the console directs windows uses an IIMKM02 interface.

NOTE The *X Server Node* name entered at the keyboard definitions page for a keyboard during system configuration must match the *X Server Node* name entered at the *X Device Definition* page during window management configuration.

Open Access System Definition - an open access system operates as a system node on the network with direct connection to the INFI 90 communication highway. It, therefore, has its own unique node name. The console requires identifying this node name for those functions that access an open access system.

OIS System Configuration

OIS system configuration must be done **before** any further configuration or operation can take place. During this component of configuration, the process engineer defines general parameters and keyboard definitions that effect operation and enable supported peripherals.

Additionally, system configuration includes setting up the processing responsibilities of the console. This can be used to maximize operation based on its intended application. A *CIU Task Processing* option determines the number of exception reports processed during a one second cycle, and the order of priority for executing the remaining task processing responsibilities.

System configuration also includes setting the time and date format. The time and date that appears at the display title line or other functions that use a time and date field conform to the configured format.

SYSTEM CONFIGURATION

NOTE The console must be reset after all or any changes have been made at the *OIS System Configuration* page. It will not exit this function once a change has been made without initiating a reset. Press [ESC] **before** pressing any other keys to exit this display without having to reset the console.

- Step 1** The process engineer defines general system operating parameters through one of the *OIS System Configuration* pages (see

Figure 16-2). To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown.

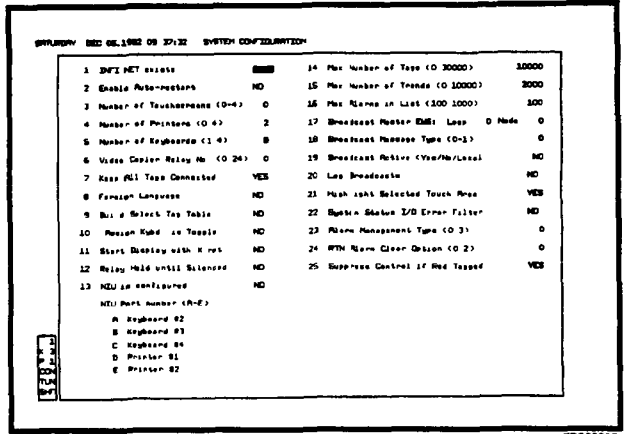



Figure 16-2. OIS System Configuration - General Parameters

Step 2 To define the displayed fields

a Use the configuration keys listed in Table 16 1 to enter data and move between each display input field Table 16-2 lists the system configuration page attributes Refer to this table when entering data After each data entry, pressing **ENTER** or moving to another field causes the console to prompt with

Do Not Restart the OIS While It Is Processing

Before continuing with further input or resetting the console, wait for the message.

Restart System, Updates Have Been Done

Continue with this step until all system attributes have been defined When completed, go to the next step

Press **ESC** at any time to call a *Select Field* input prompt, which can be used to move to a specific field

OIS CONFIGURATION

b. Restart the console using the procedures given under **Reset** in the **Window Operations** section. When the console comes back on line it operates with the parameters defined at this screen.

Table 16-2 OIS System Configuration Attributes

Field	Valid Entries	Purpose
INFI-NET exists	YES/NO	Defines the type of communication highway on which the console is operating INFI-NET or Plant Loop system YES = INF -NET system NO = Plant Loop system
Enable auto-restart	YES/NO	Not applicable for this console NO - default leave at default
Number of touch screens	0 - 4	Not applicable for this console 0 - default leave at default
Number of printers	0 - 4	Identifies the number of printers the console can access for logging. The console can access up to four printers connected to the network through terminal servers or auxiliary terminals 0 - default no printers connected 1 to 4 = number of printers accessed
Number of keyboards	1 - 4	Identifies the number of keyboards supported. This number should correspond to the total number of keyboards being supported by the main console including itself and its auxiliary terminals Refer to Keyboard Definitions in this section for procedures to define the following for each keyboard <i>Keyboard Type</i> <i>Trackball</i> <i>Number of ADPs</i> <i>X Server Node</i>
Video copier ready	0 - 24	Not applicable for this console 0 = default no connection
Keep all tags connected	YES/NO	Determines whether the console monitors exception reports continuously or only when required. The console monitors exception reports sent on the communication highway YES = monitors exception reports continuously for all tags defined in its database providing a continuous update of the database values NO = monitors exception reports for only those tags that currently appear in a display at the screen and only when a tag is collecting data for tags

Table 16-2. OIS System Configuration Attributes (continued)

Field	Valid Entries	Purpose
Foreign language	YES/NO	Not applicable for this console NO = default leave this field at its default
Build select tag table	YES/NO	Allows the console to build a tag table it uses to automatically activate control for a tag selected through the TUNE , DETAILS or OP PARAMS functions YES = enables the console to build a tag table NO = default disables building a tag table, disabling automatic control activation
'Assign kybd is toggle	YES/NO	Determines the operation of SWITCH CRT YES - key acts as a toggle to switch between two windows when the console generates only two windows NO - system prompts for the window number to which to switch. Must be set to NO when the console is generating three or more windows
Start display with x rpt	YES/NO	Determines the initial presentation of variables at display call up YES = causes the console to wait for a new exception report before it displays any values, states or alarms for tags after the operator first calls a display. The alarm status and value fields for a point remain blank until the console receives a new exception report for that point NO = causes the console to display the values, states or alarms received in previous exception reports for points when the operator first calls a display
Relay hold until silenced	YES/NO	NO = default an alarm relay remains closed until the alarm condition driving the relay returns to normal or is acknowledged or the duration set for the relay expires YES = an alarm relay remains closed until the operator presses SILENCE or the duration set for the relay expires
NIU is configured	YES/NO	Not applicable for this console NO = default leave this field at default
Max number of tags	0 - 10000 or 0 - 30000	Determines disk space allocation for the tag database The console can support up to 30 000 tags in its database. If using an IIMCP01 module (Plant Loop system) the field and database size default to 10000. If using an IIMCP02 module, the field and database size default to 30000 If changing the size of the tag database increase or decrease it to the nearest 2500 increment up to 10000 (e.g. 2500 5000 7500 or 10000) requiring any size greater than 10000 set the field to 30000 NOTE Decreasing this number erases any database tag entries that have index numbers above the new value entered. It is recommended to leave this field at its default even if the maximum number of tags is not required

OIS CONFIGURATION

Table 16-2 OIS System Configuration Attributes (continued)

Field	Valid Entries	Purpose
Max number of trends	0 - 10000	<p>Determines disk space allocation for the trend database should be set close to the current database requirements. This can be increased later to add more trends to the database if desired.</p> <p>The console allows for up to 10 000 trend definitions but the maximum number of each type of trend is 2 000 local one minute standard trends, 2 000 local display trends and 5 000 remote trends.</p> <p>NOTE Decreasing this number erases any trend definitions that have index numbers above the new value entered.</p>
Max arms in list	100 - 1000	Determines the maximum number of arms that the console saves for display in any given arm summary element. Each summary can include up to 1 000 current arms.
Broadcast master EWS ¹	0 - 250	<p>Address of an interface unit that connects a workstation running the global database manager to the NFI-NET loop. Relates to tag broadcasting and is required to enable broadcasting tag changes made at the console or receiving broadcast tag lists (database) from a GDM workstation.</p> <p>Several GDM workstations can be connected to the loop at one time. This address ensures that only broadcasts from a designated workstation are received at this console.</p> <p>Valid Loop and Node addresses are:</p> <p>0 = no loop connection or Plant Loop system</p> <p>1 to 250 = loop and NFI 90 node address</p> <p>Related fields are:</p> <p><i>Broadcast Message Type</i></p> <p><i>Broadcast Active</i></p> <p><i>Log Broadcasts</i></p>
Broadcast message type ¹	0 - 1	Relates to tag broadcasting 0 = default leave at default
Broadcast active ¹	YES/NO/ LOCAL	<p>Relates to tag broadcasting. Used to enable/disable or limit tag broadcast activities at the console.</p> <p>YES = enables receiving a broadcast tag list from a GDM workstation and receiving and broadcasting tag changes made at this console to the GDM workstation.</p> <p>NO = disables both receiving and sending any type of tag broadcast. This disables broadcasting completely.</p> <p>LOCAL = enables receiving broadcast tag lists and sending tag changes, disables sending tag changes to the GDM workstation.</p>
Log broadcasts ¹ (Future)	YES/NO	<p>Relates to tag broadcasting. Not applicable for this software release.</p> <p>NO = default leave this field at default.</p>

Table 16-2 OIS System Configuration Attributes (continued)

Field	Valid Entries	Purpose
High light selected touch area	YES/NO	Enables touch point area highlighting. The operator can select displays or control points through the keyboard or through a touch point. For touch point selects, the console can be set to highlight the selected touch point area to provide a visual verification of selection. YES = enable touch point highlighting NO = disable touch point highlighting
System status I/O error filter ¹	YES/NO	Determines whether the console makes an entry in the alarm summary list or the events log for a system status (S) alarm caused by a remote I/O error or local I/O error in a PCU module. Valid only when the console is operating on INFI-NET system. YES = enables filtering of remote or local I/O status errors NO = default, disables filtering of remote or local I/O status errors
Alarm management type ²	0-3	Determines an alarm summary and an alarm processing operation. 0 ³ = default, console builds an alarm list (see alarm summary) in chronological order as alarms occur. 1 = builds an alarm list with alarms of the same priority grouped together, then chronologically ordered within that priority. 2 ³ = same as option 0 but employs fixed position return to normal. 3 = same as option 1 but employs fixed position return to normal.
RTN alarm clear option	0-2	Not applicable for this console. 0 = default, leave this field at its default.
Suppress control if red tagged	YES/NO	Defines red tag status operation at the console. YES = default, suppresses control changes made from the keyboard for any block that is red tagged. Red tag status information also appears on the display. NO = does not suppress control changes made from the keyboard; red tag status appears for informational purposes only.

NOTES


- 1 Fields are valid only when the console is operating on INFI-NET system.
- 2 When using options 0 and 1, a tag that returns to its normal state generates a new alarm line at the beginning of the alarm summary scrolling the last entry off of the summary. Options 2 and 3 are fixed position return to normal options. If used, a tag that returns to its normal state maintains its current position in the list but changes to a specified return to normal color.
- 3 Alarm Management Type is set to 0 or 2; all alarm entries in alarm summaries default to priority 1 (P1). Priority sorting is not implemented.

OIS CONFIGURATION

KEYBOARD DEFINITIONS

Before the OIS console can direct windows to another network node (e.g. auxiliary terminal) the process engineer must perform keyboard definitions to identify the node that is to receive the window, and the type of keyboard interface being used by that node. If an auxiliary terminal with an IIMKM02 keyboard interface is receiving a window, the number of annunciator display panels being driven by the keyboard interface of the terminal must also be defined

Step 1 The process engineer defines keyboards through one of the *OIS System Configuration* pages (see Figure 16-3). To call this display, first press **[GENL FCTNS MENU]**, then select the following menu items in the sequence shown



NOTE The console must be reset after making any changes at the keyboard definitions page. It will not exit this function once a change has been made without interrupting a reset. Press **[ESC]** *before* pressing any other keys to exit this display without having to reset the console.

Keyboard Type (IMEI/IME2)	Trackball (Yes/No)	Number of RDP Panels (0-9)	X Server Mode
1 Keyboard #1	NO	1	0
2 Keyboard #2	NO	0	OWEL
3 Keyboard #3	NO	0	0
4 Keyboard #4	NO	0	0

TPS0736A

Figure 16-3 OIS System Configuration - Keyboard Definitions

Step 2 To define a keyboard

a Use the configuration keys listed in Table 16-1 to enter data and move between each display input field Table 16-3 lists the attributes of the keyboard definitions page Refer to this table when entering data at this page. Press **[ESC]** at any time to call a *Select Field* input prompt, which can be used to move to a specific field

b After completing all required entries, press **[ENTER]** This updates the configuration on the hard disk and implements any changes After pressing **[ENTER]** the following message appears.

Update of Files In Progress, Please Wait

Before continuing with further input or resetting the console, wait for the message

Restart System, Updates Have Been Done

c. Restart the console using the procedures given under *Reset* in the *Window Operations* section. When the console comes back on-line it operates with the parameters defined at this screen

Table 16 3 Keyboard Definition Attributes

Field	Purpose
Keyboard type	<p>Identifies the type of keyboard being used for each of four possible keyboards By default keyboard numbers correspond to window numbers (ie keyboard one is assigned to window one) Valid entry is</p> <p>MKM2 = identifies an IMKM02 keyboard interface being used by the network node receiving a window associated with the keyboard Use this type only when the window is to appear at the main console (ie, this console) or its auxiliary terminal (eg IO C40n tied to an IIO S401 or IIO S40D main console)</p> <p>XKBD = use this type for any other network node receiving a window whether that node uses an IMKM02 interface or not For example a personal computer, work station, another main console or an auxiliary terminal tied to another main console</p> <p>NOTE Using MKM2 requires making an X Server Node entry</p>
Trackba	<p>Not applicable for this software release</p> <p>0 = default leave this field at default</p>
Number of ADPs	<p>Enables and identifies the number of panels assigned to a keyboard The keyboard type must be MKM2 to define annunciator display panels (ADP) Each keyboard supports four annunciator display panels a fixed and table top panels Valid entry is</p> <p>0 = default no annunciator display panel</p> <p>1 to 4 = number of panels assigned to that keyboard</p>

OIS CONFIGURATION

Table 16-3. Keyboard Definition Attributes (continued)

Field	Purpose
X server node	<p>Required for MKM2 type keyboards. Identifies with which network node (e.g. auxiliary terminal) the keyboard associates. Valid entry is 0 = assigns the keyboard to the main console. Use this for an IIO S40n console.</p> <p><i>nodename</i> = assigns the keyboard to a node. The console checks to determine if the name corresponds to a valid node after pressing ENTER and before making the assignment.</p> <p>NOTE The keyboard assignments must agree with the window assignments (<i>X Server Node</i>) made through <i>X Device Definition</i>.</p>

TASK PROCESSING CONFIGURATION

During operation, the console performs its processing in a certain order every cycle, a cycle is one second. Task processing configuration allows adjusting the number of exception reports the console is to process during a cycle, and it assigns a priority to the remaining processing responsibilities of the console.

The ability to set the number of exception reports to process during a cycle allows the process engineer to adjust the operation of the console for its intended use. If the main responsibility of the console, for example, is to present real-time data for operations, then the number of exception reports to process should remain high. A lower number may be desired for a console used for less critical tasks.

The tasks the console is responsible for processing during a cycle include:

- Control commands initiated at the console
- Exception reports received from the process
- Standard and enhanced trend data
- Operator assignable trends (fast trends)
- MFC data source data for XY plots
- Sequence of events log data
- PCU configuration operations
- PCU management operations
- Module firmware reports

Of these responsibilities, the console always processes control commands first, then exception reports. After that, the order of processing depends on *CIU Task Processing* configuration. This option also sets the number of exception reports the console is to process during a cycle.

When all tasks have been completed or the one second time elapses, the console restarts its processing order. This sequence continues to repeat under normal operating conditions. Due to the limited time in a cycle, some tasks may not be executed in the current cycle. The processing may be delayed until the next or subsequent cycles depending on the system load.

If the console completes all processing requirements of the cycle and determines that there is sufficient time remaining in the cycle, it will return to processing control commands and exception reports until the one second time elapses. The *Max number of XR's to be processed each second* set during configuration still applies however. The console will not process more than this number of exception reports each cycle even if there is processing time remaining in the cycle.

With a configuration that requires the console to process a large number of exception reports, it is possible that some of the lower priority tasks will be executed in later cycles. If the number of exception reports to process is too large, the processing of exception reports might not be completed during a single cycle. For these reasons, care must be taken when deciding the number of exception reports to process and the priority of each of the remaining tasks.

NOTE Usually the defaults for the *CIU Task Processing* configuration are adequate for proper operation of the console. It may be beneficial to become familiar with this function before performing a console configuration to maximize processing capabilities.

Step 1 The process engineer defines task processing through the *CIU Task* page (see Figure 16-4). To call this display, first press (GENL FCTNS MENU), then select the following menu items in the sequence shown.

A OIS Configuration → *E System* → *L CIU Task Processing*

Step 2 The fields at the page include

Max number of XR's to be processed each second - determines the maximum number of exception reports to be processed during a cycle. The range is from 1 to 1600, the default is 150.

When the console is equipped with a serial interface unit (IIMCP01 module), a good starting point for setting the number of exception reports to be processed each second is the default of 150. When the console has a SCSI interface unit (IIMCP02 module), a value of 600 exception reports is recommended as a good starting point.

Number of seconds in which XR polling did not complete - gives a count of the number of times one of two events occur. The count increments each time no exception report polling occurred during a cycle. This can happen, for example, if during the end of the

OIS/CIU/NOV DEC 05 1982 08 48 41 CUI/TKK	
Max number of NO's to be processed each record	0000
Number of seconds in which NO polling did not complete	10
Reset incomplete polls/second count	NO
Task	Priority (1-3)
Time d.-.	2
Operator Assignable Trends	2
Profiles	2
Sequence of Events List	2
NOU Configuration Operations	3
NOU Load and Save Operations	3
Module Firmware Reports	3

3
 2
 1
 0
 0
 0
 0
 0

TP50772B

Figure 16-4. OIS System Configuration - CIU Task Processing

current cycle the console has polled for some type of data other than exception report data and the processing of that data does not complete until the end of the next cycle

The count also increments each time not all exception reports are returned to the console during a cycle. This can occur when the buffer containing exception report data fills, which causes the processing of any waiting data to extend into the next cycle. For example, if the console is set to process 100 exception reports and the buffer fills after 50 reports, during the next cycle the console must complete the processing of the remaining 50 reports. This assumes that after the first 50 reports, there are 50 more waiting. If the console processes the 50 and there are no more reports, then the count does not increment.

The not completed attribute can be referenced to determine if the console is requesting a large number of exception reports from its communications interface unit. A number in this field does *not* indicate data loss, only that there is a large amount of data remaining to be processed.

Reset incomplete polls/second count - used to reset the incomplete poll counter to zero. Enter **YES** at this field to reset the counter. The field defaults to **NO** before and after initiating a reset. Reset the counter after making adjustments at this page.

Task - the column provides a list of console processing responsibilities.

Priority - the column indicates and allows changing the priority associated with a task.

To define the fields at this page

a. Use the configuration keys listed in Table 16-1 to enter data and move between each display input field. At the *Max number of XR's to be processed each second* field enter a number from 0 to 1600. A maximum of this many exception reports will be processed during a single cycle.

Refer to the *Number of seconds in which XR polling did not complete* field to adjust the maximum number of exception reports. This field may need to be adjusted later if changes to the system are made.

b. In the *Priority* column of each task listed, enter a priority from 1 to 3. A task having a priority of 1 executes before a priority 2 task, and a priority 2 task executes before a priority 3 task.

NOTE This console does not support MFC data source profiles. Set the priority of the task to 3.

For tasks having the same priority level, processing occurs on a first-in, first-out basis except in the case of trending. If there are other tasks with the same priority as trending, they execute before trending.

c. Press **ENTER** to update the configuration, then press **ESC** to exit.

During approximately the first ten minutes after the console comes on-line, the number of incomplete polls may increase since the entire database must be reported. As a result, the processing of exception report specifications takes priority over all other processing except control operations. At the end of the ten minutes, the processing should return back to the order dictated by this configuration. It is suggested that the incomplete poll counter be reset after the console has been on line for at least ten minutes.

To reset the incomplete poll counter

a. Use the configuration keys listed in Table 16-1 to enter data and move between each display input field. At the *Reset incomplete polls/second count* field, key in YES.

b. Press **ENTER** to reset the counter to 0.

TIME/DATE FORMAT

The process engineer can format the time and date to appear in any desired order. For example, the date can appear in conventional format as MONTH-DAY-YEAR or military format as DAY-MONTH-YEAR. With this configuration, the time and date order

c. At the *Time and Date Order* field specify the time and date order of appearance the console is to use when presenting time and date. This sets the order for all functions except the title line. For example, to have the date appear before the time (e.g., 28-FEB-92 06.17:35) enter DT.

d. Specify the title line time, date and day of the week order of appearance at the *Title Line Order* field. For example, for the title line to display in time, date and day of the week order enter TDW.

e. At the *Day of Week Width* field, specify the number of letters that are to appear at the title line for the day of the week. For example, to show a day of the week as a three letter abbreviation enter 3 (maximum ten characters) The display will show MON for Monday

f. After completing all fields, press **ENTER**. This updates the configuration on the hard disk

g. Press **ESC** to exit this display

Window Management

The OIS console supports up to four windows. These windows can be directed to several different types of nodes on the DECnet network. The types of network nodes that can receive a window include.

- Auxiliary terminals
- Other main consoles
- VAXstations
- Engineering work stations (personal computers) running PATHWORKS software

The console determines to which network node it is to send a window by window management configuration. The name of a node entered when making window assignments identifies that node to the console. Once a window assignment is made, the console sends a window to a node to give access to the OIS application running at the main console. Password security determines the operations that can be performed through this access.

A window must be directed to an auxiliary terminal to perform INFI 90 process control and monitoring through that console. An auxiliary terminal does not have direct access to the INFI 90 communication highway, therefore, the operation of a terminal ties directly to a main console. If the OIS application is shut down at the main console, the application also shuts down at the auxiliary terminals to which the main console is directing its windows. This also applies to VAXstations or engineering work stations (EWS) receiving windows.


Window assignments can be made in two different ways. The console provides an *X Device Definition* function to perform the initial assignments, or to redirect windows. Menu selections provide access to the *X Device Definition* page. An OISWIN account provides a remote window management capability. Logging into this account initiates an interactive program that allows either initially assigning or redirecting windows. Window assignments can be changed at anytime through these functions.

When using the OISWIN account to assign a window, the system performs a status check on a network node before making an assignment. If that node is invalid or inaccessible, an error message displays at the screen. Try again after determining the cause of the problem. Check the node name entered, or that the node is powered up. Also, check the network status of the node.

Access to a specific node on the network can fail for several reasons. For example, the node can be powered down or a hardware problem can exist. When the console detects a failure of a node that it is sending a window or windows to, it immediately deactivates the windows being sent. The *X Device Definition* page or OISWIN account interactive program displays the current status of each window. Once a problem is corrected, sending a window can be reinitiated by toggling the status back to an active status.

X DEVICE DEFINITION

- Step 1** The process engineer makes window assignments at the console through the *X Device Definition* page (see Figure 16-6). To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown:



- Step 2** To define or change window assignments:
- a Use the configuration keys listed in Table 16.1 to enter data and move between each display input field. Table 16.4 explains each field of this page; refer to this table when entering data.

NOTE: The window currently displayed can be reassigned, but the window disappears after pressing the **ENTER** key terminating the session.

- b After completing all required fields, press **ENTER**. If reassigning a window, it disappears from the network node that it was previously assigned to and appears at the new target node after a few seconds.

```

WINDOW  FILE 03 1992 07-01-04          WINDOW CONFIGURATION

X Server  Print  Window  End User  Mouse  Buttons  Touch  Key  Resp
Node      Node   Active   Status   L   C   F   Pt  Resp  Vel/Len
1 Window 01  0        YES  WINDOW  YES YES YES  YES  NO  100
2 Window 02  0287  0287  YES  WINDOW  YES YES YES  YES  NO  100
3 Window 03  0283  0282  NO   ZOOM   YES YES YES  YES  NO  100
4 Window 04  0284  0282  YES  ZOOM   YES YES YES  YES  NO  25

9 OIS Client Name  028401
    
```

TPS0231B

NOTE Changes made to the fields of the *X Device Definition* page take effect after the console is reset or the window whose attributes have been changed is reassigned to another network node, or a window is deactivated then reactivated

Figure 16-6 Window Management - X Device Definition

The error message *Unable to Open Window as Requested* displays if a node assignment is invalid, or if a node is not accessible. If access to a specific node fails, investigate and correct the problem, then go to the *Window Active* field for that node and enter **YES** to reinstate sending windows.

Table 16-4. X Device Definition Fields

Field	Description
X server node	Identifies the network node for which the window is targeted. Valid entry is 0 = use to display the window on the local screen of this console. enter this for an IIO S40n console. <i>nodename</i> ¹ = identifies the destination node that is to receive a window NOTE The <i>X Server Node</i> field at the keyboard definitions display must match this field.
Print node	Identifies the print server node. This is the network node responsible for configuration of the printer capture of the OIS application window and directing the image to the print queue manager. Any network node running the remote screen copy server node software can be specified as the <i>Print Node</i> . Valid entry is 0 = this main console. <i>nodename</i> ¹ = designates a node to act as the print server node.

OIS CONFIGURATION

Table 16-4 X Device Definition Fields (continued)

Field	Description
Window active	Shows the status of a window and allows manually changing the status. The system automatically sets this field to YES if communicating with a network node or NO if it cannot communicate with a node. Valid entry s YES = enable sending the window NO = disable sending the window
Initial state	Use this field to determine if the window initially appears at the target node as a window or an icon. This is important when sending windows to other stations so as not to have a window come up over a current window. Valid entry is WINDOW or CON
Mouse buttons	Allows setting the mouse operations within the OIS application. It specifies which mouse buttons can be used to activate touch points on displays. Valid entry s YES - enable button NO - disable button NOTE: The left button is always for windows functions
Touch point beep	Specifies whether or not an auxiliary engineering keyboard should beep when a touch point is selected using the mouse. Valid entry s YES - enable tone NO - disable tone
Key beep	Specifies whether or not an auxiliary engineering keyboard should beep when a key is pressed. Valid entry is YES - enable tone NO - disable tone. Leave this field at NO for a keyboard with a keyboard type of MKM2
Beep volume	Defines the keyboard beep volume. This field relates to the <i>Touch Pt Beep</i> and <i>Key Beep</i> fields. The volume ranges from 0 (no beep) to 100 (loudest). Leave this at default when using an IAKB02 or AKB03 keyboard
OIS client name ²	Defines the text that appears in the title bar and icon for the window

NOTES

- 1 Refer to the *Operator Interface Station, Hardware Manual* for information on assigning node names to network nodes
- 2 The console must be restarted for changes made to this field to take effect. Refer to *Reset* in the *Window Operations* section

REMOTE WINDOW ASSIGNMENT

Remote window assignments allow redirecting the main console window assignments from a remote network node. An interactive program initiated by logging into an OISWIN account gives the ability to initially define, or to change window assignments. It provides the capability to redirect a window to a remote node from that node or any other remote node even if the node does not have ready access to an OIS application window. The interactive program can be run from either a terminal or terminal window.

To change window assignments remotely:

1. Log in at the remote network node, refer to the procedures given in *Logging Into an Account* in the *Window Operations* section.

NOTE Create a terminal window at an engineering work station using procedures given in the PATHWORKS software package

2. At the dollar sign (\$) prompt of a terminal or terminal window, type

SET HOST *nodename*

where:

nodename Name of a main console from which to get the window

3. Log into the OISWIN account by entering a *Username* and *Password*; the default password is OISWIN. The account is used only for remote window management. The system runs an interactive program that displays the current window assignments.

4. Change window assignments as desired. The options allow displaying current assignments, activating or deactivating windows, and redirecting windows of the console. The new assignments take approximately 25 to 30 seconds to complete.

Password Security Configuration

NOTE Security maintenance functions are provided to allow key personnel to assign access rights to security levels and to set up user IDs and passwords. These functions should be protected at a high level of security.

Password security gives or denies access to OIS functions and displays to specific personnel identified by a password. Each display can be configured for full process control access, or access limited by password security. With password security, the operator must log on by entering his password before the console will grant control access.

Security can be applied to an entire display and to individual tags. This enables the ability to organize displays and related tags into security areas. Access to configuration, alarm management and tuning can be secured under password protection. The CONFIG/TUNE key lock can be used along with passwords for additional security.

System security functions can be modified or changed at any time through password security configuration. Before defining

OIS CONFIGURATION

password security, the CONFIG/TUNE key lock switch limits access to password security configuration Security maintenance functions support defining, changing and monitoring system security

NOTE After modifying a password the password must be entered again to put the changes into effect

Access Rights

Access rights grant unrestricted access of console capabilities to designated personnel The console provides up to sixteen security levels (minimum four). Each user is assigned a security level

Configuration - allows entry into the console configuration functions This access right allows plant personnel to configure items allowed by individual configuration masks If a particular configuration is set to not allow access, that configuration page can only be used to view the current configuration

Control - lets an operator initiate process control through a tag if the display level and tag level allow it The operator initiates control through faceplate type device mimics

Tuning enables tuning and block details operations, and additionally it enables the operations available at the operating parameters page Access to tuning and block details is through keyboard keys or the operating parameters page

Monitor - allows viewing all areas of the system

Key locks - enables and disables key lock requirements for access to the tuning and configuration functions The console can be set to require key lock along with the configuration and tuning access rights of password security, or key lock independent of password security

Alarm management - lets the operator silence or acknowledge alarms. Each display or tag can have a security level assigned This enables alarm management access rights to be defined on a per display or individual tag basis Silence and acknowledge are keyboard key functions.

Log - lets the operator activate or deactivate logs, and cancel queued log prints These capabilities are available through log status

Security and password maintenance - allows modifying security levels and user passwords. This access should be limited to personnel responsible for console security

Logical CRT - defines at which windows personnel can log into for given operations Defines the windows that can be accessed

when using **[SWITCH CRT]** This access can also be used in displays to define at which windows a display can be called.

Operation - gives access to general operations functions such as *Log by Name* and operator configurable displays

NOTE The *Diagnostic/Debug Terminal* access right does not apply for this console

Display Access Display access rights are set on a per display basis Each display identified by its display name can have a primary and secondary security level assigned This assignment determines if that display can be called to the screen based on the current security level of a user The console checks the primary level first to determine if the operator has the appropriate security level clearance If the first check fails, it then checks the secondary level for a match Security level assignments can either be done through password security options, or during display creation using a security mask (**sm**) escape command

Window Masks The console combines access rights and display access into a window mask This mask then defines the user accessibility levels for a given window. Initially, each window has a default mask assigned, which is the security level one access mask The console creates a window mask at log in When an operator attempts to use a given console function, the console first checks this window mask to determine which displays and operations to allow The console will not allow access to a desired operation if the window mask does not allow it

Passwords Passwords identify designated personnel and protect their access rights from unauthorized use Up to 128 passwords (i.e., users) can be entered at the console Password definition identifies a user index number, user ID, password, security level and functional region rights Functional region rights are individual configuration, utility and operation options available at the console Access to an entire region can be denied or allowed depending on password definition.

To identify the current user, the user index number associated with the last entered password displays in the keyboard status area of the screen, it updates after a user logs in. Log in also enters a line in the events log (or operator actions log)

NOTE The default passwords are **MAINT** for security maintenance access and **OPERATOR** for normal operations

Security Tag Groups A security tag group feature allows grouping process area related tags into up to 16 different groups During password definition, a group or groups can be assigned for access by specific personnel. The groups that a user has access to are set individually; any

OIS CONFIGURATION

combination of groups can be assigned. Tags are assigned to security groups during tag configuration. The default security group for a tag is group one.

Complete password security configuration requires the following:

- Security options configuration.
- Logical CRT definition
- Security level configuration
- User password definition.
- Display mask definition
- Tag security level and group configuration
- Log security level configuration

The configurations listed represent utilization of all security features. Any or some may not apply to your specific security strategy. Password security should be considered before configuration of the tag database, and custom and SOE logs. The process engineer defines attributes affecting password security during these configuration procedures.

SECURITY OPTIONS

Security option configuration sets up general parameters the console uses for password security. These include:

Number of Levels - identifies the number of security levels that password security uses.

Number of Passwords - sets the number of passwords that will be defined. This corresponds to the number of users.


Automatic Logout - used to automatically log out an inactive user after a specified time period from five minutes to 12 hours.

Default User - tells the console which password (i.e., user index number) to log in after start-up or log out procedures. The *Default User* attribute could be used to specify a user index number that either permits complete access limited by the key lock switch only, or denies all access until performing a valid password log in.

- Step 1** Security maintenance personnel define the operating parameters of password security through the *Security Options* page (see Figure 16-7). To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown:

```

A OIS Configuration
  └─ G Security
      └─ A Security Options Configuration
  
```

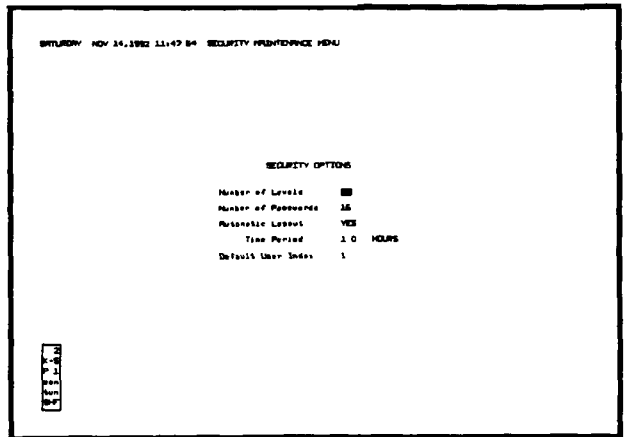

TPS01488

NOTE Care must be taken when making changes at this display. Decreasing the number of levels or passwords deletes any entries with level numbers or user index numbers above the newly entered value. Changes made to the number of security levels could affect display log and lag security.

Figure 16-7 Password Security - Security Options

Step 2 To define the options:

- a. Use the configuration keys listed in Table 16-1 to enter data and move between each display input field. At the *Number of Levels* field, enter the number of security levels required. Valid entry is from 4 to 16.
- b. Enter the total number of passwords required at the *Number of Passwords* field. Valid entry is from 1 to 128. This should be large enough to accommodate all personnel requiring a password.
- c. At the *Automatic Logout* field, enter **YES** to have the console automatically log out a password. Log out occurs after an inactive period of time determined by the *Time Period* field. Enter **NO** to disable automatic log out.
- d. Enter an automatic log out time in the *Time Period* fields. This attribute requires two entries, the first being a number, the second being **MINUTES** or **HOURS**. The minimum is 5 **MINUTES**, maximum 12 **HOURS**.
- e. At the *Default User Index* field, enter the user index number the console is to automatically log into at start up or after a log out. User index numbers are set during password definition.
- f. Press **ENTER** to save the configuration to hard disk, then press **ESC** to exit.

OIS CONFIGURATION

LOGICAL CRT DEFINITIONS

Currently, only password security uses logical CRT definitions. Logical CRT definitions specify up to 16 logical CRT assignments. The keyboard can be switched to any window the console supports by pressing **(SWITCH CRT)**. This configuration defines the windows as logical CRTs. Once defined, access to each can be limited to specific security levels through security level configuration. To locate logical CRTs, the console references a console address definition, then window to console association.

Follow the procedures for logical CRT definition, refer to **CONSOLE AND LOGICAL CRT ASSIGNMENTS** in this section. Access to each of the 16 possible logical CRTs can then be enabled or disabled through security level configuration.

The console supports up to four windows requiring a maximum of four logical CRT definitions for window one through window four. All 16 can be defined if desired.

SECURITY LEVEL

Once the *Number of Levels* has been set through security options configuration, each security level must be defined separately. Security level configuration defines access rights, key lock function and logical CRTs each level can access.

The tune and configuration access rights can be used with or without key lock use. Key lock use by a security level can be disabled by setting the corresponding key lock fields to **NO**. If key lock alone is to be used to limit access to configuration and tuning functions, their corresponding *Access Rights* fields must always be set to **YES**.

NOTE It is suggested that a console should have a security level defined for common operations such as configuration even if no one is currently assigned to the level.

- Step 1** Security maintenance personnel define each security level through the *Security Levels* page (see Figure 16-8). To call this display, first press **(GENL FCTNS MENU)**, then select the following menu items in the sequence shown:

```

A OIS Configuration
  └─ G Security
      └─ B Security Level Configuration
  
```

- Step 2** To define a security level:

a Use the configuration keys listed in Table 16.1 to enter data and move between each display input field. At the *Level* field, enter the number of the security level to define, then press

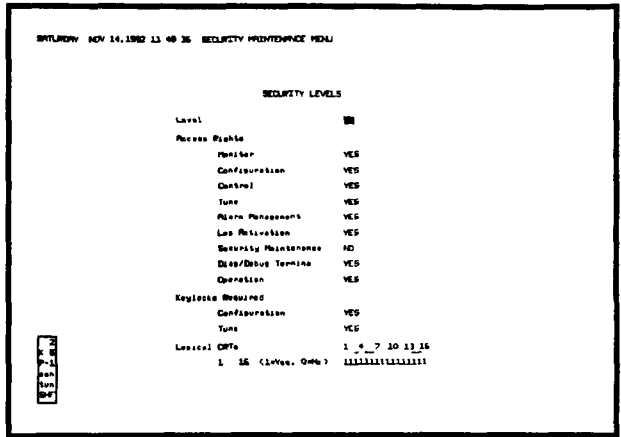


Figure 16-8. Password Security - Security Levels

[ENTER]. Valid entry is from 1 to the number of levels set during security options configuration (maximum 16)

b. For each *Access Rights* type, enter **YES** to grant access to that type of function for this security level. Enter **NO** to not allow this security level access.

c. At the *Keylocks Required* fields, enter **YES** to require the key lock to be in the **CONFIG** position to perform configuration and **TUNE** to perform any tuning. If **YES**, security is based on both access rights and key lock position. If set to **NO**, security, the console predicates security on access rights alone, ignoring the key lock position.

When using just the key lock for configuration and tuning security, set the *Access Rights* fields for both configuration and tuning to **YES**.

d. Up to 16 logical CRTs can be defined for this console through logical CRT definition. Once defined, the *Logical CRTs* field either enables or disables access to individual screens supported by the console and identified as logical CRTs.

The 1.4.7.10.13.16 field corresponds to logical CRT one through 16. For this security level to access a logical CRT, set its corresponding field to 1; set it to 0 to not allow access. For example, to allow access to only logical CRTs one and eight, the entry would be 1000000100000000.

OIS CONFIGURATION

e Press **[ENTER]** to save the configuration to hard disk, then press **[ESC]** to exit

USER PASSWORD DEFINITION

User password definition defines each user ID, password, security level, security group and functional region access for a user. The user ID and password can be any of up to eight characters. *The default password is the user ID.* Passwords are normally hidden except when they are being entered. The security level is one of the levels defined with security level configuration. Security tag groups defines the groups that the user has access to if tag grouping is being used. The functional region defines the configuration, utility and operational regions the user can enter with his given security level.

The regions directly correspond to the access rights enabled during security level configuration. For example, if a user is to be given tag configuration access then the security level should include configuration access rights, and database region access should be enabled.

NOTE While configuration of passwords is being performed, integrity visibility to the screens is suggested.

Step 1 Security maintenance personnel define passwords for personnel through the *User Password Definitions* page (see Figure 16-9). To call this display, first press **[GENL FCTNS MENU]**, then select the following menu items in the sequence shown:

```

A OIS Configuration
  |
  |→ G Security
    |
    |→ C User Password Definitions
  
```

Step 2 To define a password:

a Use the configuration keys listed in Table 16-1 to enter data and move between each display input field. At the *User Index* field, enter an index number to define, then press **[ENTER]**. Valid entry is from 1 to the number of passwords defined through security options configuration (maximum 128). A user index number displays in the keyboard status block to identify the password currently logged in at the console.

b Enter a descriptive identifier at the *User ID* field. Any keyboard characters can be used; up to eight characters can be entered. If a password has not been entered, this entry becomes the password by default.

c Enter a password of up to eight characters at the *Password* field. The password will be visible during configuration but appears as ********* any other time the display is called.

```

MONDAY NOV 26, 1982 08 13 06 SECURITY PROMPT/PAGE MENU

                                USER PASSWORD DEFINITION

User Index:                      000
User ID:                          OPERATOR
Password:                          ****
Security Level:                     1
Security Tag Groups:                1_4_7_10_13_16
1 - 16 (1=Yes 0=No) 11111111111111

Region Access
Shadows                            YES
Display                             YES
Keyboard                             YES
System                              YES
Log                                  YES
Time/Date                           YES
Real Time                            YES
Revised                              YES
Pass                                 YES
MDU Configuration                   YES
Access Inhibit                      YES
    
```

TPSO150B

Figure 16-9. Password Security - User Password Definitions

d. Enter the security level at the *Security Level* field. This is one of the security levels defined during security level configuration. Valid entry is from 1 to the number of security levels defined during security option configuration (maximum 16).

e. The process engineer assigns tags to any of 16 different security groups. A tag is assigned to a group through tag database configuration. Once assigned, the *Security Tag Groups* field enables access to each security group for this password.

The default tag group set in the configuration of a tag is one; therefore, at least group one should be enabled even if tag grouping is not being used.

The *1 4..7. 10. 13 .16* field corresponds to security groups one through 16. For this user ID to access a group, set its corresponding field to 1; set it to 0 to not allow access. For example, to allow access to only groups one, five, eight and 13 the entry would be **1000100100001000**.

f. For each of the specified regions, set its *Region Access* field to YES to allow this user ID access or NO to not allow access. These fields should be consistent with the *Access Rights* set during security level configuration.

Region Access can be used to deny access rights at a higher level than what is available through security level configuration. For example, a security level may allow access rights to configuration, but password security may not allow access to database configuration.

g Press **[ENTER]** to save the configuration to hard disk, then press **[ESC]** to exit.

DISPLAY MASK DEFINITION

Display mask configuration sets security levels for individual displays. Access to certain displays can be limited to only specific security levels. Security personnel can determine which users have access rights to a display by specifying a primary and secondary security level. Once a user ID has been given access to a display, the operations that can be performed after calling the display are still limited by the parameters set for that user's security level. Do **not** define a display mask for a display unless it is to have limited access.

Display access security levels can be defined during display creation using a security mask (sm) escape command. If set during display creation, display mask definition is not required. It is recommended that changes that are to be permanent be made to the security mask escape command in a display source file (.DT). Refer to Appendix B for the format of the command. Displays built with the operator configurable display function are set to the security level of the currently logged in user ID.

- Step 1** Security maintenance personnel define display access through the *Display Mask Definition* page (see Figure 16-10). To call this display, first press **[GENL FCTNS MENU]**, then select the following menu items in the sequence shown:

A OIS Configuration

↳ G Security

↳ D Display Mask Definition

- Step 2** To define access for a display.

a Use the configuration keys listed in Table 16-1 to enter data and move between each display input field. At the *Display Name* field enter the name of the display to define. The display must reside on the hard disk as a .DU display file. The name entered is the display file name without the .DU extension.

b In the first input field of the *Security Levels* field, enter the primary security level. Valid entry is from 1 to the number of security levels set during security option configuration (maximum 16).

c In the second input field of the *Security Levels* field, enter the secondary security level (optional). Valid entry is from 1 to the number of security levels set during security option configuration (maximum 16). This field defines a second valid security level for the display.

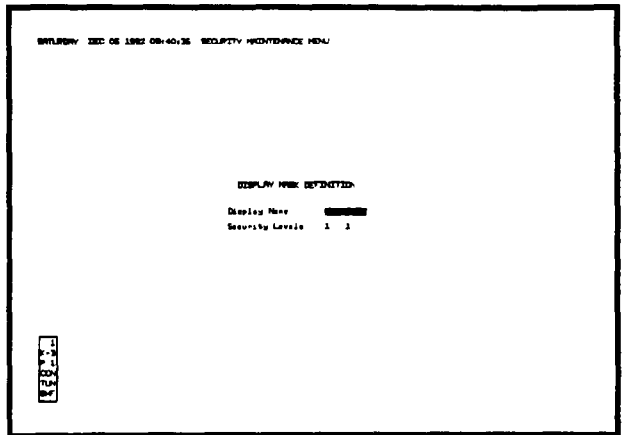


Figure 16-10 Password Security - Display Mask Definition

d Press **ENTER** to save the configuration to hard disk, then press **ESC** to exit

TAG SECURITY LEVEL AND GROUP

Each tag in the database can have a security level assigned. This determines whether an operator can gain access to functions related to that tag based on an entered password. A tag can be assigned any of the 16 available security levels.

Tags in the database can also be organized into security groups. This allows grouping related process points (i.e., areas), which gives only personnel with appropriate passwords access to these points. The password definition identifies which groups a password can access.

Follow the procedures for defining individual tags; refer to *Entering or Editing Individual Tags* in this section for the procedures. Set the *Security Level* field to the desired security level for the tag being configured. Valid entry is from 1 to 16. Set the *Security Group* field to a specific group number to assign this tag to that group. Valid entry is from 1 to 16. The security level and security group will then be used to verify control, tuning, alarm management and window access for any operations affecting the tag. Password security should be considered prior to tag configuration.

OIS CONFIGURATION

LOG SECURITY LEVEL

Security levels can also be defined for custom logs and sequence of events (SOE) logs. The console checks the security levels defined for these types of logs before allowing an operator to perform log status operations. These include activating, deactivating or canceling log prints. If set, the console does not allow an operator to perform log status operations unless authorized by a password. Password security should be considered prior to custom and SOE log configuration.

- | | |
|--------------------|---|
| Custom Logs | Follow the procedures for configuring custom logs through the report generator, refer to CUSTOM LOG CONFIGURATION in this section. Set the <i>Security Level</i> field to the desired security level for each configured log. Valid entry is from 1 to 16. |
| SOE Logs | Follow the procedures for configuring SOE logs, refer to SOE LOG CONFIGURATION in this section. Set the <i>Security Level</i> field to the desired security level for each configured log. Valid entry is from 1 to 16. |

Database Configuration

The database of the console consists of a separate tag and trend database. The tag database includes specific information for each process control system variable that the console is to monitor or control. The trend database contains specific information the console needs to collect and display trended data from the INFI 90 distributed trending system. Each database also defines additional attributes used in displays, logs, archiving, password security and alarm management. Other database features related to the tag database, and defined separately, are tag descriptors and alarm comments.

There are two types of descriptors: Engineering unit and logic state descriptors. These are either analog value units of measurement or digital state identifiers that appear in most OIS functions, and displays that incorporate tag descriptor escape commands (ec 37, ec 38, and ed 37). Consoles on a common communication highway should use the same list of descriptors.

Alarm comments related to tags appear at displays when process values exceed certain thresholds or digital variables change to specific states. The PCU module configuration determines the alarm thresholds and states that trigger alarms. These comments appear at alarm summaries or any displays that incorporate alarm comment escape commands (ec 33 and ed 33). An alarm comment gives the ability to display text that describes, for example, either the purpose of the alarm or operator actions required to correct the alarm.

This part of the section provides procedures to define the tag database, alarm comments and tag descriptors only. **Trend**

Definition in this section explains the trend tag database configuration

TAG DATABASE

The console allows on-line tag configuration. Tags can be added or deleted, and almost any tag attribute can be changed then immediately implemented by the console without requiring a console reset.

The exception is deleting, adding or modifying an N90STA tag that defines an NNIU01 module. These changes require calling the operating parameters page for the tag being changed, then turning scan off then back on, or resetting the console. Refer to **TAG OPERATIONS** in the *Process Monitoring* section for procedures.

Each entry in this database is in the form of a tag. A tag configured in the console represents each analog and digital exception reporting block, and each station, device driver and control block in PCU module control schemes. During database configuration, the process engineer defines a tag for the process variables that the console monitors and process devices available for operator control.

Each tag contains all information the console requires to find and establish a communication route to individual points in the process control scheme (i.e., loop, PCU, module and block number). The console does not require a tag to support PCU module tuning and configuration functions. Not all PCU function blocks can be assigned a tag. Once the process engineer defines a tag, the tag index number or tag name can be used in any of the OIS functions.

The console automatically does concordance checking to detect certain configuration errors. These include data over limits, duplication of tag names or hardware addresses, invalid descriptors and alarm inhibiting requirements.

Each tag type available in the console corresponds to one or more function codes (FC). The tag types available are:

ANALOG Acquires an analog exception reported value. This tag type supports analog exception report, FC 30.

DAANALG Acquires an analog exception reported value providing enhanced alarm management capabilities. This tag type supports data acquisition only through a DA macro that incorporates a control station function code, FC 21, 22, 23, or 80. It also supports data acquisition analog, FC 177, but does not enable the full functionality of the function code.

OIS CONFIGURATION

- DADIG** Acquires a digital exception reported state providing enhanced alarming management capabilities. It also allows the operator to select the input source for an associated function block in a PCU module, and write a user-inserted value to the PCU module. This tag type supports data acquisition digital, FC 211.
- DADIGTL** Acquires a digital exception reported state providing enhanced alarm management capabilities. This tag type supports data acquisition only through a DA macro that incorporates a multi-state device driver function code, FC 129.
- DANG** Acquires an analog exception reported value providing enhanced multiple level alarming as well as deviation and rate alarming. It also allows the operator to select the input source for an associated function block in a PCU module, and write a user-inserted value to the PCU module. This tag type supports data acquisition analog, FC 177.
- DD** Acquires an exception reported set or reset state for a device while it is in either manual or automatic mode. It also allows the operator to initiate manual control. This tag type supports device driver, FC 123.
- DEVSTAT** For internal console use only, no values are received over the communication highway for this type of tag. It allows defining the printer type of a printer used for logging.
- DIGITAL** Acquires a digital exception reported state. This tag type supports digital exception report, FC 45.
- INTANG** For internal console use only, no values are received over the communication highway for this type of tag. The INTANG tag type allows writing an analog value from an application processor that can be used throughout OIS functions.
- INTDIG** For internal console use only, no values are received over the communication highway for this type of tag. The INTDIG tag type allows writing a digital value from an application processor that can be used throughout OIS functions.
- MSDD** Acquires an exception reported status for a three state device while it is in either manual or automatic mode. It also allows the operator to initiate manual three state control. This tag type supports multi-state device driver, FC 129.

N90STA Reads detailed status information and problem reports from INFI 90 equipment over the communication highway

NOTE For Plant Loop nodes to receive the same time-stamped message to support distributed trending a nodes on the loop must have an N90STA tag

RCM Acquires an exception reported set or reset state of a device. It also allows the operator to initiate control of the device. Used in this way, this tag type supports remote control memory, FC 62

Monitors the operation of a sequential events recorder, and allows the operator to request sequence of events summary reports. Used in this way, this tag type supports sequence of events log, FC 99

RMCB Acquires an exception reported start or stop state of a device, and allows the operator to initiate control of the device. This tag type supports remote motor control, FC 136

RMSC Enters a constant value into a PCU module control scheme. This tag type supports remote manual set constant, FC 68

STATION Monitors exception reported variables for a process control station while it is in either manual or automatic mode. It also allows the operator to change the control output, or initiate a set point or ratio index change. This tag type supports M/A station (basic), FC 21; M/A station (cascade), FC 22; M/A station (ratio), FC 23, and control station, FC 80

TEXT Acquires an exception reported text selector message. The message, generated by the PCU module control scheme, contains a message number that corresponds to a text string defined at the console. It also contains a color and blink option

A defined message can relate to the good, bad or wait condition reported for a device driver block or a multi-state device driver block. Also, the good, alarm or wait condition reported for a remote motor control block. This tag type supports text selector, FC 151

TEXTSTR Enables communication between the console and a C language or batch program running in a PCU module to allow transfer of text strings. This tag type supports user-defined data export, FC 194.

Refer to the *Function Code Application Manual* for more information and specifications for the previously described function codes.

TAG BROADCASTS

The OIS console has the capability to broadcast and receive any change made to a tag in its database. The broadcast ability allows any change made at the console to be incorporated and implemented at other consoles. The receive ability allows any change made at another console to be incorporated and implemented at this console. This requires a work station connected to the INFI-NET communication highway and running the global database manager (GDM) software program.

Additionally, an entire tag list can be broadcast to this console from the GDM work station, however, this requires the console to be taken off line by running a command file through a terminal window. Refer to the *Personal Computer Software Global Database Manager* instruction for program operation specifics and work station requirements. Refer to *ENABLING TAG LIST BROADCAST MODE* in the *Terminal Utilities* section for procedures to take the console off-line to receive a broadcast tag list.

When a change is made to a tag and that change is then broadcast, the GDM program automatically performs a consistency check to validate the change. It verifies that the tag name to loop, PCU, module and block address is unique across the entire database. This allows the GDM program to maintain database integrity for all consoles or devices on the communication highway that use the database.

Attributes at the general parameters screen must be set during OIS system configuration to enable tag broadcasts. The console must be operating on INFI-NET communication highway to enable this feature.

TAG DATABASE CONFIGURATION

Tag database configuration requirements include enabling tag broadcast abilities if desired, then entering or editing individual tags.

During start-up or reset, the console downloads each tag in the database list to its communications interface unit. The interface unit requires this to establish communication with PCU modules. Tag configuration cannot take place while the console is downloading the tag database list to its interface unit.

In the tag database, certain tag attributes remain the same and have the same function for all tag types; although they are defined differently for each tag. Other fields are dependent on the

tag type entered. Additional attributes in the tag database pertain to alarming, and event logging and archiving.

Care must be taken when making changes to the database since the tag database is the foundation for all OIS functions. For example, deleting or changing a tag that is used to inhibit alarming of other tags requires changing or modifying all of those tags that use it for inhibiting. Another example would be making a node type change to a node N90STA tag. This in most cases then requires making changes to all the module N90STA tags for that INFI 90 node.

The recommended procedure for changing the node type of a node N90STA tag is to first delete all PCU module N90STA tags for that node, make the appropriate changes to the node type, then add any module N90STA tags required.

Enabling On-Line Tag Broadcasts

Database broadcasting allows the console to broadcast and receive tag changes or additions over the communication highway (INFI-NET system only). When tag broadcasting is enabled, any changes or additions to the database are automatically sent over the communication highway to other consoles through a GDM program running on a work station. Likewise, any changes made at other consoles are received at this console.

When a tag is modified or added, validation checks are first made at the console level before the tag is broadcast. These local validation checks test for duplicate tag name and loop, PCU, module, and block address. The console also checks alarm inhibit information for the tag and the tag that it may inhibit (i.e., set at the Alarm Inhibit field). If any of these checks fail, the broadcast does not occur. Once verified, broadcasting is automatic. The GDM program performs the same validation checks.

Do not exit the tag configuration function until the console presents a message verifying a successful broadcast. If the broadcast was successful, the tag configuration changes save to the hard disk. Further tag changes or additions can then take place. If tag configuration is exited while the tag is already being broadcast to GDM program, the broadcast runs to completion with the results of the broadcast being logged in the events log.

All tag changes are logged as part of the events log. This provides a reference to recover edits made to the tag before being aborted.

An error message appears if tag updates are made simultaneously at other windows supported by the console. The tag broadcast task can issue only one broadcast at a time. Any other broadcast attempt while the console is already processing a broadcast causes a busy reply from the broadcast task. Queued

tag broadcasts continue to process as long as tag configuration has not been exited. Exiting aborts any queued broadcasts.

Follow the procedures for system configuration, refer to *OIS System Configuration* in this section for the procedures. The fields that enable on-line broadcasting of tag changes are *Broadcast Master EWS: Loop ___ Node ___* and *Broadcast Active*. Additionally the *Broadcast Message Type* field must be set to provide proper communication.

Set the *Broadcast Master EWS: Loop ___ Node ___* field to the loop and INFI 90 node address of the network interface unit (NIU) connecting the work station running the GDM program to the communication highway. Valid entry is from 1 to 250 for both address fields. This identifies the specific work station that is maintaining the database of this console. Several work stations running the global database manager can be connected to the loop at one time.

Set the *Broadcast Active* field to YES. This enables both transmitting and receiving single tag changes, and receiving a broadcast of a complete tag list. This field has two other choices: NO or LOCAL. NO disables both transmitting and receiving of any type of tag broadcast. LOCAL allows receiving a broadcast of a tag list and any single tag changes from the GDM work station, but disables broadcasting single tag changes to the GDM work station. Refer to *OIS System Configuration* in this section for proper setting of the *Broadcast Message Type* field.

Entering or Editing Individual Tags

NOTE The preferred method for creating a tag database is by using the SLDG program. The console should mainly be used to update or make changes to the existing database.

Each tag in the database has a name of up to 14 characters and tag index number (1 to 30,000). A tag name and index number identifies the tag throughout all OIS functions. Each tag can also have up to 32 alphanumeric characters to describe its purpose. These descriptions help to identify the tag while at certain displays. An additional 32 character customer identifier also can be entered in the database to further explain the process point. Each process point value or state that the operator is to monitor or control, and OIS peripheral or INFI 90 module to monitor requires a tag in the database.

Step 1 The process engineer defines individual tags through the *Tag Configuration* page (see Figure 16-11). To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown:

A OIS Configuration → A Database → A Tag


```

08147730 04-0CT  54897Y   Tag Configuration          1 2 3 6 7 8 9 10 11 20 25 26 27 28 30  A
Tag Index
Tag Name
Tag Descriptor
Customer Tag ID
Loop PCU Mod B out
Type
Security Group
Alarm Group
Alarm Inhibit Tag
Inhibit On Alarm State
Inhibit Alarm Status State
ABB-Knob Panel Lock
Security Level
Alarm Inhibit Save
State Change-Print Save
Get Alarm-Print Save
Process-Print Ack
Mode . . . . .
Primary Display
    
```

A Select Tag	F Copy Index	C Copy Index to Range	S Copy Fields to Range
--------------	--------------	-----------------------	------------------------

TPS0014B

Figure 16-11 Database - Tag Configuration

Step 2 Use the *Tag Configuration* display submenu to select a tag to configure or edit. It also provides the capability to copy tags. Copying can be used to expedite tag configuration. To define individual tags:

a Choose **A Select Tag** from the submenu. This brings up a *Tag Name or Index* prompt. Type a tag name or index number for a tag to edit. Valid entry is from 1 to the number of tags set during database sizing (maximum 30,000). Press **ENTER** to call the tag.

b Use the OIS configuration keys (refer to Table 16-1) to move between and enter data into each display field. Table 16-5 lists general tag attributes that apply to all tag types. Table 16-6 to Table 16-18 list additional attributes related to specific types of tags. Refer to these tables when entering data.

c After completing all required fields, press **ENTER**. This updates the configuration on the hard disk.

d To enter additional tags, press **ESC** to call the submenu back to the screen and repeat Steps 2a through 2c. Press **NEXT PAGE** or **PREV PAGE** to sequence to the next or previous index number without having to use the *Select Tag* option.

e Once all tags are defined or edited, press **ESC** to exit this display.

This procedure must be done *before* performing any further configuration if a tag database does not exist, or at any time to add

or edit new tags. Tags are required before any other OIS functions can be enabled.

NOTE The *Alarm Groups* option can be used to assign tags to alarm groups. Refer to **ALARM GROUP CONFIGURATION** in this section for specifics.

Configuration Submenu

The *Tag Configuration* page submenu options (see Figure 16-11) allow selecting tags for editing, and copying both individual or a range of defined tags to individual or a range of available index numbers.

A tag that has been copied has the same hardware address as the original tag except the function block address is set to an invalid value. The tag is *not* defined until after entering a unique tag name and address. Before using the copy features, verify that a tag is not being copied to an already existing tag since this overwrites an existing tag.

Select Tag - press **[A]**, an input field used to enter a tag name or index number appears. After keying in the desired name or number, press **[ENTER]** to display the attributes for that tag. If the field is left blank or cleared and **[ENTER]** is pressed, the next available undefined tag appears.

Copy Index - press **[B]**, a prompt with the current tag index number in a *Copy Index* ___ To ___ input field appears. Either use this tag number or enter a different one. Move to the *To* field and enter a tag index number to copy this tag to, then press **[ENTER]** to execute the copy.

Copy Index to Range - press **[C]**, a prompt with the current tag index number in a *Copy Index* ___ To ___ input field appears. Either use this tag number or enter a different one. Move to the range fields and enter a range of index numbers to copy this tag to, then press **[ENTER]** to execute the copy.

Copy Range to Range - press **[D]**; a prompt with the current tag index number in the first input field of a *Copy Range* ___ To ___ field appears. Either use this tag number or enter a different one. Move to the next field and enter the second tag index number to complete the range of tags to copy. Enter the range to copy tags to in the *To* range input fields. Press **[ENTER]** to execute the copy.

Delete Tag

A tag can be deleted by changing its *Tag Type* field to *UNDEF*. As soon as *UNDEF* is typed at this field and **[ENTER]** is pressed, all other fields clear and a default configuration appears.

NOTE Deleting a tag is no longer done by copying a blank tag over an existing tag.

Change Tag Type Changing a tag type from a digital type tag (e.g., DIGITAL, DD, MSDD, etc.) to an analog type tag (e.g., ANALOG, STATION, DAANALG, etc) causes the console to run validation checks before initiating the change. It checks the database to determine if the state of the digital tag is being used for alarm inhibiting. If it is, the following message appears:

Alarm Inhibit Mode Conflict on Tag n .ERR 437

The tag type change cannot be done until correcting the mode conflict for tag *n*. A possible solution is to change the *Inhibit On Alarm/State* field for tag *n* to **ALARM**. The console also performs this check during a copy operation.

Tag Broadcast Errors The console presents error messages if a broadcast fails. These include:

Tag Update Failed - Duplicate Tagname ERR 438

Tag Update Failed - Duplicate Address ERR 439

The console places the input cursor at the field in error. Correct the field in error and initiate saving the tag to attempt another broadcast.

The message:

Tag Update Failed :ERR 440

is a general error message. It normally appears when attempting a tag broadcast to an off-line GDM work station, or if a communication failure exists. This returns the input cursor to the *Tag Name* field. Refer to the **Personal Computer Global Database Manager** instruction for additional information.

Do **not** exit the tag configuration function until the console presents a message verifying a successful broadcast. If the configuration is exited after changes have been made but before a broadcast reply message appears, the console considers all updates as being aborted and records the following message in the events log (operator actions log):

Tag <index number>, <tag name> Update aborted by <user ID> at CRT <n>

This can also occur if tag updates are made simultaneously at other windows supported by the console. The tag broadcast task can issue only one broadcast at a time.

All tag changes are logged as part of the events log. This provides a reference to recover edits made to the tag before it was aborted.

OIS CONFIGURATION

Table 16-5 Tag Database General Attributes

Field	Description																		
Tag index	Corresponds to the tag selected for definition or editing. This is not a user input field. An index number identifies a tag throughout a OIS functions.																		
Tag name	Name of up to 14 characters to identify this tag. The console checks the entire tag list for duplicate names when attempting to move to the next input field or after pressing (ENTER) while at this field.																		
Tag descriptor	Descriptor of up to 32 characters that appears in most functions to further describe the purpose of the tag.																		
Customer tag ID	Additional 32 character tag identifier.																		
Loop PCU mod block	Hardware communication loop PCU and module address and software function block address. Establishes a communication route between the console and a PCU module for monitoring and control of a point in the plant control scheme. Valid entries: Loop - 0 to 250 (NFI NET system up to 250 Plant Loop system 0 or 1) PCU - 0 to 250 (INFI NET system up to 250 Plant Loop system up to 63) mod = 0 to 31 block - 0 to 9998 NOTE For DEVSTAT, INTANG and NTANG tag types, the address should be 0-0-0. Enter a block address of 0 for N90STA tags. Table 16-17 and Table 16-18 identify the module address to use for certain types of N90STA tags.																		
Type	Valid tag types are: <table border="0"> <tr> <td>ANALOG</td> <td>INTD G</td> </tr> <tr> <td>DAANALG</td> <td>MSDD</td> </tr> <tr> <td>DADIG</td> <td>N90STA</td> </tr> <tr> <td>DADIGTL</td> <td>RCM</td> </tr> <tr> <td>DANG</td> <td>RMCB</td> </tr> <tr> <td>DD</td> <td>RMSC</td> </tr> <tr> <td>DEVSTAT</td> <td>STATION</td> </tr> <tr> <td>DGTAL</td> <td>TFXT</td> </tr> <tr> <td>NTANG</td> <td>TEXTSTR</td> </tr> </table> The console checks entries against valid tag types.	ANALOG	INTD G	DAANALG	MSDD	DADIG	N90STA	DADIGTL	RCM	DANG	RMCB	DD	RMSC	DEVSTAT	STATION	DGTAL	TFXT	NTANG	TEXTSTR
ANALOG	INTD G																		
DAANALG	MSDD																		
DADIG	N90STA																		
DADIGTL	RCM																		
DANG	RMCB																		
DD	RMSC																		
DEVSTAT	STATION																		
DGTAL	TFXT																		
NTANG	TEXTSTR																		
Security group	Assigns the tag to a security group. Relates to password security. A tag can be assigned to one of 16 security groups. Access to the group can be permitted by assigning the group number to specific personnel identified by a password. Valid entry is from 1 to 16.																		
Alarm group	Assigns the tag to an alarm group. Relates to alarm management. An alarm group number appears at a display and in the alarm summary of a tag in that group goes into an alarm condition. If configured for group 0, this tag does not trigger alarm group alarm indications when it enters an alarm condition. Valid entry is from 0 to 99. For DEVSTAT tags, the default is group 0. For N90STA tags, the default is 5. NOTE This console does not use DEVSTAT tags for monitoring the status of its peripherals. Alarm group 0 is considered invalid for alarm purposes even though the console assigns a DEVSTAT tag to this group.																		

Table 16-5 Tag Database - General Attributes (continued)

Field	Description
Alarm inhibit tag	<p>Defines a tag that inhibits alarm indications for this tag when the inhibit tag is in a certain alarm condition or state. This is an automatic alarm inhibit feature that relates to alarm management. A valid entry for this field is any tag name or index number (except an RMSC tag). If left blank, automatic alarm inhibiting does not occur. Related fields are <i>Inhibit On Alarm/State</i> and <i>Inhibit Alarm Status/State</i>.</p>
Inhibit on alarm/state	<p>Determines whether alarm inhibiting for this tag is based on the alarm condition or the digital state of the alarm inhibit tag. Relates to the <i>Alarm Inhibit Tag Field</i> and is not valid unless a tag name is entered at the <i>Alarm Inhibit Tag Field</i>. Valid entries:</p> <p>ALARM = default, selects inhibiting on alarm condition of an alarm inhibit tag</p> <p>STATE = selects inhibiting on state condition of an alarm inhibit tag; this is valid for digital state reporting alarm inhibit tags only.</p>
Inhibit alarm status	<p>Determines the alarm status or device state of the alarm inhibit tag that inhibits its alarming for this tag. Relates to the <i>Inhibit On Alarm/State Field</i> and is not valid unless a tag name is entered at the <i>Alarm Inhibit Tag Field</i>. Valid entry for this field depends on the type of tag entered as the alarm inhibit tag.</p> <p>If the <i>Inhibit On Alarm/State Field</i> is set to ALARM, a valid entry is H 2H 3H, L 2L 3L HD LD HR LR A and blank.</p> <p>If the <i>Inhibit On Alarm/State Field</i> is set to STATE, a valid entry for this field is 0 1 2 3 or blank.</p>
ADS - keypad annunciator	<p>Defines the annunciator display panel (ADP) indicator that is lit when this tag goes into an alarm. Relates to alarm management. The address of the indicator is the keyboard (<i>Keyb</i>) to which the panel is tied, specific panel (<i>Panel</i>) and specific LED (<i>Lamp</i>). Valid entry for these fields depends on the number of keyboards and annunciator display panels accounted for during OIS system configuration.</p> <p><i>Keyb</i> = 0 to 4; 0 allows panels to mimic each other. For example, a two-keyboard console with one annunciator display panel per keyboard can be configured so both panels use the same tag entries and perform the same function.</p> <p><i>Panel</i> = 0 to 4; 0 specifies no panel assignment for this tag.</p> <p><i>Lamp</i> = 0 to 32; 0 specifies no assignment for this tag.</p>
Security level	<p>Limits access to the functions performed through this tag based on the security level. Relates to password security. A tag can be assigned to one of 16 security levels. Access to the tag functions can be permitted by giving the appropriate access rights to personnel identified by a password. Valid entries from 1 to 16.</p>
Alarm - print/save	<p>Determines if alarms for this tag appear in the events log. Valid entries:</p> <p>YES = enables printing alarm events for this tag in an events log printout as alarms occur.</p> <p>NO = disables printing alarm events (continued).</p>

OIS CONFIGURATION

Table 16-5 Tag Database - General Attributes (continued)

Field	Description
Arm - print/save (continued)	<p>Valid Save field entry is</p> <p>YES = enables saving a arm events for this tag to hard disk for a period of printout of an events log, and for system events archiving</p> <p>NO = disables saving to hard disk</p>
State change - print/save	<p>Determines if state change events for this tag appear in the events log Valid Print field entry is</p> <p>YES = enables printing state change events for this tag in an events log printout as state changes occur</p> <p>NO = disables printing state change events</p> <p>Valid Save field entry is</p> <p>YES = enables saving state change events for this tag to hard disk for a period of printout of an events log, and for system events archiving</p> <p>NO = disables saving to hard disk</p> <p>NOTE This field is valid for DADIG DIGTAL DADGTL INTCG RCM RMCB DD, MSDD and TEXT tag types</p>
Operator acts - print/save	<p>Determines if operator action events for this tag appear in an events log Valid Print field entry is</p> <p>YES = enables printing operator action events relating to this tag in an events log printout as operator actions occur</p> <p>NO = disables printing operator action events</p> <p>Valid Save field entry is</p> <p>YES = enables saving operator actions events for this tag to hard disk for a period of printout of an events log and for system events archiving</p> <p>NO = disables saving to hard disk</p>
Broadcast tag ack	<p>Determines whether a tag alarm acknowledgment for this tag is broadcast on the communication highway to acknowledge the alarm at other consoles or computers Relates to a arm management A node is selected in the <i>Node List field</i> determines to which nodes to broadcast the acknowledge Valid entry is</p> <p>YES = broadcast alarm acknowledge</p> <p>NO = do not broadcast alarm acknowledge</p>
Node list	<p>Specifies the node list defined through global alarm acknowledge/s configuration to reference when broadcasting alarm acknowledges Relates to the <i>Broadcast Tag Ack field</i> Up to four node lists can be defined Valid entry is</p> <p>0 = specifies a node list that the console automatically builds during start-up The node list contains the first 32 N90STA tags in the database that define either a console or a computer</p> <p>1 to 4 = identifies one of four defined node lists</p>
Primary display	<p>Defines a display as the primary display of this tag Any name of an assembled display (.DU) on the hard disk can be entered in this field The display becomes the primary display calculated from either the alarm summary or operating parameters functions and DISPLAY</p>

Table 16-6. Tag Database - ANALOG and INTANG Attributes

Field	Description
Engineering unit	Non entry field a PCU module reports the index number that associates an engineering unit of measurement with this tag. A list of valid fixed and user-defined engineering units can be viewed at the EUD Configuration display.
Decimal places	Number of decimal places to display for this tag. Valid entry is from 0 to 4.
Return to norm	PRIORITY - identifies the relative priority or importance within an alarm group of a return to normal condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8, 1 being the highest priority. COMMENT - index number of the alarm comment that is to appear at a display when this tag returns to a normal condition.
Bad quality	PRIORITY - identifies the relative priority or importance within an alarm group of a bad quality condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8, 1 being the highest priority.
High alarm	PRIORITY - identifies the relative priority or importance within an alarm group of a high alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8, 1 being the highest priority. COMMENT - index number of the alarm comment that is to appear at a display when this tag enters any high alarm condition.
Low alarm	PRIORITY - identifies the relative priority or importance within an alarm group of a low alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8, 1 being the highest priority. COMMENT - index number of the alarm comment that is to appear at a display when this tag enters any low alarm condition.

Table 16-7 Tag Database - DANG Attributes

Field	Description
Engineering unit	Non entry field a PCU module reports the index number that associates an engineering unit of measurement with this tag. A list of valid fixed and user-defined engineering units can be viewed at the EUD Configuration display.
Decimal places	Number of decimal places to display for this tag. Valid entries from 0 to 4.
Norma	PRIORITY - identifies the relative priority or importance within an alarm group of a return to normal condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8, 1 being the highest priority. COMMENT - index number of the alarm comment that is to appear at a display when this tag returns to a normal condition.
Bad quality	PRIORITY - identifies the relative priority or importance within an alarm group of a bad quality condition for this tag. Relates to alarm management and the alarm summary. Valid entries from 1 to 8, 1 being the highest priority.
High	PRIORITY - identifies the relative priority or importance within an alarm group of a high alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entries from 1 to 8, 1 being the highest priority. COMMENT - index number of the alarm comment that is to appear at a display when this tag enters any high alarm condition.

OIS CONFIGURATION

Table 16 7 Tag Database - DANG Attributes (continued)

Field	Description
2 high	<p>PR OR TY - identifies the relative priority or importance within an alarm group of a two high alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entries from 1 to 8. 1 being the highest priority.</p> <p>COMMENT - index number of the alarm comment that is to appear at a display when this tag enters any two-high alarm condition.</p>
3 high	<p>PRI OR Y - identifies the relative priority or importance within an alarm group of a three-high alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8. 1 being the highest priority.</p> <p>COMMENT - index number of the alarm comment that is to appear at a display when this tag enters any three high alarm condition.</p>
Low	<p>PRI OR Y - identifies the relative priority or importance within an alarm group of a low alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8. 1 being the highest priority.</p> <p>COMMENT - index number of the alarm comment that is to appear at a display when this tag enters any low alarm condition.</p>
2 low	<p>PR OR TY - identifies the relative priority or importance within an alarm group of a two low alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entries from 1 to 8. 1 being the highest priority.</p> <p>COMMENT - index number of the alarm comment that is to appear at a display when this tag enters any two-low alarm condition.</p>
3 low	<p>PRI OR TY - identifies the relative priority or importance within an alarm group of a three low alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8. 1 being the highest priority.</p> <p>COMMENT - index number of the alarm comment that is to appear at a display when this tag enters any three-low alarm condition.</p>
High dev	<p>PRI OR TY - identifies the relative priority or importance within an alarm group of a high deviation condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8. 1 being the highest priority.</p> <p>COMMENT - index number of the alarm comment that is to appear at a display when this tag enters a high deviation alarm condition.</p>
Low dev	<p>PR OR TY - identifies the relative priority or importance within an alarm group of a low deviation condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8. 1 being the highest priority.</p> <p>COMMENT - index number of the alarm comment that is to appear at a display when this tag enters a low deviation alarm condition.</p>
High rate	<p>PRI OR TY - identifies the relative priority or importance within an alarm group of a high rate of change condition for this tag. Relates to alarm management and the alarm summary. Valid entries from 1 to 8. 1 being the highest priority.</p> <p>COMMENT - index number of the alarm comment that is to appear at a display when this tag enters a high rate of change alarm condition.</p>
Low rate	<p>PR OR TY - identifies the relative priority or importance within an alarm group of a low rate of change condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8. 1 being the highest priority.</p> <p>COMMENT - index number of the alarm comment that is to appear at a display when this tag enters a low rate of change condition.</p>

Table 16-8 Tag Database DAANALG Attributes

Field	Description
Engineering unit	Non entry field a PCU module reports the index number that associates an engineering unit of measurement with this tag. A list of valid fixed and user-defined engineering units can be viewed at the <i>EUD Configuration</i> display.
Decimal places	Number of decimal places to display for this tag. Valid entries from 0 to 4.
Alarm type	Type of alarming being implemented in the data acquisition analog function block. Valid entries STANDARD = standard INFI 90 alarming using a high and low alarm limit only. FIXED = incorporates multiple alarming using fixed alarm levels (e.g. three high to three-low) set in the PCU module control scheme. VARIABLE = incorporates multiple alarming using variable alarm levels. Alarm levels are based on the output values of other function blocks. The <i>Hi Var Alarm Tag</i> and <i>Low Var Alarm Tag</i> fields identify the function blocks setting the variable alarm levels.
Alarm deadband	Defines the deadband value set in the PCU module control scheme. A four character floating point value used for three-high, two-high, two-low and three-low alarm limits.
Norma	PRIORITY - identifies the relative priority or importance within an alarm group of a return to normal condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8. 1 being the highest priority. COMMENT - index number of the alarm comment that is to appear at a display when this tag returns to a normal condition.
High	PRIORITY - identifies the relative priority or importance within an alarm group of a high alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entries from 1 to 8. 1 being the highest priority. COMMENT - index number of the alarm comment that is to appear at a display when this tag enters any high alarm condition.
2 high (FIXED VARIABLE only)	PRIORITY - identifies the relative priority or importance within an alarm group of a two-high alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entries from 1 to 8. 1 being the highest priority. COMMENT - index number of the alarm comment that is to appear at a display when this tag enters any two-high alarm condition. LIMIT - for reference only the actual limits are set in the PCU module. Information entered in this field is for values displayed when calling the <i>Operating Parameters</i> display for this tag.
3 high (FIXED VARIABLE only)	PRIORITY - identifies the relative priority or importance within an alarm group of a three-high alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8. 1 being the highest priority. COMMENT - index number of the alarm comment that is to appear at a display when this tag enters any three-high alarm condition. LIMIT - for reference only the actual limits are set in the PCU module. Information entered in this field is for values displayed when calling the <i>Operating Parameters</i> display for this tag.

OIS CONFIGURATION

Table 16-8 Tag Database - DAANALG Attributes (continued)

Field	Description
Low	<p>PR OR TY - identifies the relative priority or importance with n an alarm group of a low alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8. 1 being the highest priority.</p> <p>COMMENT - index number of the alarm comment that s to appear at a display when th s tag enters any low alarm condition.</p>
2 low (FIXED VARIABLE on y)	<p>PRIOR TY - identifies the relative priority or importance with n an alarm group of a two-low alarm condition for th s tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8. 1 being the highest priority.</p> <p>COMMENT - index number of the alarm comment that s to appear at a display when this tag enters any two-low alarm condition.</p> <p>LIMIT - for reference only the actual limits are set n the PCU module. Information entered in th s field s for values displayed when ca ng the <i>Operating Parameters display</i> for th s tag.</p>
3 low (FIXED VARIABLE on y)	<p>PR OR TY - identifies the relative priority or importance with n an alarm group of a three-low alarm condition for th s tag. Relates to alarm management and the alarm summary. Valid entry s from 1 to 8. 1 being the highest priority.</p> <p>COMMENT - index number of the alarm comment that s to appear at a display when th s tag enters any three-low alarm condition.</p> <p>LIMIT - for reference only the actual limits are set in the PCU module. Information entered in this field is for values displayed when ca ng the <i>Operating Parameters display</i> for this tag.</p>
Bad quality	<p>PRIOR TY - identifies the relative priority or importance with n an alarm group of a bad quality condition for th s tag. Relates to alarm management and the alarm summary. Valid entry s from 1 to 8. 1 being the highest priority.</p>
Low variable tag	<p>Defines the tag name of the tag whose value determines the low variable alarm limit. Applies only when the alarm type is VARIABLE.</p>
High variable tag	<p>Defines the tag name of the tag whose value determines the high variable alarm limit. Applies only when the alarm type is VARIABLE.</p>

Table 16-9 Tag Database DIGITAL, DADIGTL, DADIG, INIDIG and KCM Attributes

Field	Description
State ZERO ONE	<p>ZERO s x character maximum logic state descriptor that associates with this tag and appears on displays to identify the zero state of a device.</p> <p>ONE s x character maximum logic state descriptor that associates with th s tag and appears on displays to identify the one state of a device.</p> <p>The two entries must match entries in the <i>logic state descriptor</i> st defined through <i>ogic state descriptors configuration</i>. The PCU module reports the device state.</p>
Return to norm	<p>PRIOR TY - identifies the relative priority or importance with n an alarm group of a return to normal condition for this tag. Relates to alarm management and the alarm summary. Valid entry s from 1 to 8. 1 being the highest priority.</p> <p>COMMENT - index number of the alarm comment that s to appear at a display when this tag returns to a normal condition.</p>

Table 16-9. Tag Database - DIGITAL, DADIGTL, DADIG, INTDIG and RCM Attributes (continued)

Field	Description
Bad quality	PRIORITY - identifies the relative priority or importance within an alarm group of a bad quality condition for this tag. Relates to alarm management and the alarm summary. Valid entries from 1 to 8, 1 being the highest priority.
Alarm	PRIORITY - identifies the relative priority or importance within an alarm group of an alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8, 1 being the highest priority. COMMENT - index number of the alarm comment that is to appear at a display when this tag enters an alarm condition.

Table 16-10 Tag Database - STATION Attributes

Field	Description
Engineering unit	Non entry field. A PCU module reports the index number that associates an engineering unit of measurement with this tag. A list of valid fixed and user defined engineering units can be viewed at the EUD Configuration display.
Decimal places	Number of decimal places to display for this tag. Valid entry is from 0 to 4.
Tuning block	Identifies the block number of a function block providing control for the station block that this tag is referencing. This is the block that develops the final control output of the station block (e.g. PID block). To call the tuning display press [TUNE] . Valid entry is: 0 = default causes the system to prompt for a block number to be displayed in the block data portion of a tuning display. This occurs if the controller block associated with a station block is not a PID block. 11 to 9998 = block address of the controlling function block. Allows the tuning display to be requested without having to specify the block number of the associated controller block.
Return to norm	PRIORITY - identifies the relative priority or importance within an alarm group of a return to normal condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8, 1 being the highest priority. COMMENT - index number of the alarm comment that is to appear at a display when this tag returns to a normal condition.
Bad quality	PRIORITY - identifies the relative priority or importance within an alarm group of a bad quality condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8, 1 being the highest priority.
High alarm	PRIORITY - identifies the relative priority or importance within an alarm group of a high alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8, 1 being the highest priority. COMMENT - index number of the alarm comment that is to appear at a display when this tag enters a high alarm condition.
Low alarm	PRIORITY - identifies the relative priority or importance within an alarm group of a low alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8, 1 being the highest priority. COMMENT - index number of the alarm comment that is to appear at a display when this tag enters a low alarm condition.

OIS CONFIGURATION
Table 16 10. Tag Database - STATION Attributes (continued)

Field	Description
High deviation	<p>PRIORITY - identifies the relative priority or importance within an alarm group of a high deviation alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entries is from 1 to 8. 1 being the highest priority.</p> <p>COMMENT - index number of the alarm comment that is to appear at a display when this tag enters a high deviation alarm condition.</p>
Low deviation	<p>PRIORITY - identifies the relative priority or importance within an alarm group of a low deviation alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entries is from 1 to 8. 1 being the highest priority.</p> <p>COMMENT - index number of the alarm comment that is to appear at a display when this tag enters a low deviation alarm condition.</p>

Table 16 11 Tag Database - RMCB, DD and MSDD Attributes

Field	Description
State-ZERO ONE (RMCB DD MSDD)	<p>ZERO - six character maximum logic state descriptor that associates with this tag and appears on displays to identify the zero state of a device.</p> <p>ONE - six character maximum logic state descriptor that associates with this tag and appears on displays to identify the one state of a device.</p> <p>The two entries must match entries in the logic state descriptor list defined through logic state descriptors configuration. The PCU module reports the state of the device.</p>
State TWO THREE (MSDD)	<p>TWO - six character maximum logic state descriptor that associates with this tag and appears on displays to identify the two state of a device.</p> <p>THREE - six character maximum logic state descriptor that associates with this tag and appears on displays to identify three state of a device.</p> <p>The two entries must match entries in the logic state descriptor list defined through logic state descriptors configuration. The PCU module reports the state of the device.</p>
Feedback 1-ZERO ONE (RMCB DD MSDD)	<p>ZERO - six character maximum logic state descriptor that associates with this tag and appears on displays to identify a logic zero state for feedback one.</p> <p>ONE - six character maximum logic state descriptor that associates with this tag and appears on displays to identify a logic one state for feedback one.</p> <p>The two entries must match entries in the logic state descriptor list defined through logic state descriptors configuration. The PCU module reports the feedback state of the device.</p>
Feedback 2 ZERO ONE (RMCB DD MSDD)	<p>ZERO - six character maximum logic state descriptor that associates with this tag and appears on displays to identify a logic zero state for feedback two.</p> <p>ONE - six character maximum logic state descriptor that associates with this tag and appears on displays to identify a logic one state for feedback two.</p> <p>The two entries must match entries in the logic state descriptor list defined through logic state descriptors configuration. The PCU module reports the feedback state of the device.</p>

Table 16-11. Tag Database - RMCB, DD and MSDD Attributes (continued)

Field	Description
Feedback 3-ZERO ONE (MSDD)	ZERO - six character maximum logic state descriptor that associates with this tag and appears on displays to identify a logic zero state for feedback three ONE - six character maximum logic state descriptor that associates with this tag and appears on displays to identify a logic one state for feedback three The two entries must match entries in the logic state descriptor list defined through logic state descriptors configuration. The PCU module reports the feedback state of the device
Feedback 4-ZERO ONE (MSDD)	ZERO - six character maximum logic state descriptor that associates with this tag and appears on displays to identify a logic zero state for feedback four ONE - six character maximum logic state descriptor that associates with this tag and appears on displays to identify a logic one state for feedback four The two entries must match entries in the logic state descriptor list defined through logic state descriptors configuration. The PCU module reports the feedback state of the device
Permissive 1-ZERO ONE (RMCB)	ZERO - six character maximum logic state descriptor that associates with this tag and appears on displays to identify a logic zero state for permissive one ONE - six character maximum logic state descriptor that associates with this tag and appears on displays to identify a logic one state for permissive one The two entries must match entries in the logic state descriptor list defined through logic state descriptors configuration. The PCU module reports the permissive state of the device
Permissive 2-ZERO ONE (RMCB)	ZERO - six character maximum logic state descriptor that associates with this tag and appears on displays to identify a logic zero state for permissive two ONE - six character maximum logic state descriptor that associates with this tag and appears on displays to identify a logic one state for permissive two The two entries must match entries in the logic state descriptor list defined through logic state descriptors configuration. The PCU module reports the permissive state of the device
Return to normal (RMCB DD MSDD)	PRIORITY - identifies the relative priority or importance within an alarm group of a return to normal condition for this tag. Relates to alarm management, and the alarm summary. Valid entry is from 1 to 8, 1 being the highest priority COMMENT - index number of the alarm comment that is to appear at a display when this tag returns to a normal condition
Bad quality (RMCB DD MSDD)	PRIORITY - identifies the relative priority or importance within an alarm group of a bad quality condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8, 1 being the highest priority
Alarm (RMCB DD MSDD)	PRIORITY - identifies the relative priority or importance within an alarm group of an alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entries from 1 to 8, 1 being the highest priority COMMENT - index number of the alarm comment that is to appear at a display when this tag enters an alarm condition
Text set (RMCB)	Text set number defined through remote motor control block text configuration that contains text to associate and display for each of the ten error codes that can be sent in an exception report from a remote motor control function block. The error codes identify the current state of the remote control device

OIS CONFIGURATION

Table 16-12. Tag Database - RMSC Attributes

Field	Description
Engineering unit	Non entry field a PCU module reports the index number that associates an engineering unit of measurement with this tag. A list of valid fixed and user defined engineering units can be viewed at the EUD Configuration display.
Decimal places	Number of decimal places to display for this tag. Valid entry is from 0 to 4.
Return to norm	PRIORITY - identifies the relative priority or importance within an alarm group of a return to normal condition for this tag. Relates to alarm management and the alarm summary. Valid entries from 1 to 8, 1 being the highest priority. COMMENT - index number of the alarm comment that is to appear at a display when this tag returns to a normal condition.
Bad quality	PRIORITY - identifies the relative priority or importance with an alarm group of a bad quality condition for this tag. Relates to alarm management and the alarm summary. Valid entries from 1 to 8, 1 being the highest priority.

Table 16-13. Tag Database - TEXT Attributes

Field	Description
Return to norm	PRIORITY - identifies the relative priority or importance with an alarm group of a return to normal condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8, 1 being the highest priority. COMMENT - index number of the alarm comment that is to appear at a display when this tag returns to a normal condition.
Bad quality	PRIORITY - identifies the relative priority or importance within an alarm group of a bad quality condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8, 1 being the highest priority.

Table 16-14 Tag Database - TEXTSTR Attributes

Field	Description
Text length	Specifies the length of the text string that will be accepted by the console if the accepted string length set here is less than the exception reported string length truncation occurs. This is considered to be remote truncation since the communications interface of the console uses the string length value to determine the maximum string length that it is to accept. Valid entry is from 1 to 80.
Control enabled	Determines whether the console is to a low operator control of the text string export block in a PCU module from the console. When enabled the operator can perform control through the keyboard and see the results of the actions at the screen. When disabled, the screen becomes informational only. Valid entry is: YES = default enable control for this tag NO - disable control for this tag
Return to norm	PRIORITY - identifies the relative priority or importance with an alarm group of a return to normal condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8, 1 being the highest priority. (continued)

Table 16-14. Tag Database - TEXTSTR Attributes (continued)

Field	Description
Return to norm (continued)	COMMENT - index number of the alarm comment that is to appear at a display when this tag returns to a normal condition
Bad quality	PRIORITY - identifies the relative priority or importance within an alarm group of a bad quality condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8, 1 being the highest priority
Alarm	PRIORITY - identifies the relative priority or importance within an alarm group of an alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entries from 1 to 8, 1 being the highest priority COMMENT - index number of the alarm comment that is to appear at a display when this tag enters an alarm condition

Table 16-15 Tag Database - DEVSTAT Attributes

Field	Description
Return to norm ¹	PRIORITY - identifies the relative priority or importance within an alarm group of a return to normal condition for this tag. Relates to alarm management and the alarm summary. Valid entries from 1 to 8, 1 being the highest priority COMMENT - index number of the alarm comment that is to appear at a display when this tag returns to a normal condition
Bad quality ¹	PRIORITY - identifies the relative priority or importance within an alarm group of a bad quality condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8, 1 being the highest priority
Alarm priority ¹	PRIORITY - identifies the relative priority or importance within an alarm group of an alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8, 1 being the highest priority COMMENT - index number of the alarm comment that is to appear at a display when this tag enters an alarm condition
Device type	Identifies the type of peripheral device for which this tag is defined. Required for proper operation of printers for logging. Valid device types are PRINTER UNDEFINED
Printer number	Identifies which of four possible printers for a device type of PRINTER. Valid entry is from 1 to 4
Printer type	Defines printer type for a device type of PRINTER. Valid entries ANS (low speed no color) ANSI COLOR (low speed color) ANSI HIGH (high speed no color) IBM (low speed no color) IBM COLOR (low speed color) UNDEFINED

NOTE 1 This console does not indicate alarms for the DEVSTAT tag therefore the priority and comment entries can be left at their default of 0. If sharing the database among other types of consoles, this console ignores the entries in these fields.

OIS CONFIGURATION

Table 16-16. Tag Database - N90STA Attributes

Field	Description
Module type	The console uses this attribute to interpret module status reports received over the communication highway from INFI 90 modules. The information appears at system status pages. The <i>Module Type</i> must be specified. In some cases the module type is for a module that is part of the network interface unit of an INFI 90 node. The console presents a node type instead of module type at the system status overview and node status summary pages in this case. Refer to Table 16-17 for valid module types for PCU modules and Table 16-18 for module types for consoles.
Broadcast - ack sil	Used to determine whether or not to broadcast an alarm acknowledgement or silence to the INFI 90 node defined by this tag whose address is specified in a node list. The field provides an alternate means for turning broadcasting off instead of having to modify a node list. Acknowledge and silence are enabled or disabled separately. NO = default do not broadcast to the node YES - broadcast to the node
NIU port 0/1 - terminal lang	Not applicable for this console.
Return to norm	PRIORITY - identifies the relative priority or importance within an alarm group of a return to normal condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8 - 1 being the highest priority. COMMENT - index number of the alarm comment that is to appear at a display when this tag returns to a normal condition.
Bad quality	PRIORITY - identifies the relative priority or importance within an alarm group of a bad quality condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8 - 1 being the highest priority.
Alarm	PRIORITY - identifies the relative priority or importance within an alarm group of an alarm condition for this tag. Relates to alarm management and the alarm summary. Valid entry is from 1 to 8 - 1 being the highest priority. COMMENT - index number of the alarm comment that is to appear at a display when this tag enters an alarm condition.

Table 16-17. N90STA Tag - INFI 90 Module Types for PCU Modules

Module Type	Nomenclature	Description
AMMH	NAMM01	Analog Master Module (high)
AMML	IMAMM03 NAMM02/03	Analog Master Module (low)
AOM	IMAOM01 NAOM01	Analog Output Module
B M ¹	INBMU2 NBIM01/02	Bus interface Module
BTM ²	INBTM01, NBTM01	Bus Transfer Module
CBC	CBC01	Batch Command Controller
CLC	CLC03/04	Loop Command Controller

Table 16-17. N90STA Tag - INFI 90 Module Types for PCU Modules (continued)

Module Type	Nomenclature	Description
COM/QRC	IMCOM03/04 NCOM02/03/04 IMQRC01 NQRC01	Controller Module and Quick Response Controller Module
CSC	CSC01	Sequence Command Controller
CTM	NCTM01	Configuration and Tuning Module
CTT	NCTT01/02	Configuration and Tuning Terminal
GCM/PPT ³	INPPT01 NGCM02	Plant Loop to Plant Loop Transfer Module (remote)
IT01 ³	NIT01 NBCM01	NF-NET to INF-NET Transfer Module (local)
T02 ³	NI T02 NGCM03	INFI-NET to INFI-NET Transfer Module (remote)
IPT01 ³	INIPT01 NGCM04	INFI-NET to Plant Loop Transfer Module (local)
IPT02 ³	INIPT02	NF-NET to Plant Loop Transfer Module (remote)
LCM01	NLCM01	Large Controller Module
LCM02	NLCM02	Large Controller Module
LCM03	NLCM03	Large Controller Module
LMM01	NLMM01	Logic Master Module
LMM02	IMLMM02 NLMM02	Logic Master Module
LSM/PCT ⁴	INPCT01 NLSM01/02	Plant Loop to Computer Transfer Module (interface unit for MCS and 5 000 tag O U)
MFC	IMMFC03/04/05, NMFCD01/02/03/04/05	Multi-Function Controller Module
MFP	IMMFP01/02/03	Multi-Function Processor Module
MPC	IMMPC01 NMPC01	Multi-Processing Module
NIU ³	NN U01	Network Interface Unit
NPM ¹	INNPM01	Network Processing Module (Controlway)
PBUG	N/A	Module Bus Debugger
PM ⁵	NPIM01	Processor Input Module (interface unit for OIU)
PTM	INPTM01 NPTM01	Point Table Module
SBM	NSBM01	Superloop Bus Module

OIS CONFIGURATION

Table 16-17. N90STA Tag - INFI 90 Module Types for PCU Modules (continued)

Module Type	Nomenclature	Description
SCM	NSCM01	Serial Communication Module
SSM/ICT ⁴	IN CT01 NSSM01	NFI-NET to Computer Transfer Module (interface unit for MCS and 5 000 tag O U)

NOTES

- 1 PCU node use a module address of 0 or 1 depending on the address of the module
- 2 Use a module address of 3
- 3 Communication module, use a module address of 0
- 4 MCS or 5 000 tag OIU interface module use a module address of 2
- 5 O U interface module use a module address of 2

Table 16-18 N90STA Tag - INFI 90 Module Types for Consoles

Module Type ¹	Nomenclature	Description
COMPUTER ²	N/A	Computer connected to the communication highway through a network interface unit
O S10	O S10	Operator Interface Station
O S20	O S20	Operator Interface Station
O S40	I O S401/A/D	Operator Interface Station
O S41	I O S411/A/D	Operator Interface Station
O U	NO U01/02/03	Operator Interface Unit
MCS	NMCS02	Management Command System

NOTES

- 1 All consoles use a module address of 2
- 2 Used to access computers running process interface software packages (e.g. SLDG XRS 90 Data Management *090 Process Management etc)

ALARM COMMENTS

An alarm comment is defined text that can be associated with an alarm condition or conditions of a tag in the database. An alarm comment can be created for each alarm condition of a tag. Each tag type has different possible alarm conditions, which include:

- Return to normal (RTN)
- Alarm (A)
- High Alarm (H)
- Two-high alarm (2H)
- Three-high alarm (3H)
- Low-alarm (L)

- Two-low alarm (2L)
- Three-low alarm (3L)
- High deviation (HD)
- Low deviation (LD)
- High rate of change (HR)
- Low rate of change (LR).

All alarm comments have an assigned index number. The index number allows using a single comment with several tags. In this way, a comment does not have to be redefined for each tag. Enter the index number for each alarm condition of a tag during its configuration to associate a comment with a condition.

Once created, alarm comments reside in an alarm comment file on the hard disk. Alarm comment configuration modifies or creates this alarm list. The number of comments in the file is variable with a maximum of 20,000 entries. The preferred method for creating an alarm comment list is by using the SLDG program then transferring the comment file to the console. The configuration option at the console is better suited for making modifications to an existing list. Refer to the *Personal Computer Software Logging, Database and Graphics* instruction for procedures.

NOTE If changes are made at the console to the alarm comment list, it is suggested that the alarm comment file be transferred back to the engineering work station at which the alarm comment file is being maintained. Transferring the file back maintains the database integrity.

Pages of the alarm comment configuration function allow viewing, modifying, adding, deleting and printing alarm comments. The process engineer defines alarm comments through the *Alarm Comment Configuration* page (see Figure 16-12). To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown:

A OIS Configuration → *A Database* → *1 Alarm Comment*

- Paging** The entire contents of the alarm comment configuration file can be viewed by paging through the alarm comment configuration display. Press **[NEXT PAGE]** or **[PREV PAGE]** to call the next or previous page of comments to the screen. Press **[HOME]** to return to the first page and the beginning of the file.
- Select** The *A SELECT* option calls an alarm comment by index number to have that comment appear as the first entry at the page. This positions an input cursor at the comment for immediate editing. To use this option:

1. Press **[A]** to select the option.

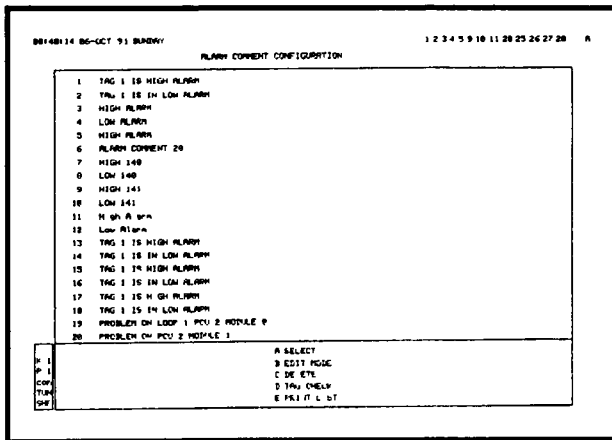


Figure 16-12 Database - Alarm Comment Configuration

2 Key in the index number of an alarm comment and press **ENTER**

3. Use the configuration keys listed in Table 16 1 to change, modify or clear the selected comment Use the paging keys to move the cursor to other comments in the list while in this mode

4 Press **ENTER** after making all modifications to save the changes and update the alarm comment file

Edit The **B EDIT** option puts the current page into editing mode and enables an input cursor. Pressing **ENTER** before any other selection does the same thing To use this option

1 Press **B** or **ENTER** to go into editing mode

2 Use the configuration keys listed in Table 16 1 to change, modify or clear any selected comment Use the paging keys to move the cursor to other comments in the list while in this mode

3 Press **ENTER** after making all modifications to save the changes and update the alarm comment file Press **ESC** before **ENTER** to exit without making changes

Delete The **C DELETE** option specifies a single, list, or range of alarm comments to delete from the alarm comment file After selecting this option, the next page presents two deletion choices **LIST** or **RANGE**

Use the *A LIST* option to specify a single or list of up to five alarm comments to delete. To use this option

- 1 Press **[C]** to select *DELETE*
- 2 Press **[A]** to select *LIST*; the page presents a single input field.
- 3 Key in the index number of a comment to delete. If only one comment is to be deleted, go to the next step. Press **[TAB]** to enter additional index numbers. Up to four additional comments can be specified for deletion.
- 4 Press **[ENTER]** to initiate the deletion. Press **[ESC]** before **[ENTER]** to exit without deleting.

Use the *B RANGE* option to specify a from and a to range of alarm comments to delete. To use this option

- 1 Press **[C]** to select *DELETE*
- 2 Press **[B]** to select *RANGE*, the page presents a *START* and *END* input field.
- 3 Key in the index number of the first comment in the range at the *START* field.
- 4 Move to the *END* field and enter the last index number in the range to delete. If only one comment is to be deleted, enter the same index number in both fields.
5. Press **[ENTER]** to initiate the deletion. Press **[ESC]** before **[ENTER]** to exit without deleting.

Tag Check

The *D TAG CHECK* option allows checking the tag database to determine which tags currently use an alarm comment. To use this option:

- 1 Press **[D]** to select *TAG CHECK*. The page presents a single *INDEX* input field.
- 2 Key in the index number of a comment, not a tag index number.
- 3 Press **[ENTER]**.

The next page to appear gives a list of tags that use the selected comment. Each entry shows the index number and name of a tag. See Figure 16-13 for an example of the tag check page. Select *A PRINT LIST* to print the current tag list to a printer; the keyboard status block shows the printer at which a printout will occur. Select *B NEXT LIST* to call the *INDEX* input field back to the screen to initiate another tag check. Select *C MORE* to view additional tags if the list spans more than one page.

Engineering Unit Descriptors

Engineering unit descriptors relate to tag types that present analog values. They describe the unit of measurement (e.g., DEG F, GPM, AMPS, LB/HR) for a tag value. These descriptors show the unit of measurement related to a particular value received from the process. A descriptor follows the tag value throughout all console functions.

The console provides an index of common engineering units. A total of 256 engineering unit descriptors can be defined in the database (i.e., index numbers 0 to 255): 0 through 15 are fixed and 16 through 255 can be user-defined. Table 16-19 lists the fixed engineering unit descriptors and their index numbers. The fixed descriptors can be substituted using the text substitution function. Refer to *Text Definition and Substitution* in this section.

Table 16-19 Engineering Unit Descriptors

Index	Descriptor	Index	Descriptor
0	(bank)	8	GPM
1	(bank)	9	CFS
2	%	10	CFM
3	DEG F	11	LB/HR
4	DEG C	12	GAL
5	PS A	13	AMPS
6	PS G	14	IN HG
7	N H ₂ O	15	KLB/HR

The actual reporting of engineering unit descriptors comes from PCU control modules. Once the process engineer defines an engineering unit in the module configuration, the module sends an index number to the console to identify the engineering unit associated with an exception reported value. The console cross-references this index number to its database list of fixed and user-defined descriptors. Since the modules report an index number of an engineering unit descriptor, all devices on a common communication highway should use the same EUD list.

Logic State Descriptors

Logic state descriptors relate to tag types that present digital device logic states. These descriptors show the current logic state (e.g., on or off, zero or one, run or stop, or closed or open) of a device. A descriptor, once defined for a tag, follows the tag throughout OIS functions.

Unlike engineering unit descriptors, a PCU module does not report index numbers for logic state descriptors. The console refers to the tag database for the correct descriptor.

The console provides an index of common logic state descriptors. A total of 256 logic state descriptors can be defined in the database: 0 through 15 are fixed, and 16 through 255 can be user-defined. Table 16-20 lists the fixed logic state descriptors and their index numbers. The fixed descriptors can be substituted

using the text substitution function Refer to *Text Definition and Substitution* in this section

Table 16-20 Logic State Descriptors

Index	Descriptor	Index	Descriptor
0	ZERO	8	LOW
1	ONE	9	HIGH
2	ON	10	EMFTY
3	OFF	11	FULL
4	NO	12	RUN
5	YES	13	STOP
6	CLOSED	14	TR P
7	OPEN	15	(b ank)

Additional logic state descriptors and engineering unit descriptors can be added to the database through console configuration, or off-line using the SLDG utility

Defining Engineering Unit Descriptors

Step 1 The process engineer defines individual engineering unit descriptors through the *EUD Configuration* page (see Figure 16-14) To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown

A OIS Configuration → A Database → D Engineering Units

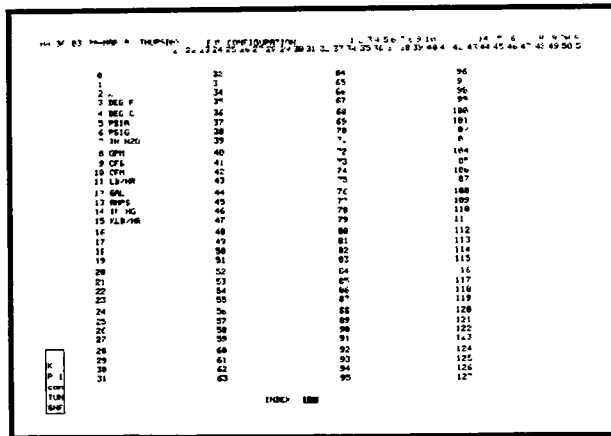


Figure 16 14 Database - EUD Configuration

Step 2 There are two pages of descriptors. The first page shows descriptors 0 through 127, the second page descriptors 128 through 255. Press **[NEXT PAGE]** or **[PREV PAGE]** to move between the pages. New descriptors can be added or existing descriptors can be edited through these display pages.

NOTE Descriptors 0 through 15 are fixed and cannot be changed through this configuration.

To define analog value engineering unit descriptors

a. Use the OIS configuration keys (refer to Table 16-1) to move between and enter data into each display input field. The console initially enters 16 at the *Index* prompt. This is the first user-definable descriptor. Either use this number or enter another, then press **[ENTER]**. This moves the input cursor to a specific descriptor to edit or add.

b. Type a new engineering unit descriptor (six characters maximum) or edit the existing engineering unit descriptor.


c. Press **[ENTER]** to update the EUD list on the hard disk. Moving from this EUD field to another also enters the engineering unit descriptor into the hard disk list. Press **[NEXT PAGE]** to view the second page of descriptors to make changes if desired.

d. Either move to another field and repeat Steps 2b and 2c, or press **[ESC]** to call the *Index* prompt and repeat Steps 2a through 2c to enter or edit additional descriptors.

e. After completing all additions or edits to both descriptor pages, press **[ENTER]** then **[ESC]** to exit this display.

Defining Logic State Descriptors

Step 1 The process engineer defines individual logic state descriptors through the *LSD Configuration* page (see Figure 16-15). To call this display, first press **[GENL FCTNS MENU]**, then select the following menu items in the sequence shown:



Step 2 There are two pages of descriptors. The first page shows descriptors 0 through 127, the second page descriptors 128 through 255. Press **[NEXT PAGE]** or **[PREV PAGE]** to move between the pages. New descriptors can be added or existing descriptors can be edited through these display pages.

```

04473715 4:00A M THURSDAY 155 CPU:100% (0) 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20
21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 *
0 ZERO 32 64 96
1 ONE 33 65 97
2 ON 34 66 98
3 OFF 35 67 99
4 NO 36 68 100
5 YES 37 69 101
6 CLOSED 38 70 102
7 OPEN 39 71 103
8 LOW 40 72 104
9 HIGH 41 73 105
10 EMPTY 42 74 106
11 FULL 43 75 107
12 RUN 44 76 108
13 STOP 45 77 109
14 TRIP 46 78 110
15 47 79 111
16 48 80 112
17 49 81 113
18 50 82 114
19 51 83 115
20 52 84 116
21 53 85 117
22 54 86 118
23 55 87 119
24 56 88 120
25 57 89 121
26 58 90 122
27 59 91 123
28 60 92 124
29 61 93 125
30 62 94 126
31 63 95 127

```

I
 N I
 P-1
 P-2
 P-3
 P-4

INDEX > 000

TPS0016A

Figure 16-15 Database - LSD Configuration

To define digital logic state descriptors

NOTE Descriptors 0 through 15 are fixed and cannot be changed through this configuration. LSD 15 is defined as blank.

a Use the OIS configuration keys (refer to Table 16-1) to move between and enter data into each display input field. The console initially enters 16 at the *Index* prompt. This is the first user-definable descriptor. Either use this number or enter another, then press **ENTER**. This moves the input cursor to a specific descriptor to edit or add.

b Type a new logic state descriptor (six characters maximum) or edit the existing logic state descriptor.

c Press **ENTER** to update the LSD list on the hard disk. Moving from this LSD field to another also enters the logic state descriptor into the hard disk list. Press **NEXT PAGE** to view the second page of descriptors to make changes if desired.

d Either move to another field and repeat Steps 2b and 2c, or press **ESC** to call the *Index* prompt and repeat Steps 2a through 2c to enter or edit additional descriptors.

e. After completing all additions or edits to both descriptor pages, press **ENTER** then **ESC** to exit this display.

Display Generation

The OIS console uses a variety of summary, interactive and informational displays to convey information about process operations and results of control actions to an operator. The displays include summaries, graphic overviews, graphic details and group displays. These displays can be assigned to tags, keyboard keys and ADP pushbuttons. Displays are not console specific. A display on one console can be copied to floppy disk for transfer and use on another console.

Faceplate symbols which mimic process devices can be created and used in these graphic displays, or assigned using the operator displays' faceplates function for use in operator configurable displays. This section explains two methods available for creating displays and faceplate symbols.

The first and preferred method for display creation is to use a configuration tool called screen oriented display generator (SODG). The SODG utility is available through the software, logging, database and graphics (SLDG) configuration program, which runs on a Bailey Controls engineering work station (EWS). The SODG utility is an interactive display editing program for creating displays, faceplates and symbols. This configuration tool can be used to create new or edit existing displays. The SLDG program provides a library of standard faceplates and symbols, which can be used as is or modified.

NOTE If modifying SLDG provided standard symbols or faceplates, it is suggested that a renamed copy of the original file be made then modifications be made to the renamed file. This maintains the integrity of the symbol library.

Displays and symbols created using SLDG utilities reside in display source files (.DT). Once transferred to the console, the *Display Generator* function must be used to assemble and store the files to its hard disk as .DU files (i.e., displays) and .DL files (i.e., symbol files). File utilities at the console can be used to transfer unassembled .DT files to the hard disk for storage.

A feature available through the SLDG program (i.e., release 4.1 or greater) and enabled at the console is display broadcasting. Broadcasting allows the console to receive a display source file (.DT) over the communication highway (INFI-NET system only) from an engineering work station running the SLDG program. The engineering work station initiates the transfer, not the console. Once received, the console automatically runs the file through its *Display Generator* function. The new display is then available at the next display call up. The operations performed by the console on received display files are transparent to the operator.

The second method of display creation is to use the EDT text editor available at the console. When using EDT, a display file (.DT) is created by entering escape commands for each element and capability incorporated into a display. Escape commands define display interactives, static data, dynamic values and symbols, control points, key selects, etc. Each line of the source file contains a single escape command. Refer to Appendix B for display and symbol escape commands, and the format that must be followed when creating a display or symbol file.

The EDT function can be used to create new or edit existing displays. The source file (.DT) for a display can reside either on the hard disk or on a floppy disk. Displays created with SLDG and transferred to the hard disk of the console can be edited using the text editor. Display files created with the text editor must first be assembled using the *Display Generator* function before they can be used in operations.

DISPLAY GENERATOR

NOTE The DOT and PROCDT commands perform the same function as the *Display Generator* option. If using either of these commands processing a display through the *Display Generator* function is not required. Refer to **USER-CREATED DISPLAY AND SYMBOL FILES** in the *Terminal Utilities* section for procedures.

The process engineer uses the *Display Generator* function as the last step in display creation. All displays or faceplate symbols whether created using the SODG utility or EDT function must be processed through the *Display Generator* before they can be used by the console.

This function takes a .DT display source file, assembles it into a .DU display file or .DL symbol file and transfers it to a specific assembled display or symbol file directory on the hard disk ([DATA.USNO4] to [DATA.USNOE]). The console automatically determines to which directory the files store. The console references these directories when a display is called by name, or through an ADP pushbutton or keyboard key. It also references these directories when assigning faceplate symbols through the operator configurable displays function. When assembling a display, both the display source file and the symbol source files for all symbols referenced in that display must reside on disk.

NOTE This procedure is not required when broadcasting a display source file from an engineering workstation to the console. The console automatically runs the received source file through the *Display Generator*.

Step 1 The process engineer processes display source files (.DT) through the *Display Generator* (see Figure 16-16). To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown:

A OIS Configuration → B Display → A Display Generator

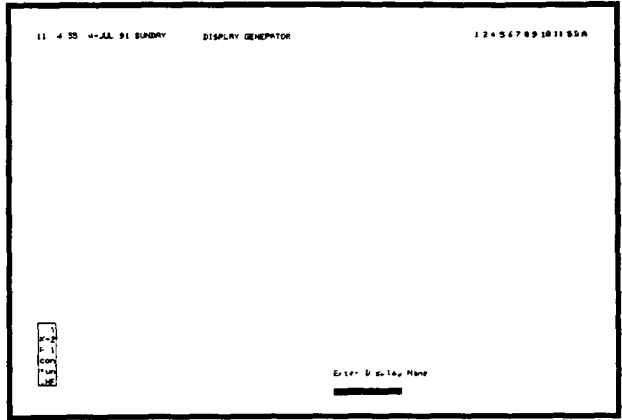


Figure 16-16 Display Generation - Display Generator

Step 2 To process a display file

a. The page presents a single input field, *Enter Display Name*. Enter the display file name without extension. Wild card characters (i.e., * and ?) can be used to process several files or all files that follow a specific name pattern.

Unassembled display or symbol source files whether transferred from a SLDG work station, created with the EDT function, or provided with the software normally reside in the [DATA.USN54] directory. To process a display file that resides in this directory, enter just the filename, a directory number need not be specified.

NOTE This procedure overwrites existing .DU display files.

b. Press **ENTER**, the console presents messages to indicate completion of display file processing. The console indicates successful file processing by displaying the entered file name with a *DU completed*. When all file processing is complete, the message *is Completed*.

If an error in the display source file exists and the console cannot process a file, the file in error appears with an asterisk (*) beside it and a .DT extension to indicate an unsuccessful operation. This also applies for display source files broadcast from an engineering work station. Error messages related to the file in error can be viewed through the *Show Display Errors* function. Once corrected, another attempt to process the display file can be made.

c. Press **ESC** to exit this display when the console has completed all processing.

DISPLAY ERRORS

The OIS console identifies errors it encounters during display file processing (i.e., Display Generator) Errors encountered during display generator operation appear as *-<filename>.DT while at the display generator screen The actual errors can be viewed through the Show Display Errors option

Display errors are saved in display error files on the hard disk The name of these files, which appear at the first page of this function, correspond to the name of the display source file After viewing the errors through this option then correcting them, the display source file can be run through the display generator again

Display source file errors are viewed through the Show Display Errors page (see Figure 16-17) To call this display, first press GENL FCTNS MENU, then select the following menu items in the sequence shown

A OIS Configuration → B Display → D Show Display Errors

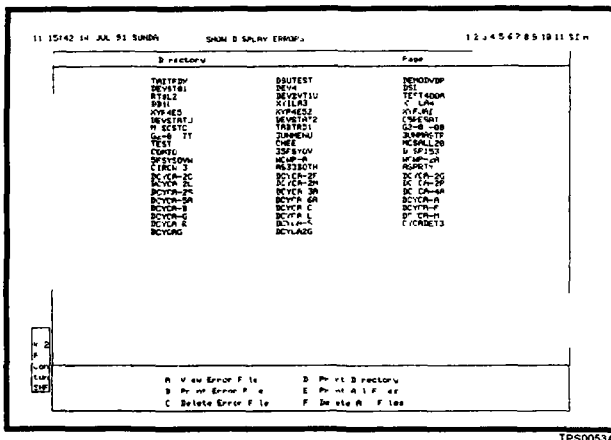


Figure 16-17. Display Generation - Show Display Errors

The display shows a directory listing of display error files that currently reside on the hard disk The options available at this display are

- View Error File** Used to call and view the contents of a specific error file The error file corresponds to the source file in which the display generator function encountered errors The

error file provides a list of errors encountered.

Print Error File Prints the errors listed in an error file. This is also available after calling an error file using the *View Error File* option

Delete Error File Deletes error files when no longer required. Error files should be deleted from the hard disk to free hard disk space. This option is also available after calling an error file using the *View Error File* option

Print Directory Prints the current directory to a printer assigned to the keyboard

Print All Files Prints the contents of all error files currently listed in the directory and residing on the hard disk

Delete All Files Deletes all error files currently in the directory

View Error File To view display errors encountered in a display source file.

a Select *A View Error File* from the directory options menu. This calls an *Enter File Name* prompt

b Enter the file name as it appears in the directory, then press **ENTER**. For example, to view the errors encountered while running the display source file *DISP1.DT* through the display generator, enter *DISP1* at the prompt. The errors appear on the screen. Press **NEXT PAGE** or **PREV PAGE** to view the entire contents of the file.

c Three choices are available while viewing the file. The two options presented at the bottom of the display allow printing or deleting the contents of the error file, or **ESC** can be pressed to exit the display. Exiting leaves the error file intact on the hard disk for future viewing.

Select *A Print Current File* to print a hard copy of the error file to a printer. Select *B Delete Current File* to delete the error file from the directory and hard disk.

d Either select another option, or press **ESC** to exit the error file directory.

Print Error Files To print the contents of a single error file

a Select *B Print Error File* from the directory options menu. This calls an *Enter File Name* prompt.

b Enter the file name as it appears in the directory, then press **ENTER** The console prints the entire contents of the file

Select *E Print All Files* to print the contents of all error files Once selected, the console begins printing the contents of all error files listed in the directory

Delete Error File To delete a single error file from the directory and hard disk

a Select *C Delete Error File* from the directory options menu This calls an *Enter File Name* prompt

b Enter the file name as it appears in the directory, then press **ENTER** The console deletes the file

Select *F Delete All Files* to delete all error files Once selected, the console deletes all error files listed in the directory

Print Directory Select *D Print Directory* to print the directory listing

TEXT EDITOR DISPLAY GENERATION OR EDITING

The EDT text editor function can be used to access and edit existing display source files, or to create new files Unassembled display files (*.DT*) reside on the hard disk in the [DATA USN54] directory by default Typing the VMS EDIT command at the dollar sign (\$) prompt of a terminal or terminal window activates the EDT text editor If a terminal window does not exist, create one using the procedures given under *OPENING A TERMINAL WINDOW* in the *Window Operations* section

Refer to the VMS documentation provided with the console for an explanation and procedures to use the EDT text editor Refer to Appendix B for display and symbol file required formats, and available escape commands Refer to *DISPLAY GENERATOR* in this section or *USER-CREATED DISPLAY AND SYMBOL FILES* in the *Terminal Utilities* section for procedures to process and assemble displays and symbols for console use

Keyboard Configuration

Keyboard configuration assigns displays, key macros or user tasks to keyboard function keys and annunciator display panel (ADP) pushbuttons It also defines key macros, alarm tones and alarm relays.

Any configured display that resides as a *.DU* display file on the hard disk can be assigned to an available, assignable key or ADP pushbutton Once assigned, that display can be accessed through a single key press Assignable keys include

32 function keys (e.g., **AREA n** or **F \bar{n}**)

DISPLAY SUMM

ALARM SUMM**SYSTEM STATUS SUMM****HELP**

NOTE Use **[SHIFT]** in combination with the function keys (i.e. **[F1]** through **[F16]**) to access function keys 17 through 32. For example, press **[SHIFT]-[F1]** to access F17.

Key macros incorporate multiple keystrokes into a single key press. Up to 96 macros can be defined, with each macro incorporating up to 50 keystrokes. After pressing a keyboard key or ADP pushbutton which has a macro assigned, the console performs each key action specified in that key macro. These actions can include any key sequence incorporated into a display using interactive display select escape commands and keyboard keys.

All keyboard keys except those used during macro configuration, and ADP pushbuttons can be defined in a key macro. Each macro can contain a maximum of five display call-ups and window selects. Once defined, macros can be assigned to function keys and ADP pushbuttons.

Macros also accept nested definitions. If a macro contains a key or ADP pushbutton that has a macro already assigned, that macro executes as a part of the initial macro. There is no limit to the number of nesting levels possible. Care should be taken when creating nested key macros. Make sure the nested macro is *not* defined in such a way that it causes the console to continually execute a loop.

NOTE Key macros should *not* be activated when displays which have elements selected for control. Deactivate controls before selecting the macro.

Assigning a user-written program (i.e., user task) to a function key or ADP pushbutton allows activating that program with a single key or pushbutton press. This provides an easier method of activation than having to open a terminal window and entering the EXE command.

Each keyboard the console supports provides five tones and six relays. Both are used in alarm management. Tones sound to inform an operator of an alarm condition, relays close to initiate an alarm sequence.

Keyboard configuration consists of

- Defining key macros
- Assigning displays, key macros or user tasks to keyboard keys
- Assigning displays, key macros or user tasks to ADP pushbuttons








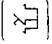

OIS CONFIGURATION

- Defining logical alarm tones
- Defining logical alarm relays

DEFINING KEY MACROS

Key macros can incorporate any ADP pushbutton and any keyboard key except those used in macro configuration. The keys not available for macros and their configuration functions are

NOTE These keys are located in the cursor control alphabet characters and numeric keypad blocks of the keyboard, not the station and remote control block.

-  Erases the current macro definition and returns the input field to the first or starting position.
-  Moves the input field to the first position in the next macro definition. If the next macro definition is not displayed, the next page is brought up. This does not save the macro from which the input cursor was tabbed.
-  Moves the input field to the first position in the previous macro definition. If the previous macro definition is not displayed, the previous page appears. This does not save the macro from which the input cursor was tabbed.
-  Performs the same function as **TAB** except that it also saves the macro definition being exited.
-  Performs the same function as **TAB BACK** except that it also saves the macro definition being exited.
-  Moves the input field within the current macro definition to the previous key definition location. Use this to move to a specific key definition and delete or overwrite that definition.
-  Moves the input field within the current macro definition to the next key definition location. Use this to move to a specific key definition and delete or overwrite that definition.
-  Moves the input field within the current macro definition to the previous key definition location, and deletes the key input from which the input field was moved. Use this to delete key entries.
-  Moves the input field within the current macro definition, and inserts an *undef* key definition. Use this to insert key entries between existing entries.

DIS CONFIGURATION

b Use the macro definition keys explained earlier to move to specific macros and key entries, and to save definitions. The console initially positions the input cursor at the first key position field in the macro definition. This is the first key in the sequence. The console processes macros from left to right, top to bottom. Up to 50 keys can be incorporated into a single key macro.

Enter a key sequence by pressing each keyboard key or ADP pushbutton in the order that the console is to perform them. Any key can be defined in a key macro except for those used in key macro configuration.

When a key or pushbutton is pressed, the *undef* key definition is replaced by an abbreviated key name in brackets or an ASCII character enclosed in single quotes. For example, `<NXT PAG>`, `<GEN FUN>`, `<F14>`, `'7'` or `'*`

c Save the macro definition by either moving from the macro using the double up or double down arrow keys, or press `HOME`. Repeat Steps 2a through 2c to define additional macros.

d When macro definition is complete, press `HOME` then `ESC` to exit.

Moving to another macro using the double up and double down arrow keys, or pressing `HOME` saves a macro. As soon as a macro is saved, it is available for use. A macro number assigns that macro to a keyboard key or ADP pushbutton.

Edit Macro Any defined key macro can be edited. To edit an existing key macro, call the macro by entering its macro number at the *Enter Macro Number* field. This input field appears when the configuration page is first called, or by pressing `HOME`. Edits can include deleting, adding or changing keys in a macro.



To delete a key entry from a macro key sequence, move the input field cursor to highlight the key entry to delete, then press the double left arrow key. The key entry will no longer appear, and the subsequent key entries will move back one place in the macro.



To insert a key entry into a macro key sequence, move the input field cursor to highlight the key entry that is to occur immediately before the key to be inserted, then press the double right arrow key. This inserts an *undef* key definition into the list. Move to the *undef* field and press the key to add. This replaces the *undef* with the defined key.

Delete Macro To delete a defined macro

1 Move to the macro by using the *Enter Macro Number* prompt, or `TAB` or `TAB BACK`.

2 Press **CLEAR**.

3. Save the change by either moving away from the macro using the double up or double down arrows, or press **HOME** Press **ESC** prior to any other key to cancel the deletion

ASSIGNING KEYBOARD KEYS

Keyboard configuration allows assigning displays, key macros and user tasks to keyboard assignable function keys. Displays must reside on the hard disk as .DU display files. Macros must be previously defined using key macro definition procedures. User-written programs must be identified by performing user task definition, refer to *User Task Definition* in this section. The procedure associates an index number with a user-written program.

Step 1 The process engineer makes key assignments through the *Assign Keys To Displays* page (see Figure 16-19) To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown

A OIS Configuration → D Keyboard → A Function Keys

Step 2 Key assignments are keyboard specific. When the configuration display first appears, a **KEYBOARD** prompt displays

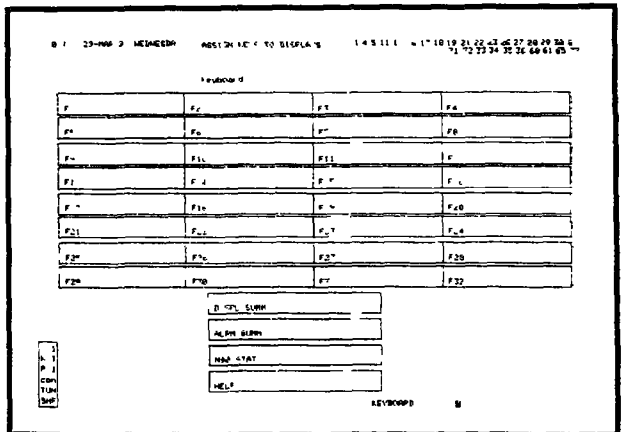


Figure 16-19 Keyboard - Assign Keys to Displays (Page 1)

TP50118A

To call the configuration for a specific keyboard

- a Enter a keyboard number from 1 to 4 for which the assignments are being made or modified
- b Press **[ENTER]** The next display shows the current assignments for that keyboard (see Figure 16-20). If no previous assignments were made, each key contains a default configuration. This default causes a function key press to call a display defined as *BLANK*

1514L 10 09 09 9 TUESDAY ASSIGN KEYS TO DISPLAY 4 5 1 12 1 17 16 15 2 22 23 24 27 28 29 30 5
31 32 33 34 35 36 40 41 42 43 47 52 76

KEYBOARD

F	10	F	D CONRO	F	F7	D CHTELST	D	F4	D BLANK	
F5	D BLANK	F	F6	D BLANK	F	F7	D BLANK	F	F8	D BLANK
F9	D BLANK	F	F10	D BLANK	F	F11	D BLANK	F	F12	D BLANK
F13	D BLANK	F	F14	D BLANK	F	F15	D BLANK	F	F16	D 5 10PND
F17	D BLANK	F	F18	D BLANK	F	F19	D BLANK	F	F20	D BLANK
F21	D BLANK	F	F22	D BLANK	F	F23	D BLANK	F	F24	D BLANK
F25	D BLANK	F	F26	D BLANK	F	F27	D BLANK	F	F28	D BLANK
F29	D BLANK	F	F30	D BLANK	F	F31	D BLANK	F	F32	D BLANK

DISPL BLANK D BLANK F
ALRM BLANK D ALMSUMFL F
N90 STAT D ALM F
HELP D HELP1 F

1 1
10 1
100 1
1000 1
10000 1

TP50117A

Figure 16 20 Keyboard Assign Keys to Display (Page 2)

Step 3 Three fields for each function key define the assignment as a display, macro or user task, identify the display name, macro number or user task number, and specify the window assignment

NOTE The default alarm summary display name is *ALMSUMFL* The default system status display name is *N90STAT1*

To assign a **display** to a key

- a Use the OIS configuration keys (refer to Table 16 1) to move between and enter data into each display field Move to a specific key
- b At the first field for that key, enter a **D**
- c Move to the second field for that key and enter the display name This name must correspond to an assembled display file

on the hard disk. The entered name is the file name without the *.DU* extension

d Move to the third field for that key and make the window assignment. This determines where the display will appear when the key is pressed. Valid entry is:

0 = all windows supported by this console

1 = window one only

2 = window two only

3 = window three only

4 = window four only

F = window assignment follows the keyboard assignment.

e Repeat Steps a through c to make additional key assignments

f Press **ENTER** to save the assignments

To assign a *key macro* to a key

a Use the OIS configuration keys to move between and enter data into each display field. Move to a specific key

b At the first field for that key, enter an M

c Move to the second field for that key and enter the macro number. This number must correspond to a defined key macro. The console allows assigning a macro that is undefined, however, pressing the key has no effect. Valid entry is from 1 to 96

d When assigning key macros, the third field for a key is not valid and does not require an entry for window assignment. Repeat Steps a through c to make additional key assignments.

e Press **ENTER** to save the assignments

To assign a *user task* to a key

a Use the OIS configuration keys to move between and enter data into each display field. Move to a specific key

b At the first field for that key, enter an A

c Move to the second field for that key and enter the user task index number. This number must correspond to a user task defined during user task definition. The console allows assigning a user task that is undefined; however, pressing the key has no effect. Valid entry is from 1 to 50

d When assigning user tasks, the third field for a key is not valid and does not require an entry for window assignment Repeat Steps a through c to make additional key assignments

e Press **ENTER** to save the assignments

Delete Assignment To delete a key assignment, go to that assignment and set the three fields to

D
BLANK
0

This causes the key to display the default **BLANK.DU** display when pressed

ASSIGNING ADP PUSHBUTTONS

NOTE An annunciator display panel requires an MKM02 keyboard interface

Keyboard configuration allows assigning displays, key macros and user tasks to ADP pushbuttons Displays must reside on the hard disk as **.DU** display files. Macros must be previously defined using key macro definition procedures User written programs must be identified by performing user task definition, refer to **User Task Definition** in this section The procedure associates an index number with a user written program

ADP lamps are assigned through tag database configuration Display assignments should correspond to these tag database lamp assignments This allows the operator to call a display relating to an alarm (indicated by the lamp being lit red) to perform actions required to correct the alarm

Step 1 The process engineer makes pushbutton assignments through the ADP assignment page (see Figure 16-21) To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown

A OIS Configuration → D Keyboard → B ADP

Step 2 Pushbutton assignments are annunciator display panel specific When the configuration display first appears, a **KEYBOARD ADP ___ LAMP ___** prompt displays To call the configuration for a specific annunciator display panel

a Use the OIS configuration keys (refer to Table 16 1) to move between and enter data into fields Enter the keyboard number the annunciator display panel is assigned to, ADP number the assignments are being made for, and a specific lamp (pushbutton) being assigned

b Press **ENTER** This calls the second page of the configuration The next display shows the current assignments for that panel

1 00153 09 APR 9 MEMESDP 2 0 11 2 04 25 00 1 00 61 00 00 0 05 67 70 50
 02 07 8 24

KEYB,HPD RB, PANEL

1	2	3	4
5	6	7	8
9	10	11	12
13	14	15	16
17	18	19	20
21	22	23	24
25	26	27	28
29	30	31	32
33	34	35	36
37	38	39	40
41	42	43	44
45	46	47	48
49	50	51	52
53	54	55	56
57	58	59	60
6	7	8	9

KEYBOARD 2 HPD LWF

TP60118A

Figure 16-21 Keyboard - ADP Assignment Display (Page 1)

(see Figure 16-22) If no previous assignments were made, each pushbutton contains a default configuration. This default causes a pushbutton press to call a display defined as *BLANK*.

Step 3 Three fields for each pushbutton define the assignment as a display, key macro or user task, identify the display name, macro number or user task index number, and specify the window assignment.

To assign a *display* to a pushbutton

- Use the OIS configuration keys to move between and enter data into each display field. Move to a specific pushbutton.
- At the first field for that pushbutton, enter a D.
- Move to the second field for that pushbutton and enter the display name. This name must correspond to a display file on the hard disk. The entered name is the file name without the *.DU* extension.
- Move to the third field for that pushbutton and make the window assignment. This determines where the display will appear when the pushbutton is pressed. Valid entry is
 - 0 = all windows supported by this console
 - 1 = window one only
 - 2 = window two only

e Press **ENTER** to save the assignments

To assign a *user task* to a pushbutton

a Use the OIS configuration keys to move between and enter data into each display field Move to a specific pushbutton

b At the first field for that pushbutton, enter an A

c Move to the second field for that pushbutton and enter the user task index number. This number must correspond to a user task defined during user task configuration The console allows assigning a user task that is undefined, however, pressing the pushbutton has no effect. Valid entry is from 1 to 50

d When assigning user tasks, the third field for a pushbutton is not valid and does not require an entry for window assignment. Repeat Steps a through c to make additional pushbutton assignments

e Press **ENTER** to save the assignments

Delete Assignment

To delete a pushbutton assignment, go to that assignment and set the three fields to

D
BLANK
0

This causes the pushbutton to display the default **BLANK.DU** display when pressed

DEFINING LOGICAL ALARM TONES

A logical alarm tone assigned to an alarm group sounds when a tag in that group goes into alarm Each of 20 possible logical tones is formed by selection of a keyboard annunciator, and a defined pitch and volume Tone configuration determines the priority, physical keyboard, duration and volume of each logical tone Each tone is identified and assigned by its logical tone number The console uses the priority to identify which tone should sound first in the event two tones trigger at the same instant

Press **SILENCE** to disable all tones immediately

Tone configuration also sets a global alarm silence toggle for each logical tone, and defines a node list to use when broadcasting tone silences This is a function of global alarm acknowledge and silence configuration Tone configuration provides an enable or disable of silence broadcasting on a per tone basis Refer to **GLOBAL ALARMING ACKNOWLEDGE AND SILENCE** in this section for specifics

Logical tone configuration provides a test feature that allows hearing a tone to:

- Verify a keyboard annunciator is working
- Verify correct configuration
- Determine if the pitch, volume and duration are sufficient to identify an alarm

Step 1 The process engineer configures logical alarm tones through the *Tones Configuration page* (see Figure 16 23) To call this display, first press **[GENL FCTNS MENU]**, then select the following menu items in the sequence shown.

A OIS Configuration → D Keyboard → C Tones

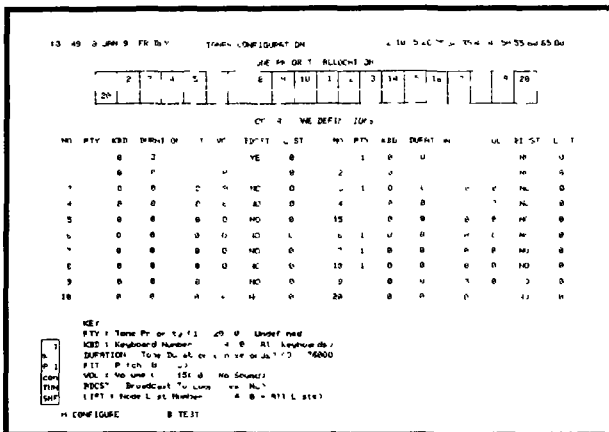


Figure 16 23 Keyboard - Tone Configuration

TPS0120A

Step 2 To define a logical tone

a Press **[A]** to select *CONFIGURE*; this calls a *Tone Number* prompt

b Enter the number of a logical tone, then press **[ENTER]** Valid entry is from 1 to 20. After pressing **[ENTER]**, the input cursor appears at the *PTY* field for that logical tone. The tone count displaying in the *TOPE PRIORITY ALLOCATION* box for a given tone priority changes from cyan to green when a tone with that priority is being configured

c The *LOGICAL TONE DEFINITIONS* portion of the screen displays the current alarm tone configuration, and is the area of the screen used to change configurations. Use the OIS configuration keys (refer to Table 16-1) to move between and enter data into each display field. Enter a priority for this tone. Valid entry is 0 for undefined, or 1 to 20.

After entering, the priority level indicated in the *TONE PRIORITY ALLOCATION* box at the top of the display increments to the total number of tones with that priority assigned. For example, if tones six and ten are set to priority four, the *TONE PRIORITY ALLOCATION* box indicates a 2 under priority level four.

d. Enter the number of a physical keyboard that is to provide this tone in the *KBD* field. Valid entry is 0 for all keyboards, or 1 to 4 for a specific keyboard. If the *KBD* column is set to all zeros, only five tones can be defined.

e. Enter the duration in seconds that this tone is to sound when triggered. Valid entry is 0 for no tone, or 1 to 36000. The tone can be silenced prior to completing its duration by pressing **SILENCE**.

f. Enter the pitch of this tone in the *PIT* field. Valid entry is from 0 to 14. Each pitch number corresponds to a different frequency in hertz.

g. Enter the volume of this tone in the *VOL* field. Valid entry is 0 for no sound, 1 (softest) to 15 (loudest).

NOTE: The next two fields relate to global silencing and alarm management.

h. Set the *BDCST* field to **YES** to enable broadcasting a tone silence for this logical tone. Tone silencing is initiated through **SILENCE** on the keyboard. Set this field to **NO** to disable broadcasting.

i. If the *BDCST* field is set to **YES**, enter a node list number at the *LIST* field. This field determines to which nodes, specified in a node list, to broadcast the silence. Valid entry is:

0 = broadcast the silence to the nodes in the node list automatically compiled by the console during start-up. This list contains the first 32 N90STA tags that define a console or a computer.

1 = node list one

2 = node list two

3 = node list three

4 = node list four

OIS CONFIGURATION

If the *BDCST* field is set to *NO*, the *LIST* field is not valid. Refer to **Alarm Management Configuration** and **GLOBAL ALARMING ACKNOWLEDGE AND SILENCE** in this section for more information on silence broadcasting

J To define another logical tone, use the OIS configuration keys to move to the fields of the tone and repeat Steps 2c through 2i. Or, press **[ESC]** to call the *Tone Number* prompt and repeat Steps 2b through 2i. When complete, press **[ENTER]** to save the configuration to the hard disk

Test Tone configuration provides a test option that sounds a tone using its configured pitch and volume. Test duration is set through the test function. To test a defined tone:

1 Press **[B]** to select *TEST*; this calls a *Tone Number* *Duration* ___ input field

2 Use the OIS configuration keys to move between and enter data into each display field. Enter the tone number to test, then the duration of the test in seconds (0 to 36000). The tone count displaying in the *TONE PRIORITY ALLOCATION* box for a given tone priority changes from cyan to yellow when a tone with that priority is being tested

3 Press **[ENTER]**, the console presents a *Test in progress* message and a *Test Time* ___ field that counts down the test duration. The tone sounds until the test time decrements to zero

Testing a tone turns off any active tones that are currently sounding, and also prevents any new tones from sounding during the test. Press **[ESC]** to discontinue a test in progress

DEFINING LOGICAL ALARM RELAYS

A logical alarm relay closes for a defined duration when a tag goes into alarm. The alarm relay, however, must be assigned to an alarm group, and the tag assigned this group number for this to occur.

Each of the 24 logical relays is formed by one of six physical relays per keyboard and a specified duration. Relay configuration identifies the physical keyboard and relay, and the duration for a logical relay. Each relay is assigned by its logical relay number. The duration is the number of seconds the relay closes.

Normally, a relay remains closed until the alarm driving the relay returns to normal, the alarm is acknowledged, or the duration set for the relay expires. A *Relay Hold until Silenced* field at the system configuration page provides an option to change the functionality of the relays. If this field is set to *YES*, any alarm relays

b Enter the number of a logical relay, then press **[ENTER]** Valid entry is from 1 to 24. After pressing **[ENTER]**, the input cursor appears at the *PHYS* field for that logical relay

An *X* displays in the *PHYSICAL RELAY ALLOCATION* boxes for each configured relay Thus *X* changes color from cyan to green for a given relay when that relay is being configured

c The *LOGICAL RELAY DEFINITIONS* portion of the screen displays the current alarm relay configuration, and is the area of the screen used to change configurations Use the OIS configuration keys (refer to Table 16-1) to move between and enter data into each display field Enter the physical relay number at the *PHYS* field. Valid entry is 0 for undefined, or 1 to 6 After entering, an *X* appears in the *PHYSICAL RELAY ALLOCATION* box at the top of display

If a *Physical Device Overlap* error message occurs when attempting to enter a physical relay number, that relay number has been used previously. This can occur, for example, if a physical relay has been assigned to keyboard one and an attempt to assign that relay number to keyboard two has been made If this occurs, move to the *KYBD* field of the relay being defined and make the keyboard assignment before the physical relay assignment

d Enter the number of a physical keyboard that is to provide this relay in the *KYBD* field Valid entry is 0 for all keyboards, or 1 to 4 for a specific keyboard If the *KYBD* column is set to all zeros, only six physical relay assignments can be made

e Enter the duration in seconds that this relay is to close when triggered. Valid entry is 0 for do not close, or 1 to 36000

f To define another logical relay, use the OIS configuration keys to move to the fields of the relay and repeat Steps 2c through 2e Or, press **[ESC]** to call the *Relay Number* prompt and repeat Steps 2b through 2e When complete, press **[ENTER]** to save the configuration to the hard disk

Test Relay configuration provides a test option that closes a specific relay defined through this configuration Test duration is set through the test function To test a defined relay

1 Press **[B]** to select *TEST*; this calls a *Relay Number* *Duration* __ input field.

2 Use the OIS configuration keys (refer to Table 16 1) to move between and enter data into each display field Enter the relay number to test, then the duration of the test in seconds (0 to 36000) The *X* displaying in the *PHYSICAL RELAY ALLOCATION*

box for a given keyboard changes from cyan to yellow when a relay driven by the keyboard is being tested

3 Press **ENTER**, the console presents a *Test in progress* message and a *Test Time* ___ field that counts down the test duration. The relay remains closed until the test time decrements to zero. Press **ESC** to discontinue a test in progress

Alarm Management Configuration

Alarm management configuration involves setting standard console indications and responses to alarm conditions for operator ease of alarm processing. Alarm management starts at the PCU module level. The actual alarm limits that trigger a process alarm condition are set in the control scheme of PCU modules, and remain the same when viewed at any console

Through the tag database, the console can monitor individual process points to trigger its alarm indications and responses. This allows the operator to manage process alarms from a single point. Alarm management must be considered during initial tag database creation since several attributes in the database pertain to alarming

Alarm management configuration encompasses the following configurations

- Alarm group
- Alarm quality
- Automatic tag alarm inhibiting
- Alarm summary format
- Alarm summary report
- Alarm tones and relays
- Global alarm acknowledge and silence.
- Remote alarm acknowledge

This section of the manual discusses alarm management configuration only. Refer to the *Alarm Processing* section for alarm management operations

ALARM GROUP CONFIGURATION

The number of points defined in a single process can be substantial. For ease of alarm processing, alarm groups keep related process tags together in groups for easier management. After tags have been assigned to a group, each alarm group must then be

OIS CONFIGURATION

defined. The process engineer establishes standard alarm indications and console responses to alarm conditions through alarm group configuration.

During tag configuration, a tag can be assigned to an alarm group. Each tag can be assigned to groups 1 through 99; group 0 is reserved for INFI 90 system devices. Tags in the tag database can be grouped by assigning the same alarm group number to each tag that is to be in that group. When any tag in a group enters an alarm condition, a group indicator (i.e., 1 to 99 or 0) displays at the upper right corner of the screen on all displays. This alarm group indicator allows the operator to quickly identify a problem area in the process. The indicator also appears in the alarm summary, and as part of an alarm status/quality/group field.

The process engineer configures each alarm group separately. Alarm group attributes relate to all tags assigned to that group. Group configuration sets up the console responses that notify an operator or trigger an alarm annunciator. A keyboard annunciator tone assigned to a group sounds to notify an operator of either a tag in that group entering an alarm condition or returning to its normal condition from an alarm condition. A keyboard relay assigned to a group closes for either an alarm or return to normal condition, and can be used to trigger an external alarm annunciator.

Alarm group configuration requirements include:

- Individual tag alarm group assignments
- Alarm group definition

Tag Alarm Group Assignment

Each tag in the database can be assigned to an alarm group. The alarm group assignment is optional. A tag must be assigned to a group, however, for its alarm conditions to be indicated to an operator with an alarm group indicator and other alarm indications.


Follow the procedures for defining individual tags; refer to *Entering or Editing Individual Tags* in this section for the procedures. Set the *Alarm Group* field to the desired group number for all tags related to that group. Valid entry is from 1 to 99; the console automatically assigns group 0 to N90STA tags and group 0 to DEVSTAT tags. Setting this field to 0 leaves the tag unassigned. Tags should be assigned to groups during initial database configuration.

Alarm Group Definition

- Step 1** The process engineer defines an alarm group through the *Alarm Groups* page (see Figure 16-25). To call this display, first press

GENL FCTNS MENU, then select the following menu items in the sequence shown.

A OIS Configuration → E System → B Alarm Groups

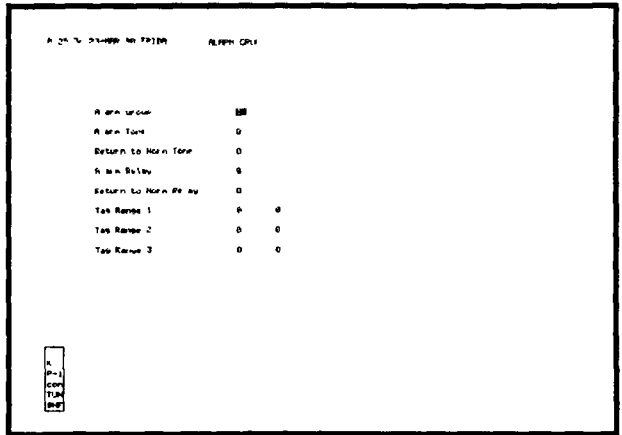

TPS0001A

Figure 16 25. Alarm Management - Alarm Groups

Step 2 To define an alarm group

a Enter the number of an alarm group to define or edit at the *Alarm Group Number* prompt, then press **ENTER**. Valid entry is from 1 to 99, or S

b Use the OIS configuration keys (refer to Table 16 1) to move between and enter data into each display input field. Table 16-21 describes alarm group attributes, refer to this table when entering data

c After completing all required fields, press **ENTER**. This updates the configuration on the hard disk

d To define or edit additional groups, press **ESC**. This positions the input cursor at the *Alarm Group* input field. Enter the next group number to edit, then press **ENTER**. Press **NEXT PAGE** or **PREV PAGE** to sequence to the next or previous group.

e Repeat Steps 2a through 2c until all required alarm groups are defined. This includes group S. Press **ESC** to exit this display when done

Table 16-21. Alarm Group Attributes

Field	Description
Alarm group	Identifies and calls an alarm group for configuration. Enter this number in the tag database to assign a tag to this group. Valid group numbers are: 1 to 99 = process tags S = INFI 90 system tags group. The console automatically assigns N90STA type tags to this group. NOTE This console does not present alarm indications for DEVSTAT tags in an alarm group D.
Alarm tone	Defines the logical tone that sounds when a tag in this group enters an alarm condition. Valid entry is: 0 = no tone assigned to group 1 to 20 = logical tone to assign to this group NOTE The actual logical tone configuration and keyboard assignments are made through keyboard configuration. The configuration defines the duration, pitch, and volume of the tone, and selects the keyboard that supplies the tone.
Return to normal tone	Same as the <i>Alarm Tone</i> field, except that this tone sounds when a tag in this group returns to its normal condition. Valid entry is: 0 = no tone assigned to group 1 to 20 = logical tone to assign to this group
Alarm relay	Defines the keyboard relay that closes when a tag in this group enters an alarm condition. Valid entry is: 0 = no relay assigned to group 1 to 24 = logical relay to assign to this group NOTE The actual logical relay configuration and keyboard assignments are made through keyboard configuration. The configuration defines the duration in seconds that the relay closes, and selects the keyboard and physical relay.
Return to normal relay	Same as the <i>Alarm Relay</i> field, except that this relay closes when a tag in this group returns to its normal condition. Valid entry is: 0 = no relay assigned 1 to 24 = logical relay to assign to this group
Tag range 1/2/3	Used to expedite an alarm group assignment or to override any existing alarm group assignments in the tag database. Up to three ranges of tag index numbers can be entered for this alarm group. Valid entries: 0 = range not assigned 1 to 30000 = maximum entry can be from 1 to 30,000 depending on the current database size. NOTE Alarm groups should be assigned during tag database configuration. The configuration that was performed more recently overrides the previous configuration.

Tag Range The process engineer can use the *Tag Range* fields to initially define or to modify alarm group assignments for tags in the tag database.

To use the *Tag Range* fields to make or modify alarm group assignments

a. Perform Steps 2a through 2c as described in the preceding steps

b. At the *Tag Range* fields, define up to three tag ranges. The tag ranges specify which tags in the tag database are to be assigned to the currently selected alarm group.

c. After completing all required fields, press **[ENTER]**. This procedure modifies the alarm group assignments in the tag database for the tags that fall within the specified range or ranges.

For example, if a range is defined as 1 to 50 and the configuration page shows 15 in the *Alarm Group* field, then tags 1 to 50 will be assigned to alarm group 15 after pressing **[ENTER]**. The console does not retain the tag range entries after exiting the configuration page. The fields reset to 0 to allow defining additional tag ranges if desired.

ALARM QUALITY OPTION


The alarm quality option configuration both enables quality status alarming, and defines color schemes for presenting non good and good quality indications. Good indications refer to any of the alarm conditions of a tag. Setting the foreground and background colors used to indicate an alarm through this option standardizes console indications.

By setting the color scheme, alarm fields that appear at all displays and dynamic symbols built-in to user-created displays conform to a standard allowing the operator to easily recognize specific alarm and quality conditions. An alarm field is either the five character alarm status/quality/group field or the one character alarm status field on a display. Alarm quality configuration also affects console return to normal processing (i.e., *Blink Alarms* field for a *No Alarm* condition).

There is a distinct difference between tag alarm condition and tag quality. Tag quality relates to the validity of an exception reported point. A point reporting good quality means that the process control scheme has determined that it is receiving valid input from a process device, and transmitting valid data to the console for that point whether the point is in a normal or alarm condition. The control scheme identifies an alarm condition in an exception report when a point has passed an alarm threshold set in the control scheme. A point can report good quality but still be in an alarm condition. To use the quality reported for a process point in alarm management, bad quality alarming must be enabled. Refer to the *Alarm Processing* section for an explanation of the alarm status and quality indications.

OIS CONFIGURATION

Step 1 The process engineer defines alarm quality options through one of the *OIS System Configuration* pages (see Figure 16-26) To call this display, first press **[GENL FCTNS MENU]**, then select the following menu items in the sequence shown



16112:18 86-JAN-92 MONDAY OIS SYSTEM CONFIGURATION 39

AlarmQuality	Foreground Color	Background Color	Blink Alarm	Reverse Video	Display Last Good Value	Log Last Good Value
Non-Good Quality						
1 OMSAB Quality	8888	8	YES	NO	NO	NO
2 Discontinuation	NONE	NONE	NO	NO	NO	NO
3 Substitution	NONE	4	NO	NO		
4 Suspect	NONE	NONE	NO	NO		
5 Inhibit	NONE	NONE	NO	NO		
Good Quality						
6 No Alarm	NONE	NONE	NO	NO	22 Handl: Bad qual by	
7 Boolean Alarm	18	NONE	YES	NO	ad on alarm (Yes/No)	
8 Bad Qual by Alarm	4	NONE	NO	NO	YES	
9 High Alarm	2	NONE	YES	NO		
10 High-2 Alarm	2	NONE	NO	NO		
11 High-3 Alarm	3	NONE	YES	NO	23 Use Colors for	
12 Low Alarm	2	NONE	YES	NO	AlarmQualityGroup	
13 Low-2 Alarm	5	NONE	YES	NO	Element (Yes/No)	
14 Low-3 Alarm	6	NONE	YES	NO	NO	
15 High Deviation	NONE	NONE	YES	NO		
16 Low Deviation	NONE	NONE	YES	NO		
17 HSB Status Alarm	NONE	NONE	YES	NO		
18 Device Status Alarm	NONE	NONE	YES	NO		
19 High Rate Alarm	NONE	NONE	NO	NO		
20 Low Rate Alarm	NONE	NONE	NO	NO		
21 Suppressed Alarm	NONE	NONE	NO	NO		

TPS0002B

Figure 16-26 Alarm Management - Alarm Quality Options

Step 2 To configure the alarm quality options

NOTE Changes made at this display require a reset of the OIS application. Press **[ESC]** before making any changes to exit this display without having to reset.

a Initially the console positions the input cursor at the first field available for entry. Either use the OIS configuration keys (refer to Table 16-1) to move between fields, or press **[ESC]** to call a *Select Field* prompt. At the prompt, enter the number associated with the attribute to which to move. Table 16-22 describes the alarm quality options attributes, refer to this table when entering data.

b After completing all required fields, press **[ENTER]**. This updates the configuration on the hard disk.

c Reset the OIS application by performing the steps given under *Reset* in the *Window Operations* section. When the console comes back on-line, it will operate with the entered parameters.

Table 16-22 Alarm Quality Options

Field	Description
Handle bad quality as an alarm	<p>Enables using bad quality as an alarm. Valid entry is</p> <p>YES = enable bad quality alarming; a bad quality condition causes the console to display all normal alarm indications for a process variable being reported as in bad quality. In addition to the normal bad quality indicator (*) in the status position of an alarm status/quality/group field, the console also makes an entry in the alarm summary and gives alarm group indications for bad quality.</p> <p>NO = disable bad quality alarming</p>
Use colors for alarm/quality/group element	<p>Determines if the alarm status/quality/group field of a tag uses a default color scheme or the color scheme defined at this page. Valid entry is</p> <p>YES = use the color scheme set at this display</p> <p>NO = use the default colors defined during display creation</p>
Foreground color	<p>Identifies the foreground color that is to appear for a particular non good quality or alarm condition (good quality). Specify a color in this field to override default colors. Once defined, this color identifies an alarm condition or non good quality for a tag. Use <i>Colors for Alarm/Quality/Group Element</i> must be set to YES for this to have any effect.</p> <p>Valid entry is NONE or 0 through 63. Refer to <i>Printer Color Maps</i> in this section to cross reference color index numbers to presented colors.</p>
Background color	<p>Identifies the background color that is to appear for a particular non good quality or alarm condition. Specify a color in this field to override any default colors. Once defined, this color identifies the alarm condition or non good quality for a tag. Use <i>Colors for Alarm/Quality/Group Element</i> must be set to YES for this to have any effect.</p> <p>Valid entry is NONE or 0 through 63. Refer to <i>Printer Color Maps</i> in this section to cross reference color index numbers to presented colors.</p>
Blink alarms	<p>Determines if the specific alarm condition or non good quality should blink when unacknowledged. Valid entry is</p> <p>YES = enable blink</p> <p>NO = disables blink</p>
Reverse video	<p>Used to highlight a specific alarm condition or non good quality instead of specifying a foreground and background color. Valid entry is</p> <p>YES = enables reverse video; causes default colors to appear in reverse</p> <p>NO = disables the color reverse feature; disable when specifying a foreground color and a background color in this configuration.</p>
Display last good value	<p>Determines if the value of a tag displays as a bad quality string or as the last known good value. This occurs when the tag enters a bad quality condition. Valid entry is</p> <p>YES = display the last known good value</p> <p>NO = display a bad quality string; the bad quality string is defined through text substitution.</p>

OIS CONFIGURATION

Table 16-22. Alarm Quality Options (continued)

Field	Description
Log last good value	Determines if the console logs the value of a tag as a bad quality string or as the last known good value. This occurs when the tag enters a bad quality condition. The option effects console Valid entry is YES = log the last known good value NO = log a bad quality string the bad quality string is defined through text substitution

Return to Normals The *Blink Alarms* field for the *No Alarm* state can be used to identify return to normal conditions to an operator. Set the *Blink Alarms* field to YES for the *No Alarm* condition to cause any tag that returns to normal from an alarm to blink. The tag can then be acknowledged using **ACK ALARM** or **PAGE ACK**. This applies to acknowledging return to normals for both the alarm status/quality/group field, and for dynamic symbols. When this feature is enabled:

1. All acknowledge keys work for the alarm status/quality/group fields for tags that return to normal state.
2. Alarm and quality indicators blink in the tag summaries function to indicate unacknowledged return to normals.
3. Alarm status/quality/group fields and value fields blink for unacknowledged return to normals.
4. The foreground color for all standard symbols is green to indicate normal state.

AUTOMATIC TAG ALARM INHIBITING

A feature defined in the tag database is automatic alarm inhibiting. This feature designates a tag to disable alarm indications for another. Either the alarm condition of an analog type of tag, or the alarm state or digital state of a digital type of tag can disable alarming. An alarm inhibit tag and its condition that triggers inhibiting are defined through tag database configuration. For analog types of tags, only alarm condition can trigger inhibiting.

Follow the procedures for defining individual tags, refer to **Entering or Editing Individual Tags** in this section for the procedures. Three attributes in the tag database define alarm inhibiting. Enter the name of the tag used for inhibiting at the *Alarm Inhibit Tag* field. Any type of tag except RMSC can be used. Set the *Inhibit Alarm Status/State* field to **ALARM** for alarm condition triggering, or **STATE** for digital state triggering.

If *Inhibit On Alarm/State* field is **ALARM**, set the *Inhibit Alarm Status/State* field to the specific alarm condition that inhibits

alarming for this tag. Any valid alarm condition that the inhibit tag can be in is valid. These can include H, L, 2H, 2L, 3H, 3L, HD, LD, HR, LR or A. Using A specifies the state designated as the alarm state for a digital type of tag.

If the *Inhibit On Alarm/State* field is *STATE*, set the *Inhibit Alarm Status/State* field to the specific state that inhibits alarming for this tag. Any valid state that a digital inhibit tag can be in is valid. This includes 0, 1, 2 or 3.

Leaving the *Alarm Inhibit Tag* field blank disables automatic alarm inhibiting. The *Inhibit On Alarm/State* and *Inhibit Alarm Status/State* fields cannot be accessed when it is blank.

ALARM SUMMARY CONFIGURATION

NOTE Configuration changes made with the alarm summary format function do not require a reset to put the changes into effect. Calling any display containing an alarm summary shows the results of the changes.

An alarm summary can contain a list of up to 1,000 of the most recent process alarms. The number of alarm entries that can appear in any alarm summary list depends on OIS system configuration. An alarm summary can be assigned to **ALARM SUMM** through keyboard configuration.

The console provides a standard alarm summary display. Alarm summaries can appear in operator configurable displays, or any user-created displays. The alarm summary escape command (**as 82** or **as 83**) defines the overall characteristics of the summary, which include:

- Alarm groups or priorities (all or selected)
- Element size
- Key selects
- Position
- Line format (index number).
- Colors
- Alarm types (all, or acknowledged only, or unacknowledged only)

The alarm summary escape commands provide three alarm group or alarm priority options: Range of alarm groups/priorities only, individual groups/priorities only, or both range and individual. The process engineer can use these options to limit the summary to only specific alarm groups or specific alarm priorities. It can also be set to show all alarms, acknowledged alarms only or unacknowledged alarms only. Refer to Appendix B for alarm summary escape command specifics.

OIS CONFIGURATION

Alarm summary format configuration allows tailoring the format and content of line entries in alarm summaries (i.e., line formats). The console allows for 106 line formats numbered from 0 to 105. Of these, line formats 0 through 4 are fixed formats and cannot be modified. The remaining 101 can be user-defined. A format, once specified in an alarm summary escape command, defines the attributes and their order of appearance for all entries that appear in the summary. The alarm summary report also uses one of the line formats to determine the attributes and order of appearance in the printed version of the summary.

This section provides the procedures to configure individual alarm summary line formats. Only one line format can be specified for an alarm summary element or an alarm summary report. The process engineer can use any one of 106 possible line formats (0 to 105) in a single alarm summary element or report.

Each format requires a specified line option and character height. The position and color of each alarm line element are configured individually. Elements of an alarm line include:

Date of alarm - date of alarm occurrence

Time of alarm - time of alarm occurrence

Tag name - name of the alarming tag.

Current value - current value, state and status of the tag in alarm

Exceeded limit value - violated alarm limit for tags that report analog values

Engineering units - engineering unit associated with an analog value

Tag description - tag description from the database

Alarm condition - alarm status, quality and alarm group of the alarming tag

Alarm comment - up to 64 character comment from the database for the alarming tag. Only one alarm comment field can be used in a single alarm line format (i.e., alarm comment cannot be used with alarm comment/text string).

Latched alarm time - used to latch the time of occurrence to the alarming tag. This displays the time of occurrence in a return to normal entry for the alarming tag.

Latched alarm date - used to latch the date of occurrence to the alarming tag. This displays the date of occurrence in a return to normal entry for the alarming tag.

Priority - two character indicator that shows the priority assigned to the alarming tag (set in the tag database)

Text string - up to 80 character text string associated with a TEXTSTR tag. A local truncation indication will not appear. Only one text string field can be used in a single alarm line format (i.e., text string cannot be used with alarm comment/text string).

Text string with local truncation - up to 80 character text string associated with a TEXTSTR tag. The summary indicates any local truncation of the text string with an ellipsis (. . .)

Alarm comment/text string - up to 80 character text string or alarm comment for a tag. The text string appears for a TEXTSTR tag while an alarm comment appears for all other tags. No local truncation indication will appear.

Alarm comment/text string with local truncation - up to 80 character text string or alarm comment for a tag. The text string appears for a TEXTSTR tag while an alarm comment appears for all other tags. The summary indicates any local truncation of the text string with an ellipsis ()

Remote truncation status - indicates the presence or absence of remote truncation for a text string. Remote truncation is done by a PCU module or the communications interface unit of the console.

After defining a line format, the alarm summary display (or any display that uses an alarm summary element) must be edited to include the desired format. For example, to use line format 5 in a summary display, the alarm summary escape command (as #2 or as #3) must be edited to include line format 5 as the configurable record number.

Table 16-23 lists the default line options and character height for formats 0 to 4. The actual line elements can be viewed by using the *Display/Modify Format* option.

Table 16-23 Default Alarm Line Formats

Format Number	Line Option	Character Height
0	0	Single
1	1	Single
2	2	Single
3	0	Double
4	1	Double

The CRT of the console can display 64 different colors, 16 base colors and three shades of each base color. Through line formatting, the process engineer can assign a color to each element of an alarm line.

Alarm summary format configuration also defines priority override colors and alarm report titles. A priority colors option allows setting a foreground and background color for each priority level for both alarm and return to normal alarm entries. These colors override any existing color scheme. A title configuration option defines the titles that appear in alarm summary printouts.

Before defining line formats for alarm summaries, the size of the alarm summary element should be considered. Table 16-24 shows the effects that a selected element size, line option and character height has on the capabilities of an alarm summary. The element size is set in the alarm summary escape command. Element capabilities refers to the number of lines per alarm entry and number of alarm entries that can appear on a single page of the element.

Table 16 24 Alarm Summary Element Options

Element Size	Line Option	Character Height	Number of Alarms	Lines Per Alarm Entry
32	0	Single	16	2
32	0	Double	16	1
32	2	Single	16	1
33	0	Single	8	2
33	0	Double	8	1
33	2	Single	8	1
33	1	Single	8	4
33	1	Double	8	2
34	0	Single	4	2
34	0	Double	4	1
34	2	Single	4	1
34	1	Single	4	4
34	1	Double	4	2
35	0	Single	2	2
35	0	Double	2	1
35	1	Single	2	4
35	1	Double	2	2

NOTE: The maximum number of alarm entries on one alarm summary cannot exceed 16.

Alarm summary configuration includes

- Setting maximum number of current alarms
- Defining the format of alarm summary lines
- Setting the priority override colors

Setting Maximum Alarms

NOTE: This procedure requires a reset.

The process engineer defines the number of current alarms that can appear in an alarm summary list through OIS system.

configuration This sets the maximum number of current alarms saved for review

Follow the procedures for setting the OIS system configuration; refer to *OIS System Configuration* in this section for the procedures. Set the *Max Alarms in List* field to the desired maximum number of alarms to save. Valid entry is from 100 to 1000

Defining Summary Lines

The process engineer can determine which data items are to appear in an entry of an alarm summary. This can be done for the standard alarm summary or any displays that use an alarm summary element. An alarm summary escape command (as #2 or as #3) sets the actual size of the alarm summary element ranging from full size to one-eighth size.

Before setting the format of an alarm line, the number of different formats for the system must be specified. Once established, the process engineer then sets the line option and character height for each line format. Once these are set, each data item and order of appearance in an alarm line can be defined.

The line option and character height attributes work together. Character height can be single or double height, single height is 124 display units (one line) and double height is 248 display units (two lines) using 0.0 fixed spacing factor. Less double height characters than single height characters can appear in a line entry. Line options can be 0, 1 or 2.

NOTE This console does not support foreign language

Line Options Line option 0 allocates two physical lines of the screen. With this option an alarm entry appears as either two lines of single height characters or one line of double height characters.

Line option 1 allocates four physical lines of the screen. Alarm entries appear as four lines of single height characters or two lines of double height characters.

Line option 2 allocates one physical line of the screen. With this option only single height characters are allowed.

The following procedures define a line format. The procedures are the same, and can be repeated to define additional line formats. Line formats can be entered at any time. To enter a new line format, follow the procedures in the order presented. Existing line formats can be viewed or edited through option A *Display/Modify Format*.

The process engineer selects the alarm summary options through the *Alarm Summary Format* page (see Figure 16-27). To call this

display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown

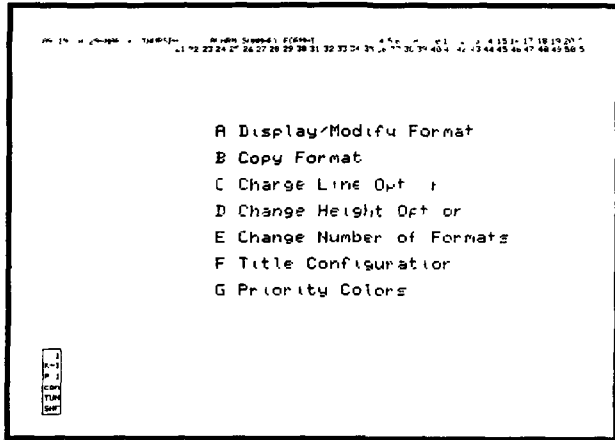



Figure 16 27 Alarm Summary - Options Menu

TPS0003A

Number of Formats Set the number of formats.

1 Choose **E Change Number of Formats** This clears the option menu and displays a **Number of Formats** input field

2 Enter the total **number of formats** required Valid entry is from 5 to 106 Line formats 0 through 4 are predefined, and can be viewed but not modified The number of formats depends on the number of alarm summary displays or reports that require different line formats If several alarm summary displays or reports are used, they can all use the same line format, or can all use different line formats

3 Press **ENTER** to update the OIS configuration

4 Press **ESC** to exit and return to the **Alarm Summary Format** options display

Line Option Set the line option.

1 Choose *C Change Line Option*. This clears the option menu and displays the line option fields (see Figure 16-28)

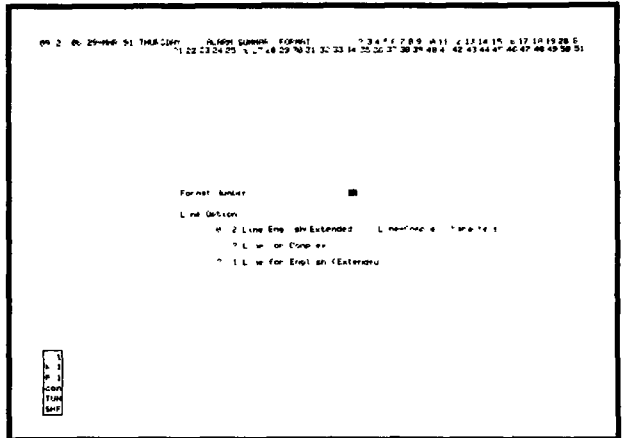


Figure 16 28 Alarm Summary - Line Options

2 Enter the number of the line format that the line option is being selected for in the *Format Number* input field. Valid entry is from 5 to 105 depending on the total number of formats set previously. Formats 0 through 4 cannot be changed

3. Use the OIS configuration keys (refer to Table 16-1) to move to the *Line Option* field Enter the desired line option Valid entry is:

0 = summary allows for two lines of single height characters or one line of double height characters for each entry

1 = summary allows for four lines of single height characters or two lines of double height characters for each entry

2 = summary allows for one line of single height characters only

Refer to Table 16-24 to determine the affects of this option on the capabilities of an alarm summary

OIS CONFIGURATION

4. Press **ENTER** to update the configuration
5. Press **ESC** to exit and return to the *Alarm Summary Format options display*.

Character Height Set the character height:


- 1 Choose *D Change Height Option*. This clears the option menu and displays character height selection fields
- 2 Enter the number of the line format that the character height is being selected for in the *Format Number* input field. Valid entry is from 5 to 105 depending on the total number of formats set previously. Formats 0 through 4 cannot be changed
- 3 Use the OIS configuration keys (refer to Table 16-1) to move to the *Character Height Option* field. Enter the desired character height. Valid entry is 0 for single height characters, or 1 for double height characters. This must be consistent with the chosen line option
- 4 Press **ENTER** to update the configuration
- 5 Press **ESC** to exit and return to the *Alarm Summary Format options display*

Display/Modify Format To display an existing line format, edit an existing format or define a new format

- 1 Choose *A Display/Modify Format*. This clears the option menu and displays an *Enter Format Number* input field
- 2 Enter the number of the line format to view, edit or define at the input field. Valid entry is from 0 to 105 depending on the total number of formats set previously. Formats 0 through 4 can be viewed only
- 3 Press **ENTER** to call the format. A menu of options appears (see Figure 16-29).

The *Alarm Summary Configurable Format* __ (Line Opt __) field at the top of the display shows the currently selected line format, and line option previously selected for the line format. Press **NEXT PAGE** or **PREV PAGE** to sequence to the next or previous line format

The boxed area of the display represents the actual format of an entry as it will appear in a summary that uses this format. The console presents a default format in this box. If any of formats 5 through 105 are selected, the options presented allow modifying the default elements of the line shown in this boxed area

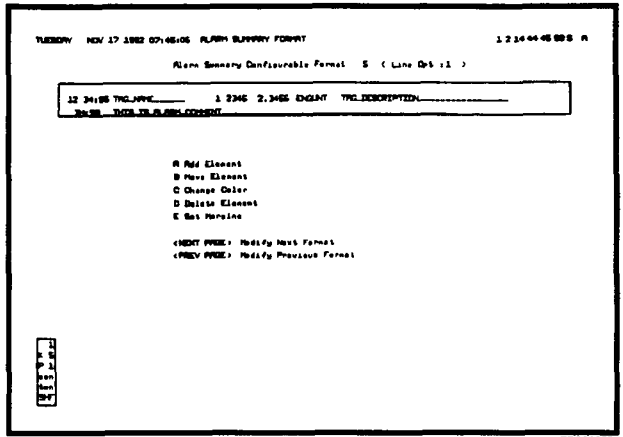

TPS0005B

Figure 16-29. Alarm Summary - Display/Modify Format Menu

Add element - use this option to add new line elements to the current format For line formats using line option 0, line elements must be positioned within a maximum 400 to 9600 x-coordinate and 0 to 310 y-coordinate For line formats using line option 1, line elements must be positioned within a maximum 400 to 9600 x-coordinate and 0 to 620 y-coordinate For line option 2, line elements must be positioned within a maximum 400 to 9600 x-coordinate and 0 to 155 y-coordinate This can be seen in the grid that appears after choosing any of the *Add Element* options Each element of a line format can display in a different color

NOTE The left and right margin of the line format can be modified using the *Set Margins* option

To add an element.

1 Choose option *A*, this calls up an *Add Element* menu (see Figure 16-30). Use the configuration keys (refer to Table 16-1) to move between and enter data into each display input field.

2. All of the different line elements are entered in basically the same way. Select the letter designator for the type of line element to add from the list of displayed options (i.e., *A* through *Q*) This calls up prompts that allow entering an x-coordinate and y-coordinate, and in some cases the length of a field The length needs to be specified when choosing any of the alarm comment or

6 If no further modifications are required, press **[ESC]** to exit this display. Further line modification can be performed through the *Display/Modify Format* menu items.

Move element - use this option to move elements of a line for mat, and to change the character length of an element if desired. To move an element or change its character length:

1. Choose option B; press **[TAB]** or **[TAB BACK]** to select an element. An element blinks when selected using the tab keys. Press **[ENTER]** once selected. Use the OIS configuration keys to move between and enter data into each display input field.

2. Enter a new x-coordinate, y-coordinate and length if required, then press **[ENTER]**. The console displays an error message if an entered coordinate attempts to place the line element outside the margin limits, or causes the element to overlap another or the element to extend beyond the margins. Once entered, the element appears in the boxed area at its respective position and length.

3. After making any or all changes, press **[ENTER]** to update the configuration on the hard disk.

4. If no further modifications are required, press **[ESC]** to exit this display. Further line modification can be performed through the *Display/Modify Format* menu items.

Change color - use this option to change the color of a line element. To change the color of an element:

1. Choose option C, press **[TAB]** or **[TAB BACK]** to select an element, an element blinks when selected using the tab keys. Press **[ENTER]**, this calls a color selection display.

2. Enter a color code to change to, then press **[ENTER]**. The color graph presented shows the actual colors and their respective color codes. Select the color that this element should display as in an alarm summary. Once entered, the element appears in the boxed area in its respective color.

3. After making any or all changes, press **[ENTER]** to update the configuration on the hard disk.

4. If no further modifications are required, press **[ESC]** to exit this display. Further line modification can be performed through the *Display/Modify Format* menu items.

Delete element - use this option to delete a line element that is no longer required.

To delete an element

1. Choose option *D*; press **[TAB]** or **[TAB BACK]** to select an element, an element blinks when selected using the tab keys Press **[ENTER]**, this deletes the selected element After pressing **[ENTER]**, the element no longer appears in the boxed area
2. After making any or all changes, press **[ENTER]** to update the configuration on the hard disk
3. If no further modifications are required, press **[ESC]** to exit this display. Further line modification can be performed through the *Display/Modify Format* menu items.

Set margins - this option can be used to reduce the size of a line by adjusting the left and right margins Once changed, all elements of a line format must be within these new x coordinate limits Any element outside the margins will not appear in the summary The upper and lower limits are still maintained by the line option selection

To change either or both left and right margins

1. Choose option *E*, the display presents two input fields The upper field is for the left margin, lower for the right Entries can be made in both or only one of these fields Use the OIS configuration keys to move between and enter data into each display input field
2. Enter the new margins, then press **[ENTER]** Valid entry is from 400 to 9600. Once entered, the outline of the boxed area will be reduced or expanded to the new limits entered Any elements added or moved must fall within these new limits
3. After making any or all changes, press **[ENTER]** to update the configuration on the hard disk.
4. If no further modifications are required, press **[ESC]** to exit this display Further line modification can be performed through the *Display/Modify Format* menu items

Copy Format

Use the *B Copy Format* option to copy an existing line format to another. To copy a format.

1. Choose option *B*, the display presents a *Copy From Format # _ To _* prompt
2. Use the OIS configuration keys to move between and enter data into each display input field. Key in the number of the line format to copy from, then the number of the line format to copy to Valid entry depends on the total number of formats set

previously. The range is from 0 to 105 for the from entry, and 5 to 105 for the to entry

3 Press **[ENTER]** to initiate the copy. If copying a line format over an existing format, the console requires confirmation before it initiates the copy

Setting Priority Colors

The process engineer can define colors for each alarm priority level. After configuration, the priority of a tag in alarm determines the foreground and background colors used in an alarm summary for the tag. These colors override any color scheme defined using the *Add Element* feature of the *Display/Modify Format* option; refer to *Defining Summary Lines* in this section. Priority colors are set separately for alarm and return to normal tag conditions.

Step 1 The process engineer defines priority colors through the *Alarm Summary Format* page (see Figure 16-27). To call this display, first press **[GENL FCTNS MENU]**, then select the following menu items in the sequence shown

```

A OIS Configuration
  └─ E System
    └─ E Alarm Summary Format
  
```

Step 2 To define foreground and background colors for a priority level:


NOTE Enter **NONE** in the override color fields to use the colors selected during line format configuration without using priority color override

a. Select **G Priority Colors**. This calls the *Alarm Summary Format* display for defining priority colors (see Figure 16-31). Use the OIS configuration keys to move between and enter data into each display field

b. At the *Priority* input field, enter the number of a priority level to define. Valid entry is from 1 to 8. Press **[NEXT PAGE]** or **[PREV PAGE]** to sequence to the next or previous priority level.

c. Enter a color code from the displayed color chart in the first *Foreground Override Color* field for **ALARM**. Valid entry is from 0 to 63, or **NONE**. This identifies the foreground color of an alarm summary entry for a tag that enters an alarm condition with this priority.

d. Enter a color code from the displayed color chart in the *Background Override Color* field for **ALARM**. Valid entry is from 0 to 63, or **NONE**. This identifies the background color of an alarm summary entry for a tag that enters an alarm condition with this priority

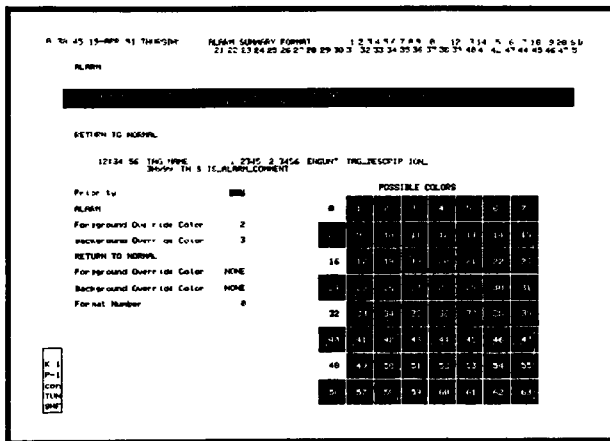

TPS0007B

Figure 16-31. Alarm Summary - Priority Colors

e. Enter a color code from the displayed color chart in the *Foreground Override Color* field for *RETURN TO NORMAL*. Valid entry is from 0 to 63, or NONE. This identifies the foreground color of an alarm summary entry for a tag that returns to its normal condition from an alarm condition.

f. Enter a color code from the displayed color chart in the *Background Override Color* field for *RETURN TO NORMAL*. Valid entry is from 0 to 63, or NONE. This identifies the background color of an alarm summary entry for a tag that returns to its normal condition from an alarm condition and has this priority level.

g. The *Format Number* field allows entering the number of a defined line format to be shown at the top of the display. This provides an example of what the line will actually look like at an alarm summary for both alarm and return to normal tag conditions. A change to this field does not affect the configuration of alarm summaries, only the line format displayed at the top of the page.

Enter the number of a line format, then press **ENTER**. Valid entry is from 0 to 105 depending on the total number of line formats configured. The entered line format appears at the top of the screen in the selected alarm and return to normal colors. Pressing **ENTER** also updates this configuration.

h. Either repeat Steps 2a through 2g to define additional priorities, or press **ESC** to exit this display.

ALARM SUMMARY REPORT

An alarm summary report creates a hard copy list of current alarms. Up to 1,000 alarm summary entries can appear in a report. The entries are for those tags that are part of selected alarm groups designated in the definition of a report. Each report can summarize the alarms for a range of alarm groups and a maximum of ten additional alarm groups. Up to 12 different reports can be generated.

The process engineer can schedule printing for the reports to occur at a specific time, then at time intervals. Printing can also be left unscheduled to occur after being triggered by a specific process event. Either or both types of scheduling can be used. A process event that can trigger an alarm summary report is a change in

- Analog alarm condition
- Digital state
- Alarm status — to alarm from normal, or from alarm to normal

Each alarm summary report starts on a new page and can consist of several pages. Each page has a title line followed by a maximum of 30 alarm entries. The title line format is configurable, up to 12 different title lines can be created. Each report can have the same title, or each can use a different title.


Alarm summary report configuration includes

- Defining the titles for alarm summary reports
- Formatting the line entries of a report
- Defining each summary report, and scheduling all reports

Summary Report Title Lines

The *Title Configuration* option of *Alarm Summary Format* is used to define titles for alarm summary reports. Up to 12 titles can be defined, then assigned to each of 12 possible reports. The title is a two line entry with a maximum of 132 characters per line.

Step 1 The process engineer defines each title individually. This is done through the *Alarm Summary Format* page (see Figure 16-27). To call this display, first press **[GENL FCTNS MENU]**, then select the following menu items in the sequence shown:



Step 2 To call the page for defining the titles, and to define titles:

- a. Choose *F Title Configuration*. This clears the menu, then displays an *Enter Format Number* input field.
- b. Enter the number of a report title, then press **ENTER**. Valid entry is from 1 to 12. This displays the *Alarm Summary Title* page for the selected title (see Figure 16-32).

```

11 17:27 14 JUL 9 SUNDAY          ALARM SUMMARY FORMAT          23456789 0115DH
                                     *** Alarm Summary Title *** Format Number: 1
LINE 1
1  0  20  30  40  50  60  70
-----
71  00  90  100  110  120  130
-----
94  ALARMS 94  PAGE 0
-----
LINE 2
1  10  20  30  40  50  60  70
-----
71  00  40  100  110  120  130
-----
UNLACED ALARMS 00
-----

Tab  stat c information on and/or the following consecutive character sequences
-----
20 Tr Oper Type (14)          3P Page Number (2)
27 Tr Oper Inc (8)           4P Report Counter (40)
28 Tr Oper Date (11)         9R Alarm Counts (R in Ms) (4)
35 Tr Oper Tag Name (5)      2R Report Number (2)
3S Tr Oper Tag Status (5)    2U Alarm Counts (Unlaced ones) (4)

These sequences define the start character position for output of their corresponding attribute.
The number n ( ) represent the character width required for output of each attribute.
Characters and/or other sequences placed within a sequence's defined field are ignored.
  
```

TPS0052A

Figure 16-32 Alarm Summary Report - Alarm Summary Title

The *Alarm Summary Title* page contains a default title definition when it first comes up. This format can either be used as is, or can be modified. Title items can be deleted, added or moved using the OIS configuration keys. Each attribute that is to appear in the title of an alarm summary title line is entered as a separate character sequence code. The position of the sequence code on the input line defines the starting character position for the attribute.

At the bottom of this display is a list of two character sequence codes that define each item that can appear in the title of the final, printed report. Static text strings can be entered. Each character occupies a single character space. Available title attributes (sequence codes) and their results are:

Report Number (%N) Two characters that identify the report number (1 to 12)

<i>Report Criteria (%R)</i>	40 characters that identify an alarm group range and an alarm group list.
<i>Trigger Type (%Y)</i>	14 characters that identify the trigger type (time or tag).
<i>Trigger Time (%T)</i>	Eight characters that show the time of the trigger for either a time or tag triggered report
<i>Trigger Date (%D)</i>	11 characters that show the date of the trigger for either a time or tag triggered report
<i>Trigger Tag Name (%G)</i>	14 character tag name identifier for a tag triggered report
<i>Trigger Tag Status (%S)</i>	Five characters that identify the alarm condition, status or state of the trigger tag for the report.
<i>Alarm Counts (%A)</i>	Four characters that indicate the total number of current alarms that meet the report criteria
<i>Alarm Counts (%U)</i>	Four characters that indicate the total number of current unacknowledged alarms that meet the report criteria.
<i>Page Number (%P)</i>	Two characters showing the current page number of the report

All or only specific codes can be used as long as the 132 character maximum is maintained. The number in brackets () next to each sequence code identifies the number of character spaces each code item occupies, which is the number of spaces to allow between each code. The console ignores characters placed within these reserved spaces. The two characters of the sequence code count as two spaces. The codes can be placed anywhere within the highlighted *LINE* fields to allow placing data items in any order desired.

Entering Sequence Codes

To define the sequence codes.

1 Use the configuration keys listed in Table 16-1 to enter data and move between each display input field. Enter the sequence codes or static data that are to appear in an alarm summary report in the *LINE 1* and *LINE 2* input fields. The placement of codes in these fields directly corresponds to their position in the final printout.

Be sure to allow the number of spaces indicated in the brackets between sequence codes. The code itself counts as two spaces. Each *LINE* field is separated into two parts, however, in the final printout the entries appear as one line.

2. Press **[ENTER]** after completing the entries to update the configuration on the hard disk.
3. Press **[ESC]** to exit the display.
4. Repeat Steps 1 through 3 for each title that is to be defined. Titles can be created or edited at any time.

Formatting Report Entries

Alarm entries are formatted for printing based on the line format chosen for the report. The process engineer defines the line format through alarm summary format configuration. Each of the 12 reports can use the same or a different line format. These formats can be the console default line formats (0 to 4) or user-defined formats (5 through 105).

To define a line format, follow the procedures outlined in ***Defining Summary Lines*** in this section. Once a line format has been created, it can be identified for use in individual reports through alarm summary report configuration.

Defining and Scheduling Alarm Summary Reports

Alarm summary report configuration enables individual reports and schedules report printing. Print scheduling is for all defined reports, not individual reports.

Alarm summary reports can print at a specific time, then at time intervals (i.e., *PERIODIC REPORTS*). Reports can also be unscheduled to print only after a specific process event occurs (i.e., *TRIGGERED REPORTS*). Either or both types of scheduling can be used. A print time starts periodic report printing, and a time interval reschedules the report for periodic printing. The console monitors a specified tag to start triggered report printing. The trigger can be the alarm condition of an analog type of tag, or the alarm state or digital state of a digital type of tag. The alarms that print are the current (snapshot) alarms at the time the report starts. The console can work on only one trigger condition at a time. It ignores any triggers that occur while currently processing alarm summary reports regardless of whether the trigger is time or a tag trigger.

The printed alarm entry is similar to the alarm entry in an alarm summary display, but it is limited to two lines of printed text. As a result, alarm formats of more than two display lines may give undesirable and possibly unreadable results in the printed report.

When the line format contains a value field, the printed version outputs a value that is the tag value at the time of alarm occurrence, or the time at which the tag returned to normal. The display shows the current exception reported value.

Each summary report can present alarms for all alarm groups or only specific alarm groups if desired. Alarm summary report configuration can assign a range of alarm groups and a list of up to ten specific alarm groups to each report. Either a range or individual groups can be defined, or both can be defined for each report. Using both allows specifying a limited range, then up to ten more groups (e.g., 1 to 10 range, and 12, 13, 19, 20, etc.)

Step 1 The process engineer schedules printing for alarm summary reports, and defines each report through the *Alarm Summary Report* page (see Figure 16-33). To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown:

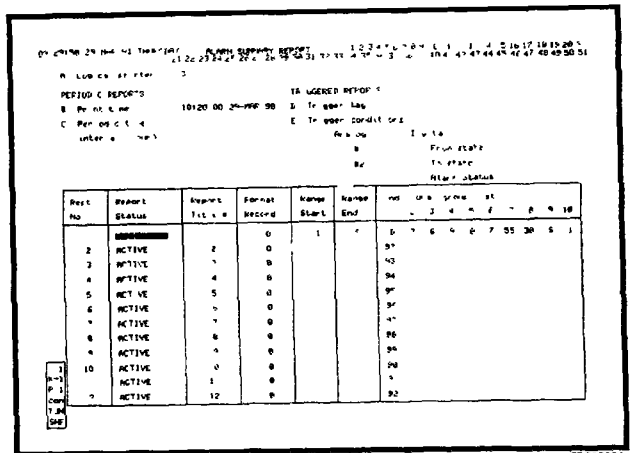



Figure 16-33 Alarm Summary Report - Definition

Step 2 To schedule alarm summary reports

a At the Report number or parameter letter input field enter A, then press **ENTER**. This places the input cursor at the *Logical*

OIS CONFIGURATION

printer field Use the OIS configuration keys listed in Table 16-1 to enter data and move between each display input field

b. Enter the number of a logical printer to be used for printing of the reports Valid entry is from 1 to 16

c. Press **[ESC]** to call the *Report number or parameter* input field, or use the OIS configuration keys to move to the *Print time* field Enter a time and date to start the first print The format of this time and date entry depends on the time and date format configuration; refer to **TIME/DATE FORMAT** in this section If using only tag triggering, clear this field.

d Move to the *Periodic time interval* field Enter the time interval (in hours) between printing of subsequent reports after the initial Valid entry is from 1 to 24. If using only tag triggering, clear this field

e Move to the *Trigger Tag* field Enter the name or index number of the tag that is to trigger printing This can be an analog or digital type of tag If using only periodic triggering, clear this field

f If the trigger tag is analog, enter one or two alarm conditions for the tag that are to trigger the reports Valid entries are H, 2H, 3H, L, 2L, 3L, HD, LD, HR, LR or A depending on the type of trigger tag If using only periodic triggering, clear these fields

If the trigger tag is digital, define the from and to state transition and the alarm status that are to trigger the reports Valid *From state* and *To state* entries are the logic state descriptors set in the tag database for the trigger tag Valid *Alarm status* field entry is blank (no status triggering), ALARM or RTN (return to normal) If using only periodic triggering, clear these fields

g. If this was a change to the configuration of an existing report, press **[ENTER]** to update the configuration If further configuration (i.e., individual report definitions) is required, either press **[ESC]** to call the *Report number or parameter letter* input field or move the input cursor to the report fields using the OIS configuration keys Perform Steps 3a through 3i

Step 3 Each alarm summary report is defined separately To define each report

a At the *Report number or parameter* input field, enter a report number (1 to 12) to select that report, then press **[ENTER]** This places the input cursor at the *Report Status* field for the report Use the OIS configuration keys listed in Table 16-1 to enter data and move between each display input field When initially defining a report, this field should be set to *INACTIVE* for an existing report, this field may indicate *ACTIVE* To add or edit a report, enter *INACTIVE* at the field

Making an existing report *INACTIVE* takes that report off-line. The *INACTIVE* report will not print if triggered, all other *ACTIVE* reports print when triggered.

- b Move to the *Report Title* input field Enter the title number to use for this report. This is the title that was created earlier Valid entry is from 1 to 12.
- c Move to the *Format Record* input field. Enter the number of a line format to use for this report This determines the line format that each entry in a report uses Valid entry is from 0 to 105.
- d Move to the *Range Start* input field Enter the first alarm group in a range of alarm groups. Range can be used separate from, or in conjunction with the list of individual groups A range can be specified without a list
- e Move to the *Range End* input field Enter the last alarm group in a range of alarm groups
- f Move to the *Individual group list* input fields Enter up to ten alarm groups that are to appear in this report The group list can be used separate from, or in conjunction with an alarm group range. A group list can be specified without a range.
- g At this time the alarm summary report must be turned on. Move to the *Report Status* input field, key in *ACTIVE* Reports can be turned on or off individually, and at any time
- h Press **ENTER** to update the configuration
- i To define additional reports, repeat Steps 3a through 3h for each report Once all required reports are complete, press **ESC** to exit this display

ALARM TONES AND RELAYS

The process engineer defines logical alarm tones and relays through keyboard configuration procedures, refer to *Keyboard Configuration* in this section for the procedures Tone configuration defines the priority, keyboard, duration, pitch and volume of an alarm tone It also determines whether a tone will be broadcast to other nodes on the communication highway, which nodes to broadcast to depends on the node list selected Relay configuration determines the physical relay and keyboard location, and how long the relay closes

The tone priority sets a logical order for sounding tones in case several alarms (with tones) occur at the same instant The keyboard assignment tells the console which keyboard is to supply the tone. Tone and relay duration can range from one second to 36,000 seconds.

OIS CONFIGURATION

GLOBAL ALARMING ACKNOWLEDGE AND SILENCE

After the console indicates an alarm condition the operator needs to first silence an alarm tone, then select the alarming tag and acknowledge its alarm. This is done by pressing specific key board keys. The console provides the option of sending this silence and acknowledge action to other INFI 90 nodes over the communication highway. This can be used to silence and acknowledge an alarm at other consoles from this console. The process engineer must configure global alarm acknowledge and silence functions to enable this feature.

Global alarm acknowledge and silence configuration sets up a plant wide network for alarm acknowledgment and tone silencing. With global acknowledgment an operator at one console can acknowledge alarms for both his console and other consoles linked to the communication highway. The global silence performs the same type of function except that the operator can silence the alarm tone generated at other consoles.

A node list determines to which INFI 90 nodes on the loop an acknowledge or silence is broadcast. The console automatically compiles a node list during start-up which contains the first 32 N90STA tags in the database that define either an OIS console, an MCS console, or a computer. In addition, up to four lists can be user-defined. Each list can contain a maximum of 32 node addresses. Each node that appears in a user-defined node list must be defined in the database as an N90STA tag. If a node in the list is not a console or computer, it is ignored and no message is sent to that node.

Each tag in the database can be set to broadcast to one of the user-defined node lists or to the node list compiled during start-up. Each user-defined node list has a toggle that controls the broadcasting of messages to all nodes contained in the list. The node list toggle ability allows turning individual lists on or off without having to modify the database. If this toggle is set to NO, no messages are sent to the nodes in the list regardless of the broadcast setting in the tag database. Acknowledge and silence functions both share the same node lists.

For N90STA type tags, an additional acknowledge and silence attribute acts as a toggle for turning alarm acknowledge and silence broadcasting on or off for that particular tag. The toggle setting determines whether the console is to broadcast an acknowledge or silence to the N90STA node if its node address is defined in a node list. This provides an alternate means of disabling broadcasting for nodes defined in a list rather than having to modify a node list and remove a node from a particular list. Acknowledge and silence are configured separately.

To enable this console to broadcast an alarm acknowledge and silence to other nodes on the communication highway, the following configurations must be performed.


- Node list configuration
- Tag configuration
- Alarm tone configuration
- Enable console receive and broadcast capabilities.

This console also can be set to receive, or to not receive broadcasts from other consoles


Node List Configuration

The OIS system configuration defines up to four separate node lists. These lists, selected for each tag and each tone, specify the nodes to which the console broadcasts acknowledges and silences. Each list defines up to 32 nodes. Specified nodes must be either OIS consoles, MCS consoles, or computers connected to the loop through network interface units (NIU).

Step 1 There are two pages for defining node lists, page one for list one and two, page two for list three and four. The process engineer defines node lists through the one of the *OIS System Configuration* pages (see Figure 16-34). To call this display for node lists one and two, first press GENL FCTNS MENU. Select the following menu items in the sequence shown:



To call this display for node lists three and four, first press GENL FCTNS MENU. Select the following menu items in the sequence shown:



NOTE Any changes or additions made to the node lists require the console to be reset.

Step 2 To define a list.

- a. Use the OIS configuration keys listed in Table 16-1 to enter data and move between each display input field. Enter a loop and

```

00:57 14 23-009-9 PK MW          SYSTEM CONFIGURATION: J 2 3 4 5 6 7 8 9 10 11 12 13 4 15 16 17 18 19 20 5
21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51

A. Receive Global Alarm Acknowledge (Yes/No)  YES
B. Send Global Alarm Acknowledge (Yes/No)      NO
C. Receive Global Silence (Yes/No)            NO
D. Send Global Silence (Yes/No)              NO

E Mode List 1 Active (Yes/No) YES              F Mode List 2 Active (Yes/No) NO
Loop Number  Node Number  Loop Number  Node Number  Loop Number  Node Number  Loop Number  Node Number
1 2 17 0 0 33 0 0 49 0 0
2 2 3 18 0 0 34 0 0 50 0 0
3 0 0 19 0 0 35 0 0 51 0 0
4 0 0 20 0 0 36 0 0 52 0 0
5 0 0 21 0 0 37 0 0 53 0 0
6 0 0 22 0 0 38 0 0 54 0 0
7 0 0 23 0 0 39 0 0 55 0 0
8 0 0 24 0 0 40 0 0 56 0 0
9 0 0 25 0 0 41 0 0 57 0 0
0 0 0 26 0 0 42 0 0 58 0 0
1 0 0 27 0 0 43 0 0 59 0 0
12 0 0 28 0 0 44 0 0 60 0 0
13 0 0 29 0 0 45 0 0 61 0 0
14 0 0 30 0 0 46 0 0 62 0 0
15 0 0 31 2 3 47 0 0 63 0 0
16 0 0 32 0 0 48 0 0 64 0 0

```

P-1
 P-2
 CON
 TLM
 DEF

TPS0008A

Figure 16-34 Alarm Management - Global Alarm Acknowledge/Silence

node number in the *Loop Number* and *Node Number* input fields respectively for each node that is to be part of this list. Valid node entries are 0 to 250 for INFI-NET system and 0 to 63 for Plant Loop system. If a node specified in the list is not a console or computer (NIU connecting the computer), the console ignores the entry and sends no messages to that node.

- b. If required, move to the second node list on this page and repeat Step 2a to define this list. If not required, continue with the next step.
- c. After completing all entries, press **ENTER**.
- d. Restart the OIS application using the procedures given under **Reset** in the **Window Operations** section.
- e. If required, after the console comes back on-line call the second page of node lists (refer to Step 1) and repeat Steps 2a through 2d.

Tag Configuration

When setting up global alarm acknowledge and silence, the process engineer performs tag configuration for two purposes. First, an attribute in the tag database enables alarm acknowledge

broadcasting for a tag, and another attribute defines the node list the console references when broadcasting these alarm acknowledges. Secondly, each node defined in the node lists must be defined in the tag database as an N9OSTA type tag.

To define an N9OSTA tag for a node and to enable broadcasting for a tag, follow the procedures for defining individual tags; refer to *Entering or Editing Individual Tags* in this section for the procedures. Tags in the tag database must be enabled individually to broadcast an alarm acknowledge on the communication highway. Set the *Broadcast Tag Ack* field to YES to enable broadcasting alarm acknowledges for the tag. Set the *Node List* field to 0 to direct broadcasts to the node list compiled by the console, or 1, 2, 3 or 4 to direct broadcasts to a specific user-defined list of nodes.

Alarm Tone Configuration

The process engineer enables alarm tone silence broadcasting through keyboard tone configuration. Each tone must be enabled individually to broadcast an alarm tone silence on the communication highway.

Follow the procedures for logical alarm tone configuration; refer to *Keyboard Configuration* in this section for the procedures. Set the *BDCST* field to YES to enable broadcasting alarm silences for that tone. Set the *NODE* field to 0 to direct broadcasts to the node list compiled by the console, or 1, 2, 3 or 4 to direct broadcasts to a specific user-defined list of nodes.

Enabling OIS Receive and Send Capabilities

The OIS system configuration both enables and disables receiving and sending alarm acknowledges and silences on the communication highway. A console can be set to transmit only, receive only, or transmit and receive alarm acknowledges and silences. System configuration also allows activating or deactivating node lists. This allows selectively enabling or disabling broadcasts to a complete list of nodes.

- Step 1 The process engineer enables sending and receiving alarm acknowledges and silences through one of the *OIS System Configuration* pages (see Figure 16-34). To call this display, first press GENL FCTNS MENU, then select the following menu items in the sequence shown:

A OIS Configuration

 → E System

 → A System

 → B or C Global Alarm Acknowledge/Silence

OIS CONFIGURATION

Either option *B* or *C* *Global Alarm Acknowledge/Silence* can be used Both options provide the same capabilities

- Step 2** Use the OIS configuration keys listed in Table 16-1 to enter data and move between each display input field. Set the *Receive Global Alarm Acknowledge* field to **YES** to receive at this console any alarm acknowledges sent on the communication highway by other INFI 90 nodes. To broadcast alarm acknowledges from this console, set the *Send Global Alarm Acknowledge* field to **YES**

Set the *Receive Global Silence* field to **YES** to receive at this console any alarm tone silences sent on the communication highway by other INFI 90 nodes. To broadcast silences from this console, set the *Send Global Silence* input field to **YES**

Each of these global features can be toggled on or off Setting any of these fields to **NO** disables that global feature If this node is sending an acknowledge or silence to another, the node that is to receive the acknowledge or silence must have its global receive capability enabled

- Step 3** A node list must be made active before any broadcasts to nodes in that list can take place. Each node list can be activated or deactivated separately To activate a node list set the *Node List n Active* field to **YES** for the node list to activate Set this field to **NO** to deactivate the list

REMOTE OIS ALARM ACKNOWLEDGE

A *Remote Acknowledge Tag Assignments* option defines up to five DIGITAL tags that can be used to perform alarm acknowledgment Use remote acknowledgment to acknowledge alarms on the main console and its auxiliary terminals, but only auxiliary terminals supported by this console. A supported terminal is one to which the main console sends a window This console can generate four windows. The selected DIGITAL tag can acknowledge alarms on all or only a specific window. Using the same DIGITAL tag as the remote acknowledge tag on other consoles enables using this single tag for acknowledging alarms at several consoles at one time

An alarm acknowledge occurs when the remote acknowledge tag changes to its one state. The tag must return to its zero state before another acknowledge can occur.

- Step 1** The process engineer defines remote acknowledge tags through one of the *OIS System Configuration* pages (see Figure 16-35). To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown



11 19152 14-JUL-9 8080Y OIS SYSTEM CONFIGURATION 1 2 4 5 6 7 8 9 10 11 808

Remote Acknowledge Tags

Tag Name	CRT Number
1 0180002	1
2 0180003	ALL
3 0180004	ALL
4 0180005	ALL
5 0180006	ALL

F-2
 F-1
 F-0
 F-9
 F-8
 F-7
 F-6
 F-5
 F-4
 F-3
 F-2
 F-1
 F-0

TP50051A

NOTE Changes made at the Remote Acknowledge Tag Assignments display requires a reset of the OIS application

Figure 16-35 Alarm Management - Remote Acknowledge Tag Assignments

Step 2 Up to five remote acknowledge tags can be specified To define a remote acknowledge tag

a Use the OIS configuration keys listed in Table 16-1 to enter data and move between each display input field Enter a tag name or index number for a DIGITAL type tag at the *Tag Name* input field

b Move to the *CRT Number* field and enter the number of a window for which this tag is to perform acknowledgment Valid entry is 1 to 4, or ALL

c Repeat Steps 2a and 2b for each tag that is to perform acknowledgment. When completed, reset the OIS application using the procedures give under *Reset* in the *Window Operations* section. When the console comes back on-line, it will operate with the entered parameters

Open Access System Configuration

An open access system (OAS) provides a centralized, plant wide data acquisition and archival storage platform. The console can access an OAS node to view trend data collected by the open access system, and to archive logs generated at the console. The open access system has access to both real-time process data through direct connection to the INFI 90 communication highway and network capabilities over DECnet network.

The communication highway access enables the open access system to collect and store trended data from the INFI 90 distributed trending system. Transfer of data between an OAS node and the console is over the DECnet network.

Trends The open access system has its own trend database to define its trend data collection responsibilities. The console can retrieve the data collected by an open access system to view it at a trend display. To do this, the console must have a remote trend defined in its database.

For console purposes, remote trends are display only. When a trend display containing remote trends is called to the screen, the console first makes a request to the open access system for any collected, historical data. It then begins local data collection after receiving the data collected by the open access system. Local data collection ceases after removing a trend display with remote trends from the screen. The console does not store any trend data for those trends defined as external source.

Logs All logs the console is capable of generating can be archived to an open access system. These include the system events log, custom logs and SOE logs. Once archived, the open access system provides the ability to display or print the reports, and archive the logs to archival storage medium for permanent storage. Logs archived to the open access system cannot be retrieved directly from the open access system using archival retrieval procedures at the console. They can, however, be retrieved directly from the storage medium to which the open access system archived them.


To access the open access system for both trending and log archiving requires performing:

- OAS definition
- Trend definition.
- Archival storage configuration

OAS DEFINITION

An open access system is a node on the network. The OAS definition procedure identifies an OAS node or nodes to the console. The definition references the name of the node to which the console is to archive logs, and from which it is to retrieve trend data. The same or different nodes can be used for these purposes.

Step 1 The process engineer defines OAS nodes through the *OAS Definition* page (see Figure 16-36). To call this display, first press **(GENL FCTNS MENU)**, then select the following menu items in the sequence shown.



F00000 000 00,1992 10:00:00 OAS DEFINITION

Log Collection Node:

Trend Data Source Node:

Keyboard Legend:

- 1
- 2
- 3
- 4
- 5
- 6
- 7
- 8
- 9
- 0
- DEL
- END
- ESC
- ENTER

TP502288

Figure 16-36 Open Access System Configuration - OAS Definition

Step 2 To define the fields at this page

NOTE The same or different node names can be entered in each field of the OAS definition page as long as the names entered are valid and are defined in the list of nodes known to the console. Refer to *Network Definitions* in this section for further explanation.

- a Use the OIS configuration keys listed in Table 16.1 to enter data and move between each display input field. Enter the node name of the open access system that is to receive archived events and logs generated at the console in the *Log Collection Node* field.
- b Move to the *Trend Data Source Node* input field and enter the name of the node from which the console is to retrieve trend data.
- c Press **ENTER** to update the configuration on the hard disk. Press **ESC** before **ENTER** to exit without making any change.

OIS CONFIGURATION

DEFINING REMOTE TRENDS

To view remote trend data at the console, the same trend must be defined in the database of both the console and the open access system. The trend defined at the console is an external source trend.

Follow the procedures for defining a trend, refer to **TREND DATABASE CONFIGURATION** in this section for procedures. The procedures for defining a local and remote trend are the same. The entry in the *Trend Usage* field determines whether the trend is a local or remote trend. Enter **EXTERNAL SRC** to define the trend as a remote trend.

Once defined with an **EXTERNAL SRC** usage type, an *External Source Node* field appears. Enter the OAS *nodename* or a 1 to identify the node that is the source of the trend data for this trend definition. The *nodename* must match the name defined in the *External Source Node* field of the OAS definition page, entering 1 causes the console to automatically get the node name from the OAS definition page.

OAS ARCHIVAL STORAGE

The process engineer sets up archiving of system events and custom logs to an open access system in the same way as archiving to storage medium. The specific requirements include turning on archiving for system events and logs using data type to volume definition, then directing and scheduling the archive to a media type of OAS.

- Step 1 Follow the procedures to define data type to volume definitions, refer to **Data Type to Volume Definition** in this section. Turn archiving on for the *Events* data type to archive the events log, and *Logs* data type to archive custom logs and SOE logs. Refer to **Configuring Events to be Archived**, **Configuring Custom Logs to be Archived** and **Configuring Sequence of Events Logs to be Archived** in this section for additional archival storage requirements.
- Step 2 Follow the procedures to configure volume to media definitions to direct and schedule archiving to an open access system, refer to **Volume to Media Definition** in this section for procedures. Set the *Media Type* field to **OAS**. Archives automatically occur at the scheduled times.

NOTE Make sure to consider the amount of hard disk space available for temporary storage of archived data when scheduling an archive to an open access system.

Trend Definition

To access and use PCU collected trend data in trending functions, a trend must first be defined in the trend database. Up to 10,000 trends can be defined during trend definition. Refer to

OIS TRENDING in the *INFI 90 and OIS Overview* section for additional information on trending

One of two platforms can be the data source for trend data. Either the console can collect and store data locally on its hard disk or it can acquire the data from an open access system. Collecting the data from an OAS node is remote data collection. A trend definition determines which is to occur for a particular trend.

Local Trends The console uses local trends to collect and store data directly from trend blocks in PCU modules. These tags identify the trend data collection point, and provide the console with information it requires to establish a communication route to the collection point within the control scheme (i.e., trend block).

Remote Trends The console uses remote trends to retrieve trend data collected by an open access system. In this case, the tag defines the attributes of the trend and tells the console to which OAS node to direct a request for historical trend data.

Remote trends are display only trends. The console does not store or use the remote data from an open access system in any of its other trending functions. The console requests data from an open access system only after calling a trend display containing remote trends to the screen. It then begins local trending based on the trend defined in its database until removing the trend display from the screen.

The process engineer defines trending functions after establishing a trend database. Trending functions at the console are:

- Trend graph displays.
- Trend plot displays
- Trend logs.

Trend displays are either a trend graph or an XY coordinate plot. A trend graph shows variables as continuous lines. An XY coordinate plot presents a set of process variables in a two-dimensional grid. Trend logs provide a hard copy record of historical trend data. Refer to *Trend Displays* in the *Process Monitoring* section for an explanation of the displays.

Standard Trends A standard trend is a trend that employs function code 66 (FC 66) to perform data collection. Any analog exception reporting point can be trended by using a trend block in the control scheme of a PCU module. The trend block is normally associated with an exception reporting block. The PCU module performs the initial trend data compression and calculations (e.g., average, sum, etc.) for collected data that is eventually sent to the console.

Digital values can also be trended, but require conversion from a digital value to an analog (real) value. This can be done by using

OIS CONFIGURATION

the analog trend function code with an analog transfer function code. Refer to the *Function Code Application Manual* for specifics. Configure the analog transfer function code as

S1 = 5 (fixed block with value of 0.0).
 S2 = 6 (fixed block with value of 1.0).
 S3 = Block address of logic level to trend

Enhanced Trends An enhanced trend is a trend that employs function code 179 (FC 179) to perform data collection. The console must be operating on the INFI-NET system to use enhanced trending. With this type of trending, the exception reporting function blocks that can be trended include:

- Analog exception report, FC 30
- Digital exception report, FC 45
- Remote control memory, FC 62
- Remote manual set constant, FC 68.
- Control station, FC 80
- Device driver, FC 123.
- Multi-state device driver, FC 129
- Remote motor control block, FC 136
- Data acquisition analog, FC 177
- Data acquisition digital, FC 211.

The enhanced trend block records analog values and digital states from these function blocks, and also records alarm status and quality. The PCU module performs the initial trend data compression and calculations (e.g., average, sum, etc.) for collected data that is eventually sent to the console.

TREND DATABASE CONFIGURATION

Each trend the console processes is defined as a tag in the trend database. The console requires a trend definition to locally collect trend data from a PCU control module, or remotely from an open access system. Each trend definition has an index number. The index number is used in all trending functions.

To define a local or remote trend, the console requires an exception reporting block and a trend block in the control scheme of a PCU module. It also requires a tag defined in its database for the exception reporting block. The console uses the tag to display real-time values and attributes along with historical trend data. A tag as part of a trend definition creates a link between an exception reporting block and a trend block.

In addition, the console also requires performing the OAS definition procedure to identify the data source node for remote trends. The name of the node is then entered during definition of a trend.

The database of the console can handle up to 10,000 trend definitions. Of these, the console allows for a maximum of

- 10,000 with a *DISPLAY ONLY* usage type
- 5,000 with an *EXTERNAL SRC* usage type
- 2,000 with a *SAVE TO DISK* or *ARCHIVE* usage type

The maximum for remote trends (*EXTERNAL SRC*) is 5,000 since the open access system can handle a maximum of 5,000 trend definitions

A combination of one minute standard, 15-second standard and enhanced trends affects the maximum number of *SAVE TO DISK* or *ARCHIVED* trends the console can process. The maximum number of enhanced trends is not known at this time.

Refer to Table 16-25 for guidelines to determine the number of trends the console is capable of processing. This table assumes that the console is using only standard trends, and all are defined as *SAVE TO DISK* or *ARCHIVED* trend usage

Table 16-25 Trend Capabilities for Standard Trends

One-minute Trends	15-second Trends	Total System Trends
2 000	0	2 000
1 800	100	1 900
1 600	200	1 800
1 400	300	1 700
1 200	400	1 600
1 000	500	1 500
800	600	1 400
600	700	1 300
400	800	1 200
200	900	1 100
0	1 000	1 000

The size of the trend database can be adjusted during OIS system configuration. The database should be only large enough to accommodate the current trend requirements, and can be increased in size when necessary.

The attributes of a trend definition depend on its usage type. The attributes give the console information required to collect trended data from PCU modules or an open access system. Additional

attributes in the database pertain to displays and archiving. Trend database configuration requirements include setting the database size, then entering individual trends.

NOTE Trend definitions are required to retrieve data collected by the distributed trending system. Operator assignable trends do not use trend definitions to acquire data. Refer to *Operator Assignable Trends* in the *Process Monitoring* section for an explanation of operator assignable trends.

Sizing the Trend Database

Not all configurations require the maximum number of trend definitions. The size of the database (i.e., number of trends) should be only large enough to accommodate the current trending requirements. The process engineer sets the database size through the *OIS System Configuration* page.

NOTE Changes made at this display require a reset of the OIS application after completion.

Follow the procedures for setting the OIS system configuration, refer to *OIS System Configuration* in this section for the procedures. Set the *Max Number of Trends* field to the number of trend definitions currently required, valid entry is from 0 to 10000. This number should be close to, but greater than the actual number of trend definitions that will be created.

This procedure can be used to initially set or subsequently change the database size. The console allocates hard disk space based on the value entered. Entering a value that reflects the current database requirements frees unused disk space for other functions. The number of trends can be increased at any future time to incorporate additional process control scheme requirements.

NOTE Decreasing the number of trends erases a trend tags that have index numbers greater than the newly entered size value.

Entering a Trend Definition

Several attributes define a trend. When defining the trend database, the process engineer enters a trend type and a trend mode. The entered type and mode must match the type and mode configured for the trend block in the PCU module. These data entries inform the console of the type of trend block being referenced, and the collection method being used by the module for the particular process point.

The console also requires entering the address location (i.e., loop, PCU, module and block) of the trend block configured in a PCU

module This establishes a communication route to collect data. Additional trend database attributes determine when and how long the console will store trend data, and whether the data is sourced locally or remotely

NOTES

- 1 The console implements local trending after calling a trend display containing remote trends. The attributes defined for a remote trend must match the PCU module trend block to correctly perform local trending.
- 2 The console determines the order that each PCU module is polled for trend data, not the trend index number order.

Standard Trends For standard trends, the length of time trend data is stored can be adjusted and ranges from hours to 92 days. This sets the maximum amount of historical data that can appear at a display. Any data that displays past this time span comes from the archiving function. Other information entered in the database pertains to archiving, and also to a control station trend. A subtype identifies which variable of a control station is being trended.

NOTE If archiving a trend its *Time Span* field must be set at the archiving time span plus two hours. This provides some margin between trend storage and archive storage to prevent loss of archived data.

Enhanced Trends For enhanced trends, the trend definition defines the initial display resolution for a trend display. This resolution does not have to be the same as the collection resolution of the trend block. The resolution, however, must be greater than and a multiple of the resolution set in the block. For example, if an enhanced trend block is set for two second resolution, then the display resolution can be set to ten seconds instead.

The amount of enhanced trend data that the console stores on disk can be adjusted. This sets the maximum amount of historical data that can appear at a display.

This procedure must be done *before* performing any other trending configuration. It establishes a trend index number which is used in all other trending functions.

Step 1 The process engineer defines each process trending point the console is to collect data from individually. This is done through the *Define Trends* page (see Figure 16-37). Each trend point requires a trend definition in the database. To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown:

A Ois Configuration → A Database → B Trend

OIS CONFIGURATION

```

SPTLRDWN DEC 08 1982 09:42:01 0773DE TR04DS

Trend Index      3
Trend Type      [REDACTED]
Trend Name      BAKE TO BREAD
Trend Mode      SIMPLE
Tag Name        BSWDA 203-3
Tag Subtype
Layer PGU/Module Block 1  203  2  1886
Number Events      100
Sleeping Resolution  30  HOURS
  
```

1
2
P 1
END
104
04

TPS0232C

Figure 16 37. Trend - Define Trends

Step 2 To define a trend

NOTE Enhanced trends can be defined only if the console is operating on the INF-NET system

a The console initially positions the input cursor at the *Trend Index* field. Key in a trend index number for a desired trend to define or edit. Valid entry is from 1 to the number of trends set during database sizing (maximum 10,000) Press **ENTER** to call the trend definition

b Use the OIS configuration keys (refer to Table 16-1) to move between and enter data into each display field Table 16-26 explains the attributes of a trend definition, refer to this table when entering data

c After completing all required fields, press **ENTER** This updates the configuration on the hard disk

d To define additional trends, press **ESC** to call an *Index Number* prompt Enter the next index number to define or edit, then press **ENTER** Press **NEXT PAGE** or **PREV PAGE** to sequence to the next or previous index number without having to call the *Index Number* prompt

e Repeat Steps 2a through 2d until all trend tags trends are defined or edited Once complete, continue to press **ESC** to exit this display and configuration

Table 16 26. Trend Definition Attributes

Field	Description
Trend index	Shows the index number of the trend currently being defined or edited. The index number identifies a trend in all trending functions. Valid entry is from 1 to 10000.
Trend type	Determines the type of trend as either a standard trend (FC 66) or an enhanced trend (FC 179). Valid entry is ENHANCED - enhanced trend FAST = 15-second standard trend NORMAL = one-minute standard trend UNDEFINED = use to remove a trend definition NOTE This type must match the type of the trend block being used in a PCU module. The entry in this field also determines which of the remaining fields require entry.
Trend usage	Defines a trend as a local or remote trend and enables or disables saving data to the hard disk. For a remote trend, the open access system's response for collecting and storing trend data. For local trends, the usage type determines if the console saves trend data to its hard disk for display of historical data, and for logging and archiving. It also defines a trend as a display only trend, which the console does not save data for. For display only trends, the amount of historical data presented at a display is limited to the amount of data stored by the PCU module. Valid entry is ARCHIVED = this is the same as SAVE TO DISK except that it also enables saving data to the hard disk for archiving. The console temporarily stores the data to an archival storage directory for eventual transfer to storage medium. This option is not available for enhanced trends. This defines the trend as a local trend. DISPLAY ONLY = the console does not store any data for this trend to its hard disk. Trend data is display only. This defines the trend as a local trend. EXTERNAL SRC = defines the trend as a remote trend. If used, the console requires an entry in the <i>External Source Node</i> field. SAVE TO DISK = the console stores trend data collected for this trend to its hard disk for display and logging. This defines the trend as a local trend.
Trend mode	Identifies the collection mode being implemented by the trend block in a PCU module. For a <i>standard trend</i> , valid entries AVERAGE SAMPLE MAXIMUM SUM MINIMUM For an <i>enhanced trend</i> , valid entry is AVERAGE RANGE MAXIMUM SAMPLE MINIMUM SUM NOTE This field must match the trend mode defined in the PCU module trend block. Currently, the console only supports SAMPLE mode for enhanced trends.
Tag name	Name or index number of a tag defined in the tag database. This must be the tag that references the function block that sources the values to the trend block in the PCU module. The console requires this for display purposes.

OIS CONFIGURATION

Table 16-26. Trend Definition Attributes (continued)

Field	Description
Tag subtype	<p>Valid for standard trends only. This field applies when the trend is for a control station. It identifies which variable of the control station is being trended. Valid entry is:</p> <p>CO = control output PV = process variable R = ratio index SP = set point</p>
Loop PCU module block	<p>Hardware communication highway PCU and module address and software function on block address of the trend block in a PCU module. This is not the address of the source function block. This establishes a communication route between the console and a PCU module for collecting trend data.</p>
Time span	<p>For standard trends only, sets the maximum amount of time of historical trend data that can be saved on the hard disk. The Time Span requires two entries: A numeric value and HOURS or DAYS. The maximum time span is 92 days.</p>
Number events	<p>For enhanced trends only, sets the maximum number of events the console is to save to disk. The number to set in this field depends on the type of event being saved, the anticipated duration between samples, and the amount of free disk space available for storage. The size of each sample for each type of event is:</p> <p>ANALOG - 10 bytes DANG - 23 bytes DADIG - 8 bytes Digital type - 8 bytes RMSC - 10 bytes STATION - 23 bytes</p>
Display resolution	<p>For enhanced trends only, sets the initial display resolution at a trend display. The Display Resolution requires two entries: a numeric value and SECONDS, MINUTES or HOURS. The minimum resolution period is one second; the maximum is eight hours.</p> <p>NOTE: This field does not have to match the collection resolution of the trend block and should be set to the minimum resolution necessary for console purposes. The resolution must, however, be a multiple of the resolution set for the trend block. For example, if the block collects every one minute, this resolution can be 2 MINUTES, 4 MINUTES, 6 MINUTES, 8 HOURS.</p>
External source node	<p>Identifies the OAS node from which the console is to retrieve trend data. Valid entry is:</p> <p><i>nodename</i> - name of the OAS node providing trend data</p> <p>1 = console gets the node name from the OAS definition function</p>

TREND DISPLAY AND XY PLOT CONFIGURATION

Trended data can appear at the console in either a trend display or XY plot. The process engineer can use trends in graphic overview, graphic detail, group or operator configurable displays.

The console provides standard trend displays in varying sizes. Whether using these standard displays or creating custom displays, the escape commands in the source file of a trend display must reference trend index numbers defined through trend definition. The trend definition allows the console to acquire trended data, then present this data in displays

The console also provides standard XY plot displays in varying sizes. XY plots require additional configuration to display trended data, or other types of data. A plot index number that defines the variables to display must be referenced in the XY plot display source file. The process engineer establishes these plot index numbers through XY plot configuration

NOTE XY plots do not support enhanced trends

Refer to **Display Generation** in this section for specific information and procedures to modify or create these displays. Operator configurable displays only require entering a trend index number to present trended data. Other configuration procedures set up the operating parameters for operator configurable displays

Logging Configuration

The process engineer configures each type of log available at the console separately. These include custom, system events (and operator actions) and sequence of events (SOE) logs. Logging provides a means of recording process data, then making a hard copy printout

Some standard custom logs are snapshot, trend and trip. These logs are derived from PERIODIC, STANDARD and TRIP log types. A snapshot log takes a sample of current process values at a designated time, on demand, or when a specific process event occurs. Trend logs present a hard copy of data collected from the INFI 90 distributed trending system. The trend log can also contain current process values. Trip logs retrieve historical trended data to present pretrip event data, and collect current data to present post-trip event data. The process engineer or system management personnel are not limited to only these type of custom logs. These are, however, standard logs for the console

Events logs and operator actions logs record process events such as digital and analog tag events, and tag and INFI 90 module alarms. Operator actions logging records actions taken to manage alarms and process events. These type of logs are normally merged into a single system events log, although, the console allows separating these into two distinct logs

Sequence of events logging provides a means to collect, store and print data collected by sequential events recorders (SER) connected directly to process devices. This type of logging requires additional hardware external to the console, and dedicated to events recording

OIS CONFIGURATION

The custom and SOE logs can be set to save up to nine of the most recently generated reports to hard disk. Refer to *Printing and Displaying Log Reports* in the *Recording Process Data* section for procedures to print these retentions.

SYSTEM EVENTS LOG CONFIGURATION

The process engineer must perform three separate configuration procedures to enable system events logging:

- Configuration of individual tags in the tag database
- Events log configuration.
- Events log format configuration

During events log configuration, the process engineer sets the attributes that affect the printing and archiving of event log data items. Tag database fields related to events logging determine if an alarm, state change or operator action for a tag will appear as an entry in the events log. Events log configuration determines if an alarm, state change or operator action will appear based on the settings in the tag database. The events log configuration function acts as the master switch for turning events logging on or off.

For example, if the *Alarms-Save* attribute is set to *NO* in the database for a tag, but the events log configuration *Alarms-Save* attribute is set to *YES*, an alarm for that tag does not appear in a periodic printout. Conversely, if the *Alarms-Save* attribute is set to *YES* in the database for a tag, but the events log configuration *Alarms-Save* attribute is set to *NO*, an alarm for that tag still does not appear in a periodic printout. Both fields must be set to *YES* to print the alarm.

For system events logging purposes, process events are classified into two groups. Events and operator actions. Events are alarms and digital state changes. Operator actions include operator control and configuration actions, alarm acknowledges and operator notes. The console can save up to 1,000 of the most recent events on hard disk, then archive the saved events for long-term storage. The console saves these events in the *EVENTS.LG* file.

NOTE The *EVENTS.LG* file should *not* be directly manipulated using file management utilities.

System event logs can print continuously or periodically to a printer. Continuous printing sends event data to the printer every time a system event occurs. This provides a real-time, dynamic printout. In this case, entries are sent line by line to the printer. For periodic printing, the console formats the entire log before sending it to the printer.

Events log data saved to disk also can be demanded using log retrieval functions. Refer to *Printing and Displaying Log*

Reports in the **Recording Process Data** section for procedures to demand a printout of an events log or an operator actions log.

Continuous Print To print a process event item in a continuous printout, the *Print* attribute in the tag database for that type of event must be set to **YES**. Continuous printing also must be switched on during event log configuration; set the *Print* field to **YES** for an item to turn on continuous printing. If the continuous events log shares a printer with the periodic events log or other types of logs, each events log entry is inserted in the printout between completed log printouts.

Periodic Print To print a process event item in a periodic printout and to archive an item, the *Save* attribute in the tag database for that type of event must be set to **YES**. Saving the item to hard disk also must be switched on during events log configuration; set the *Save* field to **YES** for an item to enable saving to the hard disk. For periodic printouts, a starting date and time and a print period of up to 24 hours determine when and how often printing occurs

Items set for continuous print do not necessarily have to be saved to hard disk. Conversely, not all event log items saved to disk must be printed continuously

The process engineer or management personnel can modify the format and content of the system events log to tailor it to specific plant requirements. Modifications are limited to entering a title line, and selecting the type of event and any amplifying data (e.g., date, time, tag name, tag description, etc.) that is to appear in a printout or archive

The event log format options further divide the process events and operator actions into distinct categories. Each of these categories appears as a separate entry in the events log

Process event:

- Analog alarm events
- Device status alarm event.
- Digital events
- Module alarm event
- Node alarm event
- Text selector event

Operator action:

- Configuration event
- Information event.
- Operator action events.
- Operator notes

OIS CONFIGURATION

Log entries are either one or two lines with a maximum of 132 characters per line. The process engineer can arrange the information that appears in each line in any desired order. Attributes for each type of event item and the event log title establish the information that appears in a log entry. Each entry can contain all available attributes or only attributes needed by plant operation managers.

Configuring Individual Tags

Three attributes configured in the database for a tag enable saving and printing events for the tag. Each attribute enables a different type of event. Each tag event must be enabled on a per tag basis. System events logging should be considered during initial tag database creation since attributes defined in the tag database affect system events logs.

The process engineer enables the events logging for each tag through the *Tag Configuration* display. Follow the procedures for entering a tag to enable each type of event; refer to **Entering or Editing Individual Tags** in this section for the procedures.

Three separate fields at the display enable and set up printing of each type of tag event: *Alarms-Print Save*, *State Change Print Save* and *Optr Acts Print Save* fields. These attributes configure events to print in a continuous and periodic printout of the events log.

To enable printing tag events to a printer as the events occur, set the *Print* field for each event type to YES. To enable saving events to the hard disk for periodic printing (and archiving), set the *Save* field for each event item to YES.

This can be done during the initial creation of the tag database or during initial configuration of the events log, or at any time to add new events to an already existing events log. This procedure, however, only enables event types for individual tags. Events log configuration attributes act as a master switch to enable or disable each type of event for logging; refer to **Events Log Configuration** in this section.

Events Log Configuration

Once each tag is enabled, the process engineer can configure atributes controlling events logging. The attributes set the operating parameters and identify the type of events to log.

- Step 1** The process engineer enables events logging and schedules printing through the *Event Log Configuration* page (see Figure 16-38). To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown:

A OIS Configuration → C Logging → B System Events Log

```

13:20 07 23-000-01 FRIDAY          EVENT LOG CONF (MENU) 1 2 3 4 5 6 7 8 9 10 / 12 14 15 16 17 18 19 20
21 ... 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51

Event Log Items          Pr ntt Yes/No          Save Yes/No
-----
Alarm                    YES                    YES
D g to Disk              NO                     YES
Event Log Log. al fr. ter Number (1 to)          1
Act on Log Items        Print (Yes/No)        Save (Yes/No)
-----
Operator Control        NO                     YES
Operator History        YES                    YES
Operator Control re     NO                     YES
Alarm Al. Log. edg     YES                    YES
Act on Log Log cal Printer Number ( 16 )        1

Separate Act on Log from Event Log? (Yes/No)    NO
Total Number of Events/Act on to be Saved to Disk (0-1000) 1000

Archive Items Saved to Disk? (Yes/No)          YES
Periodic Print of Event Log (saved to Disk)? (Yes/No)  NO
Log Cal Printer Number for Periodic Print (1 - 6)    6
Start Time (in Hours) for Periodic Print          0:00:00-23:59:59
Periodic Print of Event Log (1 - 24 Hours)         24 Hours
    
```

TPS0122A

Figure 16-38 Logging - Event Log Configuration

Step 2 To define events logging:

- a Use the OIS configuration keys (refer to Table 16-1) to move between and enter data into each display field Table 16-27 explains the attributes of event log configuration, refer to this table when entering data.
- b After editing all input fields, press **[ENTER]** This updates the configuration on the hard disk
- c Press **[ESC]** to exit this configuration page

Table 16-27 Event Log Configuration Attributes

Field	Description
tem prnt	Enables printing each type of event to a printer as each type of event occurs for a tag. This enables printing events for all tags that have their events tem Prnt fields set to YES in the database. Valid entries are: YES = enable printing events as they occur NO = disable printing events as they occur
Item save	Enables saving each type of event to the hard disk as each type of event occurs for a tag. The item must be saved to disk for periodic printing and archiving. This enables saving to disk for all tags that have their events item Save fields set to YES in the tag database. A saved log can be demanded at any future time for printing using the Log by Name function (continued)

OIS CONFIGURATION

Table 16 27 Event Log Configuration Attributes (continued)

Field	Description
tem save (cont nued)	Valid entry s YES = enable sav ng events to hard d sk NO = disable saving events to hard d sk
Events log og ca printer number	Specif es to which logica printer the event log items pr nt to as they oc cur. This field relates to the <i>Print</i> field for each event item. Va d entry is from 1 to 16
Act or og og ca printer number	Specif es to which logica printer the operator actions log items pr nt to as they occur. Th s field relates to the <i>Print</i> fie d for each event tem. Valid entry s from 1 to 16
Separate act on log from events log?	Used to separate the events log nto two d stinct logs. An events log contain ng process events, and an operator actions og contain ng on y operator act ons related to console process ng. Va id entry is YES – enable separate ogs NO = d sab e separate ogs. this ma ntains a sing e og cortan ng both events and operator act ons
Total number of events/actions to be saved to d sk	Defines the total number of events to save to disk. The conso e can save up to 1 000 of each event and operator act on on hard d sk for per od c printing and archiving. Va d entry s from 0 to 1000 NOTE Any number except 0 must be entered in this field to enab e the Save fe d entries
Archive items saved to d sk?	Relates to archiva storage. Va d entry is YES = enable archiving NO = disab es archiving
Per odic print of events log (saved to d sk)?	Turns periodic printing on or off. Va d entry is YES = enable periodic pr nting NO = d sab e periodic pr nting NOTE f set to YES the <i>Logical Printer Number for Periodic Printing Start Time for Periodic Printing</i> and <i>Period of Periodic Print</i> fe ds requ e entries
Log ca printer number for per odic pr nt ng	Specif es to which log cal printer a periodic printout of event and operator action items occurs. Th s fie d relates to the <i>Per odic Print of Event Log</i> field and is val d only if that field is set to YES. Valid entry is from 1 to 16
Start t me for per od c pr nt	T me and date at which an initial period c pr nt occurs. Any subsequent prints occur at a defined period. This field re lates to the <i>Per odic Print of Event Log</i> field and s valid only if that f eld is set to YES. The t me s defined in the format set dur ng time/date format conf gurat on
Per od of per odic print	T me interva in hours between each periodic print after the n tia start time. Th s fie d relates to the <i>Per odic Print of Event Log</i> field and s va id on y if that fie d is set to YES. Va d entry is from 1 to 24


Defining Events Log Format

The final configuration procedure the process engineer must complete is event log format configuration. This allows changing

the format and content of an entry in the events log or operator actions log

Step 1 The process engineer performs events log formatting through the *Event Log Format* menu (see Figure 16-39). To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown

A OIS Configuration → C Logging → E Event Log Format

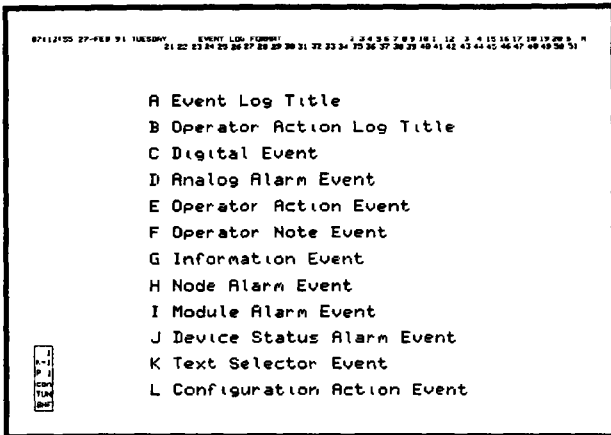

TP50123A

Figure 16-39 Logging - Event Log Format Menu

Step 2 Each event or operator action that appears as an entry in an events log must be configured separately. An events log entry, including its title is either a one or two line entry with a maximum of 132 characters per line. The *Event Log Format* menu has several options which allow selecting each type entry for editing. The formatting procedures are the same for all options presented.

Select one of the event types from the *Event Log Format* menu to edit the format of that type of event. This brings up a formatting display for the event (see Figure 16-40 for an example).

At the bottom of this display is a list of two-character sequence codes that define each item that can appear in the final log print-out. Each type of events log entry has a different set of sequence codes. Color codes can be used if the console is equipped with a color capable printer.

All or only specific codes can be used as long as the 132 character maximum is maintained. The number in brackets () next to

d Repeat Steps a through c for the title, and for each event and operator action item listed in the *Event Log Format* menu

Events Log Considerations

For archiving, the console does not separate process events and operator action events when it saves these items to disk. The console only saves event items in separate files when used for periodic printing and log retrieval.

If the target printer for a periodic printout or an archive device for archiving of the events log is not functioning, the file buffer may overflow while waiting for the printer or archive device. This can cause a loss of event data from the periodic printout, and loss of event data on the archive medium.

If the console is reset during a periodic print period, the accumulated events do not print until the original log period has been reached after the console comes back on line. If the time period passed while the console was off-line, the accumulated events print immediately after the console comes back on line. The next periodic print occurs at its originally scheduled time based on the defined log start time and not the restart time for the console.

Log Rescheduling

The periodic print function can be turned off at any time. The start time and period for a log can be redefined at any time. Rescheduling does not affect data that has already been archived.

If the period is extended, the printout does not occur until the new period has been completed. If the period is shortened and the current time has already passed the new period, the accumulated events print immediately. The next print time is based on the start time and the new period.

If the start time is changed, events print immediately. The log reschedules at the new time and period.

CUSTOM LOG CONFIGURATION

Custom logging provides three variations in log operation. Periodic, event triggered or operator demanded. A periodic log produces operations summaries at a specified time or time intervals. An event triggered log produces summaries of a particular operation (e.g., batch report, pre-fault and post-fault log) at the time it occurs. Operator demanded logs are unscheduled and initiated through operator actions.

Custom log types are PERIODIC, TRIP and STANDARD. The difference between each type is the method used to collect data for the log.

The STANDARD type log is intended to collect trend data. The STANDARD type can be used to create trend logs that contain data the console has collected from the distributed trending.

OIS CONFIGURATION

system. This log continues to collect trend data at defined intervals during its entire collection period. These logs can also contain current, snapshot tag values the console collects from the process at the end of the collection period for the log, not at intervals like trend data.

The TRIP type causes the console to retrieve a specified amount of data prior to and after a plant fault. This data is trended process values for pretrip data and current process values for post-trip data. The amount of pretrip and post-trip data depends on configuration of the log. Only event triggering can be used to start data collection.

The PERIODIC type log is intended to collect tag data. For a PERIODIC type, the console collects process values at a specified time, after an event triggers collection, or on demand. Current, snapshot values are collected at the end of the collection period for the log. Normally, the collection period is set to 0 to allow the console to collect the data as soon as it is triggered or made active. A PERIODIC log can also retrieve data collected from the distributed trending system. If this is done, however, the PERIODIC log acts similar to, and must be configured in the same way as a STANDARD type log.

Custom Log Scheduling

The process engineer can schedule data collection and printing to occur at a specified time, time intervals, or after a particular process event. A log can also be defined but unscheduled to allow an operator to demand the collection or printing at any time. The time span or length of time a log collects data also can be defined.

Collection types are TIME, EVENT, or DEMAND (operator demand). Print types are TIME, EVENT, DEMAND or COLLECT (collection completion). The console uses these types, in any combination, to schedule logging. Printing takes place at a designated printer.

Collection Types

A TIME collection type applies to only trend logs (STANDARD type) and snapshot logs (PERIODIC type). Using this type of collection, a log has a specific starting time. The data collection for the log occurs at the scheduled time.

An EVENT collection type starts data collection for a log when a particular process event takes place. The console monitors a trigger tag and collects data after a defined event occurs for the tag. An event can be an analog alarm or digital state change. Two trigger conditions for data collection can be specified for a log.

A DEMAND collection type starts data collection for a log as soon as it becomes ACTIVE. Activating a log can be done at the time of log creation, or later using the log status function. This type of collection is for unscheduled logs, and allows the operator to start log collection at any time.

Repeat Cycle Use the repeat cycle option to automatically reschedule data collection for a log. It can be enabled for any of the collection types. Log printing, with repeat cycle enabled, occurs at the normally scheduled print cycle which is dependent on the print type configured for the log

With the repeat cycle enabled for a TIME collection type log, the log continues to repeat its collection period after it completes its initial collection period. By not setting this option, log data collection stops after completion of the initial collection period

With the repeat cycle enabled for an EVENT collection type log, the log begins its collection period each time the event defined to trigger the log takes place. An event that takes place during a collection cycle does not affect or trigger subsequent collections. By not scheduling a repeat cycle, collection occurs only the first time the event occurs

With the repeat cycle enabled for a DEMAND collection type log, the log begins its collection period as soon as it is made ACTIVE and continues to repeat its collection period until it is made INACTIVE. By not scheduling a repeat cycle, the log does not repeat its collection period until it is made INACTIVE then ACTIVE again.

Print Types A log with a TIME print type has a specified starting time for printing. If a log continues to repeat its collection period, printing repeats at the defined time

A log with an EVENT print type starts after a specified process event occurs, regardless of how much of the collection period is complete. The console monitors a trigger tag and prints log data after a defined event occurs for the tag. An event can be an analog alarm or digital state change. This is similar to a DEMAND print type for a log, but the demand is based on a process event. Two conditions that trigger printing can be specified for a log

A log with a COLLECT print type begins printing immediately upon completion of its collection period. This type of print does not occur before a log has completed its entire collection period.

A log with a DEMAND print type is an unscheduled log. The log does not print any of its data until the operator manually demands the printout using the *Log by Name* function.

NOTE A retained copy of a log or any currently collected data for a log can be demanded for printout using the *Log by Name* function. Refer to *Printing and Displaying Log Reports* in the *Recording Process Data* section for procedures to demand a printout of a custom log.

Saving Logs The logging system can save on hard disk up to nine generations of each custom log. A custom log resides in a *LOGnnnn.Ln* file where *nnnn* is the log index number from 0001 to 0300 and *.Ln* through *.L9* is the retention number. The saved logs are the nine most recently generated (i.e., logs after completed collection). The console removes the oldest log as new logs are retained. Any

custom log can be saved as a permanent record using the archiving function

Custom Log Generator

The console provides a custom log generator function the process engineer or manager can use to tailor each type of report to specific plant requirements During log definition, the process engineer defines the attributes that determine data collection and printing cycles Log definition also sets the number of columns and rows in a log, which is important for determining how many values can appear in a log

After custom log definition (i e., **NEXT PAGE**), an empty log shell containing a number of cells provides the means to tailor the report This is where the process engineer or manager details the data that appears in a printout of the log, and also the data that appears in a log archive The format is limited only to the number of rows and columns defined previously, and available cell definition types.

As in spreadsheets, cells contain or define the data that is to appear in a printout A cell can also be hidden A cell of a custom log can contain

ASCII text characters - up to 80 characters of descriptive text (e.g., headings, legends, descriptions) or printer escape codes (e.g., color, new line, form feed, compressed print)

Trend value - a trend value based on a selected trend definition

Tag attribute tag database configuration data e.g., tag name, description, engineering units or alarm groups)

Tag value - a tag value current at the time of data collection based on a selected tag (mainly used for snapshot logs)

Alarm or quality - alarm state or quality status for a tag defined in the database, not a trend definition

Calculation result - sum, difference, division, product, average, minimum or maximum value for specified cells

OIS date and time either the current time at log output or the start time of the log

Offset time - offset time from the start of the log

Constant value - a defined constant value which can be used in calculations

Log Definition

A custom log must first be defined to identify its type and operating parameters, specifically the collection and print cycles Log

OIS CONFIGURATION

c Use the OIS configuration keys (refer to Table 16-1) to move between and enter data into each display field. Table 16-28 explains the log definition attributes, refer to this table when entering data.

d. After completing all required fields, press **[ENTER]**. This updates the configuration on the hard disk.

e Press **[NEXT PAGE]** to call the *Cell Configuration* page. This is the display used to format the actual log.

Step 3 Log definition attributes set the number of rows and columns in a log. This determines the number of cells that can be used to present data in a log output. The next step in custom log definition is to create the appearance and content of the log by selecting and defining cells. Refer to *Cell Definition* in this section for procedures.

Step 4 To start data collection for a completely defined and formatted log, make it *ACTIVE*. A log can be activated as the final step in log creation, or it can be left inactive after configuration and activated later through log status functions. Refer to *Log Status* in the *Recording Process Data* section for procedures to activate a custom log.

To activate a log

a Press **[ESC]** to exit the *Cell Configuration* page.

b Use the OIS configuration keys to move to the *Log Status* field key in *ACTIVE*.

c Press **[ENTER]** to initiate the change. Press **[ESC]** to exit.

When a log is activated, the console checks the validity of the log header configuration. If any field is not configured correctly, an error message displays and the input cursor positions at the field in error.

Make a log *INACTIVE* and blank its *Log Name* field to *delete* the log.

Table 16-28 Log Definition

Field	Description
Log number	Non input field identifies the currently selected log by its number. The console supports up to 300 definitions.
Log status	Current status of the log. Change the status to turn the log on (<i>ACTIVE</i>) or off (<i>INACTIVE</i>). This field must be <i>INACTIVE</i> to edit the log definition. It can be changed to <i>ACTIVE</i> as the last step of log definition or after using log status functions. A log begins its collection period as soon as it is made <i>ACTIVE</i> .

Table 16-28. Log Definition (continued)

Field	Description
Log name	Name of up to eight characters to identify the log. This name appears at other functions to identify the log (e.g. log status summary display).
Log description	Description of up to 32 characters to describe the purpose and function of the log. This description appears at other functions.
Security level	Level assigned to the log, and required by operators to perform log status operations for the log. Relates to password security. Valid entry is 1 to 16.
Log type	Valid entry is PERIODIC, TRIP, or STANDARD.
Log collector number	Log collector where a printout of this log is to occur. Valid entry is from 1 to 16.
Number of columns	This and the number of rows determine the number of cells in a log. The number of cells establishes the amount of data that can appear in the log. Valid entry is from 1 to 64.
Number of rows	This and the number of columns determine the number of cells in a log. The number of cells establishes the amount of data that can appear in the log. Valid entry is from 1 to 250.
Number of retentions	Number of historical copies of the log to be saved on disk. Up to nine copies can be saved. The saved logs are the nine most recently generated. The console drops the oldest log as new logs are retained. Valid entry is 0 for no retentions, or 1 to 9. NOTE: Saved copies of a log can be demanded for printing at a future time using the <i>Log by Name</i> function.
Collect on type	This attribute schedules data collection for the log. DEMAND = an operator initiates the collection on by changing the <i>Log Status</i> field to ACTIVE at log definition completion, or through log status functions. This is an unscheduled log. EVENT = a process event (i.e. tag alarm condition or state change) triggers collection. If used, related fields are <i>Collection Trigger Tag</i> , <i>Analog Trigger Conditions</i> , and <i>Boolean Trigger Conditions</i> . TIME = reaching a specified time triggers collection. If used, the <i>Log Start Time</i> field must be defined.
Print type	This attribute schedules printing for the log. DEMAND = a printout does not occur until the operator demands it using the <i>Log by Name</i> function. EVENT = a process event (i.e. tag alarm condition or state change) triggers printing. If used, related fields are <i>Print Trigger Tag</i> , <i>Analog Trigger Conditions</i> , and <i>Boolean Trigger Conditions</i> . TIME = reaching a specified time triggers printing. If used, the <i>Printer Trigger Time</i> field must be defined. COLLECT = a log prints as soon as it competes its collection period.
Repeat collect on cycle	Enables automatic rescheduling of logs after a log completes its initial collection period. YES = enable rescheduling. For a TIME triggered log, the log repeats collection at the intervals specified by its collection period. This begins after the initially scheduled collection time. (continued)

Table 16-28. Log Definition (continued)

Field	Description
Repeat collect on cycle (continued)	<p>For an EVENT triggered log, the log collects every time a specified process event occurs</p> <p>For a DEMAND triggered log the log continues to repeat its collection period until it is made INACTIVE</p> <p>NO = disable rescheduling The log collects only once either at the specified time or at the first occurrence of the process event</p>
Collect on period	<p>Amount of time that a log continues to collect data after it is triggered for collect on. It requires a number and time unit entry. Valid numeric entry is 0 to 999. A unit is either SECONDS, MINUTES or HOURS</p> <p>For a TRIP type log this field should equal the total amount of pretrip and post-trip time (i.e., <i>Pre-Trip Period</i> field plus <i>Post-Trip Period</i> field)</p> <p>For a PERIODIC type log the console collects tag data at the end of the collect on period, not the log start time. In most cases this is set to zero</p> <p>For a STANDARD type log the console collects trend data at intervals during the entire collection period. This sets the intervals</p>
Pretrip period	<p>Determines the amount of historical or pretrip data measured in time that the console is to retrieve once a process trip occurs. Applies to TRIP type logs only. It requires a number and time unit entry. Valid numeric entry is 0 to 999. A unit is either SECONDS, MINUTES or HOURS</p>
Post trip period	<p>Determines the amount of data to collect after a process trip occurs. Applies to TRIP type logs only. It requires a number and time unit entry. Valid numeric entry is 0 to 999. A unit is either SECONDS, MINUTES or HOURS</p>
Collect on trigger tag ID	<p>Name or index number of a tag the console is to monitor to trigger data collection for the log. This attribute is valid for EVENT collect on type logs only, and is independent of the print trigger tag. Other attributes related to this field include</p> <p style="text-align: center;"><i>Analog Trigger Conditions</i> <i>Boolean Trigger Conditions</i></p>
Print trigger tag ID	<p>Name or index number of a tag the console is to monitor to trigger printing of the log. This attribute is valid for EVENT print type logs only and is independent of the collection trigger tag. Other attributes related to this field include</p> <p style="text-align: center;"><i>Analog Trigger Conditions</i> <i>Boolean Trigger Conditions</i></p>
Analog trigger conditions (collection or print trigger tags)	<p>identifies one or two (i.e., #1 and #2) alarm conditions of the trigger tag that start data collection or printing. This entry depends on the type of tag identified as the analog trigger tag. Valid entries are</p> <p>N = trigger on return to normal condition (blank) = no trigger 3H = trigger on 3H alarm condition 2H = trigger on 2H or 3H alarm condition H = trigger on H, 2H or 3H alarm condition L = trigger on L, 2L or 3L alarm condition 2L = trigger on 2L or 3L alarm condition 3L = trigger on 3L alarm condition (continued)</p>

Table 16-28 Log Definition (continued)

Field	Description
Analog trigger conditions (collect on or print trigger tags) (continued)	HD = trigger on high deviation LD = trigger on low deviation HR = trigger on high rate of change LR = trigger on low rate of change
Boolean trigger conditions (collect on or print trigger tags)	This enables digital state triggering when using a boolean trigger tag. It identifies the digital state of the trigger tag that starts data collection or printing. This entry depends on the type of tag identified as the boolean trigger tag. Valid entry is any one of the logic state descriptors defined in the database for the trigger tag. Leave the field blank to not use digital state as the trigger.
Alarm status	This enables alarm status triggering when using a boolean trigger tag. It identifies the alarm status condition of the trigger tag that starts data collection or printing. Alarm status triggering can be based on a transition from normal to alarm or alarm to normal. One of the digital states of a tag is designated as an alarm state in the PCL module. Valid entry is ALARM = use normal to alarm status as the trigger RTN = use alarm to normal status as the trigger
Log start time	Starting time for data collection when using a TIME collection type. The format to use when entering the time and date depends on time/date format configuration. For a PERIODIC type log, data collection starts at the start time as long as collection period is zero. If not, data collection starts at the start time plus the collection period. For TRIP and DEMAND type logs, this field is not valid.
Log completion time	Non-input field; the console automatically determines the time of completion and enters the time here.

Cell Definition

The *Cell Configuration* page provides the ability to create the final format and content of a custom log (see Figure 16-42). Press **[NEXT PAGE]** while at the *Log Definition* page to call this page. Each cell location on the screen occupies the same relative position in the final printout.

At the top of the page is the cell configuration main menu. This menu lists the possible cell definitions, and provides access to utilities for:

- Copying cells
- Copying rows
- Copying columns
- Deleting cells
- Setting column width
- Printing a sample of the log format

OIS CONFIGURATION

16 2712Z 88-JAN-92 MONDAY CELL CONFIGURATION DA

A Select Cell	A1 E Copy Log
B Copy Cell	F Delete Cell
C Copy Row	G Set Column Width
D Copy Column	H Print Log Format

LOG1

	A	B	C	D
1	Recd Text		O S Time and Date	
2	Rec Text		DIR Time and Date	
3	Rec Text			
4				

Recd Text

Enter Recd String
LOG STRNG:

Hidden Cell NO

SELECT a Cell Low From the Menu MSG 261

TPS0754A

Figure 16-47 Log Configuration - Cell Configuration Display

Refer to **Cell Utilities** in this section for an explanation of the utilities and procedures to use them

The middle of the page shows a group of 16 cells. To the upper left of this block of cells is the log name. The letters across the top of the cells identify each column of cells. Columns start at A and end at a maximum of BL (column 64). The numbers down the left side identify each row of cells. The number of rows is from 1 to 250. The process engineer defines the number of rows and columns for a log through the *Log Definition* page.

If a cell has already been defined, a name indicating the cell type appears in that cell. If not, the cell is blank. Use the **A Select Cell** option to select a cell within the log area and to reposition the display. A cell selected through this option becomes the upper left cell in the block of 16 cells.

The console presents the attributes relating to a cell at the bottom area of the page. After selecting a cell, the attributes defining the type of cell appear in this area and can be changed. To define a cell:

NOTE ASC text O S tme and date offset tme and tag attribute type ce is can cross co umn boundaries for ease of def n t on. Refer to **Cell Utilities** in this section for procedures to set cell widths.

a. Choose **A Select Cell**. At the input prompt, enter the address of a cell to define or edit, then press **ENTER** Key in the column

address first then row address. Columns use alphabetic characters from A to BL (64), and rows number from 1 to 250. For example:

AC40

b Select one of the cell definition options from the menu by pressing a keyboard key. For example, press **[F]** if the cell is to contain the OIS time and date. Once selected, the attributes that define the cell appear at the bottom of the page.

c Define each field for the selected type of cell. Refer to the information that follows for an explanation of each type. When complete press **[ENTER]**. This enters the cell definition. The name of the type should appear in the cell once successfully defined.

d. Choose the *A Select Cell* option to define additional cells and repeat Steps b and c until the log is completely defined

A *Print Log Format* option accessed through *K Cell Utilities* allows printing a sample of the created log. The console substitutes false values wherever a process value should appear. Refer to *Cell Utilities* in this section for an explanation of the option

e Press **[ESC]** to exit back to the *Log Definition* page

This procedure can be performed to initially set up a log, or to make changes to an existing log

Hidden Cell

A cell designated as a hidden cell does not appear in the final printout. The result of the hidden cell is available to the logging function when performing calculations however. For example, a hidden cell could be used for data or formulas needed to produce an intermediate value but its data or value is not necessarily needed in the final log output.

To designate a cell as hidden

1. While defining the attributes of that cell use the OIS configuration keys (refer to Table 16-1) to move to the *Hidden Cell* field
2. Set the field to YES. Set the field to NO to remove a hidden cell designation

Alarm/Quality

B Alarm/Quality Field - specifies a tag name or index number in order to present the alarm status and quality status for the tag. This status can only be associated with tag values (snapshot values), not trended values. Trended values do not carry status. Figure 16-43 shows the attributes that must be defined for this cell type.

A status field width can be selected at the *Alarm Quality Field Size* field either one or three characters. A three character field

TPS0755A

Figure 16-43 Log Configuration - Alarm/Quality Field Cell Definition

shows two characters for the alarm status and one character for the quality. It is the same as a five character alarm status/quality/group field that appears at a display minus the two characters for the alarm group. A one character field will have an abbreviated alarm status overridden by bad quality similar to a one character alarm/quality field. Refer to the **Alarm Processing** section for a description of the alarm and quality indications.

ASCII Text

C ASCII Text - enters a fixed ASCII text string into the log. This string can be up to 80 characters long. The maximum ASCII characters is 5,120 per log. Figure 16-44 shows the attribute that must be defined for this cell type.

TPS0756A

Figure 16-44 Log Configuration - ASCII Text Cell Definition

In addition, printer control can be done using this type of cell. The percent (%) character followed by a one or two character code defines a printer command. All non valid command codes print as ASCII text. Printer command codes are:

%N - new line (carriage return and line feed)

%F form feed (top of form and carriage return)

%C0 - turn compressed print off.

%C1 turn compressed print on (allows maximum of 200 characters per line).

The code **%C1** puts the printer into compressed mode. The printer does not automatically reset to normal mode (132 characters per line) when another log prints. A **%C0** command must be defined

to return to normal, uncompressed print. Place this command in the last cell of the log

NOTE Key n %% to print the percent character (%) the escape sequence character is ignored

A color can be specified for a log through an ASCII cell definition. For example, the color code %K2 sets the color output to red. This code does not print in the final output. The standard color codes are:

- %K0 - black
- %K2 - red.
- %K3 - green.
- %K5 - cyan.
- %K6 - magenta
- %K7 - yellow
- %K12 - blue-magenta

These are the codes that support the current color printer capabilities of the console. The colors listed here reflect the default colors; colors can be remapped through printer color map configuration. If remapped, the number portion of the code can range from 0 to 63 as in screen color codes

The number denoting the color is terminated by any non numeric character. If the character is %, it is not in the output. The % character acts as the terminating character for the color, and allows a numeric character to be output immediately following the color code. For example, to output the number 3 following a color code, enter

%K5%3

Constant Value

D Constant Value - enters some constant value to be printed in this cell. The constant value can be used with formula type cells. If the value is not to be used with a formula cell, define the constant as an ASCII text cell instead. Figure 16-45 shows the attribute that must be defined for this cell type

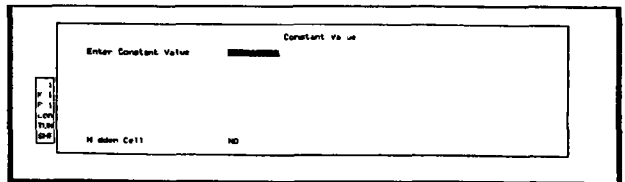


Figure 16-45. Log Configuration - Constant Value Cell Definition

Formula *E Formula* - defines a cell to be a function of other cells. Specifically, a cell can be defined to perform calculations using operands that are the result of other cells After choosing the *E Formula* option from the cell configuration main menu the following options appear

- B SUM* - sum of operands
- C DIFFERENCE* - difference of operands
- D PRODUCT* - product of operands.
- E DIVISION* - division of operands
- F AVERAGE* - sum of operands divided by number of operands.
- G MINIMUM* - minimum of operands
- H MAXIMUM* - maximum of operands.

The process engineer defines all formulas in the same way After selecting one of the formula options an *Enter List/Range of Operands* input field appears (see Figure 16-46) Use the field to specify the cells that are to be part of an equation The field allows for up to 80 characters

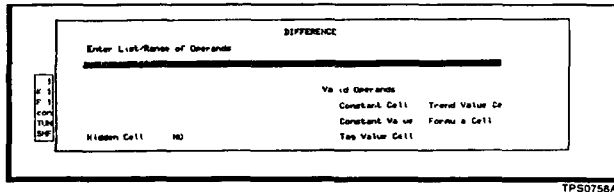


Figure 16-46 Log Configuration - Formula Cell Definition

The cell types that are valid when specifying operands used in a formula include

- Constant value cell
- Tag cell (analog value only).
- Trend cell (analog value only)
- Formula cell

A column address and row address reference a cell Columns use alphabetic characters from A to BL (64), and rows number from 1 to 250 For example:

BD12

In formula cell definition, enter the row address as 0 to specify all valid entries in an entire column. Enter ZZ as the column address to specify all valid entries in an entire row Enter a list of

operands by entering individual cell addresses each separated by a comma or blank space. Enter a range of operands by specifying a starting cell then ending cell separated by an ellipsis of two periods (..) It is possible to specify a range of cells within a list of individual cells. Examples:

A16,BZ1,J70,M1 or A16 BZ1 J70 M1

A1..AZ1

A1..L1 C7 L22

If any one of the cells involved in the calculation is bad quality, it is omitted from the calculation. The resulting value of the formula cell is marked with the suspect indicator (?). This indicator overwrites the right-most character (least significant digit position) of the formula cell result.

Example calculation: Cell C3 contains an averaged trend value. Cell C4 contains another averaged trend value. Cell D4 is being defined as a formula cell to calculate the difference between C4 and C3. Selecting *C DIFFERENCE* and entering the cell address of the two operands as

C4,C3

results in the calculation C4 - C3

OIS Time and Date

F OIS Time and Date - generates an OIS time and date for the cell. The time and date can be either the time of the log output, or the time the log started (start collection time). Figure 16-47 shows the attributes that must be defined for this cell type.

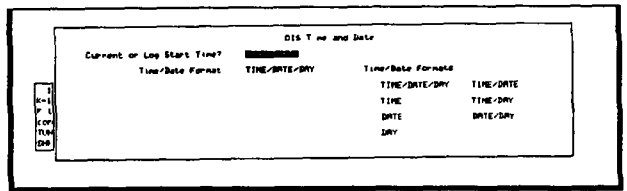


Figure 16-47 Log Configuration - OIS Time and Date Cell Definition

The *Current or Log Start Time?* field determines whether the time is the current time at log completion, or the time the log started. Enter **CURRENT** or **LOG START**.

The *Time/Date Format* field determines the format and content of the printed time and date. The options for this field are

- TIME 16 32 00
- DATE 19 DEC-92

OIS CONFIGURATION

DAY	Tuesday
TIME/DATE	16.32:00 19-DEC 92
TIME/DAY	16:32.00 Tuesday
DATE/DAY	19-DEC 92 Tuesday
TIME/DATE/DAY	16.32:00 19 DEC 92 Tuesday

Time/date format configuration sets the order and format for time (e.g , 16:32:00 or 16:32) and for date (e g , 19-DEC-92 or December 19, 1992) Refer to **TIME/DATE FORMAT** in this section

The following describes the **LOG START** time for the different log types

STANDARD (trend) - the time that the log starts collecting Normally, the first trend cell is offset zero from the log start time In this case the log start time is also the time of the first trend cell

TRIP the time of the event

PERIODIC (snapshot) - the time the snapshot was taken

The following describes the **CURRENT** time for the different log types

STANDARD - the time that collection of the log completes This does not include the processing time required to format the log for printing

TRIP - the time that collection of the log completes (i e , the time of the latest post-trip data that has been collected) This time does not include the processing time required to format the log for printing.

PERIODIC - the time that collection of the log completes This does not include the processing time required to format the log for printing

Offset Time

G Offset Time - defines a horizontal or vertical series of cells to show time The first time is an offset from the starting time of the log, and the subsequent times are offset from each other An offset is defined as a count and a unit, such as a count of 45 and a unit of SECONDS This causes a cell to show a time 45 seconds offset from the previous cell Figure 16-49 shows the attributes that must be defined for this cell type

The time attributes that can be presented in the printout for offset time are.

HH:MM:SS	12 30:00
HH:MM	12 30

	Offset Time Format	HHMMSS	Offset Time	Offset Time Formats
	Offset Time			HH MM SS
	Count	3		HHMM
	Units	MINUTES		MMSS
	Cell Direction	VERTICAL		DD HHMM
	Number of Cells	6		
	Increment Count	1		

TPS0760A

Figure 16-48 Log Configuration - Offset Time Cell Definition

DATE HH:MM 20 12 30
 MM:SS 30 00

The *Cell Direction* field determines whether the cells are to be defined consecutively across a given row or down a given column; enter either **VERTICAL** or **HORIZONTAL**

The *Number of Cells* field defines the number of consecutive cells that will show a time. This must not exceed the maximum number of cells in a row or column

The *Offset Time* fields set the initial offset time for the first cell. This time is relative to the log start time. Specify the time as a *Count* from 0 to 999, and *Units* as **SECONDS**, **MINUTES**, or **HOURS**.

The *Increment Count* field sets the time difference between consecutive cells after the first cell. The entry increases the count of the offset time by the specified number for each consecutive cell. The unit associated with this count is the unit defined for the *Offset Time* field

Tag Value *H Tag Value* - specifies the name or index number of a tag to show its value or state. The value is a snapshot taken at completion of the collection period for the log. Some types of tags require a *Tag Value Type* specification to choose whether the cell shows the value, state or operating condition of the tag. Figure 16-49 shows the attributes that must be defined for this cell type


	Tag Name/Index	XXXXXXXXXX	Tag Value Types
	Tag Value Type	ST	ST State
			NO None
	Hidden Cell	NO	

TPS0761A

Figure 16-49 Log Configuration - Tag Value Cell Definition

Trend Value *I Trend Value* - defines a series of horizontal or vertical cells to show trend values. It can also be used to define a single trend value cell. The cell must reference a valid trend definition. A trend block performs calculations on samples it collects to derive the final value that a PCU module sends to the console. The trend value cell allows performing a second calculation on the values it receives from the trend block. Cell attributes determine the type of calculation. After selecting the option, the screen shown in Figure 16-50 appears, refer to Table 16-29 for an explanation of the fields.

NOTE Currently only standard trends can be logged.

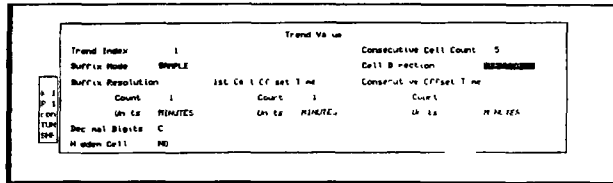

TPS0762A

Figure 16-50 Log Configuration Trend Value Cell Definition

Table 16-29 Trend Value Cell Fields

Field	Description
Trend index	Index number of the trend definition that provides the values for the trend value cells. Valid entries from 1 to 10000.
Suffix mode	Determines the type of calculation to perform on trend data. The <i>Suffix Resolution</i> field determines the amount of time the console takes samples to use in the calculation. Valid entries: AVERAGE = sum of all samples divided by the number of samples. Not valid for a digital trend. MINIMUM = minimum value during the period. MAXIMUM = maximum value during the period. SAMPLE = default; presents a single value. SUM = sum of all values during the period. Not valid for a digital trend. NOTE This is a second calculation if the module uses any correct mode besides SAMPLE.
Suffix resolution	Determines the period of time over which the console collects samples for a suffix calculation. Should be set at a minimum to the correct resolution of the trend or to any multiple of the resolution. Specify as a Count from 0 to 999 and Units of SECONDS, MINUTES, or HOURS. For example, if the trend is a one-minute trend, the resolution can be set to 2 MINUTES, 3 MINUTES, 4 MINUTES.

Table 16-29. Trend Value Cell Fields (continued)

Field	Description																		
Decima dig ts	<p>This field defines the precision for the number of digits displayed to the right of the decimal point. Enter 0 1 2 3 4 5 6 or C. C chooses precision based on the column width as follows:</p> <table border="1"> <thead> <tr> <th>Width</th> <th>Precision</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>0</td> </tr> <tr> <td>2</td> <td>0</td> </tr> <tr> <td>3</td> <td>0</td> </tr> <tr> <td>4</td> <td>1</td> </tr> <tr> <td>5</td> <td>2</td> </tr> <tr> <td>6</td> <td>2</td> </tr> <tr> <td>7</td> <td>2</td> </tr> <tr> <td>>8</td> <td>3</td> </tr> </tbody> </table>	Width	Precision	1	0	2	0	3	0	4	1	5	2	6	2	7	2	>8	3
Width	Precision																		
1	0																		
2	0																		
3	0																		
4	1																		
5	2																		
6	2																		
7	2																		
>8	3																		
Consecutive cell count	Defines the number of consecutive cells that will be defined as trend cells. Must not exceed maximum number of cells in a row or column.																		
Cell direction	Defines whether the cells are to be defined consecutively across a given row or down a given column. Enter either VERTICAL or HORIZONTAL.																		
1st cell offset time	Time relative to the starting time of the log for the first trend cell. Specify as a Count from 0 to 999 and Units of SECONDS MINUTES or HOURS.																		
Consecutive offset time	Time difference between the consecutive trend cells after the first cell. Each consecutive cell will be offset from the previous cell by this much time. Specify as a Count from 0 to 999 and Units of SECONDS MINUTES or HOURS. NOTE: The Units entry must match that of the 1st Cell Offset Time.																		

Data values in the log are listed in ascending time order from either the starting time or earliest value of the log. Therefore, it is not possible for the data in a log to be printed in reverse chronological order. After defining these attributes and pressing **[ENTER]**, the console copies the cell definition into the number of consecutive cells specified.

Problems may occur if the collection period defined for the log exceeds the time span defined for the trend. In this case, trend data would be overwritten before a calculation could be done. The console marks the value as suspect (?). If the number of samples collected is less than expected, the console performs a calculation but again marks the result as suspect. If the trend is not defined or is no longer defined in the database, the console will mark the value as bad quality.

Tag Attribute

J Tag Attribute - enters static tag configuration data in a cell. The tag name or index number must be specified along with the type of data requested. The following configuration items for the tag can be selected: Name, description, engineering unit or alarm group. Figure 16-51 shows the attributes that must be defined for this cell type.

OIS CONFIGURATION

Tag Name/Under		Tag Attribute
Tag Attribute Type	DESCRIPTION	Attribute Types
		NAME
		DESCRIPTION
		EU
		PLANN GROUP

TPS0763A

Figure 16 51. Log Configuration - Tag Attribute Cell Definition

Cell Utilities

The *K Cell Utilities* option gives access to utilities that can be used to expedite cell definition, delete cells, copy an entire log, set column widths, and initiate a sample printout of the log Figure 16-52 shows the options available after choosing this option

13144143 11 JUN 92 THURSDAY		CELL CONFIGURATION			3A
A Select Cell	B1	E Copy Log			
B Copy Cell		F Delete Cell			
C Copy Row		G Set Column Width			
D Copy Column		H Print Log Format			
LOGS					
	B	C	D	E	
1		DIS Time and Date			
2		DIS Time and Date			
3					
4					
Under menu					
SELECT a Cell Item From the Menu					
					MSC 26

TPS0764A

Figure 16 52. Log Configuration - Cell Utilities Menu

B Copy Cell - copies one cell definition to another To use the option.

- 1 Press **B** to select the option
- 2 Enter the column and row address of the source cell at the *Copy From* field The source cell initially defaults to the currently selected cell
- 3 Enter the address of the destination cell at the *To* field

- 4 Press **[ENTER]** to initiate the copy

C Copy Row - copies one entire row to another row. The default destination row and source row are the same as the currently selected row. To use the option:

1. Press **[C]** to select the option
2. If the currently selected row and the desired row to copy are the same, skip this step. If not, enter a source row at the *Copy From* field.
3. Enter a destination row at the *To* field.
4. Press **[ENTER]** to initiate the copy. The function copies the *entire* source row of cell definitions to the destination row.

D Copy Column - copies one entire column of cell definitions to another. The default source column and destination column are the same as the currently selected column. To use the option:

1. Press **[D]** to select the option
2. If the currently selected column and the desired column to copy are the same, skip this step. If not, enter a source column at the *Copy From* field.
3. Enter a destination column at the *To* field.
4. Press **[ENTER]** to initiate the copy. The function copies the *entire* source column of cell definitions to the destination column.

E Copy Log - copies an entire log definition to another log definition file. The source log will always be the log currently being defined or reviewed, a destination log can be specified. To use the option:

1. Press **[E]** to select the option.
2. Enter the index number of a log at the *To* field to specify the destination log.
3. Press **[ENTER]** to initiate the copy.

F Delete Cell - deletes one or more cells. To use the option:

1. Press **[F]** to select the option.
2. Enter the column and row address of the first cell to delete.
3. Enter the address of the last cell to delete. If deleting a single cell definition, either skip this step or enter the same cell that was entered as the first cell to delete.

OIS CONFIGURATION

4. Press **[ENTER]** to initiate the deletion. This makes the cell or cells *Undefined*. Press **[ESC]** before pressing **[ENTER]** to return to the cell definition menu without deleting any cells.

G Set Column Width - defines the width of each of the columns of the log. Columns default to a width of six printable characters. Column widths are used to determine the starting point for each column and for justifying values within a column field. ASCII text, OIS time and date, offset time, and tag attribute type cells can cross column boundaries for ease of definition.

To use this option:

1. Press **G** to select the option.
2. Enter the address of the column to adjust.
3. Enter a width. The console will allow entering any number up to 99. Before making this adjustment, however, make sure to consider the appearance of the entire log and also the number of characters a printer can output on a single line.
4. Press **[ENTER]** to initiate the change.

H Print Log Format - prints a sample format of the log currently being defined. Figure 16-53 is an example of a printout created with this option. On the printout, the rows and columns are numbered with the starting point of a column marked by a | symbol. Actual tag attributes and ASCII text will be shown, but times, values and alarm status and qualities will be artificial quantities in order to provide a more realistic presentation.

To use the option:

1. Press **H** to select the option.
2. Specify a logical printer number. This directs the printout to a specific printer.
3. Press **[ENTER]** to start the print.

Log Errors

The console checks for any invalid tag and trend references when a log is made active. The console indicates an invalid reference error through the diagnostic log function, and at the *Operator Information* page. Refer to *Diagnostic Log* in the *Terminal Utilities* section and to *OPERATOR INFORMATION EVENTS* in the *OIS Operational Information* section. Also, at the end of each log printout, the console includes an error report to notify of any invalid tag index, trend index or formula reference.

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22
1	001																				
3																					
4																					
5																					
6																					
7																					
8																					
9																					
10																					
11																					
12																					
13																					
14																					
15																					
16																					
17																					
18																					
19																					
20																					
21																					
22																					
23																					
24																					
25																					
26																					
27																					
28																					
29																					
30																					
31																					
32																					
33																					
34																					
35																					
36																					
37																					
38																					
39																					
40																					
41																					
42																					
43																					
44																					
45																					
46																					
47																					
48																					
49																					
50																					
51																					
52																					
53																					
54																					
55																					
56																					
57																					
58																					
59																					
60																					
61																					
62																					
63																					
64																					
65																					
66																					
67																					
68																					
69																					
70																					
71																					
72																					
73																					
74																					
75																					
76																					

TPS0142A

Figure 16-53 Example Trp Log Printout

The *Log Last Good Value* fields at the alarm quality options page determine how the console is to handle bad quality or disestablished points in a log. The option specifies whether the console is to print a bad quality string or the last good value for the point. Set the fields to YES to have the console print the last good value, or NO to have it print a bad quality string. Refer to **ALARM QUALITY OPTION** in this section for procedures to set the fields.

Scheduling Examples

Trend Log Example A trend log (STANDARD type) with a TIME collection type and COLLECT print type has a start time of 12 00 p m (12.00), its

OIS CONFIGURATION

collection period is 12 hours and its defined columns and rows are 20 and 50 respectively. A trend value cell in the log is set for 30 minute offset time, 30 minute resolution and 24 consecutive cells (vertical cells)

The first value will not be collected until 12:30 p.m. (12.30), then every thirty minutes until the collection period is complete. The collected values will occupy 24 of the 50 defined rows. The log prints at 12:00 a.m. (24:00). The example assumes the remaining rows and columns contain other data defined with additional cell attributes.

Trip Log Example

A trip log (TRIP type) with an EVENT collection type and DEMAND print type has a one hour pretrip period and one hour post-trip period. Its collection trigger is a high alarm (H) for an analog tag, and alarm status is ALARM. The defined columns and rows for the log are 20 and 100 respectively. A trend value cell in the log is set for zero minute offset time, two minute resolution and 62 consecutive cells (vertical cells). The specified trigger tag reaches a high alarm point at 1:00 p.m. (13:00) which starts data collection for the trip log.

The first value will be the trend value at 12:00 p.m. (12:00), and values collected at two minute intervals until the post-trip period is complete at 2:00 p.m. (14:00). The collected values will occupy 61 of the 100 defined rows. The log prints when demanded using log retrieval procedures. The example assumes the remaining rows and columns contain other data defined with additional cell attributes.

Snapshot Log Example

A snapshot log (PERIODIC type) with a DEMAND collection type and COLLECT print type has a zero collection period. The defined columns and rows for the log are 20 and 10 respectively. It contains 20 individual tag value cells listed horizontally. The log is left *INACTIVE* during configuration.

At 3:00 p.m. (15:00), the operator enters the log status function and changes the log status to *ACTIVE*. The console starts data collection immediately and prints as soon as it collects all required data. The printout contains the 20 specified values as they were at 3:00 p.m. (15:00). The values occupy all 20 columns and one of the ten rows. The example assumes the remaining rows and columns contain other data defined with additional cell attributes.

SOE LOG CONFIGURATION

The console collects data for a sequence of events (SOE) log from a multi-function processor (MFP) or multi-function controller (MFC) module. The MFP or MFC module collects data from a sequential events recorder (SER) connected to the actual process field devices.

Module/SER Requirements

Before a console can collect any SOE data for an SOE log, the process engineer must configure both the MFP or MFC module and the recorder. An SOE log function block (i.e., function code 99) allows the module to collect data from a recorder. This function code defines the type of report and maximum age of data saved and sent to the console. The module automatically removes data that is older than the specified age limit. The function code also allocates data storage space depending on the type of report. Each SOE log function block handles only one type of report, and the report includes data on all points configured in the recorder to be that event type

The recorder has function codes (independent of INFI 90 function codes) that.

1. Define normally closed or open conditions for each of its input points.
2. Turn scan off or on for each point
3. Allocate maximum predefault memory storage or sets a predefault window that determines the amount of data collected before a process fault
4. Designate specific predefault, post-fault, snapshot and summary events.
5. Set logic that triggers predefault, post-fault and snapshot reporting

Refer to the *Sequential Events Recorder* instruction manual and *Function Code Application Manual* for further information

Once these configurations are established, the console can

- Collect event data after receiving a data present indication in an exception report generated by an MFP or MFC module
- Format the log printout.
- Send event data to a printer
- Archive event data for permanent storage
- Enable operator summary log requests

OIS Requirements

The console can generate up to 160 SOE logs consisting of a combination of any of the available report types. This requires up to 32 MFP or MFC module and recorder pairs

The process engineer defines the sequence of events logging parameters for the console. These parameters tell the console.

1. How many recorders are present

- 2 Total number of SOE logs to produce
- 3 Number of inputs per recorder

All SOE logs use these parameters. Before the console can collect and print SOE data, it requires a correlation between the SER inputs and tags in its tag database.

The physical connection point for field wiring is at the terminal block of a recorder. The point of connection determines the input number for a field input to the recorder. A list of console index numbers (1 through 1,536) correspond to each SER input. Input one at the recorder is SER index one at the console. The process engineer defines the input list to identify each SER input. This list links the index numbers used by the console to tags in its database. The console needs this linkage to show the correct tag name, tag description and logic state descriptor in an SOE log entry.

NOTE The tags defined in the input list during SER definition must be digital state reporting tags (e.g. DIGITAL RMCB DD).

The console uses an RCM tag defined in its database to monitor the sequence of events log function block in an MFP or MFC module. Each log has a dedicated RCM tag. The tag contains the loop, PCU and module address of the module interfacing SER data. It also contains the block number of the SOE log function block located in memory of a module (i.e., module block address that contains function code 99). The console monitors this function block to determine if the module has data ready to send. The RCM tag for an SOE log is also required to demand a printout of a summary log.

The recorder continuously polls and saves data for each of its inputs. The MFP or MFC module polls the recorder every 250 milliseconds, and saves collected event data in memory. How long it saves the data depends on the configuration of the module. Once the module collects data from the recorder, it initiates an exception report to notify the console that it is ready to send data. After receiving this report, the console polls the module for its SOE event data. This does not apply for summary logs; the operator initiates data collection for a summary log by changing the state of an RCM tag.

Report types defined by the SOE log function block include standard, summary, pre-fault, post-fault and snapshot. Each log has a unique identifier number and a 32 character (maximum) descriptor. A report trigger tag entered during SOE log configuration is the RCM tag associated with the MFP or MFC module that is reporting SOE event data. An SER number defines the point list to use for the log. The number of retentions identifies the number of logs to save on disk for archiving purposes.

A wait time can be entered for post-fault and snapshot reports. This value tells the console how long in minutes to wait after notification of data from the MFP or MFC module before polling the module for the data. This field has no meaning for other report types. The console continues to collect data until zero points are returned.

NOTE The wait time should be shorter than the age limit set in the module configuration.

Defining SOE Log Operating Parameters

The first step in configuring the console for SOE logging is setting the operating parameters. This tells the console the number of recorders that are operating with this console, number of reports to create, and number of inputs per recorder. It establishes a base for later configuration procedures, and determines the amount of disk space to allocate for SOE logging.

Step 1 The process engineer sets the operating parameters for SOE logging through the *SOE General Parameters* page (see Figure 16-54). To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown:

A OIS Configuration

 ↳ E System

 ↳ A System

 ↳ F SOE General Parameters

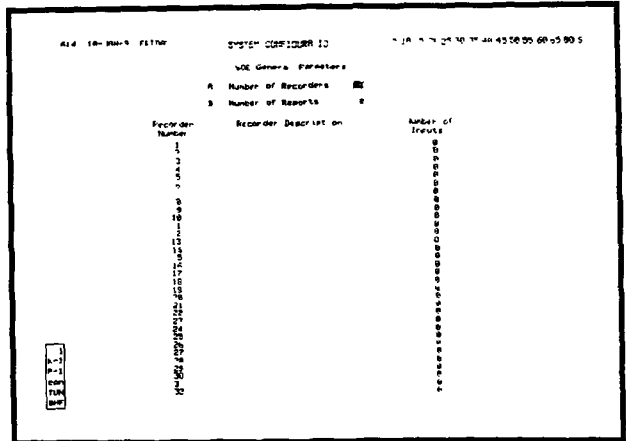


Figure 16-54 Logging - SOE General Parameters

TPS0145A

OIS CONFIGURATION

- Step 2** To set the SOE logging parameters
- a. Use the console configuration keys (refer to Table 16 1) to move between and enter data into each display field. Table 16 30 describes the attributes of the SOE general parameters page; refer to this table when entering data.
 - b. After completing all required fields, press **[ENTER]**. This updates the OIS configuration on the hard disk.
 - c. Continue to press **[ESC]** to exit this display.

Table 16-30 SOE General Parameters

Field	Description
Number of recorders	Total number of sequential events recorders available for data collection in the system. The console supports a maximum of 32 recorders. Valid entries from 0 to 32.
Number of reports	Total number of SOE logs to be produced. The console supports up to 160 SOF logs. Valid entry is from 0 to 160.
Recorder description	Optional field. Up to 32 alphanumeric characters can be entered to identify and describe the recorder.
Number of inputs	Number of inputs for the recorder. The console supports a maximum of 1536 inputs per recorder. The SER hardware configuration determines the actual number of inputs of which each recorder is capable. A base unit per recorder is 128. Valid entry is from 0 to 1536.

Defining SOE Report RCM Tags

Each log the console is to create requires an RCM type of tag configured in the database. For example, if the *Number of Reports* field set at the SOE general parameters page is 25, then 25 RCM tags for SOE logging must be defined. The console uses an RCM tag to monitor the SOE log function block in the control scheme of an MFP or MFC module. It monitors this function block to determine when to collect SOE data.


The operator also uses this tag to initiate data collection and printing of an SOE summary log. Refer to **GENERATING SEQUENCE OF EVENTS SUMMARY LOGS** in the *Recording Process Data* section for procedures to initiate a summary log.

Follow the procedures for entering a tag, refer to *Entering or Editing Individual Tags* in this section. Define a tag as a normal RCM tag, except define the *Loop*, *PCU*, and *Mod* fields as the hardware address of the MFP or MFC module being used for SOE logging. The *Block* field must be the address of the SOE log function block (i.e., FC 99).

Defining SER Input Lists

After setting the general parameters for SOE logging, the console requires a defined SER input list that links each input (i.e., index number) to a tag defined in the database. The console needs this list to acquire and print tag database data (e.g., tag name and description) in the log printout.

Step 1 The process engineer defines an SER input list through the *SER Definition* page (see Figure 16-55). To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown



Recorder number	Index	Tag Name	Index	Tag Name	Index	Tag Name
1	33	DBB 010071 0	65		67	
2	34		66		68	
3	35		67		69	
4	36		68		100	
5	37		69		101	
6	38		70		6	
7	39		71		62	
8	40		72		84	
9	41		73		85	
10	42		74		8	
11	43		75		87	
12	44		76		01	
13	45		77		4	
14	46		78		6	
15	47		79		17	
16	48		80			
17	49		81		12	
18	50		82		4	
19	51		83		117	
20	52		84		15	
21	53		85		17	
22	54		86		18	
23	55		87		128	
24	56		88		21	
25	57		89		22	
26	58		90		122	
27	59		91		173	
28	60		92		74	
29	61		93		125	
30	62		94		24	
31	63		95		27	
32	64		96		9	

Figure 16-55 Logging - SER Definition

TPSO148A

Step 2 To define an SER input list

a Use the OIS configuration keys (refer to Table 16-1) to move between and enter data into each display field. At the *Recorder number* field, type the recorder number to define an input list for, then press **ENTER**. Valid entry for this field depends on the

number of recorders set during SOE general parameters configuration Refer to *Defining SOE Log Operating Parameters* in this section. The *Number of Inputs* field reflects the number of inputs defined for the selected recorder This is also the number of index numbers that require definition

b Enter a tag name at the *Tag Name* field for each index number A maximum of 128 index numbers can display on the page Press **[NEXT PAGE]** to display the next set of 128 index numbers Continue to enter tag names for each index number until all required inputs (i.e., index numbers) are defined


c Press **[ENTER]** after all entries are made to save the data to the hard disk

d If additional lists are to be defined, move to the *Recorder number* field and repeat Steps 2a through 2c If this is the last or only list to define, continue to press **[ESC]** to exit this display

SOE Report Definition

Each SOE log the console is to create must be defined individually The total number of logs to define relates directly to the *Number of Reports* set at the *SOE General Parameters* page Each RCM tag for logging is identified the definition of a log

Step 1 The process engineer defines SOE logs through the *SOE Report Definition* page (see Figure 16-56) To call this display, first press **[GENL FCTNS MENU]**, then select the following menu items in the sequence shown



Step 2 To define each log

NOTE The log must be *INACTIVE* to edit

a Use the OIS configuration keys (refer to Table 16 1) to move between and enter data into each display field Table 16 31 describes the attributes of the SOE report definition page, refer to this table when entering data At the *Report Number* field, type the number of a log to define, then press **[ENTER]** Valid entry for this field depends on the number of logs set during SOE general parameters configuration. Refer to *Defining SOE Log Operating Parameters* in this section

b After completing all required fields, press **[ENTER]** This updates the OIS configuration on the hard disk

15 34143 24-JAN-9		RNDGNY		SOE REPORT DEFINITION		1274567910588	
Report Number	1						T RNDG
Report Status	STANDBY						STANDBY
Report Type	STANDBY						PRF FNLT
Report Title	STANDBY						HOST FALTY
Tr. Oper. Inv.	SOE						SNAPSHO
SER Number							
Max. Time	60 00:00						
Log to Printer							
No. of Retentions	3						
Active	YES						
Security Level	3						

TPS0147A

Figure 16-56 Logging - SOE Report Definition

c To enter additional logs, press **[ESC]** to call a Report number prompt. Enter the number of the next log to define or edit then press **[ENTER]**. Repeat Steps 2a and 2b Press **[NEXT PAGE]** or **[PREV PAGE]** to sequence to the next or previous index number without having to call the Report number prompt.

d Once all tags are defined or edited, continue to press **[ESC]** to exit this display

Step 3 To start data collection for a completely defined log, make it **ACTIVE**. A log can be activated as the final step of definition, or it can be left inactive after definition and activated later through log status functions. Refer to **Log Status** in the **Recording Process Data** section for procedures to activate a custom log

To activate a log

a Use the OIS configuration keys to move to the Report Status field. Key in **ACTIVE**.

b. Press **[ENTER]** to initiate the change

Table 16 31 SOE Report Definition Attributes

Field	Description
Report number	Shows the number of the current log. Each SOE log must be configured separately. Valid entry at this field is from 1 to the number of reports set during SOE general parameters configuration (maximum 160)

OIS CONFIGURATION

Table 16 31 SOE Report Definition Attributes (continued)

Field	Description
Report status	Turns the log on or off Valid entry s ACTIVE = act vates the log INACT VE = deact vates the og the log must be <i>INACTIVE</i> to ed t any fields The log can be set to <i>ACTIVE</i> as the last step of SOE report def n t ion or it can be left <i>INACTIVE</i> and turned on later using log status funct ons Once <i>ACTIVE</i> the console begins to mon tor a module for data
Report type	ident fies the report type for print g purposes only The actua report type s set in the configurat on of an MFP or MFC module Val d entry s PRE_FAULT STANDARD POST_FAULT SUMMARY SNAPSHOT
Report title	Report tit e of up to 32 characters that is to appear n a pr ntuol th s f eld s for pr nting purposes on y
Trigger tag	Name of the RCM tag defined to support th s SOE log
SER number	Number of the recorder for this log which s a so the number of an SER input list Th s nks an SER nput st to this log Val d entry s from 1 to the number of recorders set during SOE general parameters configurat ion (max mum 32)
Wait t me	Amount of time the console should wait after notif cation of data from the MFP or MFC module before poli ng the module for the data Val d for post fault and snapshot logs only The time is entered in hour m nute second format NOTE The wait t me should be shorter than the age l m t set n the modu e conf guraton
Logical pr nter no	Logica printer this log prints to after the console co ects data Val d entry is from 1 to 16
No of retent ons	Number of generations of the log that are to be saved on disk up to nine generat ons can be saved The saved ogs are the nine most recently generated Saved logs can be demanded at a future t me for printing using the <i>Log by Name</i> function The console drops the oldest log as new logs are retaned Val d entry is from 0 to 9
Arch ve	Enables archiving for this og relates to archival storage YES = enab e archiv ng use to enab e storage of og mages to an arch va storage med um NO = d sab e archiv ng
Secur ty eve	Security level assigned to the log and required by an operator to perform log status operations on the log Relates to password secur ty Val d entry is from 1 to 16

Archival Storage

NOTE *Archival Storage* d scusses the configurat ion requ irements that define data arch ving to storage med a on y Refer to **ARCHIVING** in the **Recording Process Data** section for data retr eva procedures and methods for d splaying and print ng retr eved data

The archiving function provides an integrated method for storing console data and INFI 90 process data. Archiving extends normal storage of logs, PCU configurations, system events, trends, and tag data indefinitely. Data can be archived to magnetic tape or optical disk storage medium, or to an open access system (OAS). The open access system also provides the ability to archive data to magnetic tape or optical disk medium. Once data is archived to medium, the operator can use archival retrieval or tag historian functions to retrieve data for printing or display

NOTE Currently only standard trends can be archived

The data types that can be archived include:

- **Logs** (after completion of the collection period).
 - Trend log (STANDARD type)
 - Trip log (TRIP type)
 - Snapshot log (PERIODIC type)
 - Sequence of events log
- **Trends.**
 - Raw trend data on a per trend basis
- **Events** (list of system events and operator actions)
- **Tag data.**
 - Analog tag snapshots
 - Digital tag exceptions
 - Alarms
- **PCU configurations**

Any of the data types in any combination of data can be put on any single magnetic tape or optical disk medium. However, individual data types cannot be split up to go to more than one medium. Only logs and events can be archived to an open access system

The archival storage and retrieval function of the console enables storage for individual data types, and also directs data type archiving to a storage medium or to an open access system. This function also provides retrieve data, directory (archive volume and retrieved data), store data and use new volume options.

Archiving should be considered prior to trend, tag, and log configuration since the process engineer sets attributes related to archiving during these configurations. It can, however, be enabled at any time. Complete archival storage configuration requires the following procedures:

- Archival configuration
- Configuring events to be archived

OIS CONFIGURATION

- Configuring trend data to be archived
- Configuring custom logs to be archived
- Configuring sequence of events logs to be archived
- Configuring PCU configurations to be archived
- Configuring tag data to be archived

The *Archival Configuration* option sets up the operating parameters as they pertain to archival storage. This must be done first since attributes set during this configuration allocate hard disk space for archived data storage, and turn archiving on for each data type to be archived.

The configuring of individual data types establishes the specific logs, events, PCU configurations, tags, and trends that are to be archived. These configurations define the data that the console collects and stores in hard disk files.

These procedures reflect requirements when utilizing all available archival storage options. Not all data types have to be set to archive when archiving is being configured. Therefore, not all of the procedures in this section may be required. The console can archive only one data type at a time, or a few, or all data types if desired. If archiving any data, archival configuration must be done first.

ARCHIVAL CONFIGURATION

The process engineer performs three separate configuration procedures to set up archival storage. All work together to allow the console to establish archiving criteria. These include:

- Data type to volume definition
- Volume to media definition
- Miscellaneous definitions

Hard Disk Data Storage

The console requires archival storage configuration to automatically store data to its hard disk for eventual archiving to storage medium or an open access system. The data, established through configuration of the individual types of data, stores in archive data files. These files contain the data collected that will eventually be archived.

The parameters set during archival storage configuration affect all data types. Archived data resides temporarily at a reserved area of the hard disk. The amount of hard disk space reserved for archiving is set during this configuration. Each data type competes for this reserved space. Storage to hard disk of trend, tag,

event, log, or PCU configuration data must be enabled before any data can be archived

The log configuration procedures enable storage of individual custom logs and system events. Trend definition procedures enable storage of trend data. And PCU management functions enable storage of PCU configurations.

The tag historian function provides the capability for storing, archiving and retrieving tag data (i.e., exception reports). Since the initial archival storage and retrieval of tag data is handled the same as other types of data, the same media and options are available. Archived tag data that has been retrieved can be printed for up to 100 tags at a time

Hard disk storage for archived data is temporary. Once configured, the console collects and saves specific data in hard disk files until it reaches a scheduled archive time or time interval. It then archives the data to the specified storage medium. After archiving all saved data, the console then overwrites old data in these archive data files with new data in preparation for its next archival storage. This sequence repeats until archiving is disabled. Once archived to medium, process data storage becomes more permanent

The amount of hard disk space that can be used for archival storage depends on the total amount of unused disk space available. The console references a disk space for archiving allocation made during miscellaneous definitions. This allotment and a disk space for data retrieval storage allocation should be at or less than the total unused disk space available

To limit storage of archived data to a reasonable amount, the console uses the disk space for archiving allocation as a guideline for data storage. To prevent data loss, it will temporarily use additional hard disk space as necessary going beyond the allocated amount. It does this in anticipation of some data files being deleted after archiving to medium. If for some reason archiving to medium cannot take place (e.g., medium not installed or wrong volume), the console eventually begins to write new data over old data, resulting in loss of archived data

Media Storage

The console automatically stores archived data to storage medium after reaching a defined time or time interval. Before it can automatically archive, the console requires specific parameters that identify the archived data that is to store to a particular medium. The files for archived data contain only one type of data. Any combination of these data files can be stored on any one medium.

An archive to medium consists of only the data saved during a defined time interval. The console assigns a sequence number to each archive that occurs. This sequence number is used later to retrieve data.

OAS Storage The console automatically stores archived logs and events to an open access system after reaching a defined time or time interval. Before the console can automatically archive, it requires

1. Identifying the OAS node through OAS definition procedures, refer to **OAS Definition** in this section
2. Specifying parameters during archival storage configuration that identify the archived data that is to store to the open access system (i.e., events and logs)

As with archiving to medium, the files for archived data to be sent to an open access system contain only one type of data. An archive consists of only the data saved during a defined time interval.

The console uses two configuration definitions to determine which data stores on a particular medium or to an open access system: Data type to volume definition and volume to media definition.

Data Type to Volume Definition

Data type to volume definition does three different things:

1. Turns archiving on or off for each data type
2. Assigns a volume name to each data type
3. Sets the console overwrite priority.



An on/off attribute acts as a master switch for archiving of each type of data. Archiving can be enabled or disabled for individual data types. This affects both media storage and hard disk storage.

The console requires a volume name for each archived data type. This allows grouping data types into a single volume for archiving to a single medium. The console uses this name to verify that the correct medium is installed for the volume of data being archived.

Archiving hard disk space is limited. If this space is completely consumed, the console begins overwriting old data with new data. An overwrite priority sets the order the console uses to overwrite old data. The console overwrites the lowest numbered data type first.

Step 1 The process engineer defines the data type to volume through one of the *Define Archiving* pages (see Figure 16-57). To call this

display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown

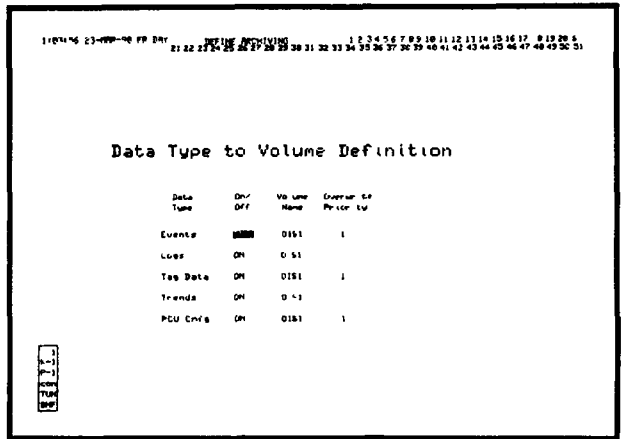

TP50010B

Figure 16-57. Archival Storage - Data Type to Volume Definition

Step 2 The five fields under the *Data Type* column are *Events*, *Logs*, *Tag Data*, *Trends* and *PCU Configuration*. The data types can be segregated as individual volumes of data or consolidated in any combination into one volume of data. However, a data type cannot be split up between volumes.

When changing a data type from on to off, the console deletes all files containing data already collected for the data type from the hard disk. This data then does not archive at any time to a storage medium. To prevent loss of archived data, it is suggested that this change not be made until either the console completes an archival storage or the *Store Data* option is used to force data storage. Refer to **ARCHIVING** in the *Recording Process Data* section.

To define each data type:

- a Use the configuration keys listed in Table 16-1 to enter data and move between each display input field. Set the *On/Off* field for each data type to **ON** to enable archiving of that type of data; set it to **OFF** to disable archiving.

The *On/Off* field activates or deactivates archiving for a given data type. For example, *Trend* field is *ON*, *Log* field is *OFF*. All trends with a *Usage Type* of *ARCHIVED* will archive, while logs do not even if they are set to archive in their configurations.

If the *On/Off* field is turned on for a data type, the *Volume Name* cannot be left blank. An error message appears if the name is blank and **ENTER** is pressed.

b For each data type that is *ON*, enter a four character volume name at the *Volume Name* field. The name appears when performing volume name to media definition.

For archiving to medium, this field defines the name assigned to a volume of data archived to the medium. Assigning the same volume name to other data types groups them for transfer to a single medium. When archiving data to an open access system, the name is used to group data types only and is not required for OAS purposes.

This is *not* the type of medium. The console associates a volume name to a certain type of medium through volume to media definition. If the name of the volume of data stored on an installed medium does not match the name configured here when it is time to archive data, the console prompts to install the correct volume through an operator action request.

If the *Volume Name* field was previously defined, the console does not allow clearing it at any time in the future. The volume name can be changed, however, at any time. If attempting to clear the name, the message *Volume Name previously defined cannot be blank* appears.

c At the *Overwrite Priority* field for each data type, enter the priority the console is to use when determining the overwrite order. This field sets the order in which old data is overwritten in the event archiving exceeds its allotted disk space. The lowest numbered data type is overwritten first.

d When completed, press **ENTER** to save the changes. This updates the configuration on hard disk.

e Press **ESC** to exit.

Volume to Media Definition

Once the volume names are assigned, volume to media definition

- Assigns the type of medium to which a volume of data archives
- Assigns descriptive text to identify a volume of data

- Sets the time of day that archiving to medium occurs.
- Sets the time interval between each archive to medium after the initial start time.

The console requires a medium type assigned to each volume of data. This determines to which medium the volume stores. Remember that a volume of data includes all data types that have the same volume name. When the console attempts to archive a volume of data to medium, it first checks if the storage medium is installed. It also checks the medium for a volume name before it begins storing data. If the medium was previously used and contains a volume of data with a name that does not match a volume being archived, the console generates an operator action request to install the correct volume. This can be a medium that contains previously archived data or a blank tape.

The console provides a function to read the directory of an installed medium. Refer to **ARCHIVING** in the *Recording Process Data* section for specifics. The directory gives

- Type of archive medium.
- Volume name
- Sequence number.
- Beginning and ending time of each archived period.
- Number of events, logs, trends, tag data files and PCU configurations stored during each archive period

Archive Scheduling

A time of day attribute sets the start time for archiving. A time span attribute sets the interval between archives. The frequency can be every four, six, eight or 12 hours, or any multiple of one day or week. The start time and the interval operate in conjunction with each other.

Any time span equal to or less than one day (i.e., 24 hours) causes an initial archive of data to occur at the specified time of day. After this initial archive, they continue to occur regularly at a defined interval. Any time span greater than one day causes the initial archive to occur at the defined time of day after completing the initial time span period. Additional archives occur regularly at the defined time span interval, and at the defined time of day.

Time Span ≤ One Day

For example, an archive has a *Time of Day to Output Data* set for 13:00 (i.e., 1:00 p.m.) It also has a 12 hour *Time Span*. The first archive to storage medium does not take place until 13:00. The data in this initial archive is all data saved between the time starting at completion of archiving configuration and 13:00. Additional archives continue to occur at 1:00 and 13:00 daily. The initial archive does not contain a full 12 hours of data, but subsequent archives contain 12 complete hours of data.

Time Span > One Day

For example, an archive has a *Time of Day to Output Data* set for 17.30 (i.e., 5:30 p.m.) It also has a seven day *Time Span*. The first archive to storage medium does not take place until 17.30, six days after the first 17.30 time passes. This is because the first day in the seven day count is from the time starting at completion of archiving configuration to 17.30 of the same day. The first day of the initial archive is not a complete 24 hour collection. Additional archives occur at seven day intervals and at 17.30. These subsequent archives contain seven complete days of archived data.

The console generates an operator action request if archiving does not take place at its scheduled time, or if it cannot automatically archive stored data. An operator action request notifies the operator that specific actions must be taken to continue processing data and prevent data loss. If no action is taken, the console eventually begins writing new data over old data resulting in loss of archived data.

Because the amount of tag data that stores on the hard disk can be considerable, the recommended frequency for tag data archiving to medium is at least once a day. The time interval between archives determines the amount of hard disk space files containing tag data consume. The console automatically archives tag data more frequently when necessary (e.g., no more hard disk space available). The storage medium must already be installed when the console attempts to archive data to prevent data loss.

Step 1 The process engineer determines volume to media definitions through one of the *Define Archiving* pages (see Figure 16.58). To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown:

- B OIS Utilities
 - F Archival Storage/Retrieval
 - ↳ A Archival Configuration
 - ↳ B Volume to Media Definition

Step 2 The *Volume to Media Definition* page configures each volume of data. This defines to which medium (i.e., magnetic tape, optical disk or open access system) a volume should archive. The *Volume Name* field cannot be changed, and reflects the volume name configured in data type to volume definition.

a Use the OIS configuration keys listed in Table 16.1 to move between and enter data into each display input field. At the *Volume Descriptor* field, assign a meaningful descriptor of up to 20 characters to describe the purpose of this volume of data. For example, it can show the type of data being stored such as *TRENDS AND LOGS*.

```

1 121143 14-JUL-91  SUNDAY          DEFINE ARCHIVING          1 2 3 4 5 6 7 8 9 10 11 58R

                                     Volume to Media Definition

Volume Name      Volume Descriptor      Media Type      Time Span      Time of Day
to Output Data

DIS1             ████████████████████      MAGTAPE        4 HOURS        6:00

DIS2             DRS                      DAS            4 HOURS        14:00
    
```

1
 2
 3
 4
 5
 6
 7
 8
 9
 10

TPS02258

Figure 16-58 Archival Storage - Volume to Media Definition

b. At the *Media Type* field enter the type of medium to which the console is to store this volume of data. Valid entry is **MAGTAPE** or **OPTICAL** for all data types, or **OAS** for the *Events* and *Logs* data types. The magnetic tape and optical disk options require optional hardware.

NOTE Examples of *Time Span* and *Time of Day to Output Data* field interaction and setting are given earlier in this section.

c. The *Time Span* field determines how often the console will write the volume of data to storage medium or to an open access system. Valid entry is **4 HOURS**, **6 HOURS**, **8 HOURS**, **12 HOURS**, **nn DAYS** or **nn WEEKS**, where *nn* is a maximum of 99. Longer time spans require more hard disk space.

NOTE The shortest valid time range is four hours. The *Time Span* field set for each trend to be archived must be at least the archive time span set during this configuration plus two hours. It is the responsibility of the process engineer or operator to ensure that this requirement is met.

d. At the *Time of Day to Output Data* field enter a time that archiving to storage medium is to occur each day.

e. When all fields are complete, press **ENTER** to update the configuration on hard disk.

f. Press **ESC** to exit.

Miscellaneous Definitions**Miscellaneous definitions**

- Allocates hard disk space for archival storage.
- Sets a disk fullness warning level
- Allocates disk space for archive data retrieval.

Up to 40 megabytes of hard disk space can be reserved for archived data storage during configuration. This allocation limits hard disk space consumed by archive data files, which prevents the console from using so much space that other operations would not function properly. The amount to reserve depends on the amount of data being archived, the time span between archives, and the amount of available unused hard disk space.

The console uses this allocation as a guideline when storing data. It will temporarily use additional hard disk space if required to prevent data loss, however, there is still a limit to the amount of space available for temporary use.

The console has the ability to notify an operator to perform certain actions to prevent loss of archived data. It uses a fullness warning level value set during configuration to notify an operator when archived data storage has consumed a certain percentage of allocated disk space. When the percentage is reached, the message:

ARCHIVAL: APPROACHING CONFIGURED DISK SPACE ALLOTMENT

appears at the operator information events page to notify an operator. A *Store Data* option in the archival storage and retrieval function allows the operator to force data storage if this message appears. Refer to **OPERATOR INFORMATION EVENTS** in the **OIS Operational Information** section for details concerning the operator information events page.

The message *Fullness warning level/100* displays if the allocated hard disk space fills completely. At this time, the operator must take some action to prevent loss of archived data. The action can be to decrease the amount of data being archived, decrease the time span or increase the amount of hard disk space reserved for data storage. Decreasing the time span causes archiving to storage medium to occur at closer intervals reducing the amount of data stored on disk.

A temporary solution is to force data to be archived using the *Store Data* option. This removes the message temporarily but does not fix the problem.

If the message *ARCHIVAL: APPROACHING CONFIGURE DISK SPACE ALLOTMENT* appears on the operator information events page when the fullness level is set to 90 percent, the *Time Span*

should be decreased. If the *Time Span* is already at its minimum of four hours, the only other option is to decrease the amount of data to be archived (e.g. turn off some individual archive fields).

Step 1 The process engineer defines the operating parameters of archiving through one of the *Define Archiving* pages (see Figure 16-59). To call this display, first press **(GENL FCTNS MENU)**, then select the following menu items in the sequence shown

- B OIS Utilities
 - ↳ F Archival Storage/Retrieval
 - ↳ A Archival Configuration
 - ↳ C Miscellaneous Definitions

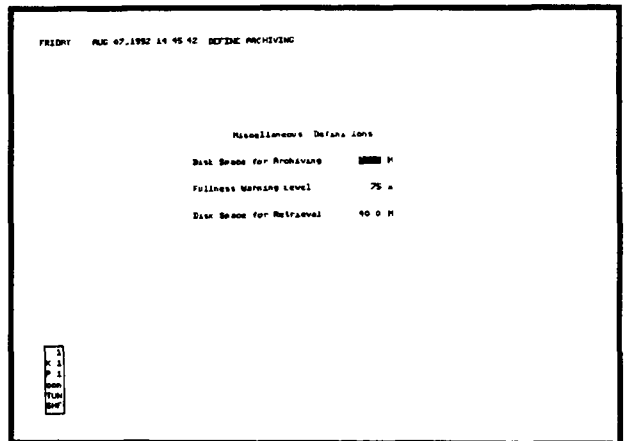


Figure 16-59 Archival Storage - Miscellaneous Definitions

Step 2 To define the operating parameters

a. Use the OIS configuration keys listed in Table 16-1 to move between and enter data into each display input field. At the *Disk Space for Archiving* field, enter the amount of space to use for data storage. This limits the maximum amount of disk space that archival storage uses. Valid entry is from 1 to 40.

The value to enter depends on the quantity of data to be archived, and the time span between each data type archive. The more data to be archived and the longer the time span, the larger this field should be. It should allow enough hard disk space for four archiving periods. After the fourth period, files for the oldest archiving data are replaced by the newest archived data. When

archiving to magnetic tape or optical disk, a starting value of five megabytes is suggested.

The amount of hard disk space used for tag data storage varies. The amount of space tag data occupies depends on the number of exception reports received for each tag, the configuration data of each tag, and the amount of time between archives to medium. For example, at a rate of ten exception reports every second collected over 24 hours with a tag type distribution of 50 percent analog, 30 percent digital and 20 percent station, 1,000 tags generate approximately 17 megabytes of data in one day.

b Enter a percentage of disk space in the *Fullness Warning Level* field. The entry in this field determines when the message

ARCHIVAL APPROACHING CONFIGURED DISK SPACE ALLOTMENT

appears at the operator information events page. The level is based on the amount of *Disk Space for Archiving* that archival storage has consumed.

c The *Disk Space for Retrieval* field limits the amount of disk space that archival retrieval uses. The value to assign at this field depends on how much data is to be retrieved, and other functions competing for disk space. A starting value of one megabyte is suggested. Refer to *ARCHIVING* in the *Recording Process Data* section for specifics on data retrieval. Valid entry is from 1 to 40.

d When complete, press **ENTER** to update the configuration on the hard disk.

e Press **ESC** to exit.

CONFIGURING EVENTS TO BE ARCHIVED

Events and operator actions related to tags defined in the database can be archived. The process engineer enables individual types of events for archiving during tag configuration. These event types include alarms, digital state changes and operator actions, each is enabled separately. Once tag configuration is set, system events log configuration then provides the master switch for enabling storage to hard disk for eventual archiving.

The same data that appears in a periodic printout of a system events log (or operator actions log) appears in an archive of events. Operator actions and system events are not separated in an archive as can be done when printing. Before any archiving of events can occur, first each tag event must be saved to disk, then archiving of those events saved must be turned on.

NOTE Changes made to these configuration pages also affect printing of events and operator actions logs.

- Step 1** Follow the procedures for editing tags; refer to *Entering or Editing Individual Tags* in this section. Each event type to be archived must be enabled to store to the hard disk. The tag configuration page provides three attributes for enabling this storage: *Alarm Save*, *State Change - Save* and *Optr Acts - Save*. These fields also enable saving data to hard disk for periodic printing of events and operator actions. Set the *Save* field for each event type to YES to enable storing that type of event; set the field to NO to disable storage. This must be done for all tags that are to have events or operator actions archived.
- Step 2** Follow the procedures for defining system events log operating parameters, refer to *Events Log Configuration* in this section. To set the attributes required for archiving.

a At the top of the event log configuration page are fields that enable saving to disk all tag events previously configured through Step 1. The console provides the option of enabling or disabling specific types of events. Each event type permitted through tag configuration does not store until its *Save* field is set to YES at this page. Set the *Save* field to NO for an event type to disable saving that event to disk, which also disables archiving. If this field is set to NO, events will not store to the hard disk even if they are enabled in the configuration of the tag.

b Set the *Archive Items Saved to Disk?* field to YES to enable archiving of all events previously saved to the hard disk. This turns on storage of events for later archiving. Set the field to NO to disable archiving.

These actions along with other configuration changes (explained earlier) enable archiving for events of selected tags.

CONFIGURING TREND DATA TO BE ARCHIVED

Each trend that is to be archived must be enabled individually. Follow the procedures for trend definition, refer to *Entering a Trend Definition* in this section. The trend definition page has a *Trend Usage* field. Set this field to ARCHIVED to enable archiving. This action along with other configuration changes (explained earlier) enables archiving of the selected trend data. This must be done for all trends that are to be archived.

NOTE Trend resolution defined in the trend database is the resolution used in archiving. Remote trends cannot be archived.

CONFIGURING CUSTOM LOGS TO BE ARCHIVED

Logs can be archived on a per log basis. To configure a custom log to archive, follow the procedures for custom log configuration; refer to *CUSTOM LOG CONFIGURATION* in this section. Set the *To be Archived?* field to YES to enable or NO to disable archiving for the log. This action along with other configuration changes

(explained earlier) enables archiving of the selected log. This must be done for all custom logs that are to be archived.

In order for the log to print and be archived, it must be made *ACTIVE*. This can be done at the log definition page during initial configuration, or later through log status operations. Logs archive only after completing their entire collection period.

CONFIGURING SEQUENCE OF EVENTS LOGS TO BE ARCHIVED

Each SOE log configured at the console must be enabled individually to archive. Follow the procedures for SOE report definition; refer to *SOE Report Definition* in this section. Set the *Archive* field to **YES** to enable or **NO** to disable archiving for the log. This action along with other configuration changes (explained earlier) enables archiving of the selected log. This must be done for all logs that are to be archived.

CONFIGURING PCU CONFIGURATIONS TO BE ARCHIVED

Besides turning PCU configuration archiving on through data type to volume definition, there is no other configuration to perform to enable archiving of configurations. Once turned on, saving a configuration through PCU management functions automatically stores the configuration in an archive data file. The configuration is then archived to medium when scheduled through volume to media definition, or after using the *Store Data* option.

CONFIGURING TAG DATA TO BE ARCHIVED

NOTES

1 This section discusses the *Historian Group Configuration* option of the tag historian only. This option defines the tag data that is to archive. Refer to **ARCHIVING** in the *Recording Process Data* section for information on the *Tag Historian Retrieval* and *Print/Delete RDF* options.

2 The tag historian does not support TEXTSTR tags.

The process engineer enables archiving of tag data through tag historian functions. For the console to collect and store tag data for archiving, a tag must be part of a tag historian group. Up to ten groups can be defined, each group containing up to 100 tags. The console records both exception reported and database configuration data for each tag defined in a historian group. Recording both allows data to be recalled regardless of database changes.

Tag historian functions also provide tag data retrieval and printing abilities. Retrieval is done by alarm group, historian group, specific tag names or wild card tag names.

b. Use the OIS configuration keys listed in Table 16-1 to move between and enter data into each display input field. Use one of the add options or the edit option from the menu to enter tags into the historian group list. These options are explained in the text that follows the steps

When tags are added, the *Tag Count* field increments to indicate the current number of tags in the list. An asterisk (*) appears next to the name of a tag in the historian group tag list if that tag has been either renamed or removed from the database

c After editing or entering all tags in a list, select option *D Edit Tag or Group Status Fields*. This places the input cursor at the *Group Status* field.

d If *INACTIVE*, enter *ACTIVE* to start data collection and storage for this group If already *ACTIVE* go to the next step

e Select *F Update Configuration* to save any changes, to update the configuration on hard disk, and to begin data collection If edits are made without saving, the console prompts with

Edits Were Made - Update Configuration!!

f If another group requires editing, select *E Go to Another Historian Group* Or press **(NEXT PAGE)** and **(PREV PAGE)** to sequence to the next or previous group respectively Repeat Steps 2a through 2e

g Press **(ESC)** to exit this configuration

Use the add options to add a new list of tags, or to append to an existing list of tags Adding tags by specifying a range, wild card name or alarm group does not duplicate tags that already appear in a historian group.

If more than 100 tags are specified, the tag list is updated, but the console does not add any tags over the 100 limit It displays a warning at the bottom of the screen to identify this, and control returns to the bottom line menu

The process engineer can perform any of the configuration options after calling a specific group from the *Enter Historian Group Number* field This input field appears when the function is first called, or after selecting *E Go to Another Historian Group* The definition of the current group must be saved (i.e., option *F*) before using the *Go to Another Historian Group* option The console prompts with

Edits Were Made - Update Configuration

if the current group is not saved first This message appears when attempting to exit the configuration without saving If no changes have been made to the group, the configuration can be exited or option *E* can be selected without first saving

Add Range of Tags

Use the *A Add Range of Tags* option to specify a consecutive range of tags or a single tag to add. Select the option, the system prompts with *Tag Index ___ To ___*. To enter a range, specify the first tag in the range at the first input field. Then move to the second input field and enter the last tag in the range. To enter a single tag, enter the same tag index number in both fields.

Press **ENTER** to add the specified tags to the historian group and to update the screen. Press **ESC** before pressing **ENTER** to cancel all inputs and return control to the options menu.

Add Tags By Wild Card

The asterisk (*) and question mark (?) are reserved for wild card use. The asterisk represents multiple characters, the question mark a single character. For example, ABC*XYZ retrieves any tag beginning with ABC and ending with XYZ with any number of characters in between. ABC?XYZ retrieves any tag beginning with ABC and ending with XYZ and only one character in between. Any combination of * and ? can be used. The system supports multiple occurrences of ?. Multiple occurrences of * are treated as ? after the first *.

Use the *B Add Tags By Wildcard* option to enter tags by specifying a search pattern and range. Select the option, the system prompts with *Wildcard Pattern ___, Tag Index ___ To ___*. Enter a wild card pattern the console is to use when searching for tag names, then enter a tag range. The tag range is optional. The console defaults to the entire tag database range.

Press **ENTER** to start the search and to add tags within the range that match the wild card pattern into the tag historian group. Press **ESC** before pressing **ENTER** to cancel all inputs and return control to the options menu.

Add Tags by Alarm Group

Use the *C Add Tags By Alarm Group* option to enter tags by specifying an alarm group range and tag range. Select the option; the system prompts with *Alarm Group ___ to ___, Tag Index ___ To ___*. The entire tag range is from 1 to S (i.e., 1 to 99 and S). To enter an alarm group range, specify the starting alarm group of the range in the first input field. Then move to the second input field and enter the last alarm group of the range. To enter a single alarm group, enter the same alarm group number in both fields. The tag range is optional. The console defaults to the entire tag database range.

Press **ENTER** to add tags within the alarm group range that are within the tag range into the historian group. Press **ESC** before pressing **ENTER** to cancel all inputs and return control to the options menu.

Edit Tag or Group

Use the *D Edit Tag or Group Status Fields* option to view the entire list of tags in the group to modify the list. Also use the option to activate or deactivate the group. Select the option, the console initially positions the input cursor at the *Group Status* field. Use

the OIS configuration keys listed in Table 16-1 to move between and enter data into each display input field. The *Tag Count* field increments or decrements to show the current number of tags in the list as tags are added or deleted. There are three pages associated with each group. Press **[ESC]** at any time to cancel all inputs and to return control to the options menu.

To view the entire list of tags in the group

- a. Select *D Edit Tag or Group Status Fields*
- b. Press **[NEXT PAGE]** or **[PREV PAGE]**. The *Page* field indicates the current page.

Enter **ACTIVE** at the *Group Status* field to activate the current group and enable data collection.

Enter **INACTIVE** at the *Group Status* field to deactivate the current group and disable data collection.

To delete a tag

- a. Move to a specific tag name in the list to delete that tag.
- b. Press **[CLEAR]** to delete the tag name.
- c. Select *F Update Configuration* to update the configuration on the hard disk.

To add or change a tag

- a. Move to an available location in the list to add a tag. Move to a specific tag name in the list to change the name.
- b. Enter the tag name or index number of the tag to add. Type a new tag name or index number to change the current tag to another.
- c. Select *F Update Configuration* to update the configuration on the hard disk.

If the entered tag name or index number is invalid, the console presents an error prompt and positions the input cursor at the tag in error.

Peripheral Configuration

The OIS console uses several peripheral devices to support data storage and recording, and process monitoring and control. These include keyboards, annunciator display panels, CRTs, printers and data storage devices. Besides enabling and defining the number of peripherals the console uses, peripheral configuration requirements are few. The number of each type of device being used is accounted for during OIS system configuration. Refer to

the *Operator Interface Station, Hardware Manual* for peripheral connections

Peripheral configuration includes

- Defining DEVSTAT tags
- Console and logical CRT definitions
- Printer configuration.

NOTE The *Peripheral Failover* option does not function for this console.

DEFINING DEVSTAT TAGS

The console has the ability to monitor the status of its own peripherals and indicate problems through operator action request messages and the diagnostic log. The console automatically generates an operator action request message if a keyboard or printer failure occurs.

A DEVSTAT tag identifies the type of printer being used for log printing. The number of printers the console can access is set during OIS system configuration. The type of printer is set in a DEVSTAT tag. Refer to *Entering or Editing Individual Tags* in this section for procedures to define a DEVSTAT tag.

CONSOLE AND LOGICAL CRT DEFINITION

Currently, only password security requires logical CRT definition. The console uses console definition and logical CRT definition to define its windows as logical CRTs. Once these configurations are set, the console can enable or disable access to windows being sent to an auxiliary terminal or other main consoles through security level configuration; refer to *Password Security Configuration* in this section.

The *Console Definition* and *Logical CRT Definition* options used together create a single security strategy for window access that can be used on multiple consoles if desired. The security requirements of the process dictate how the configurations should be set up to work together.

For a single console generating four windows, for example, the console requires only one console definition to identify itself and four logical CRT assignments to identify each of its windows. A system having four consoles each generating four windows, for example, would require four console definitions and also a logical CRT assignment for each window of each console. The advantage to using this method rather than treating each console as an individual is that all four consoles can use the same configuration since the hardware address in a console definition identifies the console.

Console Definition

Console definition identifies the hardware address location of a console on the communication highway. The address definition is used strictly at the console level for password security to distinguish between consoles. This address is the loop and node address of a console. Console definition allows up to eight definitions. Once defined, the *Console #* can be used in logical CRT definition. Only one console definition is required by the console, however, all eight can be defined to allow flexibility in creating a security strategy common to several consoles.

NOTE Console definition must be done before logical CRT definition. It defines a console number required in logical CRT definition.

Step 1 The process engineer defines consoles through the *Console Definition* page (see Figure 16-61). To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown:

A OIS Configuration → E System → J Console Definition

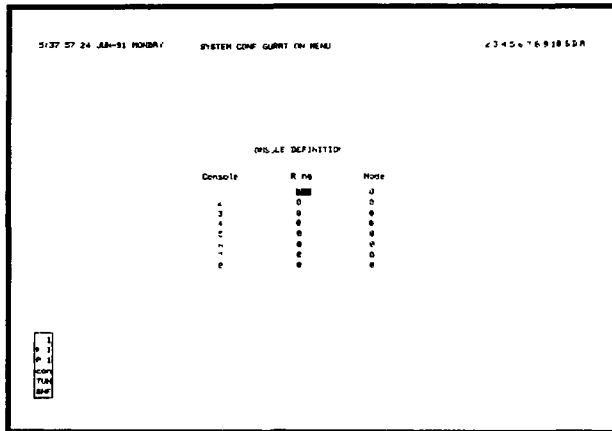


Figure 16-61. Peripherals - Console Definition

TPS0152A

Step 2 To create a console definition

a Use the OIS configuration keys listed in Table 16.1 to move between and enter data into each display input field. At the *Ring* field enter a communication highway address. Valid entry is from 1 to 250 for INFI-NET system, or 0 and 1 for Plant Loop system. Set the field to 0 to have the console use its own loop address automatically.

- b. Enter the node address for the console at the *Node* field. Valid entry is from 1 to 250 for INFI-NET system, or 0 to 63 for Plant Loop system. Set the field to 0 to have the console use its own node address automatically.
- c. Repeat Steps 2a and 2b for each console that is to be defined. Press **ENTER** to save the configuration to hard disk.
- d. Press **ESC** to exit this configuration page.

Logical CRT Definition

Logical CRT definition creates up to 16 logical CRT assignments. The configuration identifies the windows generated by a console as logical CRTs. A console number and a window number define a logical CRT. Console definition procedures assign a number to a console, which is required and used in this configuration.

- Step 1** The process engineer defines logical CRTs through the *Logical CRT Definition* page (see Figure 16-62). To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown.

A OIS Configuration → *E System* → *I Logical CRT Definition*

NOTE The console supports four windows, therefore a minimum of four logical CRTs should be defined.

- Step 2** To create a logical CRT definition:

- a. Use the OIS configuration keys listed in Table 16.1 to move between and enter data into each display input field. At the *Console* field, enter the console number for which the logical CRT assignment is being made. Valid entry is from 1 to 8. This is the console number defined previously through console definition.
- b. Enter a number of a window at the *Physical CRT* field. This defines which of the windows the *Logical CRT #* is to identify. Valid entry is from 1 to 4 for this console (i.e., 1 for window one, 2 for window two, etc.).
- c. Repeat Steps 2a and 2b for each logical CRT to define. Press **ENTER** to save the configuration to hard disk.
- d. Press **ESC** to exit this configuration page.

PRINTERS

A single console can access four physical printers for logging. The number of physical printers is defined during OIS system configuration. The printer types for log printing are:

- ANSI low speed, no color

15 37429 24 JUN-93 MONDAY		SYSTEM CONFIGURATION MENU		12456789106DA	
LOGICAL OPT DEFINITION					
LOGICAL CRT #	PRINTER	PRINTER	PRINTER	PRINTER	PRINTER
1	ANSI	ANSI	ANSI	ANSI	ANSI
2	ANSI	ANSI	ANSI	ANSI	ANSI
3	ANSI	ANSI	ANSI	ANSI	ANSI
4	ANSI	ANSI	ANSI	ANSI	ANSI
5	ANSI	ANSI	ANSI	ANSI	ANSI
6	ANSI	ANSI	ANSI	ANSI	ANSI
7	ANSI	ANSI	ANSI	ANSI	ANSI
8	ANSI	ANSI	ANSI	ANSI	ANSI
9	ANSI	ANSI	ANSI	ANSI	ANSI
10	ANSI	ANSI	ANSI	ANSI	ANSI
11	ANSI	ANSI	ANSI	ANSI	ANSI
12	ANSI	ANSI	ANSI	ANSI	ANSI
13	ANSI	ANSI	ANSI	ANSI	ANSI
14	ANSI	ANSI	ANSI	ANSI	ANSI
15	ANSI	ANSI	ANSI	ANSI	ANSI
16	ANSI	ANSI	ANSI	ANSI	ANSI

Figure 16-62 Peripherals - Logical CRT Definition

- ANSI low speed, color
- ANSI high speed, no color.
- IBM, no color.
- IBM, color

These types of printers are only used for logging Refer to **COPY SCREEN** in the **Window Operations** section for information on printers used for printing copies of screens

A DEVSTAT tag defines the type of printer The console defaults to ANSI low speed, no color if a DEVSTAT tag is not defined

In addition to defining DEVSTAT tags, printer configuration consists of printer assignment (i.e., logical printers) and printer color map configuration

Printer Assignments

The process engineer directs a log printout to a specific physical printer by specifying a logical printer number Logical printer assignment associates a logical printer number to a physical printer Up to 16 logical printer assignments can be made The console also uses logical printers to determine if the printer is either a shared or private type.

- Step 1** The process engineer defines logical printers through the **Printer Assignments** page (see Figure 16 63) To call this display, first

press **GENL FCTNS MENU**, then select the following menu items in the sequence shown

A OIS Configuration → E System → C Printer Assignment

10126 47 27-000 0 PRIORITY		PRINTER ASSIGNMENTS			
LOG CO Printer Number	Physical Printer Number	PHYS CO Printer	Shared/ Private Assignment	Physical Printer Assignment	
1	1	1	PR VATE	LT02	
2	1	2	PR VATE	HL00	
3	1	3	PR VATE	HL00	
4	1	4	PR VATE	HL00	
5	1				
6	1				
7	1				
8	1				
9					
10					
11	1				
12	1				
13	1				
14	1				
15	1				
16	1				

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16

TPS0223A

Figure 16-63 Peripherals - Printer Assignments

Step 2 To make printer assignments

a Use the OIS configuration keys (refer to Table 16-1) to move between and enter data into each display input field At the *Physical Printer Number* field for each logical printer, enter the number of a physical printer Valid entry is from 1 to 4 Whenever a printout is directed to a logical printer, it will occur at the physical printer defined here Continue with the next step after completing all required logical printer assignments

b Move to the *Shared/Private Assignment* field Each of the available printers can be designated as either a shared or a private printer type This determines whether the printer is dedicated to a console, or available to other consoles or auxiliary terminals on the network Enter either PRIVATE or SHARED for each physical printer

The console requires a private printer to print events and operator actions that are configured to print as they occur This type of log prints line-by-line As a result, the methods used by the console to allocate and deallocate a printer for this type of log makes it impractical to use a shared printer If desired, a private printer can also be used to print page-oriented logs, such as custom logs or SOE logs

c Press **[ENTER]** to update the configuration on the hard disk. The assignments go into effect immediately after pressing **[ENTER]**. All new output is then routed to physical printers as defined here. Anything queued to a physical printer before an update of this configuration remains queued to that printer.

The *Physical Printer Assignment* field shows the port to which each physical printer is attached. This is for reference only; changing port assignments requires running an off-line utility (i.e., **DEFINE_DEVICES**). Refer to the *Operator Interface Station, Hardware Manual* for procedures.

The designation in the *Shared/Private Assignment* field can be changed as needed between shared and private. Only one console can designate a printer as private. All other consoles must have the printer deleted from their printer assignment list. For the console designating the printer as private, no further restrictions apply. Once the designation is changed, anything can be sent to the private printer.

When changing from private to shared, if the events log or operator actions log is being sent to the printer being redesignated, the printer assignments for those logs must be changed first. Refer to **SYSTEM EVENTS LOG CONFIGURATION** in this section for procedures. Once completed, the printer type can be changed, then page-oriented type of logs can be assigned to that printer.

Printer Color Maps

The printer color maps function sets the colors used for printing text files. Text files are generated by functions such as logging.

NOTE The *Screen Copy Map* opt on does not function for this console.

The printer color maps configuration is required since OIS printers are not capable of reproducing all of the colors the console is capable of presenting. The console uses these settings to determine which colors to substitute for its 64 possible colors when printing. The available printer colors are:

- Black
- Red-orange
- Green
- Yellow
- Violet
- Magenta
- Cyan

Step 1 The process engineer sets printer colors for text prints through the *Printer Color Maps* page (see Figure 16-64). To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown

A OIS Configuration → *E System* → *H Printer Color Maps*

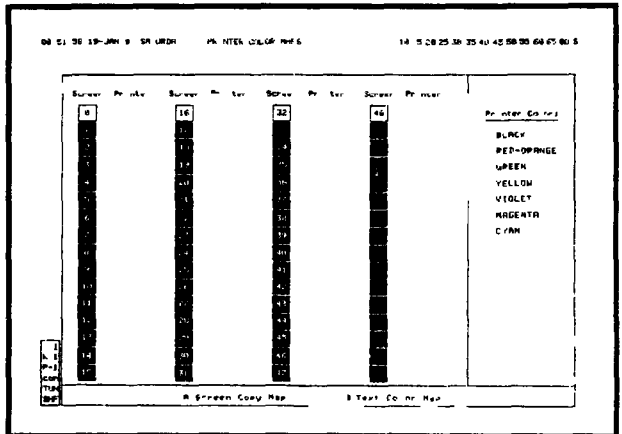


Figure 16-64. Peripherals Printer Color Maps

TPS0155A

Step 2 During log configuration, colors can be specified for the final printout of a log. Color sequence codes (e.g., %K0) set the printer to a specific color. Any text following the code prints in this color.

Part of the code is a number that identifies a color. The number can range from 0 to 63, which also corresponds to the 64 available screen colors. The text color mapping function maps the sequence codes for colors to any of the available printer colors. The console provides a default map. This default map sets the sequence code colors at

- %K0 - black
- %K2 - red-orange
- %K3 - green
- %K5 cyan
- %K6 magenta
- %K7 - yellow
- %K12 - violet

These are the standard color sequence codes. Any number from zero to 63 can be used in a sequence code as long as it has one of the available printer colors defined for its corresponding color index number.

Each color code that is to be used in a log requires a defined printer color. The console references this mapping when a log prints. For example, to have a log entry print in red, the log must have a sequence code that selects a color index set to *RED-ORANGE*. If using the default settings, color index number two is set to red, therefore, the log sequence code should be %K2 to set left printer color red.

To change the default mapping, or to define additional color sequence codes:

1. Select *B Text Color Map*. Figure 16-65 shows the next page that appears after making this selection.

14 10:20 26-JUN-91 WEDNESDAY PRINTED COLOR MAPS 124547991083

TEXT COLOR MAP

Screen	Printer	Screen	Printer	Screen	Printer	Screen	Printer	Printer Colors
0	BLACK	4	BLACK	32	BLACK	48	BLACK	BLACK
1	BLACK	5	BLACK	33	BLACK	49	BLACK	BLACK
2	RED-ORANGE	6	RED-ORANGE	34	RED-ORANGE	50	RED-ORANGE	RED-ORANGE
3	GREEN	7	GREEN	35	GREEN	51	GREEN	GREEN
4	BLACK	8	BLACK	36	BLACK	52	BLACK	YELLOW
5	CYAN	9	CYAN	37	CYAN	53	CYAN	VIOLET
6	MAGENTA	10	MAGENTA	38	MAGENTA	54	MAGENTA	MAGENTA
7	YELLOW	11	YELLOW	39	YELLOW	55	YELLOW	CYAN
8	BLACK	12	BLACK	40	BLACK	56	BLACK	
9	BLACK	13	BLACK	41	BLACK	57	BLACK	
10	BLACK	14	BLACK	42	BLACK	58	BLACK	
11	BLACK	15	BLACK	43	BLACK	59	BLACK	
12	VIOLET	16	VIOLET	44	VIOLET	60	VIOLET	
13	BLACK	17	BLACK	45	BLACK	61	BLACK	
14	BLACK	18	BLACK	46	BLACK	62	BLACK	
15	BLACK	19	BLACK	47	BLACK	63	CYAN	

Screen Color █

TPS0157A

Figure 16-65 Printer Color Maps Text Color Map

2. Key in the index number of a screen color to change at the *Screen Color* prompt, then press **ENTER**. This positions the input cursor at that color index. The number in the *Screen* column is the same as the code number.

Optionally, the *Screen Color* prompt can be left at its default 0. The configuration keys can then be used to move to a specific color index.

- 3 Enter a color that this color index is to print as when a log containing a corresponding sequence code prints. The console displays the available colors under the *Printer Colors* heading.
- 4 Press **[ENTER]** or move the input cursor to enter the change. If additional colors are to be mapped, press **[ESC]** to call the *Screen Color* prompt and return to Step 2. Or, use the configuration keys to move to a specific color index and repeat Step 3.
- 5 Press **[ENTER]** to update the configuration on the hard disk. Once **[ENTER]** is pressed, any changes made are written to the hard disk and put into immediate effect for all current and subsequent printings. If a color printer is in the middle of a print, any changes made cause the printer to change to the new color in the middle of that printing.
- 6 Press **[ESC]** to exit.

Display Configuration

Some displays available at the console require further configuration beyond the requirements stated in *Display Generation* in this section. These include operator configurable displays, XY plots and alarm summaries. This part of the section explains the additional configuration requirements. It also gives the procedures to set up automatic displays and pop up elements.

The console provides the default symbols used to create operator configurable displays. To incorporate user-created symbols instead of using these default symbols, the process engineer must perform operator displays' faceplates configuration.

XY plot definition must be performed to define the data source and operating parameters for XY plot displays. Each plot definition has an associated plot index number. An XY plot escape command uses this plot index number as one of its parameters.

Each alarm summary element references a line format parameter. This parameter determines how an alarm entry will appear at a given alarm summary page or an element of a display. Up to 106 line formats can be created. Of these 106, the console provides five standard line formats. The standard formats can be used in an alarm summary by specifying line format numbers 0 through 4 in the alarm summary escape command (as 82 or as 83). The process engineer can tailor the line format of a summary by defining any of the remaining five formats, then specifying that format in the alarm summary escape. Refer to *ALARM SUMMARY CONFIGURATION* in this section for procedures to configure additional line formats.

OPERATOR CONFIGURABLE DISPLAYS FACEPLATE CONFIGURATION

NOTES

- 1 This configuration procedure is required only if changes to the default configuration of the operator configurable displays function are required
- 2 Become thoroughly familiar with the operator configurable displays function **before** attempting any operator displays faceplate configuration

The operator displays' faceplate configuration defines the operating parameters for the operator configurable displays function. The console provides a default configuration that can be used without making any modifications. This default configuration uses standard, provided faceplate symbols (i.e., device mimics). A user created faceplate symbol can be substituted for a standard symbol by using this configuration function. The default configuration can also be modified.

The console references the parameters set here when at the operator configurable displays setup page, and also to construct a final saved display file. This functions

- 1 Defines the user-created faceplate symbols and trend symbols used in operator configurable displays
- 2 Edits default colors to be used in operator configurable trend displays.
- 3 Configures the display format used during creation of an operator configurable display (e.g., defines title position, box separation, element height, etc.)
- 4 Determines the line format used in an alarm summary element of an operator configurable display
- 5 Defines the number of horizontal and vertical boxes a certain type of display element consumes when setting up a display. This depends on the type and size of the faceplate mimic.

This configuration encompasses five separate pages. Each page is for a specific configuration option. A *DEFAULT* column lists the defaults for operator configurable displays. Access at these pages is limited to the *CONFIGURED* column. This is where any changes are made to the default parameters. The default parameters always appear for reference to easily recover from undesired changes. Press **[NEXT PAGE]** and **[PREV PAGE]** to sequence through each page of this function.

Page 1 and 2

Page one defines the symbol file that is to be used for each type of element that can be part of an operator configurable display. The symbol file defines the appearance and interaction that can

be performed through a specific device mimic. The element types include:

Analog Annunciator.

Analog box - full and half size

Boolean box (digital) - full and half size

Device Driver.

Digital Annunciator

DCS (digital control station) - full and half size

MSDD (multi-state device driver)

Remote Control Memory.

RMSC (remote manual set constant).

RMCB (remote motor control block)

Text Selector Block

D.A Analog - full and half size

D.A Digital.

Text String

The default identified for each of these element types is the standard symbol provided with the console. The name is of the assembled symbol file without the *.DL* extension. This page allows entering a file name of a user-created symbol to use in place of the default symbol. The entered name must be an assembled symbol file on the hard disk.

Page two performs the same function as page one but can be used to substitute user-created trend display elements for default symbols. It also sets or changes the default colors that identify each of the five possible trends that can appear in a trend element. A list of available colors and their index numbers are provided at this display.

Page 3

Page three specifies the horizontal (x-coordinate) and vertical (y coordinate) positions the console uses when constructing the operator configurable displays setup page and the final saved display file. The console also references the position fields when constructing touch points and highlights. The page three attributes affect

- Position of the operator configurable display title (name associated with the display).
- Starting position the console uses to begin drawing the display.
- Separation space between each box that appears on the display.
- Number of boxes that appear horizontally.


OIS CONFIGURATION

- Number of boxes that appear vertically.
- Height and width of a box that is not configured
- Height and width of a full and half size trend box
- Line format to use for an alarm summary element

Screen space available as user space is 400 to 9 600 horizontal (x-coordinate) and 400 to 7,200 vertical (y-coordinate) The title line is positioned by default at the center and top of the screen above the user space

Page 4 and 5 Page four and page five define the number of horizontal and vertical unconfigured boxes an element occupies. This must be consistent with the number of horizontal and vertical boxes, and the height and width of specific types of boxes defined on page three The actual size of the faceplate symbol determines the number of horizontal and vertical boxes to allocate When performing configuration, page three, page four and page five are dependent on each other

The process engineer defines operator configurable displays' faceplates through the *OCD Default Parameters* pages Figure 16-66 is the first page of the function To call this page, first press [GENL FCTNS MENU], then select the following menu items in the sequence shown



Press [NEXT PAGE] and [PREV PAGE] to sequence through each page of this function

Defining Faceplates

Page one and page two define the symbol files to use as the faceplate symbols related to certain types of tags, and the symbols to use in trend elements Page two also defines colors used in trend elements Figure 16-66 shows *Page 1 of 5* and Figure 16-67 shows *Page 2 of 5*

At *Page 1 of 5* and *Page 2 of 5*, enter the name of a symbol that is to appear for a certain type of element in the *CONFIGURED* column for that element. Use the OIS configuration keys (refer to Table 16-1) to move between and enter data into each display field. The symbol name entered must correspond to an assembled symbol file (.DL) that resides on the hard disk (i.e., [DATA USN44] through [DATA USN4E] directories) If the symbol file does not exist, the following error message appears

Display Not Found in Given Directory ·ERR 68

SLDRV NOV 18, 1992 08 26:30 OCD DEFAULT PARAMETERS

ELEMENT TYPE	DEFAULT	CONFIGURED
Phonics Pronunciator	PHNPL1	PHNPL1
Phonics box FULL	PHNPL1	PHNPL1
Phonics box HALF	PHNPL1	PHNPL1
Spelling box FULL	SDLPW1	SDLPW1
Spelling box HALF	SDLPW1	SDLPW1
Speller Driver	SDLPW1	SDLPW1
Spells Pronunciator	SPHDL1	SPHDL1
SDS - FULL	SDSP11	SDSP11
SDS - HALF	SDSP11	SDSP11
MSD	MSDVR1	MSDVR1
Mouse Control Menu	MCU	MCU
MSIC	MSIC1	MSIC1
MSIC	MSIC1	MSIC1
Text Selector Block	TEXTBL	TEXTBL
D R Phonics - FULL	SDSP11	SDSP11
D R Phonics - HALF	SDSP11	SDSP11
D R Spelling - FULL	SDSP11	SDSP11
D R Spelling - HALF	SDSP11	SDSP11
Text String	TEXTSTR1	TEXTSTR1

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20

PAGE 1 OF 5

TP50017B

Figure 16-66 OCD Default Parameters - Page 1 of 5

SLDRV NOV 18, 1992 08 27:16 OCD DEFAULT PARAMETERS

ELEMENT TYPE	DEFAULT	CONFIGURED	NO	COLORS
Trend CD - FULL	TREDCDF	TREDCDF	1	YELLOW
Trend CD - HALF	TREDCDF	TREDCDF	2	RED
Trend Digital - FULL	TREDCDF	TREDCDF	3	GREEN
Trend Digital - HALF	TREDCDF	TREDCDF	4	CYAN
Trend PV - FULL	TREDCDF	TREDCDF	5	ORANGE
Trend PV - HALF	TREDCDF	TREDCDF		
Trend Ratio Index - FULL	TREDCDF	TREDCDF	1	WHITE
Trend Ratio Index - HALF	TREDCDF	TREDCDF	2	RED
Trend Set Point - FULL	TREDCDF	TREDCDF	3	GREEN
Trend Set Point - HALF	TREDCDF	TREDCDF	4	BLUE
			5	CYAN
			6	MAGENTA
			7	YELLOW
			8	ORANGE
			9	YELLOW GREEN
			10	GREEN CYAN
			11	CYAN BLUE
			12	BLUE MAGENTA
			13	MAGENTA RED
			14	ORANGE CYAN
			15	LIGHT ORANGE

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20

PAGE 2 OF 5

TP50018B

Figure 16-67 OCD Default Parameters - Page 2 of 5

Enter a valid symbol name Press [HOME] to restore the previous file name entry Anytime a tag that uses the element type is configured in an operator configurable display, the symbol file that matches the entered name will be used

On Page 2 of 5 the current color choices for trend elements appear in the upper right box. The colors listed in the *COLORS* column are for each of the five possible trends that can appear at a trend element. The numbers in the *NO* column correspond to trends one through five.

To define trend colors:

- 1 Move to the *COLORS* column for the trend to define.
- 2 Enter the index number or name of a color. The list of colors in the bottom right box of the display are the color choices. The names appear in their actual colors.
- 3 Press **ENTER** to save the changes.

Defining Operating Parameters

Page three defines the various screen parameters for both the saved operator configurable display, and the operator configurable displays setup page. Figure 16-68 shows Page 3 of 5. Page four and page five determine the number of unconfigured boxes a single element type consumes. The height and width specified in the source file of a symbol determines the actual height and width of a faceplate symbol that appears in an operator configurable display.

When creating symbol files to be used in operator configurable displays, a standard height and width should be used for all

MONITOR NOV 26, 1982 08:27:07 OCD DEFAULT PARAMETERS

DESCRIPTION TITLE	DEFAULT	CONFIG
Horizontal title position	3000	7280
Vertical title position	7360	7360
Horizontal position of lower left box	456	456
Vertical position of lower left box	456	456
Horizontal separation of element boxes	56	56
Vertical separation of element boxes	56	56
Number of horizontal boxes	1	4
Number of vertical boxes	1	8
Width of unconfigured element box	2180	2180
Height of unconfigured element box	747	747
Width of trend box	2180	2180
Height of half size trend box	600	600
Height of full size trend box	1200	1200
Alarm format record number	0	106

3
PAGE 3 OF 5

3
4
5
6
7
8
9
0

TPS0019B

Figure 16-68 OCD Default Parameters Page 3 of 5

faceplates. A standard size is important since this configuration affects all faceplate symbols defined at the setup page of operator configurable displays, and assumes the same size has been used for all symbols

NOTE Configuration of Page 4 of 5 and Page 5 of 5 is dependent on configuration on Page 3 of 5

Step 1 The height and width limits set during Page 3 of 5 configuration determine the size that an unconfigured box appears as at the operator configurable displays setup page. The console references the height and width when constructing the touch points and highlights for a faceplate symbol. This configuration also affects the title position, the starting position and the box separation for both the setup page and a saved display file

To define the display fields at Page 3 of 5

a Use the OIS configuration keys (refer to Table 16-1) to move between and enter data into each display field. At the *title position* fields, enter the horizontal (i.e., x-coordinate) and vertical (i.e., y-coordinate) position at which the title of the display is to appear. Valid entry for the horizontal position is 400 through 9600; valid entry for the vertical position is 400 through 7350.

b At the position of lower left box fields, enter the horizontal and vertical position at which the console is to start drawing the operator configurable displays. Valid entry for horizontal position is 400 through 9600, valid entry for vertical position is 400 through 7200

c. At the separation of element boxes fields, enter the horizontal and vertical spacing. This defines the number of display units separating each faceplate box. The console requires at least 40 display units separating each element for proper touch point (i.e., mouse) selection. Valid entry is from 1 to 2000

NOTE When defining the next parameters the source files of the faceplate symbols should be referenced

d Enter the number of boxes that are to display horizontally at the *Number of horizontal boxes* field, and the number that are to display vertically at the *Number of vertical boxes* field. There can be no more than 32 boxes total on a single page. Valid entry for these two fields is 1 to 32.

For example, if the horizontal number of boxes is 16, then the vertical can be no more than 2. These entered values are dependent on the actual height and width of each faceplate symbol

The number of unconfigured boxes each faceplate symbol consumes is set at page four and page five. When setting these attributes, the height and width of a box and separation between each box must be considered

e Enter in display units a width for an unconfigured box at the *Width of unconfigured element box* field, and a height at the *Height of unconfigured element box* field. This sets the size of an unconfigured faceplate box. The width of a box should correspond to the width or x-offset set in the source files of the faceplate symbols; the height should correspond to the height or y-offset. Entries must be no more than the available user space, or 1 through 9200 horizontal and 1 through 6800 vertical spaces.

f This software release does not support variable trend box sizes. The *Width of trend box*, *Height of half size trend box* and *Height of full size trend box* fields cannot be changed from default. Go to the next step.

g Enter the number of a line format at the *Alarm format record size* field. This determines the format an alarm summary element uses for each line entry in the summary. There are 106 possible formats: 0 through 4 are fixed and 5 through 105 are user-configurable. Refer to **ALARM SUMMARY CONFIGURATION** in this section for an explanation, and also for procedures to define a line format.

h After completing all required fields, press **(ENTER)**. This updates the OIS configuration on the hard disk.

i Press **(ESC)** to exit this configuration procedure or **(NEXT PAGE)** to call *Page 4 of 5*.

Step 2 Page four and page five define the number of unconfigured boxes a certain type of display element consumes. For example, default faceplate symbols consume one horizontal and up to four vertical boxes depending on the chosen size. Alarm summaries use four horizontal and up to eight vertical boxes depending on the chosen size. Figure 16-69 and Figure 16-70 show *Page 4 of 5* and *Page 5 of 5* respectively. The actual size defined in the assembled symbol file and the parameters defined on *Page 3 of 5* should be referenced when defining the number of boxes an element consumes.

To define *Page 4 of 5* and *Page 5 of 5*.

a Use the OIS configuration keys (refer to Table 16-1) to move between and enter data into each display field. Press **(NEXT PAGE)** and **(PREV PAGE)** to move between *Page 4 of 5* and *Page 5 of 5*.

b Enter the number of horizontal and vertical unconfigured boxes an element should consume at the *HORIZON* and *VERTICAL* fields for that element.

c After making all changes press **(ENTER)**. Press **(ESC)** to exit this configuration.

NOV 16 1992 08:01:02 OCD DEFAULT PARAMETERS

ELEMENT TYPE	DEFAULT		CONFIGURED	
	HORIZON	VERTICAL	HORIZON	VERTICAL
Module Annunciator	1	2	1	2
Module Box Full size	1	2	1	2
Module Box half size	1	1	1	1
Module Box full size	1	2	1	2
Module Box half size	1	1	1	1
Display Annunciator	1	2	1	2
Display Control Station Full	1	4	1	4
Display Control Station Half	1	2	1	2
Multi State Device Driver	1	2	1	2
Message Control Block	1	2	1	2
Message Manual Set Constant Block	1	2	1	2
1/4 - 1/2 screen Trend box	2	2	2	2
1/4 - 1 screen Trend box	4	2	4	2
1/2 - 1/2 screen Trend box	2	4	2	4
1/2 - 1 screen Trend box	4	4	4	4
Full Screen Trend Box	4	8	4	8
Alarm Summary 1/8 screen	4	2	4	2
Alarm Summary 1/4 screen	4	4	4	4
Alarm Summary 1/2 screen	4	8	4	8
Alarm Summary Full screen	4	8	4	8

1
2
3
4
5
6
7
8
9
0
PAGE 4 OF 5

TPS0020B

Figure 16-69. OCD Default Parameters - Page 4 of 5

NOV 16 1992 08:01:33 OCD DEFAULT PARAMETERS 1 234 98 5 A

ELEMENT TYPE	DEFAULT		CONFIGURED	
	HORIZON	VERTICAL	HORIZON	VERTICAL
Message Manual Constant Block	1	2	1	2
Device Driver Tag	1	2	1	2
Text Selector Block	1	1	1	1
Data Mutation Module Full size	1	4	1	4
Data Mutation Module half size	1	2	1	2
Data Mutation Display Full size	1	2	1	2
Text Source Block	4	1	4	1

1
2
3
4
5
6
7
8
9
0
PAGE 5 OF 5

TPS0057B

Figure 16-70. OCD Default Parameters Page 5 of 5

XY PLOT CONFIGURATION

The XY plot function allows representing sets of process values in a two-dimensional graph. The console provides a standard XY

OIS CONFIGURATION

plot display that can be modified to use plots defined through XY plot definition. The data shown on the XY plot display consists of coordinate pairs whose x-axis value represents one process variable and whose y-axis value represents a different process variable. Each axis is bounded by the low and high limits of the x-axis and y axis tag. Process variables can be distributed trend values or exception reported tag values.

NOTE: XY plots do not currently support enhanced trends.

The console has a limit to the total number of XY plot samples it can process. This limit is based on the total number of samples for all of its currently active plots. Any combination of plots can be active; however, the total samples for all plots cannot exceed 4,800 samples (maximum 1,440 samples per window). Table 16-32 shows some combinations that can be used and still stay within the 4,800 sample limit. If all of the plots are 480 sample plots, then the maximum number of active plots is ten. The table shows how many XY plot elements of each size could typically be at the screen and the number of samples that each can display. The process engineer also can combine these elements in other ways.

Table 16-32 Active Plot Sample Constraints

Element Size	Elements per Window	Plots per Element	Samples per Plot	Number of Windows	Total per Window ¹	Total Samples ²
100% x 100%	1	5	120	4	600	2400
100% x 100%	1	3	480	3	1 440	4 320
100% x 50%	2	5	120	4	1 200	4 800
50% x 50%	4	5	60	4	1 200	4 800

NOTES

1. Maximum 1 440
2. Maximum 4 800

The number of plots per element is set as one of the XY plot escape command parameters (et 154) during display creation. XY plot configuration requires making individual XY plot definitions, and entering the plot index number of the definition into the source file of an XY plot display.

XY Plot Definition

The console identifies a plot by its index number. Up to 80 plots can be defined. Each plot definition specifies the operating parameters related to a single plot. During display creation, the index number is used as one of the parameters in XY plot escape commands. The plot definition

- Enables and disables data collection

- Defines a data source.
- Sets plot operating parameters

Step 1 The process engineer defines a plot through the *XY Plot Definition* page (see Figure 16-71). To call this page, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown.

A OIS Configuration → A Database → H XY Plot

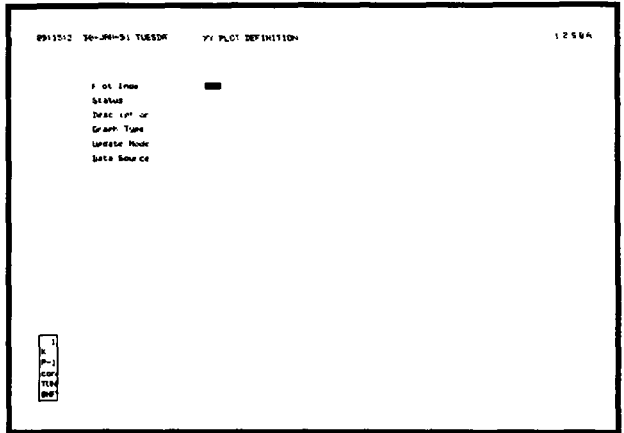


Figure 16-71 Display Configuration - XY Plot Configuration

Step 2 To define or edit a definition:

- The page first appears with the input cursor at the *Plot Index* field. Enter the number of a plot to define or edit, then press **ENTER**. Valid entry is from 1 to 80.
- When the plot definition appears, the input cursor positions at the *Status* field. If editing an existing, active plot definition, change the status to **INACTIVE**. The console will not allow any changes to an active plot.
- Use the OIS configuration keys (refer to Table 16-1) to move between and enter data into each display field. Some attributes defined at this configuration page remain the same for all XY plot definitions; although they are defined differently. Others depend on the type of data source.

Table 16-33 lists the attributes that apply for all types of plots. Table 16-34 lists the attributes as they apply to a tag data source.

plot Table 16-35 lists the attributes as they apply to a trend data source plot Refer to these tables when defining the display fields

The type of plot (tag or trend) cannot be changed at the definition display if the plot is currently displaying on another screen The plot display must be exited, the type changed, then the plot recalled to the screen All other definitions can be changed while the plot is displaying on another screen

d Press **[ENTER]** after completing all required fields This updates the configuration on the hard disk

e To define additional plots, press **[ESC]** to position the input cursor at the *Plot Index* field, then repeat Steps 2a through 2d Press **[ESC]** to exit this configuration

The console does a logical consistency check of the entire plot definition after pressing **[ENTER]**, and also when changing from *INACTIVE* to *ACTIVE* If it finds an error, the input cursor positions at the field in error.

Table 16 33 XY Plot Definition - General Fields

Field	Description
Plot index	Index number assigned to the plot ranges 1 to 80 This number defines the plot definition when used in XY plot escape commands (eg <i>exit</i> and <i>exit</i>) for a display
Status	Used to activate or deactivate data collection for the plot Valid entries ACTIVE = activates the plot data collection begins when the plot is activated INACTIVE = deactivates the plot the plot must be inactive to make any configuration changes
Description	32 character description of the plot This description is used only here it does not appear elsewhere
Graph type	Defines how the console presents the data that appears in the graph element CONTINUOUS is currently the only mode supported
Update mode	Selects the display method used to present collected data Valid entries SP - single point only one point per coordinate pair displays on the graph at a time When a coordinate value is received by the plotter it plots the point with a cross hair and removes the previous point The cross hair represents the most recent value plotted MP - multipoint same as single point but previous points appear as dots The most recent value is represented by the cross hair CC - continuous curve same as multipoint except that the previous points are joined with a line Points are joined from left to right
Data source	Defines the type of data that is collected by this plot definition Valid entries TAG = tag plot using exception reported values TREND = trend plot using distributed trend data

Table 16-34. XY Plot Definition - Tag Type

Field	Description
X tag name/index	Defines the tag that provides the exception reported value for the x-axis variable of the plot. Enter either a tag name or index number.
X high limit	Represents the high scale value of the x-axis for this plot. The field defaults to the full scale limit of the tag but can be changed.
X low limit	Represents the low scale value of the x-axis for this plot. The field defaults to the zero scale limit of the tag but can be changed.
Y tag name/index	Defines the tag that provides the exception reported value for the y-axis variable of the plot. Enter either a tag name or index number.
Y high limit	Represents the high scale value of the y-axis for this plot. The field defaults to the full scale limit of the tag but can be changed.
Y low limit	Represents the low scale value of the y-axis for this plot. The field defaults to the zero scale limit of the tag but can be changed.
Clear screen	Use this field to clear the plot. There are several different combinations that can be used. For example, a plot can clear after a defined number of samples display after a defined time period elapses or when a trigger tag trips to its one state. Valid entry is: YES = enable automatic clearing, the No. of Displayed Samples, Time Period Units, and Trigger Tag fields must then be defined. NO = disable automatic clearing.
No. of display samples	Defines the number of samples to display before clearing the plot. Valid entries: 2 to 480 = must be less than or equal to the number set in the No. of Samples field. For example, entering 120 clears the plot when the 121st sample is received. The 121st sample then plots as the first sample of the next plot. blank = disable this type of clearing.
Time period-units	Sets the time period that must elapse before the plot clears. The timer begins to count down at the first sample occurrence. The time period is expressed as a count from 0 to 99 and a unit of SECONDS, MINUTES, HOURS, or DAYS. Leave these fields blank to not use this type of clearing.
Trigger tag	Defines a DIGITAL or RCM tag that is to clear the plot when its state changes from zero to one. Enter either a tag name or index number. Leave this field blank to not use this type of clearing.
Sample period units	Defines the resolution of the data collection for the plot. The sample period is expressed as a count from 0 to 99 and a unit of SECONDS or MINUTES. Enter a sample period that is a multiple of two seconds. The Sample Period Units range is from 2 SECONDS to 30 MINUTES. Data collection begins when the plot is made active and continues to sample at the rate set here.
Number of samples	Defines the maximum number of samples to be collected for the plot at one time. Valid entry is from 2 to 480. For example, if a multipoint plot is being displayed and a value of 120 had been defined for the No. of Samples, a maximum of 120 samples would be plotted. The oldest sample scrolls off the display when a new sample is received once the maximum number of samples are on the display. Refer to Table 16-32 for guidelines when setting this field.

OIS CONFIGURATION

Table 16-35 XY Plot Definition - Trend Type

Field	Description
X trend index	Identifies the trend definition that supplies the x-axis variables of the plot. Enter the index number of a trend definition. Valid entry is from 1 to 10000.
X tag name	Displays the tag name associated with the x-axis trend. Blanks are shown if no tag name is assigned to the trend.
X high limit	Represents the high scale value of the x-axis for this plot. The field defaults to the full scale limit of the tag specified at the X Tag Name if one is assigned. Otherwise, the field defaults to 0. This field can be changed.
X low limit	Represents the low scale value of the x-axis for this plot. The field defaults to the zero scale limit of the tag specified at the Y Tag Name if one is assigned. Otherwise, the field defaults to 0. This field can be changed.
Y trend index	Identifies the trend definition that supplies the y-axis variables of the plot. Enter the index number of a trend definition. Valid entry is from 1 to 10000.
Y tag name	Displays the tag name associated with the y-axis trend. Blanks are shown if no tag name is assigned to the trend.
Y high limit	Represents the high scale value of the y-axis for this plot. The field defaults to the full scale limit of the tag specified at the Y Tag Name if one is assigned. Otherwise, the field defaults to 0. This field can be changed.
Y low limit	Represents the low scale value of the y-axis for this plot. The field defaults to the zero scale limit of the tag specified at the Y Tag Name if one is assigned. Otherwise, the field defaults to 0. This field can be changed.
Clear screen	Use this field to clear the plot. There are several different combinations that can be used. For example, a plot can clear after a defined number of samples display after a defined time period elapses, or when a trigger tag trips to its one state. YES = enable automatic clearing. The No. of Displayed Samples, Time Period Units, and Trigger Tag fields must then be defined. NO = disable automatic clearing.
No. of display samples	Defines the number of samples to display before clearing the plot. Valid entry is: 2 to 480 = must be less than or equal to the number set in the No. of Samples field. For example, entering 120 clears the plot when the 121st sample is received. The 121st sample then plots as the first sample of the next plot. blank = disable this type of clearing.
Time period-units	Sets the time period that must elapse before the plot clears. The timer begins to count down at the first sample occurrence. The time period is expressed as a count from 0 to 99 and a unit of SECONDS, MINUTES, HOURS, or DAYS. Leave these fields blank to not use this type of clearing.
Trigger tag	Defines a DIGITAL or RCM tag that is to clear the plot when its state changes from zero to one. Enter either a tag name or index number. Leave this field blank to not use this type of clearing.
Sample period units	Defines the resolution of data collection for the plot. Data collection begins when the plot is made active, and continues to sample at the rate set here. This field requires two entries. The sample period must be based on the resolution of the trends specified at the X Trend Index and Y Trend Index fields. A trend can have a resolution of one minute or 15 seconds; resolution is defined during trend definition. Enter a period that is a multiple of the greater of the two resolutions. (continued)

Table 16-35 XY Plot Definition - Trend Type (continued)

Field	Description
Sample period units (continued)	For example if the x-trend has a 15 second resolution and the y-trend has a one minute resolution the period and units can be 1 MINUTES to 30 MINUTES If both trends are 15 second trends the period and units can be 15 SECONDS 30 SECONDS 30 MINUTES
Number of samples	Defines the maximum number of samples to be collected for the plot at one time Valid entry is from 2 to 480 For example if a multi point plot is being displayed and a value of 120 had been defined for the <i>Number of Samples</i> , a maximum of 120 samples would be plotted The oldest sample scrolls off the display when a new sample is received once the maximum number of samples are on the display Refer to Table 16-32 for guidelines when setting this field

XY Plot Display Configuration Requirements

The process engineer must edit the source file (.DT) of an XY plot to use a plot definition in a display. This requires entering the plot index number as one of the parameters in the escape commands of the display. These include, for example, the XY plot (e1 154), plot control (e1 107 and e1 108), and plot information (su 154) escape commands. Refer to Appendix B for the parameters relating to these escape commands

The EDT text editor available at a terminal or terminal window, or the SLDG program can be used to edit the XY plot displays After editing, the .DT source file must be assembled into a .DU display file through the Display Generator function. The display can then be called for viewing by name using [MISC MENU] functions, or assigned to a keyboard key or ADP pushbutton

Refer to **Display Generation** in this section for an explanation of the Display Generator, SLDG program and EDT text editor. Refer to **Keyboard Configuration** in this section for procedures to assign a display to a keyboard key or ADP pushbutton

NOTE The console provides a standard XY plot display. It can be used as is or it can be modified. When modifying or editing the display, it is suggested that the display file being used be copied and renamed using file management utilities first. This helps to maintain the integrity of the display and symbol library. A plot index number can then be entered into this renamed file. The operator can call or assign this display by its new name.

AUTOMATIC DISPLAYS AND POP UP ELEMENTS CONFIGURATION

Depending on configuration, an entire display or a partial pop up element can be defined to automatically appear in place of, or at the current page. Once configured, the console references a set of DIGITAL tags to trigger the automatic activation of these displays or pop up elements. This allows automatic display activation based on process changes

Automatic displays and pop up elements are configured in sets. The console allows for up to 30 sets with up to 100 trigger tags and associated displays and pop up elements per set. During configuration, the process engineer assigns a master display and a termination display to a set. Each set contains a list of DIGITAL tags. Each tag in the list has an assembled display (.DU) or an assembled pop up element (.DL) assigned to it. A pop up element also requires an x,y coordinate to determine its position on the page.

The triggering of an automatic display or pop up occurs when a DIGITAL tag in the active set changes from its zero state to its one state. This requires, however, that there is no previously triggered display or pop up, or the state of the DIGITAL tag associated with the last triggered display or pop up element has returned to its zero state.

If configured, a denotation symbol assigned to the set appears to identify to the operator that the display or element is an automatic. For this function to work, however, a symbol file (.DL) must be created and assigned to the set during configuration. The denotation symbol does not appear for a display or pop up element if it is called to the screen manually. Refer to *Automatic Displays or Pop Up Elements* in the *Process Monitoring* section for procedures to activate or deactivate a set.

The procedures required to create automatic displays or pop up elements include:

- Creating a pop up element
- Creating a denotation symbol
- Configuring the tag set

Configuring a tag set requires:

- Assigning a master display.
- Assigning a termination display
- Assigning a denotation symbol
- Setting the number of tags.
- Defining the tags that are part of the set and the displays or pop up elements that they trigger

Creating a Pop Up Element

For pop up elements, the pop up symbol must first be created as a .DT symbol source file using either the SODG utility of the SLDG program or the EDT editor at the console. It then must be assembled using the *Display Generator* function as a .DL symbol file before it can be incorporated into an automatic display or pop up element group. The process engineer creates this symbol in

the normal way. Refer to *Display Generation* in this section for an explanation of the SODG utility and the EDT editor.

The standard control and data acquisition elements provided with the console and SLDG program can be used as pop up elements. When using automatic pop up elements, make sure to reserve a portion of the display that they are to appear at for only pop ups. This prevents the pop up from overwriting any display elements

The automatic displays function gives the ability to specify a substitution tag to be used for a pop up element. A substitution tag is the tag that is to be substituted for any tag already defined in the symbol source file. This allows using the same symbol source file for several pop up elements instead of having to create a dedicated source file for each.

The process engineer sets an x,y coordinate during *Automatic Displays* configuration that determines where the pop up is to appear on the screen. This coordinate in most cases determines where the lower left corner of the pop up element will be positioned. In some cases, the actual position may not be the lower left corner of the element but instead a position offset from the corner. It depends on the reference (rf) command within the symbol source file. If the command is rf 0.0 then the reference point for the symbol is the lower left corner. Any other setting for this command offsets the reference point from the corner position.

Creating a Denotation Symbol

Optionally, each tag set can be configured with a unique denotation symbol. Whenever a display or pop up is triggered, this denotation symbol appears on the display at a specified location. The symbol allows the operator to easily recognize that a display or pop up element is an automatic. It can also be used to indicate to the operator which tag set the display or pop up is a part of.

The denotation symbol must first be created using either the SODG utility or EDT editor as a .DT symbol source file. It then must be assembled using the *Display Generator* function as a .DL symbol file before it can be incorporated into an automatic display or pop up element group. The process engineer creates this symbol in the same way as a symbol used in a dynamic symbol. The symbol itself must not contain any other interactive escape commands (ej). Refer to *Display Generation* in this section for an explanation of the SODG utility and the EDT editor. Refer to Appendix B for an explanation of escape and graphic commands.

During configuration, the process engineer enters the name of the symbol and the x,y coordinate location where the symbol is to appear. The name is the assembled display file name without its .DL extension. The coordinate in most cases determines where the lower left corner of the symbol will be positioned. In some cases, the actual position may not be the lower left corner of the symbol but instead a position offset from the corner. Refer to

OIS CONFIGURATION

Creating a Pop Up Element in this section for further explanation

Example To have a text string such as AUTO appear on the displays and pop ups of a tag set, the complete symbol would consist of the letters A-U-T-O and a color and size. Specify the name of the symbol (file name) as the *Denotation Symbol* during configuration. The string AUTO would then appear at its defined location when a tag in the set triggers its display or pop up element

Configuring a Tag Set

Step 1 The process engineer defines automatic displays and pop up elements through the *Automatic Displays* pages. Figure 16-72 is the first page of the function. To call this page, first press **[GENL FCTNS MENU]**, then select the following menu items in the sequence shown.

A OIS Configuration
 ↳ B Display
 ↳ E Automatic Displays

10 44110 15-JUN-92 MONDAY AUTOMATIC DISPLA 1 2 3 4 5 6 7 8 9 10 11 12 1 4 15 16 17 10 19 0 50
 99

Automatic Displays Tag Set Selection Menu

SET	WINTER DISPLAY	SET	WINTER DISPLAY
1	30-CHTRP	16	ava table
2	FIVE	17	ava table
3	CMBCHD	18	ava table
4	ava table	19	ava table
5	ava table	20	ava table
6	ava table	21	ava table
7	ava table	22	ava table
8	ava table	23	ava table
9	ava table	24	ava table
10	ava table	25	ava table
11	ava table	26	ava table
12	ava table	27	ava table
13	ava table	28	ava table
14	ava table	29	ava table
15	ava table	30	ava table

ENTER SET TO EDIT ENTER SET TO DELETE
 [] []

KEYBOARD: EX11

TPS0753A

Figure 16 72 Automatic Displays - Tag Set Selection

Step 2 The tag set selection page enables defining new, deleting existing, or editing existing tag sets. Up to 30 tag sets can be defined, each set containing up to 100 trigger tags. Each tag has an associated display or a pop up element. This first page identifies any previously defined tag sets and those sets that are still available for configuration. If a tag set has previously been defined the

name of a master display appears for that set, if not, *available* appears.

To define or edit a tag set.

a. Enter the number of a tag set to define or edit at the *ENTER SET TO EDIT* field. Valid entry is from 1 to 30

b Press **ENTER** to call that set.

To delete a tag set

a Enter the number of a tag set to delete at the *ENTER SET TO DELETE* field Valid entry is from 1 to 30

b Press **ENTER** to initiate the deletion An *available* replaces the master display name after deletion

Step 3 A tag set configuration page appears after entering a tag set number at the selection page This configuration page determines the operation of the selected set Figure 16-73 shows the tag set configuration page

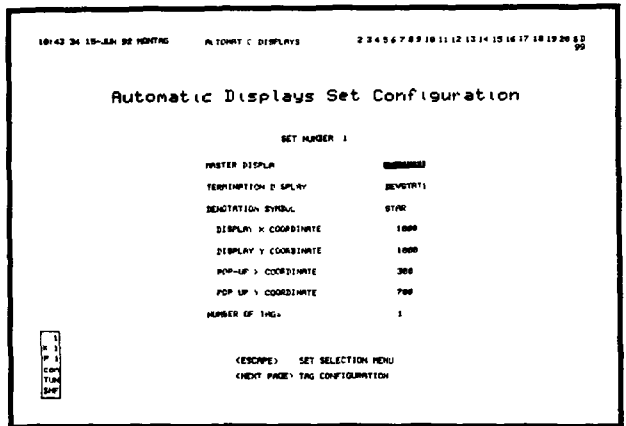


Figure 16-73. Automatic Displays - Tag Set Configuration

To configure the tag set:

a The console initially positions the input cursor at the *MASTER DISPLAY* field This field designates the display that the operator or the automatic display function must call to the screen to activate the tag set Enter the name of an assembled display file (*.DU*) without extension that is to be the master display for this

OIS CONFIGURATION

set. Any display that resides on the hard disk can be a master display

b. Use the OIS configuration keys (refer to Table 16 1) to move between and enter data into the remaining display fields At the *TERMINATION DISPLAY* field enter the name of an assembled display file (*.DU*) without extension that is to be the termination display for this set This designates the display that the operator or automatic display function must call to the screen to deactivate the tag set

c Making an entry in the *DENOTATION SYMBOL* field is optional. If a denotation symbol is to be used for this set it must already have been created. Enter the name of the assembled symbol file (*.DL*) without extension Refer to *Creating a Denotation Symbol* in this section for further explanation Leave the *DENOTATION SYMBOL* field blank and continue with Step 3e if not using a denotation symbol

d The x y coordinates of the denotation symbol for both displays and pop up elements can be configured at this page Enter the display coordinates and pop-up coordinates for the denotation symbol

Enter an x-coordinate at the *DISPLAY X COORDINATE* field and a y coordinate at the *DISPLAY Y COORDINATE* field if the tag set contains automatic displays Valid entry is from 0,0 to 9999,7499, although user space is from 400,400 to 9600,7200

Enter an x-coordinate at the *POP-UP X COORDINATE* field and a y-coordinate at the *POP-UP Y COORDINATE* field if the tag set contains automatic pop up elements Valid x-coordinate entry is from -9999 to 9999 Valid y-coordinate is from -7499 to 7499 The position is based on a reference point (*rf*) defined in the symbol file Refer to *Creating a Denotation Symbol* in this section for further information

e Enter the number of tags that are to be part of this tag set at the *NUMBER OF TAGS* field Valid entry is from 1 to 100

f Press **ENTER** to update the configuration Press **NEXT PAGE** to define the tags and the displays and pop up elements for this set, or press **ESC** to return to the tag set selection page

Step 4 Figure 16 74 shows the tag configuration page which appears after pressing **NEXT PAGE** while at the tag set configuration page This page defines a list of tags for the tag set, and defines the display or pop up element that each tag is to trigger

The tag configuration page presents only ten tag entries at one time Press **NEXT PAGE** or **PREV PAGE** to sequence between the next and previous ten entries

```

18:45:04 15-JUN 92 MONTRG      AUTOMATIC DISPLAYS      2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22
                                                                                                     23
Automatic Displays Tag Configuration

                                SET NUMBER
NO      TAG                      DISPLAY/POP-UP      X      Y      SUBSTITUTE
1      [REDACTED]                ZCYRPF          4000   4000   E0107170005
2
3
4
5
6
7
8
9
10
[KEYS: F1, F2, F3, F4, F5, F6, F7, F8, F9, F10, F11, F12, CLR, END]

(ESCAPE)  SET CONFIGUR ON
          (NEXT PAGE) NEXT PAGE
          (PREV PAGE) PREV PAGE
  
```

TPS0706A

Figure 16-74 Automatic Displays - Tag Configuration

To define a tag

- a The console initially positions the input cursor at the first tag entry. Use the configuration keys (refer to Table 15-1) to move between and enter data into each display input field. At the TAG column field for a tag, enter the name or index number of a DIGITAL tag.
- b Enter the display name or pop up element name at the DISPLAY/POP-UP column field that this tag is to trigger. The name is the assembled display file name without its .DU extension, or the assembled symbol file name without its .DL extension.
- c The x-coordinate and y-coordinate of the pop up element is also defined at this page. Enter the coordinates for the element at the X and Y column fields. Valid x-coordinate entry is from 0 to 9600. Valid y-coordinate is from 0 to 7200. If the tag triggers a display, skip this step and continue with the next step.
- d The SUBSTITUTE field is optional and pertains to pop up elements only. If the index number of the tag the pop up element is to present information for is already defined in the pop up element, leave this field blank. Enter a tag name or index number in this field if the pop up element is to use a substitute tag in place of the tag already defined for the symbol. Refer to *Creating a Pop Up Element* in this section for additional explanation.

- e. Repeat Steps 4a through 4d until all tags have been defined. Press **ENTER** to save the configuration, then continue to press **ESC** to exit.

Text Definition and Substitution

The console provides text definition and text substitution for two purposes. Text substitution can be used to replace default text that appears at displays and configuration pages. Text definition defines text strings associated with, and selected by text selector function blocks (FC 151) and remote motor control blocks (FC 136) in PCU module configurations. Also, alarm comment definition, logic state descriptor definition, and engineering unit descriptor definition can be considered as text definition procedures.

NOTE This console does not support foreign language.

TEXT SUBSTITUTION

Almost all text that appears in displays at the console can be modified through text substitution. The process engineer can use this configuration to change displayed text, error messages, configuration specific entries, prompts, etc. This configuration can substitute default text with any desired ASCII character strings.

Some character strings cannot be modified. The options available for a particular text set appear next to the *Language* field after calling a particular set. If a text set cannot be modified, only *DEFAULT* appears next to the *Language* field.

- Step 1** The process engineer defines text substitution strings through the *Text Substitution* pages. Figure 16-75 shows the first page of this function. To call this page, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown:

A OIS Configuration → *A Database* → *E Text Substitution*

The text substitution pages provide a complete list of text groups that can be substituted. Press **NEXT PAGE** and **PREV PAGE** to move between the pages.

- Step 2** At the bottom of this page are three informational fields, and two input fields. The informational fields and their purpose are:

Description shows the currently selected text set. The number in brackets () is the record number followed by the text set descriptor.

Max Width - indicates the maximum number of characters that can be entered for each text string of the selected set.

11:25 AM 18 JAN 80 SUBSYS 72 7 SUBST1707 ON 1 34 * R 101 SDA

Beault English - Current Subst. - Subst. Page 1

0	SUNDAY
1	MONDAY
2	TUESDAY
3	WEDNESDAY
4	THURSDAY
5	FRIDAY
6	SATURDAY

DESCR PTOR	13	Day of Week
PL (OFF)	10	
# of ENTRIES	7	
Record Number	0	
Language	ENGLISH	C. DEFAULT EXTENDED

TPS0055A

Figure 15 76 Text Substitution Example Configurable Text String Page

the text set selected, options for this field are *DEFAULT* and *EXTENDED*

Key in *EXTENDED* to make a substitution After entering, continue with the next step

Use the *DEFAULT* option to reset the text back to default Enter *DEFAULT*, then press **ENTER** The display and configuration on the hard disk return to the default settings If resetting to default, two options are available at this point Continue substitution for the set by keying in *EXTENDED*, then go to the next step Or, exit configuration of this text set by pressing **ESC**

c Move to the *Record Number* field and enter the number of a specific text string to modify, then press **ENTER** Valid entry for this field is 0 to the number of records shown in the # of Entries field minus one

The *Record Number* field can be left at 0 to position the input cursor at the first entry, then the configuration keys can be used to search for a specific entry Also, if the number of entries is substantial this field can be used to move the input cursor and scroll the display to a higher numbered entry

For example, if the text set has 100 entries, enter 50 to position the cursor and scroll the display to text string number 50 The configuration keys can then be used to move up or down in the list

d Once at the desired text string, key in the substitution text, then press **ENTER**. This updates the configuration on hard disk and immediately implements the change. Additional substitution text strings for this text set can be entered by using the configuration keys to move the input cursor to any desired text string.

e After completing all changes for this text set, press **ESC**. This positions the input cursor back to the *Language* field. Two choices are available at this point.

Press **NEXT PAGE** or **PREV PAGE** to call the next or previous text set to modify that set. Repeat Steps 2b through 2d. Press **ESC** to return to the first configuration page.

f. Press **ESC** to exit this configuration.

TAG TEXT SELECTOR

The *Tag Text Selector* option defines text strings that can be associated with DD, MSDD and RMCB tags. These text strings relate to the good, bad and waiting condition reported by a device driver or multi-state device driver function block, and the good, alarm and waiting condition reported by a remote motor control function block. The conditions are exception reported by a PCU module. The module must contain a text selector function block (FC 151) that references one of these function blocks. The text selector function block can also be configured as a stand alone text selector.

A text selector function block in a PCU module sends a message number, and color and blink option to the console. A TEXT tag configured at the console enables receiving this information from the exception report. The message number is used to select a specific text string defined at the console. The text (message) can display in a graphic by using the text dynamic escape command (**ed 79**).

The tag text selector function block does not send alarm status to the console. Therefore, the only time a TEXT tag appears in alarm is when its status is bad quality. This also requires the console to be configured to use bad quality as one of its alarm conditions, refer to **ALARM QUALITY OPTION** in this section.

When the tag exhibits bad quality, either a bad quality text string replaces the currently displayed text string, or the last known good or current string remains on the display. The alarm quality option also determines which of the two occurs. The bad quality string can be modified through text substitution.

The escape command does not specify any colors. Configuration of the text selector function block in the PCU module determines the color and blink options. If associated with one of the function blocks discussed earlier, the configuration set for a text selector

block links it to the specific function block. The console receives the color and blink specifications in an exception report generated by the function block Color and blink configured in the PCU module should be consistent with the overall color and blink settings of the console

Each message defined in the console has a message number. Up to 10,000 text selector messages can be defined at the console. The message number sent from the PCU module selects one of these messages by its number. If the message number received from the block is outside the range of messages defined at the console, error text appears. The *Error Field* text set accessed through text substitution sets this error text. Color is still a function of the exception report in this case.

- Step 1** The process engineer defines text strings through the *Tag Text Configuration* page (see Figure 16-77). To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown:

A OIS Configuration → *A Database* → *F Tag Text Selector*

The screenshot shows a terminal-style interface for configuring text selector messages. At the top, there is a header with a grid of numbers from 1 to 50. Below this, there are two input fields: 'Number of Messages' set to '10000' and 'Start no Message' set to '0'. On the left side, there is a vertical menu with options: '1', 'A', 'P', 'I', 'HOME', 'TUN', and 'OFF'.

Figure 16-77 Text Definition - Tag Text Selector Configuration

TPS0162A

- Step 2** To define text selector messages:

a Use the OIS configuration keys listed in Table 16-1 to move between and enter data into each display input field. At the *Number of Messages* field, enter the total number of messages required. Valid entry is from 1 to 10000. If no change is required, go to the next step.

NOTE Care must be taken when changing the *Number of Messages* field since this field indirectly affects PCU module configurations. This number establishes the range of valid message numbers which becomes the valid message numbers that can be set in PCU module text selector function blocks. Decreasing this number erases any entries above the newly entered value which could make message numbers indicated in PCU modules invalid.

b Each display shows only 20 text messages. Enter the message number the display is to start with at the *Starting Message* field, then press **[ENTER]**. Valid entry is 0 to the total number of messages minus one.

Pressing **[ENTER]** both updates the configuration on the hard disk to allocate enough space for all required messages, and calls 20 messages for display starting with the first message entered at the *Starting Message* field. The console positions the input cursor at this starting message.

Increase Size If the total number of messages is changed from the current value, the console resizes the file that contains the messages. When the size is increased, the current messages copy to the same location in the file and the remaining new messages fill with blanks. During update of the file, this message appears.

Update of Files in Progress, Please Wait .MSG 32

Do **not** continue until the message disappears.

Decrease Size If the number of messages is decreased, this prompt appears.

WARNING; ARE YOU SURE? ESCAPE IF NOT MSG 31

Press **[ESC]** to cancel. Press **[ENTER]** to continue. The console then reduces the file to its new size. It saves the messages with message numbers at and below the newly entered number of messages. It erases any entries above the entered value. During update of the file, this message appears.

Update of Files in Progress, Please Wait .MSG 32

Do **not** continue until the message disappears.

The *Starting Message* field can be left at 0 to call the first entry in the list, then the configuration keys can be used to move to a specific entry. Also, if the number of entries is substantial this field can be used to move the input cursor and scroll the display to a higher numbered entry.

For example, if the number of messages is 100, enter 50 to position the cursor and scroll the display to text message number 50. The configuration keys can then be used to move up or down in the list.

OIS CONFIGURATION

c. Enter a text string of up to 80 characters. Any keyboard characters can be used. At this level, additional text strings can be defined by moving to a specific message number using the configuration keys.

d. Press **[ENTER]** to update the configuration on the hard disk.

e. Press **[ESC]**, this returns the input cursor to the *Starting Message* number field. Additional messages can be called and defined by repeating Steps 2b through 2d at this point. Or, press **[ESC]** to exit this configuration.

REMOTE MOTOR CONTROL TEXT

The *Remote Motor Control Text* option defines text sets that contain text strings related to remote motor control function blocks (FC 136). The function block can report any of ten different error codes that identify its current status. These error codes are reported to identify the condition that caused a bad start of a device. An RMCB tag must be configured to receive an exception report at the console. Error codes and status reported include:

No error
 Stopped
 Interlock 1
 Interlock 2
 Interlock 3
 Interlock 4
 Feedback 1 = 0
 Feedback 2 = 0
 Feedback 1 = 1
 Feedback 2 = 1

NOTE: The interlock codes indicate a not set or logic zero condition for each of four interlocks.

Each error code text set has an assigned number. Up to 100 text sets can be defined. During RMCB tag configuration, a *Text Set* attribute identifies which text set to use. When the console receives an exception report for a remote motor control block, it references one of the defined sets by its number. The specific text string to display depends on the error code returned in the exception report. The text message can appear at any display by using the RMCB error code text dynamic escape command (**ed 92**). The standard RMCB faceplate element contains this command.

Step 1 The process engineer defines text strings for text sets through the *RMCB Text Configuration* page (see Figure 16 78). To call this

display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown

A OIS Configuration

↳ A Database

↳ G Remote Motor Control Text

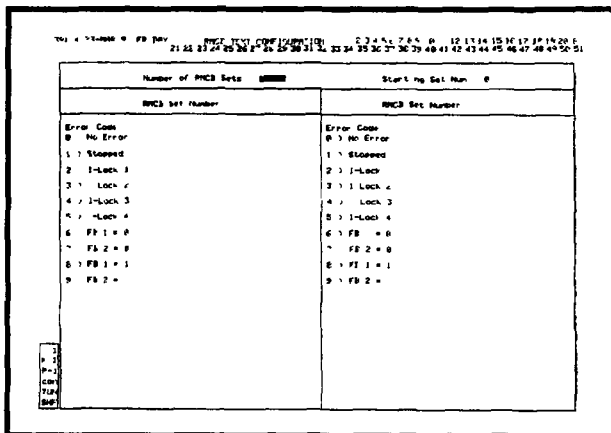


Figure 16-78 Text Definition - RMCB Text Configuration

TPS0163A

Step 2 To define an error code text group

NOTE Care must be taken when changing the *Number of RMCB Sets* field since this field directly affects the tag database. This number establishes the range of text sets which becomes the valid range for an entry in the *Text Set* field of an RMCB tag. Decreasing this number erases any entries above the newly entered value which could make message numbers indicated in tags invalid.

a. Use the OIS configuration keys listed in Table 16-1 to move between and enter data into each display input field. At the *Number of RMCB Sets* field, enter the total number of text sets required. Valid entry is from 1 to 100.

b. The configuration page can show two text sets at a time. Enter the number of a text set at the *Starting Set Num* field, then press **ENTER** to have that set appear at the screen. Valid entry is 0 to the total number of text sets minus one.

Pressing **ENTER** both updates the configuration on the hard disk to allocate enough space for all required sets, and calls two sets for display starting with the first set indicated at the *Starting Set*

OIS CONFIGURATION

Num field The console positions the input cursor at the first configurable error code.

Increase Size If the number of text sets is changed from the current value, the console resizes the file that contains these sets when **[ENTER]** is pressed. When the size is increased, the current sets copy to the same location in the file and the remaining new sets fill with blanks. During update of the file, this message appears

Update of Files in Progress, Please Wait :MSG 32

Do **not** continue until the message disappears

Decrease Size If the number of text sets is decreased, this prompt appears

WARNING, ARE YOU SURE? ESCAPE IF NOT :MSG 31

Press **[ESC]** to cancel. Press **[ENTER]** to continue. The console then reduces the file to its new size. It saves the text sets with set numbers at and below the newly entered number of sets. It erases any entries above the entered value. During update of the file, this message appears

Update of Files in Progress, Please Wait :MSG 32

Do **not** continue until the message disappears

The *Starting Message* field can be left at 0 to call the first set, then the configuration keys can be used to move to a specific set. Also, if the number of entries is substantial this field can be used to move the input cursor and scroll the display to a higher numbered set.

For example, if the number of sets is 100, enter 50 to position the cursor and scroll the display to text set number 50. The configuration keys can then be used to call the previous or next set.

c. For each error code, enter a text string of up to 15 characters. Any keyboard characters can be used.

d. Press **[ENTER]** to update the configuration on the hard disk after defining all error codes. The second set displayed can then be configured in the same way. Use the configuration keys to move to the second set. Additional text sets can be defined at this point by pressing **[NEXT PAGE]** or **[PREV PAGE]** to sequence to the next or previous set, then repeating Step 2c and this step.

e. Press **[ESC]**; this returns the input cursor to the *Starting Set Num* field. Additional text sets can be called and defined by repeating Steps 2b through 2d at this point. Or, press **[ESC]** to exit this configuration.

ALARM COMMENT TEXT

An alarm comment is a text string that can be associated with a specific alarm condition of a process device (i.e., tag). The process engineer determines the purpose of this text as it applies to the device. It can be, for example, text that describes the alarm condition the device is currently in, or text that describes any operator action required to correct the condition.

An alarm comment can be up to 64 characters. It can appear at an alarm summary or any display. However, the alarm summary must use a line format that is defined with an alarm comment field, and the display must incorporate an alarm comment escape command (see 33 or ed 33).

Refer to *Database Configuration* in this section for further explanation of alarm comments and alarm comment definition procedures. Refer to **ALARM SUMMARY CONFIGURATION** in this section for procedures to define a line format. Refer to Appendix B for information about the alarm comment escape commands.

ENGINEERING UNIT AND LOGIC STATE DESCRIPTOR TEXT

An engineering unit descriptor is a text string that shows the current unit of measurement for a process value. The descriptor is for an analog value only. A function block in the PCU module reporting the value also exception reports an index number along with the value. This number determines the descriptor that relates to the value. Each descriptor defined at the console has an index number. The console cross references the reported index number with the defined list of engineering unit descriptors to present the appropriate text.

A logic state descriptor is a text string that describes the current operating state of a process device. The descriptor is for a digital state only. The method used to determine the appropriate descriptor for a digital state is different than that used for an analog value. A PCU module does not send an index number along with a reported digital state. The console uses the tag database to determine which logic state descriptor. The choice of descriptors is defined in the tag.

Refer to **TAG DESCRIPTORS** in this section for further information, and for procedures to define descriptors.

Trend Pen Cluster Configuration

NOTE This configuration procedure describes setting up a trend pen using an analog output module (AOM) to drive a trend pen device. The AOM module operates on module bus only.

The trend pen cluster function provides an interface between the console and trend pen recorders and indicator stations. This

OIS CONFIGURATION

function enables assigning trend pen recorders to track a set of process variables selected from the console

This function distinguishes between trend pen recorders, indicator stations and output transfers. Limits for each are:

- 16 trend pen recorders with up to 32 pens per recorder
- Eight indicator stations with up to eight bars/displays per station
- 16 output transfer groups with up to 32 transfer units per group

The distinction between devices is for identification purposes. Trend pen is for some type of trend pen or chart recorder. Station indicator is for a device that displays values through bar indicators or digital readouts. Output transfer group is for generic use and can refer to a trend pen recorder, bar recorder or INFI 90 in put logic.

To implement the trend pen function, a PCU module that supports the restore function block (FC 140), timer block (FC 35), input from a different PCU (FC 26) and input from a different loop (FC 121) is required to provide the hardware interface between the console and the trend pen recorder.

Trend pen configuration consists of

- General parameters configuration
- Device definition.
- Device assignments.

The process engineer configures trend pen clusters through the *Trend Pen Cluster* page (see Figure 16-79). To call this display, first press [GENL FCTNS MENU], then select the following menu items in the sequence shown:


B OIS Utilities → I Trend Pen Cluster

GENERAL PARAMETERS

Select *A General Parameters*, a menu with these selections appears:


- A Trend Pen Recorder*
- B Indicator Station*
- C Output Transfer*

After selecting option *A*, the display of Figure 16 80 appears. With this display, the process engineer can configure recorder module tags, recorder description, number of pens and key lock requirements.

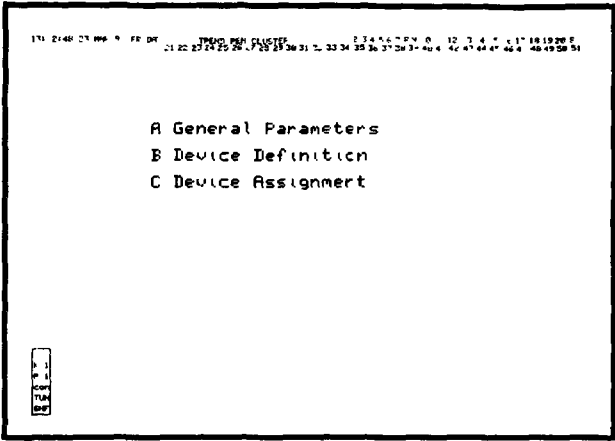

TPS0168A

Figure 16-79 Trend Pen Cluster Configuration - Main Menu

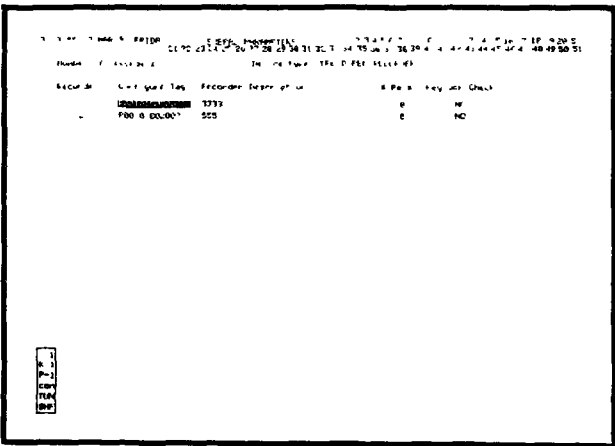

TPS0168A

Figure 16-80. Trend Pen Cluster Configuration - General Parameters

The system verifies edits made at this level on a per field basis. If changes are valid, the system saves them without requiring further action. Press [ESC] for a prompt to enter a device number to edit, or the number of a device to change.

OIS CONFIGURATION

DEVICE DEFINITION

Select *B Device Definition*, as in general parameters, a display with the following appears

- A Trend Pen Recorder*
- B Indicator Station*
- C Output Transfer*

After selecting option *A*, the device definition page (Figure 16-81) appears. This display allows defining a unique RCM tag to correspond to each physical pen within the device. This RCM tag must reference a function block in the same module as the configure tag defined through general parameters.

Pen No.	Pen Name	Pen Index	Pen Description
1	INHC	INDEX 999	STAT ON HOLD SH
2	INHC	INDEX 975	PPH/LOG HOLD SH
4	INHC	INDEX 500	DIGITAL HOLD TM
5	INHC	INDEX 1000	STATION CAPS SH

Pen No. Pen Name Pen Index Pen Description

1 INHC INDEX 999 STAT ON HOLD SH

2 INHC INDEX 975 PPH/LOG HOLD SH

4 INHC INDEX 500 DIGITAL HOLD TM

5 INHC INDEX 1000 STATION CAPS SH

6

7

8

9

10

1

2

3

4

5

6

7

8

9

10

MORE 047 14

TP50167A

Figure 16-81 Trend Pen Cluster Configuration - Device Definition

For trend pen cluster functions, reference pens by the pen number only. When displaying a pen, the pen number and the first four characters of the corresponding RCM tag description are used. This helps to distinguish between the pens. Use tag configuration procedures to define a tag description; refer to **TAG DATABASE CONFIGURATION** in this section.

When edits are made, the message *EDITS HAVE BEEN MADE* displays. This message informs the operator that what is being displayed does not necessarily reflect what is in the module.

To save edits, press **ESC**. This action brings up a menu with the following choices:

- A *Submit edits made*
- B *Submit entire configuration*
- C *Change mode to configure*
- D *Change mode to execute*
- E *Change recorder number*

Choose an option, then press **ENTER**.

- Submit edits made** Select option *A* to save the edits made at the console. If a pen already has a pen assignment, the necessary configuration information is gathered and downloaded to the module. The console downloads only the part of the module block configuration for which it is responsible. For example, block *n+1*, block *n+2*, block *n+3* and block *n+4* for a pen at block address *n*; refer to **TREND PEN CLUSTER USAGE EXAMPLE** in this section for block information. If a download for a pen fails, it is marked faulty and identified with an asterisk (*) next to its number. Pens without a pen assignment are also marked faulty.
- Submit entire configuration** Select option *B* to download the configuration of all pens with assignments to the module.
- Change mode to configure** Select option *C* to place the module corresponding to the current device in configure mode. This function is useful when changing RCM tag assignments of previously defined pens. A pen already defined with an RCM tag cannot be redefined with another RCM tag while the module is in execute mode. This operation would require configuration changes outside the scope of the trend pen cluster function (logic to turn the pens on and off). If a pen definition was changed during module execution, the old pen may not turn off correctly or the new pen may not turn on correctly.
- Change mode to execute** Select option *D* to place the module corresponding to the current device in execute mode.
- Change recorder number** Select option *E* to change to different recorders. Key in the pen number and press **ENTER** to reposition the cursor to a pen entry on the display.

Press **NEXT PAGE** and **PREV PAGE** to sequence through additional pages if all pens cannot be displayed on one page. Press **ESC** to exit this menu and go to the previous menu level.

DEVICE ASSIGNMENT

Select *C Device Assignment*; a display with the following appears:

- A *Trend Pen Recorder*
- B *Indicator Station*
- C *Output Transfer*

Only *Change mode to configure* is not allowed because this display can override configuration key lock.

TREND PEN CLUSTER USAGE EXAMPLE

In this example, the console is set up with three trend pen recorders each with five pens. The trend pen function logically groups up to 32 pens from one or more physical trend pen recorders. The three trend pen recorders can be grouped into one trend pen module, or a different trend pen module defined for each one.

In this example, all three trend pen recorders are grouped into one trend pen module. The console identifies this grouping through an RCM tag. The RCM tag is the configure tag that serves two purposes:

- 1 It identifies the PCU module configured for this grouping of pens.
- 2 It is used by the console to synchronize when the PCU module can be put into configure mode for input source (pen) reassignments and input source scaling changes. It also can be used to trigger the user-configured logic to drive the pens to a predetermined condition. This requires setting up additional logic during initial configuration of the module and its external devices.

NOTE Before placing the module into configure mode for input source reassignment or input source scaling, drive all pens within the trend pen module to a predetermined rest position.

Additionally, a unique RCM tag must be defined to correspond with each individual pen. This tag must reference a function block within the same module as the configure tag. It identifies the module blocks that the trend pen cluster function must manipulate when input source (pen) assignments and scaling modifications are made.

Each pen tag must be allocated five consecutive blocks within the PCU module as follows:

- | | |
|------------------|--|
| 1st block | The first block (i.e., block address n) must be configured as an RCM block (FC 62). The trend pen cluster function uses this block to turn the physical pen on or off. Define the meaning for on and off (e.g., off = place the pen in some predetermined rest position). |
| 2nd block | The second block (i.e., block $n+1$) is reserved for the trend pen cluster function to obtain the source input signal. |
| 3rd block | The third block (i.e., block $n+2$) is reserved for the trend pen cluster function to obtain the digital source input signal. |

OIS CONFIGURATION

- 4th block** Initially, configure the fourth block (i.e., block $n+3$) as a sum block (FC 15). The trend pen cluster function manipulates this block to scale the input signal destined to the physical pen. The output of this block feeds another set of logic to drive the physical pen. This must be set to how this output relates to the physical pen.
- 5th block** The fifth block (i.e., block $n+4$) is reserved for the trend pen cluster function. This block restores the state of the RCM block (i.e., block n) to its previous execute state whenever the module is put into execute mode.

Changes can only be made when the module is in configure mode. The trend pen cluster function handles changing the module mode and downloading changes transparent to the user.

This block saves the state the RCM block is in just before the module goes into configure mode. When the module is put back into execute mode, this block restores the RCM block to the saved state.

Figure 16-83 is an example of a block configuration to drive a physical pen to the off position. In this figure, the RCM tag controls which signal gets sent to the physical pen. The logic one state of the RCM block corresponds to the on position of the pen; logic zero state corresponds to the off position of the pen. Blocks X1, Y1 and Z are not accessed by the trend pen cluster function.

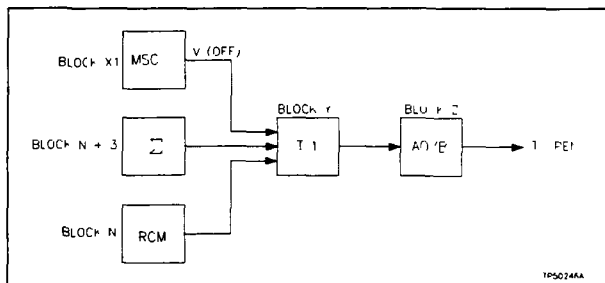


Figure 16-83. Trend Pen Cluster Configuration - Pen Off

Block X1 is a manual set constant block. It provides a 0.0 signal to drive the pen to the predetermined off position. Block Y1 is an analog transfer block; it selects which signal goes to block Z. Block Z is an analog output block that directly interfaces to the pen. The following explains the specifications for the function codes.

Remote manual set constant (FC 2)

S1 = 0 0 Default

Analog transfer block (FC 9)

S1 = x1 To reference the remote manual set constant block.

S2 = n+3 To reference the sum block

S3 = n To reference the RCM block

S4 = 0 Default

S5 = 0 Default.

Analog output block (FC 28)

S1 = d1 Destination module address The location of the physical device (user provided)

S2 = d2 Destination block address (user provided)

S3 = y1 To reference the analog transfer block, which is the signal to be sent to the pen

S4 = 0 0 Default, input zero

S5 = 100 0 Default, input span

Input Scaling

The trend pen cluster function allows scaling the input source signal going to the pen. The desired zero and span can be specified.

zero Lowest output value

span Difference between the lowest output value and the highest output value

The trend pen cluster function uses these two parameters to calculate the S3 and S4 for a two-input summer block (FC 15). The summer block performs the desired scaling.

For example, the input signal ranges from 100 to 200 units. The specific signal range of interest is from 150 to 200 units, which is the 50 percent to 100 percent level of the input signal. It is desired to have this portion of the input signal drive the trend pen full scale (0 to 100 percent) and represent the 150 to 200 unit range. This provides better resolution at the trend chart. To do this, set the following:

zero = 150 Low limit.

span = 50 High limit minus low limit, 200 - 150

OIS CONFIGURATION

The trend pen cluster function calculates the following constants for S3 and S4 of the two input summer block. The input summer provides a scaling function as follows

$$\text{summer output} = (\text{input} \times S3) + (S2 \times S4)$$

S2 is always set to 1 0, so the equation reduces to

$$\text{summer output} = (\text{input} \times S3) + S4$$

The following relationships can be derived

$$S3 = 100 0/\text{span}$$

$$S4 = \text{zero} \times (-100 0)/\text{span}$$

100 0 represents the percentage of scale range for the output signal (full scale) For this example, the function comes up with

$$S3 = 100 0/50 0 = 2 0$$

$$S4 = 150 0 \times (-100 0)/50 0 = -300 0$$

When input equals 150 0, output equals

$$150 0 \times 2 0 - 300 0 = 0\%$$

This is the percent signal, so zero percent corresponds to 150 units

When input equals 200.0, output equals

$$200 0 \times 2 0 - 300 0 = 100\% \text{ (200 units)}$$

When input equals 175.0, output equals

$$175 0 \times 2 0 - 300 0 = 50\% \text{ (175 units)}$$

The desired sum block output is a normalized value ranging from 0 to 100. The output of the sum block may not always be in this range. If the desired signal must be within a certain range, a high/low limit block (FC 6) may be needed to be placed immediately after the sum block

Module Configure Tag Requirements

The output signal of the configure tag is at logic one state when the module is in execute mode. Its feedback signal is also a logic one. When a download procedure is required, the trend pen cluster function sets the output of the RCM configure tag to logic zero. When the feedback signal is at logic zero, the trend pen cluster function places the module into configure mode.

The sample in Figure 16-84 lags the feedback signal of the RCM block one second before it goes to logic zero. This gives the user-configured logic time to execute its pen positioning logic before the module enters configure mode.

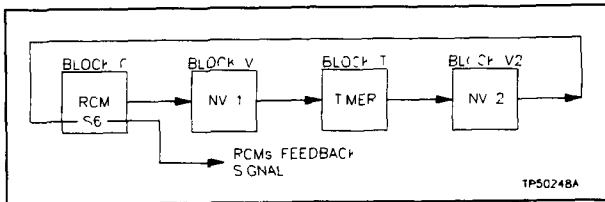


Figure 16-84. Trend Pen Cluster Configuration - Configure Tag/Timer Configuration

Configure the RCM function block used as the configure tag as follows

- S1 = 0
- S2 = 1
- S3 = 0
- S4 = 0
- S5 = 1
- S6 = V2
- S7 = 0
- S8 = 0

S5 set to one ensures the output signal of this RCM block is a logic one when the module returns to execute mode. S6 is set to V2 to reference a block at address V2. Block V1 inverts the RCM output signal and feeds it to block T, which is a timer block.

The timer block (FC 35) has this configuration:

- S1 = V1 To reference the inverter block (inverted output of configure tag).
- S2 = 1 To select the time-out mode.
- S3 = 1 To select a time period of one second.

When the input to this block is logic zero, its output is immediately logic zero. Its input must be at logic one for one second, the selected time period (S3), before its output goes to logic one. This output is fed to another inverter before going to the feedback input of the configure tag. This accomplishes the desired time lag.

Specification S3 can be set to the lag time required for the pens to go to the configuration reset position. This lag time must not

be greater than ten seconds. The trend pen cluster function wants a minimum of ten seconds for the RCM feedback signal to go to logic zero. If the feedback signal is still at logic one, the download procedure is aborted. The configuration to be downloaded is saved in the console and marked faulty.

Configuration of block V1, NOT block (FC 33)

S1 = C To reference the configure tag block

Configuration of block V2, NOT block (FC 33)

S1 = T To reference the timer block

The RCM tags referenced by the trend pen cluster function should not be controlled outside of this function. Doing so may confuse and defeat the usefulness of this function.

Figure 16 85 is a sample configuration to drive pens to a configure position when the download position is initiated by the configure tag being set to logic zero.

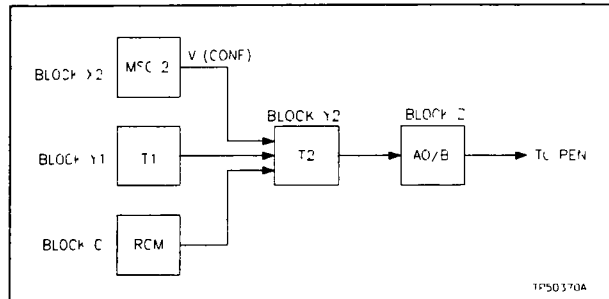


Figure 16 85 Trend Pen Cluster Configuration. Configure Tag to Pen Configuration Position Logic

Block C is the RCM function block used as the configure tag. It determines which signal is sent to the pen. Block Y2 is an analog transfer block (FC 9) that determines which signal is fed to block Z, the analog output block. The V (conf) signal is sent when the RCM block is at logic zero. The pen assignment signal (T1) is sent when the RCM block is at logic one.

TREND PEN CLUSTER CONFIGURATION RESTRICTIONS

This section discusses the proper methods for making changes to existing parameters. Use the device assignment display to change pen assignments and scaling factors. Adding pen assignments to undefined pens can be saved in the console. However, those pen

assignments are marked faulty because their corresponding pens are undefined. Their configuration is not downloaded to the module until the pens are defined through the device definition display.

Modifications at the device definition and general parameters displays are more complex. Changes made here can cause drastic results at the module. For example, changing a configure tag may require readjusting the background configuration. The background configuration refers to the logic that places the pens in a predetermined rest position. More often, changing a configure tag requires making other changes to ensure that the configure tag controls the right pens.

At the device definition display, pens are allowed to be defined, changed or deleted (ensure that configure tag is already defined at the general parameters page) if

- 1 The module is not in *execute* mode
- 2 A pen assignment has not been defined for this pen
- 3 A pen assignment is defined, but marked faulty

At the general parameters display, a configure tag change is allowed if

- 1 The target module of the original configure tag is not in *execute* mode
- 2 There are no pens and pen assignments defined
- 3 All pens and pen assignments defined are marked faulty.

When a configure tag is deleted, the pen definitions and pen assignments are marked faulty. If the configure tag is changed to reference a different module, all of its pen definitions and assignments are marked faulty. If the configure tag is changed by another reference to the same module, the pen faulty status is unchanged.

TREND PEN CLUSTER OPERATION RESTRICTIONS

The *Change Mode to Configure* operation at the device definition page always puts the module in *configure* mode. The configure tag is set to logic zero. The trend pen cluster function waits for the feedback signal to become logic zero. If the feedback signal does not become logic zero after a period of 15 seconds (ten seconds minimum), the error message *No Response to the Requested Action* appears, and the module is placed in configure mode.

The *Change mode to configure* operation available through trend pen cluster configuration functions provides the ability to drive the pens to a rest position before the module goes into *configure*

mode The *Change mode to configure* operation from any other device does not provide this capability, for example, changing the mode from the PCU configuration function of the console, or from a configuration and tuning terminal at the PCU module This places the module in configure mode, however, the logic to drive the pens is not executed

The *Submit edits made* and *Submit entire configuration* operations in the device definition and device assignment displays also have a time-out. The error message *No Response to the Requested Action* appears; however, the module is not put in configure mode and the download procedure is canceled

TREND PEN CLUSTER FUNCTION RESTRICTIONS

1 The module driving the pen devices is expected to be a multi-function processor (MFP) or multi function controller (MFC) module This module is dedicated to receiving inputs and driving the external devices This module works in conjunction with an analog output module (AOM) to drive each pen

The MFP or MFC module feeds values to the AOM module The AOM module converts these values to voltages to feed the physical devices connected to it The AOM module holds its outputs until the MFP or MFC module sends other values For example, when the MFP or MFC module is put in configure mode, the AOM module continues to drive its external devices with the last signals received from the MFP or MFC module

The console does not verify nor enforce the configuration of the module Pen assignment changes place the module in configure mode and can pose a problem if the module is configured to perform other functions

2 A tag within the module driving the external device cannot be an input source for the device All input source tags must be outside of the module referencing it The trend pen cluster function configures an analog input block to reference the input source, which requires the source to be outside the module

To bypass this restriction, a second tag must be defined at another module This second tag tracks the same signal as the first tag The pen assignment references the second tag This configuration may introduce a time lag

3 A tag residing in a module of a different PCU from the module driving the external devices cannot be an input source for more than one pen within that module For example, Tag A at PCU 2 cannot be assigned to pen number one and two of module B in PCU 3 Tag A can be assigned to pen one of module B and pen one of module C (both in PCU 3)

DOWNLOAD PROCEDURES

All pens are temporarily marked faulty when a download is requested. Each pen gets updated to successful or not faulty when its download completes successfully. If the target module is in execute, it is placed in configure mode by the trend pen cluster function:

1. The configure tag is set to logic zero. This triggers the background logic to place all pens at the predetermined configuration position.
2. The trend pen cluster function places the module in *configure* mode when the configure tag feedback signal is at logic zero. This is obtained from the tag exception report.

If the configure tag feedback signal remains at logic one, the download procedure cancels. The configuration to be downloaded is saved in the console and marked faulty.

3. When the module is in configure mode, the block configuration for each pen is sent one by one.
4. As each download of a pen completes, it is marked faulty or successful at the console. A download failure does not stop the download procedure. The download continues until all are processed.

The download process can be canceled by pressing **[ESC]** or calling another display. The pens that were not downloaded remain faulty until they are successfully downloaded.

ADDING OR CHANGING AN ANALOG TAG ASSIGNMENT

1. The function checks for an RCM block for the pen and a sum block. If neither block exists, the download of the pen fails.
2. If the restore block exists, it is deleted.
3. The restore block is added. It references the RCM block and sets it for logic zero when the module is returned to execute mode.
4. The sum block is configured as follows:

$S1 = n+1$	To reference the source input
$S2 = 6$	To reference a constant 1 0 value

S3 and S4 are set as explained in the preceding example.
5. The analog input block is added. It references the input signal (tag) to be trended.

OIS CONFIGURATION

If the source input is coming from a module within the same PCU as this module, function code 25 is used; if from a different PCU, function code 26 is used, if from INFI-NET system function code 121 is used.

6. Block $n+2$ is deleted. It is only used in digital inputs. When the module is put back in execute mode, the RCM block is set to logic zero (pen off position).

ADDING OR CHANGING A DIGITAL TAG ASSIGNMENT

1. The function checks for the existence of the RCM block for the pen and sum block. If neither block exists, the download of the pen fails.

2. If the restore block exists, it is deleted.

3. The restore block is added. It references the RCM block and initially sets it for logic zero when the module returns to execute.

4. The sum block is configured as follows:

S1 = $n+1$	To reference the input source
S2 = 6	To reference a constant 10 value
S3 = span	User-specified
S4 = zero	User specified

5. The digital input block is added. It references the input signal (tag) to be trended.

If the input is coming from a module within the same PCU as this module, function code 41 is used; if from a different PCU, function code 42 is used; if from INFI-NET system, function code 122 is used.

6. The analog transfer block is added. It references the digital input block in specification S3. The specifications are:

S1 = 5	Block supplying an analog 00 constant
S2 = 6	Block supplying an analog 10 constant
S3 = $n+1$	Digital input block
S4 = 0	Default
S5 = 0	Default

When the module is put back in execute mode, the RCM block is set to logic zero (pen off position).

DELETE PEN ASSIGNMENT

- 1 The sum block is reconfigured with the default specifications Its output signal is zero
- 2 The restore block is deleted. When the module is put in execute mode, the RCM block corresponding to the pen that no longer has a pen assignment resumes execution at logic zero (pen off position). The restore block is no longer there to restore its prior state

MODIFY SCALING FACTOR

Only the sum block is modified Specifications S3 and S4 are changed to reflect the zero and span parameters selected

The restore block is not modified The RCM block is set to its last state when the module is placed back in execute mode

TREND PEN CLUSTER CONFIGURATION FILES

The trend pen cluster configuration files reside in the [DATA USN02] directory They are

- TPCPF001.CF** contains configuration information gathered from the general parameters display for the trend pen recorder devices
- TPCPF002.CF** contains configuration information for the indicator station devices.
- TPCPF003.CF** contains configuration information for the output transfer devices
- PIO1DF_{nn}.CF** contains pen definition and pen assignment information for trend pen recorder device number *nn*, which ranges from one to 16 For example: **PIO1DF01.CF** is for trend pen recorder device number one.
- PIO2DF_{nn}.CF** contains bar definition and bar assignment information for indicator station device number *nn*, which ranges from one to eight
- PIO3DF_{nn}.CF** contains unit definition and unit assignment information for output transfer device number *nn*, which ranges from one to 16

These files need to be saved as a set per device type. For example, when transferring a trend pen cluster configuration for the

OIS CONFIGURATION

trend pen recorder device, transfer the **TPCPF001.CF** and all the **PJO1DDFn.CF** files. Additionally, the corresponding tags in the database need to be transferred or verified at the destination console.

The console does not verify configuration, this must be done manually after the transfer is complete. Verify referenced tags, set up the referenced target modules, and go through each trend pen recorder assignment.

User Task Definition

A user task interface allows a user-written program to access both static and dynamic database data from the console. It also can be written to call up displays at the console after being activated by the operator. The console provides several methods for activating these programs:

- Function key
- ADP pushbutton.
- Touch point (i.e., mouse or touch screen)
- Key select

The console requires user task definition for two purposes. The first is to identify specific user-written programs before the programs can be assigned to function keys or ADP pushbuttons. The second is to determine the operation of display call ups at the console initiated by a user-written program.

FUNCTION KEY AND ADP PUSHBUTTON ACTIVATION

For function key or ADP pushbutton activation of a user-written program, user task definition creates a list of up to 50 programs and assigns an index number to each program. The index number can then be referenced and assigned during keyboard configuration procedures. Once assigned, the console automatically activates a task after the operator presses a keyboard function key or an ADP pushbutton. Refer to *Keyboard Configuration* in this section for procedures to assign a user-written program to a function key or ADP pushbutton.

Each definition requires entering a *Task Node Name*, *Task Pathname* and *Task Activation Code*. If desired, a *Task Argument String* can be defined to be passed to the program upon activation.

The process engineer defines user tasks through the *User Task Definition* page (see Figure 16-86). To call this display, first press **(GENL FCTNS MENU)**, then select the following menu items in the sequence shown:

A Configuration → F User Task → A Definition

OIS CONFIGURATION

key or pushbutton selection infrequent, one-shot programs that do not require rapid activation can use this activation method

The wake option expects the program to already be running, but not currently active (i.e., hibernating). If it is not running, the console will execute then activate the program. Frequently activated programs that could possibly be required to respond to multiple activation requests should use the wake activation method

5 If desired, enter an argument string to be passed to the program upon activation of the program at the *Task Argument String* field. Up to 80 characters can be entered. Go to the next step if not required

6 Press **ENTER** to update the configuration. The index number can now be used in other configurations to identify the specific user-written program

7 Either continue to define user tasks by repeating Steps 1 through 6, or press **ESC** to exit the page.

KEY SELECT AND TOUCH POINT ACTIVATION

To enable the operator to activate a user-written program by touch point or key select, the select feature must be built into the display during its creation. The display must incorporate an interactive escape command (ei 107 and ei 108) to enable the operator to activate the program by using the mouse or pressing a certain key sequence. The escape command requires the same information as required for the *User Task Definition* page. Refer to **Display Generation** in this section for an explanation of methods to create displays, and Appendix B for an explanation of the interactive escape commands

DISPLAY CALL UP OPERATION

The call up of a display by a user-written program can operate in two different ways at the console. By default, the console requires the operator to first acknowledge the display activation before the display is brought up on the screen. This requirement, however, can be disabled causing the activation of a display to immediately replace the current display.

If enabled, a dialog box that identifies the window number where the display is to appear displays on the screen. This box contains some dialog generated by the program and two control buttons. The control buttons allow the operator to accept (i.e., *DISPLAY* button) the display and have it appear at the screen or reject (i.e., *IGNORE* button) the display and cancel the call up. A time out parameter in the user-written program can be used to automatically initiate a rejection of the display call up if the operator does not respond to the call up within a certain amount of time. The

time-out can also be set to zero to have the program wait for a response indefinitely

The process engineer defines user task operations through the *Application Options* page (see Figure 16-87). To call this display, first press **GENL FCTNS MENU**, then select the following menu items in the sequence shown

A Configuration → F User Task → B Options

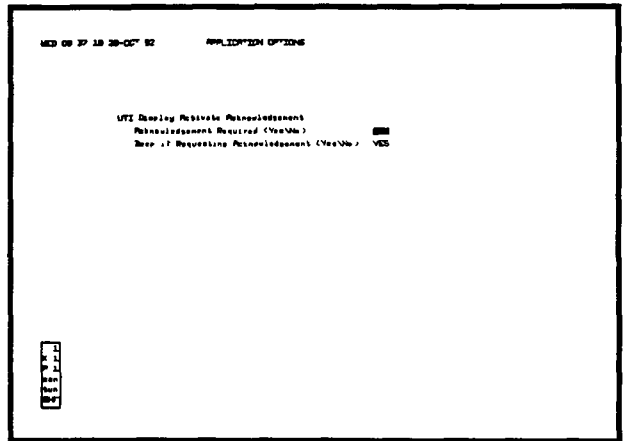


Figure 16-87 User Task Definition Options

To define the user task options

1. Use the OIS configuration keys listed in Table 16 1 to enter data and move between each display input field. At the *Acknowledge Required (Yes/No)* field, enter **YES** to have the user task dialog box appear at the screen when a display is called up by a user-written program. This enables the operator to either accept or reject the display call up. Enter **NO** to have the called display immediately replace the current display.
2. Enter **YES** at the *Beep if Requesting Acknowledge (Yes/No)* field to have the console sound a tone when the user task dialog box appears. Enter **NO** to not have a tone.
3. Press **ENTER** to update the configuration, then press **ESC** to exit.

SECTION 17 - TERMINAL UTILITIES

INTRODUCTION

NOTE This section does *not* give software installation procedures. Refer to the *Operator Interface Station, Hardware Manual* for the procedures.

This section explains the commands and utilities available to support the operator interface station (OIS). All utilities run from the OISENGR account. The utilities provide management capabilities for system files, and the ability to monitor the operation of both the VAXstation and the OIS application. The section also provides procedures for saving, restoring and transferring configuration files.

ACCESSING UTILITIES

To access the utilities described in this section, log into the OISENGR account. Refer to *Logging Into an Account* in the *Window Operations* section for procedures. While in this account, the utilities can be run by entering commands at the dollar sign (\$) prompt of a terminal or a terminal window (i.e., *Logn Window*). Additionally, some of the utilities can be accessed through pull-down menus of the session manager.

NOTE The procedures in this section assume that an auxiliary engineering keyboard is being used for data entry. The same functions can be performed using the mylar keyboard as the data entry device.

OIS DIRECTORIES

The OIS application uses three separate directories with subdirectories. Figure 17-1 shows the directory structure.

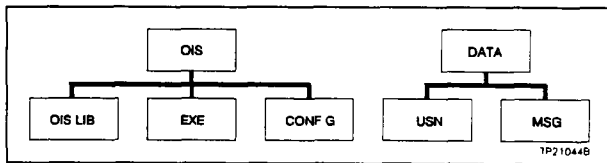


Figure 17-1 OIS Application Directories

The [OIS] directory contains the executable code, required libraries, and system configuration information. The [DATA] directory contains all data files for the OIS application.

TERMINAL UTILITIES**CHANGING DIRECTORIES**

Changing directories is a simple task. At the prompt (\$), type

D *directory-name* Return

where,

directory-name Name of the desired directory or subdirectory.

Entering a backslash (\) in place of *directory-name* causes the system to move up one directory level. For example, if the current directory is [OIS.CONFIG], type D\ to change to the [OIS] directory.

NOTE This utility is available only through the OIS accounts not the VMS operating system.

UTILITIES

The OIS console provides several utilities to support its operation. This part of the section explains each utility and its purpose.

Diagnostic Log

The OIS console maintains a diagnostic log during normal operations. This log can contain up to 2,000 messages. To display these messages on the screen or copy them to an intermediate file for printing, select *OIS Diagnostic Log* from the *OIS Utilities* pull-down menu of the session manager. The utility prompts for input as needed. Type 2 Return when prompted to select the *List To Screen* option to display the diagnostic log on the screen.

Access to the diagnostic log can also be gained by typing **VLOG** at the prompt (\$), then pressing Return.

NOTES

- 1 A VL command accesses a newer version of the diagnostic log.
- 2 The *OIS Diagnostic Log* option at the session manager uses the VLOG command.

Activity Monitor

The activity monitor utility allows monitoring system loading and resource usage. It provides information on throughput, memory pool utilization, loop time synchronization and mailbox usage for the interface unit of the console. Select *OIS Activity Monitor* from the *OIS Utilities* pull down menu of the session manager.

The default display shows information specific to the interface unit of the console. The screen updates automatically every ten seconds. To exit press Return.

Access to the activity monitor can also be gained by typing **ACTMON** at the prompt (\$), then pressing **(Return)**

VMS Monitor

The VMS monitor utility shows CPU utilization, I/O activity, page faulting and other system parameters This is a standard procedure that is part of the VMS operating system To look at statistics, type the following at the prompt (\$).

- MONITOR SYS (Return)** - overall system statistics
- MONITOR PROC/TOPC (Return)** top CPU users
- MONITOR PROC/TOPD (Return)** - top direct I/O users
- MONITOR PROC/TOPB (Return)** - top buffered I/O users
- MONITOR PROC/TOPF (Return)** - top page faulters

To exit from any of the monitor functions, press **(Ctrl)-Z**

Task Monitor

A task monitor function provides indications of software failures in the OIS application. If a task aborts, the console continues to operate and the task monitor function indicates termination of a task through an operator action message The message is *Software Failure, Please Restart Console*. The function allows completing any current operations before correcting the failure Refer to **OPERATOR ACTION REQUESTS** in the **OIS Operational Information** section for procedures to access the operator actions request page. And for a description of the indications the console gives to inform of any outstanding action requests

In most cases, a task problem can be corrected by resetting the OIS application. After completing any activities, initiate a manual reset to correct the problem Refer to **Reset** in the **Window Operations** section for procedures to reset the OIS application.

The console records the task failure as an entry in the diagnostic log The entry appears as *<taskname> is no longer in the CPU queue* *Taskname* is the name of the aborted task. Refer to **Diagnostic Log** in this section for procedures to access the diagnostic log utility.

While the task monitor works well for most tasks, it cannot inform of a failure in a task that controls keyboard input or a display output. If either occurs, reset the console

MSG Subdirectory

An MSG subdirectory utility is a useful troubleshooting tool. If a task or tasks in the OIS application continue to abort after successive restarts, the console writes information to a **.LOG** file in

TERMINAL UTILITIES

the [DATA.MSG] directory. This file provides a method of tracing a software problem. The console keeps up to five historical copies of this log in .SAV files. The .LOG file contains the most recent information after a system crash

To print these files to see why an abort keeps occurring

1. Ensure that a printer is on a terminal server
2. Use the VMS COPY command to direct the files to a printer
Either the .LOG or .SAV files can be printed

VMS Help

A help utility provides details and some examples of VMS commands. To access the help utility, type the following at the prompt (\$)

HELP **Return**

Follow the instructions on the screen.

Software Key Lock

A desktop VAXstation or personal computer running PATHWORKS software does not have a physical key lock available to prevent unauthorized use. A software key lock function allows setting key locks as desired.

The software key lock function is accessed through a terminal. Perform a SET HOST to the target OIS console, then log into the NOLOCK account. This is the default account name which can be changed. The system runs an interactive program that allows changing the key locks as desired. Exiting the program automatically logs out of the account.

STREAMING TAPE DRIVE OPERATION

A streaming tape drive (IIDST02 or IIDST03) provides the capability to store, restore and transfer OIS files. Refer to the *Operator Interface Station, Hardware Manual* for installation procedures.

Installing Tapes To install a tape and make it ready for use

NOTE The streaming tape drive unit should already be on since the console does not recognize it as an available peripheral if the drive is not powered up before console powerup.

1. Verify that the green LED located to the lower left of the tape slot is on.
2. Verify that the red button located to the lower right of the tape slot is off (not illuminated).

3. On the tape drive, raise the handle located below the tape slot and insert a formatted tape cartridge. Verify the red button comes on and the green LED goes off

NOTE Never force the handle as damage to both the tape and tape drive may result

4 Lower the handle to the original position After a few seconds, the red button turns off and the green LED turns on

5. Press the red button.

6 Verify the red button turns on and the green LED goes off, then starts flashing. After 30 seconds the green LED should stop flashing and remain on. The tape drive is now ready for use.

Unloading Tapes To unload a tape:

1 Press the red button This starts a tape rewind, which may take some time depending on the amount of tape to rewind

2 Verify the red button is off and the green LED is flashing while the tape rewinds Always ensure the red button is off before loading or unloading a tape.

3 After the green LED stops flashing and remains on the tape is rewound Raise the handle and remove the tape

SAVING AND RESTORING CONFIGURATIONS

This part of the section explains how to save an existing OIS configuration as a backup, or to restore later after a software release upgrade. It also gives the procedures to restore a saved configuration. The console provides utilities that once executed automatically save or restore a complete configuration The utilities require installation of a streaming tape drive

Save To run the save utility

1 Install a blank tape into the streaming tape drive Refer to **STREAMING TAPE DRIVE OPERATION** in this section for procedures to install a tape cartridge.

2. At the prompt (\$), type

SAVECONFIG **Return**

This command causes all configuration files to copy to the streaming tape for later restoration.

3. Unload the tape Refer to **STREAMING TAPE DRIVE OPERATION** in this section for procedures to unload a tape cartridge

TERMINAL UTILITIES

- Restore** To restore a configuration stored using the previous save procedure, perform the same steps given in the save procedure except in Step 2 enter **RESTORECONFIG** in place of **SAVECONFIG**. This command causes all configuration files to copy back to the console from the tape into the correct directories on the hard disk.

TRANSFERRING CONFIGURATION FILES

This part of the section provides procedures for transferring configurations. A transfer allows sending configuration files (.CF) or any type of files from one console to another. Once a configuration has been built, file transfer methods can be used to move an existing configuration to other consoles. The instruction gives procedures to

1. Transfer configuration files between OIS consoles.
2. Transfer a configuration created using the software, logging, database and graphics (SLDG) configuration utility

Transferring Between OIS Consoles

The procedures given allow transferring files over the DECnet network, on floppy disk, and using streaming tape cartridges. These procedures can be used to transfer an existing configuration to any other consoles.

DECNET FILE TRANSFER

For DECnet network transfer, the source and target console must reside on the same network. The network provides the most convenient and quickest transfer method. When running any of the transfer utilities, a file copies to the same directory on the target console as it occupied on the source console.

NOTE Use the asterisk (*) and percent sign (%) wild card characters of the VMS operating system when specifying a filename to define multiple transfers.

Export File To export a file from the source console

- 1 Log in at the source console. Use the login procedure given under **Logging Into an Account** in the **Window Operations** section.
- 2 At the prompt (\$), change to the [OIS CONFIG] directory by typing
D CONFIG **[Return]**
- 3 Export a file by typing

PUSH filename ext nodename [L] **[Return]**

where:

- filename* Name of the file to export
- ext* File extension
- nodename* Network node name assigned to the target console.
- L** A flag that forces the utility to give the status of a transfer at completion.

Import File To import a file on the target console

1 Log in at the target console. Use the login procedure given under *Logging Into an Account* in the *Window Operations* section

2 At the prompt (\$), change to the [OIS CONFIG] directory by typing

D CONFIG **(Return)**

3. Import a file by typing:

PULL filename ext nodename [L] (Return)

where

- filename* Name of the file to import
- ext* File extension
- nodename* Network node name assigned to the source console.
- L** A flag that forces the utility to give the status of a transfer at completion.

Export Subset The console provides utilities to transfer a subset of the database configuration files to another console over the network. The files in this subset include

ALMDESC.CF
CUSTGID.CF
EUDSCP.CF
LSDSCP.CF
TAGCNFG.CF
TAGDESC.CF
TAGNAME.CF

To export the subset of files:

1. Log in at the source console. Use the login procedure given under *Logging Into an Account* in the *Window Operations* section.

TERMINAL UTILITIES

2. At the prompt (\$), change to the [OIS CONFIG] directory by typing

D CONFIG **Return**

3. Type.

PUSHCFG *nodename* **Return**.

where:

nodename Network node name assigned to the target console

Import Subset To import the subset of files

1. Log in at the target console Use the login procedure given under *Logging Into an Account* in the *Window Operations* section

2. At the prompt (\$), change to the [OIS CONFIG] directory by typing

D CONFIG **Return**

3. Type.

PULLCFG *nodename* **Return**

where:

nodename Network node name assigned to the source console

FLOPPY DISK FILE TRANSFER

A floppy disk transfer uses standard VMS operating system commands to copy files from the console to floppy disk. Once on the floppy disks, the files can be copied to a target console.

NOTE Use the VMS operating system asterisk (*) and percent sign (%) wild card characters when specifying a *filename* to define multiple file transfers

Copy to Floppy To copy a file to floppy disk

1. At the prompt (\$), change to the [OIS CONFIG] directory by typing

D CONFIG **Return**

2. Insert a formatted floppy disk into the floppy disk drive.

- 3 Mount the floppy disk by typing.

MOUNT \$FLOPPY:volume-label **[Return]**

where

volume-label Identifier previously assigned to the floppy disk when initialized

- 4 Copy a file by typing:

COPY source-filename ext \$FLOPPY:[000000]destination-filename ext
[Return]

where:

source-filename Name of the file to copy

[000000] Not optional, enter exactly as shown including the brackets

destination-filename Name to assign to the file after copy.

ext File extension

NOTE The source and destination file names in most cases should be the same

Copy from Floppy To copy a file from floppy disk to the console

- 1 At the prompt (\$), change to the [OIS CONFIG] directory by typing

D CONFIG **[Return]**

- 2 Insert the floppy disk containing the file to copy into the floppy disk drive.

3. Mount the floppy disk by typing

MOUNT \$FLOPPY:volume-label **[Return]**

where:

volume-label Identifier previously assigned to the floppy disk when initialized

4. Copy a file by typing

COPY \$FLOPPY:[000000]source-filename ext destination-filename ext **[Return]**

TERMINAL UTILITIES

where:

[000000] Not optional, enter exactly as shown including the brackets

source-filename Name of the file to copy

destination-filename Name to assign to the file after copy

ext File extension

NOTE The source and destination file names in most cases should be the same

TAPE CARTRIDGE FILE TRANSFER

A tape transfer uses standard VMS operating system commands to copy files from the console to a tape cartridge. Once on tape, the files can be copied back to the target console. This requires installation of a streaming tape drive.

NOTE Use the VMS operating system asterisk (*) and percent sign (%) wildcard characters to define multiple file transfers.

Copy To Tape To copy a file to tape:

1 At the prompt (\$), change to the [OIS CONFIG] directory by typing

D CONFIG **[Return]**

2 Install a blank tape. Refer to **STREAMING TAPE DRIVE OPERATION** in this section for procedures to install a tape cartridge.

3 Mount the tape by typing.

MOUNT \$TAPE1:volume-label **[Return]**

where

volume-label Identifier previously assigned to the tape when initialized

4. Copy a file by typing

COPY *source-filename* *ext* **\$TAPE1:destination-filename** *ext*
[Return]

where.

source-filename Name of the file to copy

destination-filename Name to assign to the file after copy.

ext File extension

NOTE The source and destination file names in most cases should be the same

5. Unload the tape. Refer to **STREAMING TAPE DRIVE OPERATION** in this section for procedures to unload a tape cartridge

Copy From Tape To copy a file from tape to the OIS console

1. At the prompt (\$), change to the [OIS.CONFIG] directory by typing

D CONFIG **Return**

2. Install a blank tape Refer to **STREAMING TAPE DRIVE OPERATION** in this section for procedures to install a tape cartridge.

- 3 Mount the tape by typing

MOUNT \$TAPE1:volume-label **Return**

where:

volume-label Identifier previously assigned to the tape when initialized

- 4 Copy a file by typing:

COPY \$TAPE1:source-filename ext destination-filename ext
Return

where

source-filename Name of the file to copy

destination-filename Name to assign to the file after copy.

.ext File extension

NOTE The source and destination file names in most cases should be the same

- 5 Unload the tape. Refer to **STREAMING TAPE DRIVE OPERATION** in this section for procedures to unload a tape cartridge

Transferring SLDG Created Configurations

The software logging, database and graphics (SLDG) configuration utility running on an engineering work station (EWS) allows

TERMINAL UTILITIES

creating and modifying OIS configurations. The steps required to implement a configuration created with the SLDG program include:

- 1 Transferring files to directories of the OIS application after building the various pieces of a configuration with the SLDG utilities
- 2 *Converting the transferred files to an OIS format for use*

The SLDG program provides the capability to define several, but not all configuration requirements of the console. Refer to the **Personal Computer Software, Logging, Database, Graphics** instruction for the capabilities of the program. The configuration files to transfer include:

- Compressed ASCII tag database files (**.CP**)
- Display and symbol source files (**.DT**)
- Trend list text files (**.TTR** or **.CP**)
- Log definition files (**.LF**).

FILE TRANSFER

This instruction gives three separate methods for transferring SLDG configuration files. Use one of the following methods to transfer these files:

- Floppy disk
- DECnet network.
- EWS terminal emulation

Floppy Disk Transfer

NOTE The engineering work station must have the proper 3.5 inch (1.44 megabyte) floppy disk drive (PS/2 style) installed to transfer files from the engineering work station to the console using floppy disks. The console comes equipped with the appropriate floppy disk drive as standard equipment.

Configuration files created at the engineering work station can be transferred to the console on floppy disk. Copy the configuration files to floppy disk using the standard DOS COPY command, or using SLDG utilities.

**Reading from
Floppy Disk**

To read a file from floppy disk at a logged in console:

- 1 At the prompt (**\$**), type

MC PCDISK **Return**

2 Insert the floppy disk containing the file to read into the floppy disk drive. At the *PCDISK*> prompt, type

USE A: \$FLOPPY: Return

3 Type

EXPORT A:DOSSource-filename ext [OIS.CONFIG]
VMSdestination-filename ext Return

where:

<i>DOSSource-filename</i>	Name of the file to transfer.
<u>[OIS.CONFIG]</u>	Not optional; enter exactly as shown including the brackets
<i>VMSdestination-filename</i>	Name to assign to the file after transfer
<i>ext</i>	File extension, if reading a compressed text file, use the extension .CP

NOTE The source and destination file names in most cases should be the same

When reading a log file, type

EXPORT/FORMAT=FIXED A:DOSSource-filename.LF
[OIS.CONFIG]VMSdestination-filename.LF Return

where

<i>DOSSource-filename</i>	Name of the log file to transfer.
<u>[OIS.CONFIG]</u>	Not optional, enter exactly as shown including the brackets
<i>VMSdestination-filename</i>	Name to assign to the log file after transfer

Use the asterisk (*) wild card character to transfer multiple files. For example, to transfer all display files to the proper subdirectory using a wild card, type:

EXPORT A:*.DT [OIS.CONFIG] Return

[OIS.CONFIG] is not optional; enter exactly as shown including the brackets

4 When the transfer completes, remove the floppy disk

TERMINAL UTILITIES

5 Type EXIT **(Return)**.

**Writing to Floppy
Disk**

To write a file to floppy disk for transfer to the SLDG work station

1 At the prompt (\$), type

MC PCDISK **(Return)**

2 Insert a floppy disk into the drive At the *PCDISK>* prompt, type

USE A: \$FLOPPY: **(Return)**

3. Type

**IMPORT [OIS.CONFIG]VMSsource-filename ext A:
DOSdestination-filename ext **(Return)****

where

[OIS.CONFIG] Not optional, enter exactly as shown including the brackets

VMSsource-filename Name of the file to transfer

DOSdestination-filename Name to assign to the file after transfer.

ext File extension, if transferring compressed text files, use the extension *.CP*.

NOTE The source and destination file names in most cases should be the same

When writing a log file, type

**IMPORT/FORMAT=FIXED [OIS.CONFIG]VMSsource-filename.LF
A:DOSdestination-filename.LF **(Return)****

where

[OIS.CONFIG] Not optional, enter exactly as shown including the brackets

VMSsource-filename Name of the log file to transfer

DOSdestination-filename Name to assign to the log file after transfer

Use the asterisk (*) wild card character to transfer multiple files. For example, to transfer all display files from the [OIS.CONFIG] directory to floppy disk using wild cards, type

IMPORT [OIS.CONFIG] A:*.DT Return

[OIS.CONFIG] is not optional; enter exactly as shown including the brackets.

4 When the transfer completes, remove the floppy disk

5 Type **EXIT Return**

DECnet Network File Transfer

The necessary configuration files can also be transferred to the console from an engineering work station over the DECnet network. This requires

- 1 Running the PATHWORKS software program for DOS on the engineering work station
2. Connecting the engineering work station and the target console to the same DECnet network.
- 3 Connecting the engineering work station to the DECnet network using a PATHWORKS compatible interface (i.e., either a DEC DEPCA or 3-Com Ethernet board)

PATHWORKS supports the networking of personal computers and VAXstations. It allows using DOS COPY commands to transfer configuration files to the OIS console. This method provides a fast, reliable method of file transfer. Refer to the PATHWORKS documentation for command specifics. Some examples are given here.

For example, to transfer an ASCII text file to the console using PATHWORKS, enter the following while in the SLDG directory on the engineering work station:

**NFT COPY/MRS=255/VAR/ASCII *source-filename ext* NODE
account password::[OIS.CONFIG]*destination-filename ext* Return**

where.

- | | |
|-----------------------------|--|
| <i>source-filename</i> | Name of the file to copy |
| <i>destination-filename</i> | Name to assign to the file after copy. |
| <i>ext</i> | File extension |
| <i>account</i> | Name of an account on the target OIS console |



password Password of the account

[OIS.CONFIG] Not optional; enter exactly as shown including the brackets

NOTE The source and destination file names in most cases should be the same

The command can be used to transfer a file to a console on the DECnet network that is running PATHWORKS software. If the file is then required on other consoles, transfer it using any of the methods given under *Transferring Between OIS Consoles* in this section

For example, to transfer a text file from the console to an engineering work station running PATHWORKS, enter the following at the prompt (\$):

```
NFT COPY/MRS=255/VAR/ASCII NODE account password:
[OIS.CONFIG] source-filename ext destination-filename ext
(Return)
```

where:

account Name of the account logged into at the console

password Password of the account

[OIS.CONFIG] Not optional, enter exactly as shown including the brackets

source-filename Name of the file to copy

destination-filename Name to assign to the file after copy

ext File extension

NOTE The source and destination file names in most cases should be the same

EWS Terminal Emulation

Terminal emulation allows transferring configuration files to the console by using RS-232-C connection either directly to the console, or to the network through a terminal server. This requires running a commercially available VT-series terminal emulator program with file transfer capabilities (e.g., Reflection 2-Plus®) on the engineering work station.

Direct RS-232-C connection to the console is through the IIMKM02 keyboard interface port. This connection is not recommended for

® Registered trademark of Walker, Rcher & Quinn Inc.

consoles currently being used to direct process control since it requires disconnecting the mylar keyboard from the console

After loading the terminal emulation software on the engineering work station, run the file transfer capabilities as described in the documentation provided with the software. This applies to transferring files either to or from the console

NOTE The parameters required to transfer files in the proper format when using the Reflect on 2-Plus terminal emulator are method = BINARY host record size = 80

Due to RS-232-C connection, a transfer takes time to complete

TAG DATABASE BUILDER

After transferring the tag list configuration files (.CP) created with the SLDG program, a database build utility must be run to convert the database to an OIS format. The process engineer initiates the builder routine by typing DATABASE at the prompt (\$)

To run the database builder:

- 1 Perform an application shutdown if the OIS application is currently running. Use the procedures given under *Shutdown* in the *Window Operations* section. If the application is not running, continue with the next step.

NOTE It may be beneficial to open the message window before continuing to view status messages that indicate the progress of the database builder.

- 2 Open a terminal window and log into the OISENGR account. Refer to *OPENING A TERMINAL WINDOW* in the *Window Operations* section for procedures. If at a terminal, log into the OISENGR account. Refer to *Logging Into an Account* in the *Window Operations* section for procedures.

- 3 At the prompt (\$), type

DATABASE

The message window provides informational messages to identify the status of operations performed through the utility. The message *Database Build Initialization In Progress* appears at the message window after starting the utility. After a short time, the message *Initialization Complete* appears at the message window, and the following menu appears at the terminal window.

- 1 BUILD
- 2 UNBUILD
- 3 QUIT

Build The console requires the following files to reside in the [OIS CONFIG] directory to continue with a database build

EUDSCP.CP
LSDSCP.CP
ALMCOM11.CP
TAGLST1n.CP (1 of n)
TAGLST2n.CP (2 of n)
 .
 .
TAGLSTmn.CP (m of n)

NOTE The console requires an **ALMCOM11.CP** file even if alarm comments are not used. In this case, create an alarm comment file using the SLDG program with at least one bank alarm comment

To initiate a build.

1 Select 1 **BUILD**. The console prompts for the number of tag list files

2 Enter the number of tag list files, which must correspond to the *n* portion of the **TAGLSTmn.CP** files. The console checks for a complete set of tag list files based on this entry before continuing. If any files are missing, it immediately exits the build routine and displays the name of the missing files. If no files are missing, the console prompts for maximum number of tags

3 Enter the maximum number of tags used by the system. After entering, the build begins

A start time displays along with messages that reflect various stages of the build sequence. The display presents a series of dots to identify the current progress of the database build. A new dot displays each time 85 tags have been built. This allows monitoring the progress of the build and estimating the completion time since a database build takes considerable time.

When the entire build process completes successfully, the message:

Tag List build completed successfully

appears.

4 Once complete, select the 3 **Quit** option.

If the console detects an unrecoverable error while performing a build, specific messages appear to indicate a failure, and to indicate that the build cannot continue. The entire database build is first made to temporary files with **.XX** extensions. These temporary files do not become permanent unless the build is successful. The old database is retained until the new database is completely and successfully built.

Examples of unrecoverable errors are tag indexes out of sequence or an index greater than the configured system size. If an error occurs while decoding the input of a tag, a message displays to indicate that the tag was made inactive. This is considered to be a recoverable error and the build continues.

The database build writes the following files to the [DATA USN02] directory

EUDSCP.CF	Engineering unit descriptors
LSDSCP.CF	Logic state descriptors
ALMDESC.CF	Alarm comments
TAGNAME.CF	Tag names
TAGDESC.CF	Tag descriptors
TAGCNFG.CF	Tag configurations
CUSTTGID.CF	Customer identifier.

Upon successful completion of the tag database build, the console automatically deletes the .CF files from the [DATA USN02] directory

Unbuild Database unbuild performs the exact opposite of the database build to create the .CF files for transfer to an engineering work station. To unbuild the database, select 2 *UNBUILD*.

USER-CREATED DISPLAY AND SYMBOL FILES

A display or symbol source file (.DT) must be translated and assembled before it can be used in normal OIS operations. All display files transferred to the console from the SLDG work station reside in the [OIS.CONFIG] directory. Three utilities provide the display file processing capabilities: XLATEDT, DOT and PROCDT.

In certain cases, the display cache memory should be flushed before using either the DOT or PROCDT utilities. Flush the cache memory if the following conditions exist:

- The OIS application is running
- A new version of a display that is currently on the screen is to be processed

To flush the cache, type:

FLUSH Return

at the prompt (\$)

XLATEDT The XLATEDT utility translates an EWS display file in the [OIS.CONFIG] directory to OIS format. It creates a translated copy of the file using the same name and extension in the

TERMINAL UTILITIES

[DATA.USN54] directory Run this utility while in the [OIS CONFIG] directory

To run the utility

1. At the prompt (\$), change to the [OIS.CONFIG] directory by typing

D CONFIG **(Return)**

- 2 Type:

- 2 Type

XLATEDT filename **(Return)** (source file name without **.DT** extension)

or

XLATEDT * **(Return)** (wild card for all files)

The wild card asterisk (*) character can also be used to process multiple files having names that match a certain character pattern For example, entering **D*** as the file name causes the console to process all files with names having **D** as their first character. Entering **DISPL*1** processes all files having names that start with **DISPL** and end with **1** (e.g., **DISPLA1**, **DISPLB1**, **DISPLC1**, etc)

DOT The **DOT** utility generates an assembled display file (**.DU**) or symbol file (**.DL**) in the appropriate [DATA.USNxx] directory. The **DOT** utility performs the same function as the *Display Generator* available through menu selections of the OIS application Refer to *Display Generation* in the *OIS Configuration* section for an explanation. Run the **DOT** utility while in the [DATA USN54] directory

To run the utility:

NOTE Use the **DOT** utility on only those files already processed usng the **XLATEDT** utility

1. At the prompt (\$), change to the [DATA USN54] directory by typing:

D USN54 **(Return)**

- 2 Type

DOT filename.DT **(Return)** (requires the **.DT** extension)

PROCDT The **PROCDT** utility performs the same function as both the **XLATEDT** and **DOT** utilities It translates an EWS display file in the [OIS CONFIG] directory to OIS format, generates a translated

copy of the file in the [DATA.USN54] directory, and creates an assembled display (.DU) or symbol file (.DL) Run this utility while in the [OIS.CONFIG] directory

To run the utility

1 At the prompt (\$), change to the [OIS.CONFIG] directory by typing.

D CONFIG **(Return)**

2. Type:

2. Type

PROCDT filename **(Return)** (source file name without .DT extension)

or -

PROCDT * **(Return)** (wild card for all files)

The wild card asterisk (*) character can also be used to process multiple files having names that match a certain character pattern For example, entering D* as the file name causes the console to process all files with names having D as their first character. Entering **DISPL*1** processes all files having names that start with **DISPL** and end with 1 (e.g., **DISPLA1**, **DISPLB1**, **DISPLC1**, etc.)

Refer to Table 17-1 for a summary of the display file processing using these utilities

Table 17-1. Display File Processing

Utility	Directory		
	[OIS CONFIG]	[DATA.USN54]	[DATA.USNxx]
XLATEDT	filename.DT	filename.DT	
DOT		filename.DT	filename.DU/.DL
PROCDT	filename.DT	filename.DT	filename.DU/.DL

NOTE #name is the name of the display file generated and transferred from an engineering work station

TREND DATABASE BUILDER

After transferring the trend list configuration file (.TTR or .CF) created with the SLDG program, a database build utility must be run to convert the database to an OIS format To run the builder:

1 At the prompt (\$), type

TRENDS **(Return)**

2. Continue as directed by the prompts Type the name of the file from which to build the trend database in the format:

filename.TTR (uncompressed form)

filename.CP (compressed form)

where:

filename Name of the trend list file transferred from the engineering work station

Upon completion, the utility writes the trend definition file to the [DATA USN02] directory.

LOG REPORT DEFINITION

After transferring log definition files (.LF) created with the SLDG program, the files must be converted to an OIS format To convert the files

1 At the prompt (\$), type.

LOGS **(Return)**

2 Continue as directed by the prompts Type the name of the log file to convert in the format

logname.LF

where:

logname Name of the log definition file transferred from the engineering work station

Upon completion, the utility writes the log definition files to the appropriate [DATA USN λ X] directory

FILE COMPRESSION

The OIS console provides a compress and uncompress file capability for ASCII text files In the case of a large text file, a compression option can be used to reduce the size of the file prior to transfer, which speeds up the transfer process

To compress a file, at the prompt (\$), type

COMPRESS **(Return)**

filename ext **(Return)**

This creates a compressed file with a .CMP extension

To uncompress a file, at the prompt (\$), type:

UNCOMPRESS **(Return)**

filename.CMP **(Return)**

This utility creates a file with the same filename and a **.TXT** extension.

ENABLING TAG LIST BROADCAST MODE

An entire tag list can be broadcast to this OIS console from a work station running the global database manager (GDM) program; however, this requires the OIS application to be put in an off-line tag list broadcast mode by running a utility at a terminal or a terminal window. The procedures are similar to running the database builder. The procedures to take the application off-line to receive a broadcast tag list, then to put it back on-line follow.

Off-Line Mode Before initiating a broadcast from a work station, perform the following steps

1 Shut down the OIS application if it is currently running. Use the procedures given under **Shutdown** in the **Window Operations** section. If the application is not running, continue with the next step.

2 Open a terminal window and log into the OISENGR account. Refer to **OPENING A TERMINAL WINDOW** in the **Window Operations** section for procedures. If at a terminal, log into the OISENGR account. Refer to **Logging Into an Account** in the **Window Operations** section for procedures.

3 At the prompt (\$), type

TAGMODE **(Return)**

On-Line Mode Upon completion of the tag list broadcast, put the OIS application back in an on-line mode by doing one of two things

At the prompt (\$), type

OISRESET **(Return)**

- or -

Choose **OIS Reset** from the **Startup/Shutdown** pull-down menu of the session manager.

NOTE The **OIS Reset** option first shuts down the **TAGMODE** utility then starts the **OIS** application. The same can be accomplished by first performing an **OIS Shutdown** (**OISSHUTDOWN**) then an **OIS Startup** (**OISSTARTUP**).

TERMINAL UTILITIES

COMMANDS

This part of the section provides a quick reference of utility commands that can be run through a terminal or terminal window. It is intended to be a reference only. Detailed procedures for using these commands are given earlier in this section and in other sections of the instruction. This part of the section does not detail VMS commands

ACTMON

PURPOSE: The **ACTMON** command starts an activity monitor utility that allows monitoring system loading and resource usage. It provides information on throughput, memory pool utilization, loop time synchronization and mailbox usage for the interface unit of the console

COMMAND: **ACTMON**

PROCEDURE: At the prompt (\$), type:

ACTMON Return

The default display shows information specific to the interface unit of the console. The screen updates automatically every ten seconds. To exit press Return.

TERMINAL UTILITIES

D

PURPOSE: The **D** (directory) command allows changing directories

COMMAND: **D** *directory-name*

where

directory-name Name of the desired directory or subdirectory. OIS directories and subdirectories include.

```
DATA  ┌── MSG
      └── USN
OIS   ┌── CONFIG
      ├── EXE
      └── OISLIB
```

Entering a backslash (\) in place of *directory-name* causes the system to move up one directory level. For example, if the current directory is [OIS CONFIG], type **D** to change to the [OIS] directory

Example **D CONFIG**

DATABASE

PURPOSE: The **DATABASE** command starts a database builder utility that allows converting a database created with the **SLDG** program to an **OIS** format, or converting the **OIS** database to a format readable by the **SLDG** program

COMMAND: **DATABASE**

DISCUSSION: The message window provides informational messages to identify the status of operations performed through the utility. The message *Database Build Initialization In Progress* appears at the message window after starting the utility. After a short time, the message *Initialization Complete* appears at the message window, and the following menu appears at the terminal window:

- 1 *BUILD*
- 2 *UNBUILD*
- 3 *QUIT*

The console requires the following files to reside in the [OIS CONFIG] directory to continue with a database build:

- EUDSCP.CP**
- LSDSCP.CP**
- ALMCOM11.CP**
- TAGLST1n.CP** (1 of n)
- TAGLST2n.CP** (2 of n)
- ⋮
- ⋮
- TAGLSTm.CP** (m of n)

The database build writes the following files to the [DATA USN02] directory:

- EUDSCP.CF** Engineering unit descriptors
- LSDSCP.CF** Logic state descriptors
- ALMDESC.CF** Alarm comments
- TAGNAME.CF** Tag names
- TAGDESC.CF** Tag descriptors
- TAGCNFG.CF** Tag configurations
- CUSTTGID.CF** Customer identifier

Refer to **TAG DATABASE BUILDER** in this section for procedures to initiate a build or unbuild of the database, and additional information.

TERMINAL UTILITIES

DOT**PURPOSE:**

The DOT command starts a utility that generates an assembled display file (*.DU*) or symbol file (*.DL*) in the appropriate [DATA USNxx] directory. The DOT utility performs the same function as the *Display Generator* available through menu selections of the OIS application. Refer to *Display Generation* in the *OIS Configuration* section for an explanation.

COMMAND:

DOT filename.DT

DISCUSSION:

Run the DOT utility while in the [DATA USN54] directory. Use the DOT utility on only those files already processed using the XLATEDT utility. Refer to *USER-CREATED DISPLAY AND SYMBOL FILES* in this section for procedures and further explanation.

PURPOSE: The **LOGS** command starts a utility used to convert a log definition file (*.LF*) created with the SLDG program to an OIS format.

COMMAND: **LOGS**

DISCUSSION: After starting the utility, continue as directed by the prompts
The log name is in the format:

logname.LF

where

logname Name of the log definition file transferred from the
SLDG work station

TERMINAL UTILITIES

OISRESET

PURPOSE:

The **OISRESET** command initiates a reset of the OIS application at the main console or an auxiliary terminal. Some configuration procedures require a reset to enter changes to the OIS operating parameters. A reset also may be required due to a system problem. An OIS reset does not require a physical shutdown of the entire console. Reset of the OIS application can also be done remotely from a terminal.

COMMAND:

OISRESET

DISCUSSION:

Refer to **Reset** in the **Window Operations** section for further explanation.

OISSHUTDOWN

- PURPOSE:** The **OISSHUTDOWN** command initiates a shutdown of the OIS application at the main console or an auxiliary terminal. Shutdown of the OIS application can also be done remotely from a terminal.
- COMMAND:** **OISSHUTDOWN**
- DISCUSSION:** Refer to *Shutdown* in the *Window Operations* section for further explanation.

OISSTARTUP

- PURPOSE:** The OISSTARTUP command initiates a start-up of the OIS application at the main console or an auxiliary terminal. Start-up of the OIS application can also be done remotely from a terminal.
- COMMAND:** OISSTARTUP
- DISCUSSION:** After the start-up sequence completes, an OIS application window and icons appear to indicate a successful start up. Normal process operations can now be performed. Refer to *Start-Up* in the *Window Operations* section for further explanation.

PROCDT

PURPOSE: The **PROCDT** command starts a utility that performs the same function as both the **XLATEDT** and **DOT** utilities. It translates an EWS display file in the [OIS CONFIG] directory to OIS format, generates a translated copy of the file in the [DATA USN54] directory, and creates an assembled display (**.DU**) or symbol file (**.DL**).

COMMAND: **PROCDT** *filename*

where.

filename Source file name without **.DT** extension. A wild card asterisk (*) can be used to process all **.DT** files in the directory.

The wild card asterisk (*) character can also be used to process multiple files having names that match a certain character pattern. For example, entering **D*** as the file name causes the console to process all files with names having **D** as their first character. Entering **DISPL*1** processes all files having names that start with **DISPL** and end with **1** (e.g., **DISPLA1**, **DISPLB1**, **DISPLC1**, etc.)

DISCUSSION: Run this utility while in the [OIS CONFIG] directory. Refer to **USER-CREATED DISPLAY AND SYMBOL FILES** in this section for procedures and further explanation.

TERMINAL UTILITIES

RESTORECONFIG

- PURPOSE:** The **RESTORECONFIG** command starts a utility that automatically restores a configuration previously saved using the **SAVECONFIG** utility. The utility copies all configuration files to the console and stores them in the correct directories on the hard disk.
- COMMAND:** **RESTORECONFIG**
- DISCUSSION:** Refer to **SAVING AND RESTORING CONFIGURATIONS** in this section for procedures and further explanation.

SAVECONFIG

- PURPOSE:** The **SAVECONFIG** command starts a utility that automatically saves a complete backup copy of the current configuration to tape. Use the **RESTORECONFIG** utility to copy all configuration files to the console
- COMMAND:** **SAVECONFIG**
- DISCUSSION:** Refer to **SAVING AND RESTORING CONFIGURATIONS** in this section for procedures and further explanation

TERMINAL UTILITIES

TAGMODE

PURPOSE: The **TAGMODE** command runs a utility that puts the OIS application in an off-line mode to receive a tag list broadcast from a work station running the global database manager (GDM) program. The procedures are similar to running the database builder.

COMMAND: TAGMODE

DISCUSSION: The OIS application must be put on-line after receiving the broadcast by initiating a reset of the console. Refer to **ENABLING TAG LIST BROADCAST MODE** in this section for procedures and further explanation.

TRENDS

PURPOSE: The **TRENDS** command starts a database build utility that converts a trend list file (**.TTR**) containing a trend list created with the **SLDG** program to an **OIS** format

COMMAND: **TRENDS**

DISCUSSION: After starting the utility, continue as directed by the prompts. The file name of the trend list file is in the format

filename.TTR

where:

filename Name of the trend list file transferred from the **SLDG** work station

Upon completion, the utility writes the trend definition file (**TRENDEF.CP**) to the [DATA USN02] directory.

TERMINAL UTILITIES

VL or VLOG**PURPOSE:**

The **VL** or **VLOG** command runs a diagnostic log utility. The **VL** command calls a newer version of the log. The diagnostic log can contain up to 2,000 messages. The utility allows either displaying these messages on the screen or copying them to an intermediate file for printing.

COMMAND:**VL****VLOG**

XLATEDT

PURPOSE

The XLATEDT command starts a utility that translates an EWS display file in the [OIS CONFIG] directory to OIS format. It creates a translated copy of the file using the same name and extension in the [DATA.USN54] directory.

COMMAND:

XLATEDT *filename*

where:

filename

Source file name without .DT extension. A wild card asterisk (*) can be used to process all .DT files in the directory.

The wild card asterisk (*) character can also be used to process multiple files having names that match a certain character pattern. For example, entering D* as the file name causes the console to process all files with names having D as their first character. Entering DISPL*1 processes all files having names that start with DISPL and end with 1 (e.g., DISPLA1, DISPLB1, DISPLC1, etc.).

DISCUSSION:

Run this utility while in the [OIS.CONFIG] directory. Refer to **USER-CREATED DISPLAY AND SYMBOL FILES** in this section for procedures and further explanation.

22 23 26 04 10 07

Bailey

APPENDIX A - AUXILIARY ENGINEERING KEYBOARD

OVERVIEW

The auxiliary engineering keyboard is mapped to match the mylar keyboard that is standard with the IIOIS40 console. This allows accessing operator interface station (OIS) functions directly through the engineering keyboard. There are three types of auxiliary engineering keyboards available: an IIAKB02 or IIAKB03 keyboard used with the IIMKM02 keyboard interface, or an LK-201 type keyboard that can connect directly to the VAXstation of the console.

Figure A-1 shows the key mapping for these keyboards. There are some differences in layout between each type of keyboard, but the capabilities and functions accessed through them remain the same.

NOTES

1 Keyboard mapping works in both ways. For example, if **GENL FCTNS MENU** on the mylar keyboard is pressed while in a terminal window, it acts as the hold screen key (i.e. **F1**).

2 When using any one of the auxiliary engineering keyboards in O/S mode, ignore any key assignments printed on the keys.

Depending on the type of keyboard being used, press **Alt**, **Alt Function** or **Compose Character** in conjunction with another key to access the OIS function shown in Figure A-1 (e.g., Home, Disp, F1, F2, etc.). Press **Alt** when using the IIAKB02 keyboard,

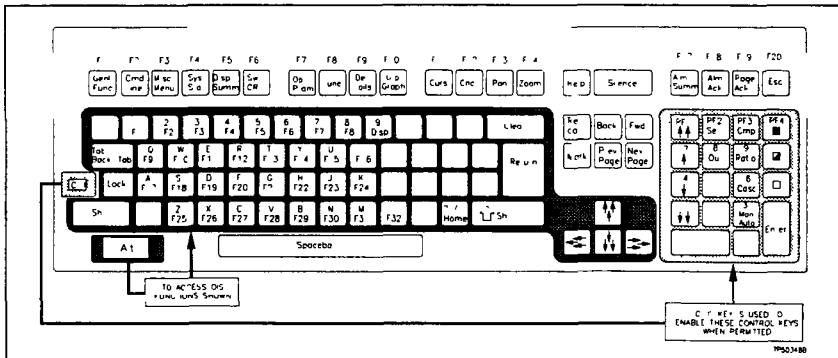


Figure A-1 Key Mapping for the Auxiliary Engineering Keyboard

AUXILIARY ENGINEERING KEYBOARD

Compose Character when using the LK-201 keyboard, or **Alt Function** or **Compose Character** when using the IIAKB03 keyboard. For example, to access the alarm summary (**ALARM SUMM**)

Press **Alt** **F17**

Press **Ctrl** in conjunction with a key in the numeric keypad to access the OIS process control function shown for that key. For example, to change to ratio mode for a station (**RATIO**)

Press **Ctrl-0** (in the numeric keypad)

Table B-2. Color Index

Index	Color	Index	Color
0	Black	8	Orange
1	White	9	Yellow-green
2	Red	10	Green-cyan
3	Green	11	Cyan-blue
4	Blue	12	Blue-magenta
5	Cyan	13	Magenta-red
6	Magenta	14	Dark gray
7	Yellow	15	Light gray

NOTE For each color there are four shades available making the total number of available colors 64 (0 to 63). Add 128 to a color code for a flashing color.

Display Element Syntax

All display source files require the following format and syntax

```

bm 0,Name~
bp 0,Name~,0
sm
bb
graphic and escape commands
.
.
.
ep
em
%%

```

All symbol source files referenced or used in display source files require the following format and syntax

```

bp 0 Name~ 0
sm
bb
rf
graphic and escape commands
.
.
.
ep
%%

```

GRAPHIC AND ESCAPE COMMANDS

All pop up symbol source files referenced or used in display source files require the following format and syntax

```
bp 0,Name-,0
sm
bb
rf
cr
es
ei
pe 124,CONTROL-
ep
%%
```

General Display and Symbol Escape Commands

This part of the section identifies the commands that create a display or symbol source file, and the attributes of that file. It also contains the *graphic commands* that create figures and static text, and the characteristics of them.

88 83 38 04 10 07

APPENDIX B - GRAPHIC AND ESCAPE COMMANDS

INTRODUCTION

This appendix lists the commands and escapes that define the elements and capabilities of a display or symbol enabling operator interface station (OIS) functions. These commands create the display and symbol source files that eventually become the assembled display used in operations.

Either the software oriented display generator (SODG) or the EDT text editor can be used to create or edit display and symbol source files. The SODG utility is available at an engineering work station running the software, logging, database and graphics (SLDG) software, and the EDT text editor is available at the console through a terminal window.

The display source files reside on the hard disk as *.DT* files. Once assembled using the *Display Generator* function (or the translation utilities described in the *Terminal Utilities* section) they become *.DU* display files and *.DL* symbol files. Some example display and symbol source files are given at the end of this section.

Display Guidelines

Some guidelines to follow when creating the source files and entering escape commands are:

1. File limits are 2,500 70-character line entries per display file.
2. User coordinate space for creating displays is 400,400 to 9600,7200.
3. If any command has an x-coordinate or y-coordinate value of zero, that element does not appear on the display.
4. Commands and parameters should be contained on one line. If not, use the continuation character /.
5. Commands must be in lower case characters.
6. Text color, line color, fill color and marker color must appear in this order as the first elements in the symbol file immediately after the **bb** command. For dynamic symbols, the first occurrence of each will be overwritten by dynamic symbol changes.
7. A non-good symbol takes precedence over an alarm state and value symbol in a dynamic symbol. Generally the order of appearance is quality, alarm, then value. A symbol without

leading color commands changes color according to the color parameters of a dynamic symbol escape.

8 When using circle (cc) and polygon (pg) commands that need to be filled, the following syntax and order applies

is interior style

fc - fill color

lc - line color (only if perimeter is on)

cc or pg - circle or polygon

If there is another pg or cc command in the file and it is not to be filled, add an is command set to 0 (hollow) prior to the next pg or cc command occurrence

9 After creating a source file, it can be edited on a personal computer running the SLDG program To do so, copy the .DT file from the console to a floppy disk

10 Enter all escape types and subtypes in decimal

11 Generally, any display without escape for control should not contain pe 124,CONTROL~ Any menu display that does not require any control action using either ei 107,83 or ei 108,83 and has only text and display selects using ei 107,82 or ei 108,82 *should not* have an escape for control

12 Refer to Table B-1 and Table B 2 when entering key and color parameters respectively

13 When defining touch point select commands for use with touch screen, each touch area must be at least 400 x 400 display units separated by 40 units Touch point areas for mouse or trackball selects must be at least 40 x 40 separated by 40 units

14 The console accepts a comma (,), semicolon (;) or colon (:) as a separator between parameters

Table B-1 Key Legend

Key	Descriptor
PREV PAGE	33305
NEXT PAGE	33309
ESC	33663
ENTER	33659
HELP	33619
0 9	ASCII codes 48 to 57
A Z	ASC codes 65 to 90

FILE DELIMITERS

The console requires file delimiters placed in a display and symbol source file to separate each section of the file, for example, the beginning, body and end of the file

These delimiters are placed both before and after the body of the source file. The body contains the escape commands that define the display features and characteristics. Some delimiters pertain to both display and symbol source files while others apply only to one or the other.

Begin Body (bb)

PURPOSE: The begin body command indicates that graphic commands follow. This must be present in a display or symbol source file before any graphic commands.

COMMAND: bb

Begin Metafile (bm)

PURPOSE: The begin metafile command must be present on the first line in a source file for a graphic display.

COMMAND: bm 0,metafile name~

where

0 Required

metafile name Maximum of 27 characters followed by a tilde (~)

Example bm 0,D03SD001~

GRAPHIC AND ESCAPE COMMANDS

Begin Picture (bp)

PURPOSE: The *begin picture command* identifies the beginning of the escape commands that make up an element or elements of the display. Each time a *bp* command is encountered, all variables of the preceding element return to default states. Several *bp* commands can appear in a single file.

COMMAND: *bp flag,text~ color*

where

flag 0 clear screen to *color*, 1 - do not clear screen

text Maximum of 28 characters for description purposes only, must end with a tilde (~)

color Background color for the picture. This is a color index number from 0 to 63, refer to Table B-2 for color index numbers.

Example *bp 1,dcsfull~,0*

End Metafile (em)

PURPOSE: The *end metafile command* marks the end of the display source file.

COMMAND: *em*

End Picture (ep)

PURPOSE: The *end picture command* causes a picture output.

COMMAND: *ep*

End of Input (%%)

PURPOSE: The *end of input characters* mark the end of a display and symbol file.

COMMAND: *%%*

FILE ATTRIBUTES

The console requires certain commands placed in the file to identify the overall characteristics of the display or symbol. For example, the security level required to access functions available through the display or symbol.

Some of these commands can be placed in various locations within the source file while others have certain requirements. Some delimiters pertain to both display and symbol source files while others apply only to one or the other.

Clip Rectangle (cr)

PURPOSE:

The clip rectangle command defines the opposite corners of a control window rectangle for a pop up element, and the area that clears on the next call up of a pop up element. Use the command to create pop up control elements. Place the command after the **bb** and **rf** command in the symbol source file.

COMMAND:

cr *x1-coordinate,y1-coordinate x2-coordinate,y2-coordinate*

where

x1-coordinate,y1-coordinate Lower left corner coordinate

x2-coordinate,y2-coordinate Upper right corner coordinate

Example **cr 1000,1000,3180,4280**

VDC Extent (ex)

PURPOSE:

The VDC extent command defines the unit size of the screen area. The default is 10,000 by 7,500 units, which is *x,y* coordinates of 0,0 lower left corner and 10000,7500 upper right corner. This is required only if changing the default size. Place the command at the beginning of the display source file.

COMMAND:

ex *x-coordinate,y-coordinate*

where

x-coordinate Lower left coordinate

y-coordinate Upper right coordinate

Example **ex 0,0,10000,7500**

GRAPHIC AND ESCAPE COMMANDS

Reference (rf)

PURPOSE: The reference command provides a reference point when creating symbols. All coordinates of the symbol are referenced to this starting point Use this command in symbol files only

COMMAND: *rf x-coordinate,y-coordinate*

Example **rf 400,1000**

Remark (rm)

PURPOSE: The remark command can be used to enter remarks into the source file These remarks do not appear in the final display presentation Remarks can be placed anywhere in the file.

COMMAND: *rm text-*

where

text Maximum of 69 characters followed by a tilde (~)

Example **rm FULL STATION SYMBOL~**

Security Mask (sm)

PURPOSE: The security mask command sets the security level access for a display and symbol

COMMAND: *sm primary-level,secondary-level*

where

primary-level Security level from 1 to 16 The console checks the *primary* level first

secondary-level Security level from 1 to 16 The console checks this level after the *primary* The *secondary* level is optional

Examples **sm 1**

sm 1,10

GRAPHIC PRIMITIVES

Graphic primitives create the figures and text that appear as part of a display or symbol. The commands to draw figures include arc (both open and closed), circle, polygon, polyline, polymarker and rectangle. Graphic attribute commands set the characteristics of the figure or text (e.g., color, width, type, etc).

Arc (ac)

PURPOSE: The arc command defines an open arc defined by a starting, intermediate and ending coordinate. The attributes of the line creating the arc can be defined using an lc, lt and lw command.

COMMAND: ac *x1-coordinate,y1-coordinate;x2-coordinate,y2-coordinate, x3-coordinate,y3-coordinate*

where

x1-coordinate,y1-coordinate Starting point coordinate

x2-coordinate,y2-coordinate Intermediate point coordinate.

x3-coordinate,y3-coordinate Ending point coordinate

Example ac 1000,1000;2000,500;3000,1000

Append Text (at)

PURPOSE: The append text command appends a defined text string to a previous character string. The command can be used to define up to an additional 69 characters if the original string exceeds the maximum of 69 characters, or to change text attributes. This command must be preceded by a tx command or another at command. A ch and cs command can be used to define the height and spacing of the characters.

COMMAND: at *flag,string-*

where

flag 0 - normal text string, 1 - append following at command text

string 0 to 69 characters followed by a tilde (-)

Example at 0,SILO-

GRAPHIC AND ESCAPE COMMANDS

Closed Arc (ca)

PURPOSE: The closed arc command produces a pie-shaped arc defined by a starting, intermediate and ending coordinate. The attributes of the line creating the arc can be defined using an *lc* and *lt* command. The console automatically closes the arc. When the arc is to be filled, it must be preceded by an *is* and *fc* command, and an *lc* command if perimeter is on for the *is* command.

COMMAND: *ca* *x1-coordinate,y1-coordinate,x2-coordinate,y2-coordinate,x3-coordinate,y3-coordinate,flag*

where.

x1-coordinate,y1-coordinate Starting point coordinate

x2-coordinate,y2-coordinate Intermediate point coordinate

x3-coordinate,y3-coordinate Ending point coordinate

flag Arc subtype, 0 chord arc (future),
1 - pie arc

Example. *ca 1000,1000;2000,500;3000,1000;1*

Circle (cc)

PURPOSE: The circle command draws a circle based on a center point and radius parameter. The attributes of the line creating the circle can be defined using an *lc* and *lt* command. When the circle is to be filled, it must be preceded by an *is* and *fc* command, and an *lc* command if perimeter is on for the *is* command.

COMMAND: *cc* *x-coordinate,y-coordinate,radius*

where

x-coordinate,y-coordinate Center point coordinate

radius Number of display units from center point

Example *cc 1650,4450;50*

Polygon (pg)

PURPOSE: The polygon command draws a polygon figure based on a starting point and up to 30 displacement parameters. The attributes of the line creating the figure can be defined using an *lc*, *lt* and *lw* command. When the polygon is to be filled, it must be preceded by an *is* and *fc* command, and an *lc* command if perimeter is on for the *is* command.

COMMAND: `pg x-coordinate,y-coordinate,x-displacement,y-displacement~`

where:

`x-coordinate,y-coordinate` Starting point coordinate.

`x-displacement,y-displacement` X-offset and y-offset display units from the start or last displacement. Up to 30 displacements can be defined with the last followed by a tilde (~)

Example `pg 950,950;100,0;0,100;-100,0;0,-100~`

Polyline (pl)

PURPOSE: The polyline command draws a polyline figure based on a starting point and up to 30 displacement parameters. The attributes of the line can be defined using an *lc*, *lt* and *lw* command.

COMMAND: `pl x-coordinate,y-coordinate,x-displacement,y-displacement~`

where:

`x-coordinate,y-coordinate` Starting point coordinate.

`x-displacement y-displacement` X-offset and y offset display units from the start or last displacement. Up to 30 displacements can be defined with the last followed by a tilde (~)

Example `pl 950,950;100,0;0,100;-100,0~`

GRAPHIC AND ESCAPE COMMANDS

Polymarker (pm)

PURPOSE: The polymarker command draws a figure comprised of polymarker points. The figure is based on a starting point and up to 30 displacement parameters. The attributes of the line can be defined using an mc, mt and ms command

COMMAND: pm *x-coordinate,y-coordinate x-displacement,y-displacement-*

where

<i>x-coordinate,y-coordinate</i>	Starting point coordinate
<i>x-displacement,y-displacement</i>	X and y-offset display units from the start or last displacement Up to 30 displacements can be defined with the last followed by a tilde (~)

Example pm 950,950;100,0;0,100;-100,0~

Rectangle (rt)

PURPOSE: The rectangle command draws a rectangle whose size and position is based on a lower left and upper right corner parameter. The attributes of the line creating the rectangle can be defined using an lc and lt command. When the rectangle is to be filled, it must be preceded by an is and fc command, and an lc command if perimeter is on for the is command.

COMMAND: rt *x1-coordinate,y1-coordinate,x2-coordinate,y2-coordinate*

where

<i>x1-coordinate,y1-coordinate</i>	Lower left corner coordinate
<i>x2-coordinate,y2-coordinate</i>	Upper right corner coordinate

Example rt 496,496,2676,3752

GRAPHIC ATTRIBUTES

Graphic attributes define the characteristics of a figure or text that follow. For text, the attributes include character height, spacing and color. For figures, they include

- Background color
- Fill in color and style for closed figures
- Line color, width and type.
- Marker color, size and type

Once an attribute is set, it remains in effect until changed by another of the same attribute command. For example, if line color is set to red, any lines drawn with graphic primitives after the line color command appear in red until another line color command occurs to change the color. In a file containing multiple **bp** commands, each **bp** command resets all file attributes to default.

Background Color (bc)

PURPOSE: The background color command sets the color used as the background color of figures in a display. The console defaults to a black background color. Background color, if used, must come before text color (tc). Currently, the **bc** command can only be used for text.

COMMAND: **bc** *flag,color-index*

where

flag 1 off, 0 on

color-index Number of a color from 0 to 63, refer to Table B 2 for color index numbers

Example **bc 1,0**

Character Height (ch)

PURPOSE The character height command defines the size of the text characters in display units (or VDC extent) that follow. Standard single height characters are 124 units while double height characters are 248 units. If specifying a character height, the command must precede a **tx** command.

COMMAND: **ch** *units*

where

units Number of screen units

Example **ch 124**

Character Space (cs)

PURPOSE: The character space command defines the amount of space between characters as a percent of character height. Specify the character height (ch) *first*. If specifying a character space, the command must precede a tx command

COMMAND: cs scaler

where:

scaler Two-digit percentage.

Example. cs 20 (equals 20% or 0.20)

Fill Color (fc)

PURPOSE: The fill color command defines the color to use as the fill-in color of a closed figure such as a circle (cc) and polygon (pg). If using a fill color, the command must precede a cc, rt, pg or ca command

COMMAND: fc color-index

where.

color-index Number of a color from 0 to 63, refer to Table B-2 for color index numbers

Example fc 1

Interior Style (is)

PURPOSE: The interior style command defines the attributes of the interior portion of a closed figure, including fill-ins and outline perimeter. The command must be present before all polygon (pg) and circles (cc)

COMMAND: is index,flag

where

index 0 hollow (do not use fill color), 1 - solid (use fill color)

flag Perimeter flag, determines if the perimeter or outline of the figure is on or off 0 - no outline visible, 1 outline visible

Example is 1,0

GRAPHIC AND ESCAPE COMMANDS

Line Color (lc)

PURPOSE: The line color command specifies the color of the line used to draw a figure or line. The line color command must precede the line or figure being drawn.

COMMAND: *lc color-index*

where

color index Number of a color from 0 to 63, refer to Table B 2 for color index numbers

Example: *lc 2*

Line Type (lt)

PURPOSE: The line type command specifies the type of line used to draw a figure or line. The line type command must precede the line or figure being drawn.

COMMAND: *lt index*

where

index 0 - solid, 1 dash, 2 dot, 3 dash-dot, 4 dash dot dot

Example: *lt 0*

Line Width (lw)

PURPOSE: The line width command specifies the width of a line expressed in number of display units (or VDC extent). The line width command must precede the line being drawn.

COMMAND: *lw units*

where

units Number of screen units

Example: *lw 1*

Marker Color (mc)

PURPOSE: The marker color command specifies the color of the marker used to draw a polymarker (pm) line. The marker color command must precede the polymarker command.

COMMAND: mc color-index

where

color-index Number of a color from 0 to 63; refer to Table B-2 for color index numbers

Example: mc 3

Marker Size (ms)

PURPOSE: The marker size command defines the size of the marker characters in display units (or VDC extent) that follow. If specifying a character height, the command must precede a pm command.

COMMAND: ms units

where

units Number of screen units

Example ms 124

Marker Type (mt)

PURPOSE: The marker type command specifies the character type used as the marker character. The marker type command must precede the pm command.

COMMAND: mt index

where

index 0 - dot (.), 1 - plus (+), 2 asterisk (*), 3 circle (o), 4 x.

Example mt 2

GRAPHIC AND ESCAPE COMMANDS

Text Color (tc)**PURPOSE:**

The text color command specifies the color of the text that follows. The text color command must precede the tx command.

COMMAND:

tc *color-index*

where.

color-index Number of a color from 0 to 63, refer to Table B-2 for color index numbers

Example **tc 3**

Graphic and Escape Commands

Escape commands define the attributes of a display, and create the elements and capabilities built into a display. The escape commands in this part of the section are specialized, and when defined create a specific characteristic or enable a specific function of a display. This section presents the commands categorized by their function.

Each escape command requires a series of parameters defined to perform its intended function. Table B-3 lists common acronyms used to represent some of the parameters used in the escape command format. It also explains the purpose of these parameters and requirements to define. If a command uses a parameter acronym that does not appear in this table, the purpose and requirements to define that parameter appear in the section detailing the use and format of the command.

Table B-3 Escape Command Parameters

Parameter	Description
<i>almcolor</i>	Alarm color index number of a color to use as the alarm color which is to identify an alarm condition presented by the escape command. Refer to Table B-2 for color index numbers.
<i>bgcolor</i>	Background color index number of a color to use as the background color for the field at which the escape command presents information. Refer to Table B-2 for color index numbers.
<i>charlength</i>	Character string length number of characters to allow for a character string returned by the escape command. Valid character length depends on the maximum number of characters returned by the escape command, and is from 1 to 255. Using the starting character (<i>start-char</i>) parameter allows breaking a character string to continue on another line.
<i>charsize</i>	Character size size of the characters presented by the escape command expressed in display units (or VDC extent). Standard single height characters are 124 units while double height characters are 248 units.
<i>decimal-digits</i>	Number of digits from 0 to 4 that are to appear after a decimal point.
<i>fgcolor</i>	Foreground color index number of a color to use as the foreground color for the field at which the escape command presents information. Refer to Table B-2 for color index numbers.
<i>key1</i>	First key ASCII character code for an alpha or numeric key or key designator for a specified key (e.g., ESC , HELP , etc.) refer to the Table B-1. If using a specified key, it should only be used for display selects. This defines the key to press in a single key select or the first numeric key in a two-key select sequence.
<i>key2</i>	Second key ASCII character code for an alpha or numeric key or ENTER refer to the Table B-1. This defines the second key in a two key select sequence.
<i>spacing</i>	Spacing factor amount of space between characters expressed as a percent of character size (<i>charsize</i>).

GRAPHIC AND ESCAPE COMMANDS

Table B-3 Escape Command Parameters (continued)

Parameter	Description
<i>start char</i>	<p>Starting character number of a character position in a character string that is to be the first character displayed. Valid entry for this parameter depends on the number of characters returned by the command; the first character position in a string is 0.</p> <p>For example, to have the field present the first character in a returned character string as the starting character, then enter 0 as the starting character number. To have the field present the 17th character in a returned character string as the starting character, then enter 16 as the starting character number.</p> <p>When used with the character length (<i>charlength</i>) parameter, it allows specifying the starting character that is to appear on another or continuation line.</p>
<i>tag</i>	<p>Tag index number: index number of the tag for which the escape command is to associate. This must be the index number of a tag defined in the tag database.</p>
<i>trend</i>	<p>Trend index number: index number of the trend for which the escape command is to associate. This must be the index number of a trend defined in the trend database.</p>
<i>x coord</i>	<p>X-coordinate: x-axis position on the display to place the information presented by the escape command. Valid default x-coordinate range is from 400 to 9600.</p>
<i>xn-coord</i>	<p>Xn-coordinate: x-axis position on the display to place the information presented by the escape command. Valid default x-coordinate range is from 400 to 9600.</p>
<i>y coord</i>	<p>Y-coordinate: y-axis position on the display to place the information presented by the escape command. Valid default y-coordinate range is from 400 to 7200.</p>
<i>yn-coord</i>	<p>Yn-coordinate: y-axis position on the display to place the information presented by the escape command. Valid default y-coordinate range is from 400 to 7200.</p>

PROGRAM ESCAPE (pe)

PURPOSE:

The program escape command loads control and applications programs. This escape provides control capabilities for INFI 90 display elements. The command must be present in a display or symbol source file to enable process control actions through that display or symbol.

Generally, any display without escape for control should *not* contain the **pe** command. This includes any menu display that does not require control action using either **ei 107,83** or **ei 108,83** and has only text and display selects using **ei 107,82** or **ei 108,82**

COMMAND:

pe type,program-name~

where.

type 124 to identify the background task

program-name CONTROL followed by a tilde (~)

Example **pe 124,CONTROL~**

SYMBOL (es)

PURPOSE:

The symbol command allows using a symbol created in a separate symbol source file as part of the current display. In this way, a symbol can be created only once and used in several different displays with minimal modifications. The command normally appears in the body of the file.

COMMAND:

es symbol-name~,color,x-coord,y-coord,tag

where:

symbol-name Name of a symbol file to be entered followed by a tilde (~)

color Color index number from 0 to 63, refer to Table B 2 for color index numbers. The color parameter changes the first of each color command encountered in the symbol file.

tag Optional, tag associated with the symbol. If not used, enter a 0.

Example **es MODLINE~,1,1600,5800,25**

GRAPHIC AND ESCAPE COMMANDS

ALARM STATUS COMMANDS

An alarm status command both displays alarm information and enables alarm indications. An alarm status command must be present in a display source file to have the console present alarm indications for an exception reported analog value or digital state considered to be an alarm condition.

NOTE Refer to Table B-3 for additional parameter definitions.

Escape Alarm (ea 56)

PURPOSE: The escape alarm command presents alarm indications and status information for a process tag. A parameter of the command references a tag for which the command presents alarm status. It also determines the type of alarm field used to present alarms.

COMMAND: *ea 56,subtype,tag,x-coord,y-coord,charsize,fgcolor,bgcolor almcOLOR spacing*

where

subtype 32 presents a five character alarm status/quality/group field

34 - presents a single character alarm status field

Example: *ea 56,32,1,1099,1065,124,7,0,7,1*

Node Type and Configuration Error (ea 64)

PURPOSE: The node type and configuration error command presents a node type, and an error indication if there is a conflict between reported node type and the node type configured for a tag. A parameter of the command references an N90STA tag for which it is to present this indication. The command is normally used in system status displays. The default indication presented to identify the error condition is an asterisk (*).

COMMAND: *ea 64,32,tag,x-coord,y-coord charsize,fgcolor bgcolor almcOLOR,spacing charlength,start-char*

Example *ea 64,32,1,1000,1000,124,3,0,7,1,8,0*

Node Error Short Form (ea 65)

PURPOSE: The node error short form command presents a single character indicator to identify the existence of a node off-line error, module error, communication error or node status error. A parameter of the command references an N90STA tag for which it is to present these indications. The command is normally used in system status displays. The default indications presented to identify each type of error condition are *O* for node off line, *M* for module error, *C* for communication error, and *S* for node status problem.

COMMAND: ea 65,50,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing

Example: ea 65,50,1,1900,1000,124,7,0,7,1

Node Error Long Form Off-Line (ea 65)

PURPOSE: The node error long form off-line command presents an indicator to identify the existence of a node off-line error. A parameter of the command references an N90STA tag for which it is to present these indications. The command is normally used in system status displays. The default indications presented by this command are *offline* and *online*.

COMMAND: ea 65,51,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing

Example: ea 65,51,1,1000,1000,124,3,0,7,1

Node Error Long Form Module (ea 65)

PURPOSE: The node error long form module command presents an indicator to identify the existence of a module error within the node. A parameter of the command references an N90STA tag for which it is to present these indications. The command is normally used in system status displays. The default indications presented by this command are *error* and *ok*.

COMMAND: ea 65,52,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing

Example: ea 65,52,1,1000,1000,124,3,0,7,1

Node Error Long Form Communications (ea 65)

PURPOSE: The node error long form communications command presents an indicator to identify the existence of a communication error. A parameter of the command references an N90STA tag for which it is to present these indications. The command is normally used in system status displays. The default indications presented by this command are *error* and *ok*.

COMMAND: ea 65,53,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing

Example: ea 65,53,1,1000,1000,124,3,0,7,1

GRAPHIC AND ESCAPE COMMANDS

Node Error Long Form Node Status (ea 65)

PURPOSE: The node error long form node status command presents an indicator to identify the existence of a status problem. A parameter of the command references an N90STA tag for which it is to present these indications. The command is normally used in system status displays. The default indications presented by this command are *problem* and *normal*.

COMMAND: **ea 65,54,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing**

Example: **ea 65,54,1,1000,1000,124,3,0,7,1**

Module Type and Configuration Error (ea 68)

PURPOSE: The module type and configuration error command presents a module type, and an error indication if there is a conflict between reported module type and the module type configured for a tag. A parameter of the command references an N90STA tag for which it is to present this indication. It is normally used in system status displays. The default indication presented to identify the error is an asterisk (*).

COMMAND: **ea 68,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing, charlength,start-char**

Example: **ea 68,32,1,1200,1000,124,3,0,7,1,8,0**

Module Mode (ea 69)

PURPOSE: The module mode command presents a module mode indication. A parameter of the command references an N90STA tag for which it is to present this information. The command is normally used in system status displays. The default mode indications presented by this command are *execut* (execute), *config* (configure), *error*, *stdby* and *failed*.

COMMAND: **ea 69,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing**

Example **ea 69,32,1,2200,1000,124,3,0,7,1**

Module Error Indicator (ea 70)

PURPOSE: The module error indicator command presents a module error indicator to identify that a module has some error. This is a general indication that only identifies the existence of an error. A parameter of the command references an N90STA tag for which it is to present this indication. The command is normally used in system status displays. The default indication presented by this command is *ERR*.

COMMAND: **ea 70,32,tag x-coord y-coord charsize,fgcolor,bgcolor,almcolor spacing**

Example **ea 70,32,1,3000,1000,124,3,0,7,1**

Device Status (ea 93)

PURPOSE: The device status command presents status indications for a supported peripheral device. A parameter of the command references a DEVSTAT tag for which it is to present these indications. The command is normally used in device status displays. The default indications presented by this command depend on the device the tag is defining. If supported by this console, the command can present status indications for its interface unit, clock, keyboards, annunciator display panels, CRT, printers, touch screen and storage devices.

COMMAND: `ea 93,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing,charlength,start-char`

Example: `ea 93,32,1,1000,1000,124,3,0,7,1,8,0`

Alarm State (ea 114)

PURPOSE: The alarm state command enables a two character text field to present the current alarm state of a tag. The command works with any tag type. The colors set during Alarm Quality Option configuration affect the alarm colors for this element.

The default text strings presented by this command include:

- | | |
|--|--------------------------------|
| Blank - no alarm | * - bad quality |
| L - low alarm | N - return to normal |
| 2L - two low alarm | // - alarms suppressed |
| 3L - three low alarm | HD - high deviation alarm |
| H - high alarm | LD - low deviation alarm |
| 2H - two-high alarm | HR - high rate of change alarm |
| 3H - three-high alarm | LR - low rate of change alarm |
| A - digital, or N90STA, DEVSTAT or TEXTSTR alarm | |

COMMAND: `ea 114,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing`

Example: `ea 114,32,23,4500,3600,124 3,0,7,1`

GRAPHIC AND ESCAPE COMMANDS

INTERACTIVE COMMANDS

An interactive command enables the operator to interact with the console through control select and display select features. An interactive command defines either a single key or a key sequence, or touch point requirement.

Keystroke select commands specify either a single or two-key select sequence that must be performed to select a display item or enable element control. Valid key select sequences include a single alpha, a numeric followed by **ENTER**, a numeric and alpha, and a numeric and numeric.

Touch point select commands define an area of the screen that can be touched when using touch screen, or a mouse or trackball cursor must be placed to select a display item or enable element control.

NOTE Refer to Table B-3 for additional parameter definitions.

Touch Point Display Select (ei 107)
PURPOSE:

The touch point display select command defines a touch point area on the screen used to call another display from the current display.

COMMAND:

ei 107,82,x1-coord,y1-coord,x2-coord,y2-coord display name-

where

x1-coord,y1-coord Lower left corner touch point coordinates

x2-coord y2-coord Upper right corner touch point coordinates

display-name Eight character name of the display to call after initiating a touch point select. The display name must correspond to the name of an assembled display file (**DU**) on the hard disk.

Example **ei 107,82,3694,6290,4494,6490,AREA1-**

Keystroke Display Select (ei 108)

PURPOSE: The keystroke display select command defines a single key or a key sequence that must be pressed to call another display from the current display. A tx command must be created to display the key characters defined in this command

COMMAND: ei 108,82,key1,key2,display-name~

where

display-name Eight character name of the display to call after pressing the select keys. The display name must correspond to the name of an assembled display file (.DU) on the hard disk

Example ei 108,82,65,0,AREA1~

Touch Point Control Select (ei 107)

PURPOSE: The touch point control select command defines a touch point area on the screen used to enable control of a tag element

COMMAND: ei 107,83,x1-coord,y1-coord,x2-coord,y2-coord,tag,ctrl-group,ctrl-option,x3-coord,y3-coord,x4-coord,y4-coord,outline-color,x5-coord,y5-coord

where

- x1-coord,y1-coord* Lower left corner touch point coordinates
- x2-coord,y2-coord* Upper right corner touch point coordinates.
- ctrl-group* Control group selection, 32 - RCM, 33 - STATION, 34 - RMSC, 36 - DD, 36 MSDD, 37 RMCB, 38 - DANG, 39 DADIG, 40 TEXTSTR. This must match the type of the referenced tag
- ctrl-option* Control prompt option, 32 - prompt at bottom line, 33 - prompt in box, 34 - combination bottom line prompt with highlight box (not for TEXTSTR tags), 35 - combination disjoint prompt with tag name and highlight box
- x3-coord,y3-coord* Required only if *ctrl-option* is set to 33, 34 or 35; defines the lower left corner of the highlight box
- x4-coord,y4-coord* Required only if *ctrl-option* is set to 33, 34 or 35; defines the upper right corner of the highlight box

outline-color Required only if *cntrl-option* is set to 33, 34 or 35, number of the color to use for the box outline when deselected Refer to Table B-2 for color index numbers

x5-coord,y5-coord Required only if *cntrl-option* is set to 35; defines the left justification coordinate.

Example. ei 107,83,496,496,2676,2076,1,36,33,496,496,2676,2076,4

Keystroke Control Select (ei 108)

PURPOSE:

The keystroke control select command defines a single key or a key sequence that must be pressed to enable control of a tag element. A tx command must be created to display the key characters defined in this command.

COMMAND:

ei 108,83,key1,key2 tag,cntrl-group,cntrl-option x1 coord,y1 coord,x2-coord,y2-coord,outline-color,x3-coord,y3-coord

where.

cntrl-group Control group selection, 32 - RCM, 33 - STATION, 34 - RMSC, 36 - DD, 36 - MSDJ, 37 - RMCB, 38 - DANG, 39 - DADIG, 40 - TEXTSTR. This must match the type of the referenced tag.

cntrl-option Control prompt option, 32 - prompt at bottom line, 33 - prompt in box, 34 - combination bottom line prompt with highlight box (not for TEXTSTR tags), 35 - combination disjoint prompt with tag name and highlight box.

x1-coord,y1-coord Required only if *cntrl-option* is set to 33, 34 or 35, defines the lower left corner of the highlight box.

x2-coord,y2-coord Required only if *cntrl-option* is set to 33, 34 or 35, defines the upper right corner of the highlight box.

outline-color Required only if *cntrl-option* is set to 33, 34 or 35, number of the color to use for the box outline when deselected. Refer to Table B-2 for color index numbers.

x3 coord,y3-coord Required only if *cntrl-option* is set to 35, defines the left justification coordinate.

Example ei 108,83,49,65,1,36,33,496,496,2676,2076,4

Soft Touch Select (ei 107)

PURPOSE: The soft touch command defines a touch point area on the screen used to call either a tuning, block details or module problem report display, or to initiate a log printout from the current display. The command can be defined to either contain parameters that define the input requirements necessary to directly initiate a function, or allow entering the necessary inputs after selection

COMMAND: ei 107,85,x1-coord,y1-coord,x2-coord,y2-coord,fcncode,p1,m1,p2,m2,p3,m3,p4,m4,p5,m5

where

x1-coord,y1-coord Lower left corner touch point coordinates.

x2-coord,y2-coord Upper right corner touch point coordinates

fcncode 0 - tuning display, 1 - block details display, 2 - not used, 3 log by name, 4 module problem report

pn Parameters to be passed such as loop, PCU, and module address, tag index number, PID block address, etc Refer to Table B-4 for the number of parameters (n) required, which is dependent on the function code selected.

mn Modify flag, 0 - allow modify after selection, 1 no modify Each pn parameter must have an mn parameter

Example ei 107,85,1000,1000,1400,1400,4,1,1,2,1,4,1

Table B 4 Soft Key Parameters

Function	Number of Parameters (n)	Parameter Description
Tuning	1	Tag index to tune
	4	P D block address
	5	Tag index and P D block
Block details	1	Tag index
	4	Block address Loop PCU module block
Log by name	2	Log index and retent on
Module problem	3	Loop PCU module address

GRAPHIC AND ESCAPE COMMANDS

Soft Key Select (ei 108)

PURPOSE: The soft key command defines a key sequence used to either call a tuning, block details or module problem report display, or to initiate a log printout from the current display. The command can be defined to either contain parameters that define the input requirements necessary to directly initiate a function, or allow entering the necessary inputs after selection. A tx command must be created to display the key characters defined in this command.

COMMAND: ei 108,85,key1,key2,fcncode,p1,m1,p2,m2,p3,m3,p4,m4,p5,m5

where:

fcncode 0 tuning display, 1 - block details display, 2 not used, 3 - log by name, 4 module problem report

pn Parameters to be passed such as loop, PCU, and module address, tag index number, PID block address, etc. Refer to Table B-4 for the number of parameters (*n*) required, which is dependent on the function code selected.

mn Modify flag, 0 allow modify after selection, 1 no modify. Each *pn* parameter must have an *mn* parameter.

Example ei 108,85,48,52,4,1,1,2,1,4,1

Trend Touch Point Control Select (ei 107)

PURPOSE: The trend touch point control select command defines a touch point area on the screen used to enable a trend element for control. There must be a select command for each of the number of trends defined in an **et 53** command

COMMAND: **ei 107,86,x1-coord,y1-coord,x2-coord,y2-coord,trend,color,hi-scale,low-scale**

where.

x1-coord,y1-coord Lower left corner touch point coordinates

x2-coord,y2-coord Upper right corner touch point coordinates.

color Number of the color to use for the trend line associated with this command Refer to Table B 2 for color index numbers that can be assigned to a trend line

hi-scale High scale limit for the trend

low-scale Low scale limit for the trend

Example **ei 107,86,8710,6290,9510,6490,20,2,100.00,0.0**

Trend Keystroke Control Select (ei 108)

PURPOSE: The trend keystroke control select command defines a single key or a key sequence that must be pressed to enable trend element control There must be a select command for each of the number of trends defined in an **et 53** command A **tx** command must be created to display the key characters defined in this command

COMMAND: **ei 108,86,key1,key2 trend color hi-scale,low-scale**

where

color Number of the color to use for the trend line associated with this command Refer to Table B-2 for color index numbers that can be assigned to a trend line

hi-scale High scale limit for the trend

low-scale Low scale limit for the trend

Example **ei 108,86,66,0,20,2,100.00,0.0**

GRAPHIC AND ESCAPE COMMANDS

Alarm Summary Touch Point Control Select (ei 107)

PURPOSE: The alarm summary touch point control select command defines a touch point area on the screen used to enable an alarm summary element for control

COMMAND: ei 107,87,x1-coord,y1-coord,x2-coord,y2-coord,x3-coord y3-coord

where

x1-coord,y1-coord Lower left corner touch point coordinates

x2-coord,y2-coord Upper right corner touch point coordinates

x3-coord,y3-coord Must match the coordinates defined in an as command

Example ei 107,87,400,6650,9600,7200,400,400

Alarm Summary Keystroke Control Select (ei 108)

PURPOSE: The alarm summary keystroke control select command defines a single key or a key sequence that must be pressed to enable operations performed through an alarm summary element

COMMAND: ei 108,87,key1 key2,x-coord,y-coord

where

x-coord y-coord Must match the coordinates defined in an as command

Example ei 108,87,83,0,400,400

Alarm Summary Primary Display Touch Point Select (ei 107)

PURPOSE:

The touch point display select command defines a touch point area on the screen used to call the primary display of a tag in the alarm summary list. A tag in the list must have a primary display assigned in its configuration for this command to have any effect.

Define a command for each display select on an alarm line basis. For example, if the summary is set up to display 16 entries, then define 16 select commands. To use the interactive in an alarm summary, this ei command must follow an as 82 or as 83 command.

COMMAND:

ei 107,88,x1-coord,y1-coord,x2-coord,y2-coord

where.

x1-coord,y1-coord Lower left corner touch point coordinates.

x2-coord,y2-coord Upper right corner touch point coordinates

Example ei 107,88,400,6294,9600,6641

Alarm Summary Primary Display Keystroke Select (ei 108)

PURPOSE:

The alarm summary primary display keystroke select command defines a single key or a key sequence that must be pressed to call the primary display of a tag in the alarm summary list. A tag in the list must have a primary display assigned in its configuration for this command to have any effect.

Define a command for each display select on an alarm line basis. For example, if the summary is set up to display 16 entries, then define 16 select commands. A tx command must be created to display the key characters defined in this command. To use the interactive in an alarm summary, this ei command must follow an as 82 or as 83 command.

COMMAND:

ei 108,88,key1,key2

Example ei 108,88,65,0

GRAPHIC AND ESCAPE COMMANDS

Pop Up Element Touch Point Select (ei 107)

PURPOSE: The pop up element touch point select command defines a touch point area on the screen used to call a pop up symbol to the screen. The command contains parameters that define the location on the screen where the symbol appears. Make sure to leave this area clear to avoid overwriting a display area with a pop up.

COMMAND: ei 107,90,x1-coord,y1-coord,x2-coord,y2-coord,symbol-name~,x3-coord,y3-coord

where

- x1-coord,y1-coord Lower left corner touch point coordinates
- x2-coord,y2-coord Upper right corner touch point coordinates
- symbol-name Name of a pop up symbol file to be displayed followed by a tilde (~)
- x3-coord,y3-coord Reference point coordinate to begin drawing the pop up symbol

NOTE Define the touch point area as the area of the screen used to select the pop up, *not* the area where the pop up appears. This is not a control select. The control select should be defined as part of the pop up symbol source file.

Example ei 107,90,1000,1000,1400,1400,DCS1POP~,3180,4256

Pop Up Element Keystroke Select (ei 108)

PURPOSE: The pop up element keystroke select command defines a single key or a key sequence that must be pressed to call a pop up symbol to the screen. The command contains parameters that define the location on the screen where the symbol appears. Make sure to leave this area clear to avoid overwriting a display area with a pop up. A fix command must be created to display the key characters defined in this command.

COMMAND: ei 108,90,key1,key2 symbol-name~,x-coord,y-coord

where

- symbol-name Name of a pop up symbol file to be displayed followed by a tilde (~)
- x coord,y coord Reference point coordinate to begin drawing the pop up symbol

Example ei 108,90,48,0,DCS1POP~,3180,4256

Tag Index Substitution for Pop Up Element Touch Point Select (ei 107)

PURPOSE:

The tag index substitution command defines a tag index number that is to be substituted for the index number defined in a pop up symbol source file. This enables using the same symbol source file in several pop up commands instead of creating a dedicated source file for each select command. It also has parameters that allow temporarily redefining the control keys defined in the pop up symbol file.

COMMAND:

ei 107,91,x1-coord,y1-coord,x2-coord,y2-coord symbol-name~,x3-coord,y3-coord,tag,option,cskey1,cskey2

where

- x1-coord,y1-coord** Lower left corner touch point coordinates
- x2-coord,y2-coord** Upper right corner touch point coordinates.
- symbol-name** Name of a pop up symbol file to be displayed followed by a tilde (~)
- x3-coord,y3-coord** Reference point coordinate to begin drawing the pop up symbol
- tag** Index number of the tag to substitute for tag index parameters in the pop up symbol.
- option** 0 - leave control select keys as is, 1 (future use) - substitute keys *cskey1* and *cskey2*.
- cskey1** (Future use) ASCII character code for an alphanumeric key, substitutes for the *key1* control select key parameter in the source file. Refer to the Table B-1. This defines the key to press in a single key select, or the first key in a two key select sequence. Used only if option parameter set to 1.
- cskey2** (Future use) ASCII character code for an alphanumeric key, substitutes for the *key2* control select key parameter in the source file. Refer to the Table B-1. This defines the second key in a two key select sequence. Used only if option parameter set to 1.

Example ei 107,91,1000,1000,1400,1400,DCS1POP~,3180,4256/25,1,51,0

GRAPHIC AND ESCAPE COMMANDS

**Tag Index Substitution for Pop Up Element Keystroke Select
(ei 108)****PURPOSE:**

The tag index substitution command defines a tag index number that is to be substituted for the index number defined in a pop up symbol source file. This enables using the same symbol source file in several pop up commands instead of creating a dedicated source file for each select command. It also has parameters that allow temporarily redefining the control keys defined in the pop up symbol file. A tx command must be created to display the key characters defined in this command.

COMMAND:

ei 108,91, key1, key2, symbol-name~, x-coord y-coord, tag, option cskey1, cskey2

where

<i>symbol-name</i>	Name of a pop up symbol file to be displayed followed by a tilde (-)
<i>x-coord, y-coord</i>	Reference point coordinate to begin drawing the pop up symbol
<i>tag</i>	Index number of the tag to substitute for tag index parameters in the pop up symbol
<i>option</i>	0 - leave control select keys as is, 1 (future use) substitute keys <i>cskey1</i> and <i>cskey2</i>
<i>cskey1</i>	(Future use) ASCII character code for an alphanumeric key, substitutes for the <i>key1</i> control select key parameter in the source file. Refer to the Table B 1. This defines the key to press in a single key select, or the first key in a two key select sequence. Used only if option parameter set to 1.
<i>cskey2</i>	(Future use) ASCII character code for an alphanumeric key, substitutes for the <i>key2</i> control select key parameter in the source file. Refer to the Table B 1. This defines the second key in a two-key select sequence. Used only if option parameter set to 1.

Example ei 108,91,48,0,DCS1POP~,3180,4256,25,1 51,0

Block Details Touch Point Control Select (ei 107)

PURPOSE: The block details touch point control select command defines a touch point area on the screen used to enable a block details element for control.

COMMAND: ei 107,95,x1-coord,y1-coord,x2-coord,y2-coord,x3-coord,y3-coord

where

x1-coord,y1-coord Lower left corner touch point coordinates.

x2-coord,y2-coord Upper right corner touch point coordinates.

x3-coord,y3-coord Must match the coordinates defined in a **bd** command

Example ei 107,95,400,6650,9600,7200,400,400

Block Details Keystroke Control Select (ei 108)

PURPOSE: The block details keystroke control select command defines a single key or a key sequence that must be pressed to enable operations performed through a block details element.

COMMAND: ei 108,95,key1 key2,x-coord,y-coord

where

x coord y-coord Must match the coordinates defined in a **bd** command

Example ei 108,95,83,0,400,400

Plot Touch Point Control Select (ei 107)

PURPOSE: The plot touch point control select command defines a touch point area on the screen used to enable an XY plot element for control. Define a command for each XY plot element of a display, maximum of four

COMMAND: ei 107,96,x1-coord,y1-coord,x2 coord,y2-coord,element,plot-index

where

element Number of a plot element from 1 to 4

plot-index Index number to associate with the plot element, 1 to 80

Example ei 107,96,7874,6290,9510,6490,1,23

GRAPHIC AND ESCAPE COMMANDS

Plot Keystroke Control Select (ei 108)

PURPOSE: The plot keystroke control select command defines a single key or a key sequence that must be pressed to enable operations performed through an XY plot element. Define a command for each XY plot element of a display, maximum of four. A tx command must be created to display the key characters defined in this command.

COMMAND: ei 108,96,key1,key2,element,plot-index

where

element Number of a plot element from 1 to 4.

plot-index Index number to associate with the plot element, 1 to 80

Example ei 108,96,48,0,1,23

Tabular Trend Touch Point Control Select (ei 107)

PURPOSE: The tabular trend touch point control select command defines a touch point area on the screen used to enable a tabular trend for control. There must be a select command for each of the number of trends defined in an et 52 command.

COMMAND: ei 107,97,x1-coord,y1-coord,x2-coord,y2-coord,element trend

where

x1-coord,y1-coord Lower left corner touch point coordinates

x2 coord,y2-coord Upper right corner touch point coordinates

element Number of a tabular trend element. This must match the element number identified in an associated et 52 command.

Example ei 107,97,1186,6290,1950,6490,1,15

Tabular Trend Keystroke Control Select (ei 108)

PURPOSE: The tabular trend keystroke control select command defines a single key or a key sequence that must be pressed to enable a tabular trend for control. There must be a select command for each of the number of trends defined in an **et 52** command. A **tx** command must be created to display the key characters defined in this command.

COMMAND: **ei 108,97,key1,key2,element,trend**

where:

element Number of a tabular trend element. This must match the element number identified in an associated **et 52** command.

Example **ei 108,97,65,0,1,15**

User Task Touch Point Select (ei 107)

PURPOSE: The user task touch point select command defines a touch point area on the screen that must either be pressed when using touch screen, or where a mouse or trackball cursor must be placed to execute a user written program on a node containing the user task interface

COMMAND: **ei 107,113,x1-coord,y1-coord,x2-coord,y2-coord,nodename~,taskname~,activation~**

where

x1-coord,y1-coord Lower left corner touch point coordinates

x2-coord,y2-coord Upper right corner touch point coordinates

nodename Name of the node that contains the user task interface and user written program. The node name can be a logical or actual node name. If using a logical, it must appear in the system logical name table. A 0 can be entered if the user task interface and user-written program reside on this console. Up to 32 characters followed by a tilde (~)

taskname Name of the UTI program to be executed. The entered name can be a logical or the actual name of the program. If using a logical, it must appear in the system logical name table. In either case, include the complete path along with the name (i.e., device and directory). Up to 32 characters followed by a tilde (~)

GRAPHIC AND ESCAPE COMMANDS

activation Method of activation, 0 - create, 1 - wake

argument An argument string to be passed to the program upon activation Up to 80 characters can be entered followed by a tilde (~)

NOTE The continuation character (/) can be used since the command defined with up to 80 characters in the *argument* parameter will not fit on a single line. If the / character is required in the argument enter it as //

Example ei 107,113,1200,5200,1600,5600,USER\$NODE~,/
USER\$TASK~,1,WINDOW:1~

DISCUSSION:

If using the create method of activation, the console expects the program to not be running. An error message occurs if the program is running and the operator attempts to execute (i.e., create) it again through a key or pushbutton selection. Infrequent, one-shot programs that do not require rapid activation can use this activation method.

The wake option expects the program to already be running, but not currently active (i.e., hibernating). If it is not running, the console will execute then activate the program. Frequently activated programs that could possibly be required to respond to multiple activation requests should use the wake activation method.

User Task Keystroke Select (ei 108)**PURPOSE:**

The user task keystroke select command defines a single key or a key sequence that must be pressed to execute a user-written program on a node containing the user task interface.

COMMAND:

ei 108,113 key1,key2,nodename~,taskname~,activation,argument~

where

x1-coord,y1-coord Lower left corner touch point coordinates

x2 coord,y2-coord Upper right corner touch point coordinates

nodename Name of the node that contains the user task interface and user-written program. The node name can be a logical or actual node name. If using a logical, it must appear in the system logical name table. A 0 can be entered if the user task interface and user-written program reside on this console. Up to 32 characters followed by a tilde (~)

<i>taskname</i>	Name of the UTI program to be executed. The entered name can be a logical or the actual name of the program. If using a logical, it must appear in the system logical name table. In either case, include the complete path along with the name (i.e., device and directory). Up to 32 characters followed by a tilde (~)
<i>activation</i>	Method of activation; 0 - create, 1 - wake.
<i>argument</i>	An argument string to be passed to the program upon activation. Up to 80 characters can be entered followed by a tilde (~)

NOTE The continuation character (/) can be used since the command defined with up to 80 characters in the *argument* parameter will not fit on a single line. If the / character is required in the argument enter it as //

Example: ei 108,113,49,65,USER\$NODE~,USER\$TASK~,1,WINDOW:1~

DISCUSSION:

If using the create method of activation, the console expects the program to not be running. An error message occurs if the program is running and the operator attempts to execute (i.e., create) it again through a key or pushbutton selection. Infrequent, one-shot programs that do not require rapid activation can use this activation method.

The wake option expects the program to already be running, but not currently active (i.e., hibernating). If it is not running, the console will execute then activate the program. Frequently activated programs that could possibly be required to respond to multiple activation requests should use the wake activation method.

CONFIGURATION DATA COMMANDS

The configuration data commands provide the capability to include tag information configured in the tag database, or configuration data retrieved from a function block referenced by a tag. The data presented by these commands is static data (i.e., not updated after initially being drawn).

NOTE Refer to Table B 3 for additional parameter definitions.

Alarm Comment (ec 33)

PURPOSE: The alarm comment command retrieves and displays the alarm comment text string defined for a specified tag. The comment that appears depends on the subtype parameter of the command.

COMMAND: *ec 33,subtype,tag,x-coord,y-coord charsize,fgcolor,bgcolor,spacing, charlength start-char*

where

subtype 32 alarm comment
 35 - high alarm comment
 36 - low alarm comment
 62 - return to normal alarm comment
 63 - low deviation alarm comment
 64 - high deviation alarm comment
 65 - two-low alarm comment
 66 - two high alarm comment
 67 - three low alarm comment
 68 - three-high alarm comment
 69 - low rate of change alarm comment
 70 - high rate of change alarm comment

Examples *ec 33,32,6,1751,1572,124,7,0,1,22,0*
ec 33,32,6,1051,1432,124,7,0,1,22,22
ec 33,32,6,1051,1432,124,7,0,1,20,44

Tag Name (ec 34)

PURPOSE: The tag name command retrieves and displays the tag name text string defined in the tag database for a specified tag.

COMMAND: *ec 34,32,tag,x-coord y-coord charsize,fgcolor,bgcolor,spacing charlength start-character*

Example *ec 34,32,1,1439,2396,124,5,0,1,14,0*

Tag Descriptor (ec 35)

PURPOSE: The tag descriptor command retrieves and displays the tag descriptor text string defined in the tag database for a specified tag

COMMAND: *ec 35,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing, charlength,start-character*

Examples *ec 35,32,1,1342,2256,124,5 0,1,16,0*

ec 35,32,1,1342,2256,124,5 0,1,16,16

Customer Identifier (ec 36)

PURPOSE: The customer identifier command retrieves and displays the customer identifier text string defined in the tag database for a specified tag.

COMMAND: *ec 36,32,tag,x-coord,y-coord charsize fgcolor,bgcolor,spacing, charlength,start-char*

Examples *ec 36,32,1,1342,2256,124,5,0,1,16,0*

ec 36,32,1,1342,2256,124,5,0,1,16,16

Logic State Descriptor (ec 37)

PURPOSE: The logic state descriptor command retrieves and displays the logic state descriptor defined for a specified tag Use this command for all digital type tags

COMMAND: *ec 37,subtype,tag,x-coord y-coord,charsize fgcolor,bgcolor,spacing*

where

subtype 33 - zero state, 34 one state, 47 - two state (MSDD),
48 - three state (MSDD)

Examples *ec 37,33,1,1289,1397,124,5,0,1*

ec 37,34,1,1289,1567,124,5,0,1

Engineering Unit (ec 38)

PURPOSE: The engineering unit command retrieves and displays the engineering unit reported for a specified tag

COMMAND: *ec 38,32.tag x-coord y-coord,charsize fgcolor.bgcolor.spacing*

Example *ec 38,32,1,2109,1512,124,5,0,1*

GRAPHIC AND ESCAPE COMMANDS

Alarm Limit (ec 39)

PURPOSE: The alarm limit command retrieves and displays either the high or low alarm limit being reported for a specified tag. The value corresponds to an exception reported high alarm or low alarm limit value.

COMMAND: *ec 39,subtype,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing, charlength decimal-digits*

where

subtype 35 - high alarm limit, 36 - low alarm limit

Example *ec 39,35,11,2569,2002,124,5,0,1,6,2*

Alarm Limits - High and Low (ec 39)

PURPOSE: The alarm limits (high and low) command retrieves and displays both the high and low alarm limit being reported for a specified tag. The values correspond to the exception reported high alarm and low alarm limit values.

COMMAND: *ec 39,subtype,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing, charlength decimal-digits scale*

where

subtype 39 - vertical scale direction, 40 - horizontal scale direction

x-coord,y-coord Starting point which determines the lowest possible position of a low value. Alarm limits are drawn proportional to the value range (i.e., zero and span values), which is represented by x,y coordinate plus scale.

scale Number of display units separating the high and low alarm limits. The scale is referenced to the x,y coordinate starting point.

Example *ec 39,39,1,2569,2002,124,5,0,1,6,2,1400*

Scale Limit (ec 40)

PURPOSE: The scale limit command retrieves and displays either the high or low scale limit being reported for a specified tag. The value corresponds to either an exception reported zero or span value.

COMMAND: *ec 40,subtype,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing,charlength,decimal-digits,variable-type*

where.

subtype 35 high scale limit, 36 - low scale limit.

variable-type 0 - process variable, 1 - set point.

Example: *ec 40,35,1,2569,1852,124,5,0,1,6,2,0*

Scale Limits - High and Low (ec 40)

PURPOSE: The scale limits (high and low) command retrieves and displays both the high and low scale limit being reported for a specified tag. The values correspond to the exception reported zero and span values.

COMMAND: *ec 40,subtype,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing,charlength,decimal-digits,variable-type,scale*

where

subtype 39 vertical scale direction, 40 horizontal scale direction

variable-type 0 process variable, 1 - set point

scale Number of display units separating the high and low scale limits (i.e., represents zero and span values). The scale is referenced to the x,y coordinate starting point

Example *ec 40,39,1,2569,1852,124,5,0,1,6,2,0,1700*

GRAPHIC AND ESCAPE COMMANDS

Alarm Ticks - High and Low (ec 41)

PURPOSE: The alarm ticks (high and low) command displays reference markers to identify the position of both the high and low alarm limits on a scale. The position of the marks correspond to the exception reported high alarm and low alarm limit values.

COMMAND: `ec 41,subtype,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,scale`

where

subtype 39 vertical scale direction, 40 horizontal scale direction

x-coord,y-coord Starting point which determines the lowest possible position of a low value. Alarm limit tick marks are drawn proportional to the value range (i.e., zero and span values), which is represented by x,y coordinate plus scale

scale Number of display units separating the high and low alarm limits. The scale is referenced to the x,y coordinate starting point

Example: `ec 41,39,1,1669,2002,50,5,0,1400`

Node Number (ec 63)

PURPOSE: The node number command retrieves and displays the node number address defined in the tag database for a specified tag.

COMMAND: `ec 63,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing`

Example `ec 63,32,10,1700,6400,124,7,0,1`

Node Error Configuration Text - Node (ec 66)

PURPOSE: This node error configuration text command displays the static text associated with node error status. It is normally used in system status displays. The default text presented by this command is *Node*.

COMMAND: `ec 66,51,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing`

Example `ec 66,51,1,1200,6400,124,5,0,1`

Node Error Configuration Text - Module (ec 66)

PURPOSE: This node error configuration text command displays the static text associated with module status. It is normally used in system status displays. The default text presented by this command is *Module*.

COMMAND: `ec 66,52,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing`

Example. `ec 66,52,1,2500,6400,124,5,0,1`

Node Error Configuration Text - Configuration System (ec 66)

PURPOSE: This node error configuration text command displays the static text associated with communication system status. It is normally used in system status displays. The default text presented by this command is *Communication System*.

COMMAND: `ec 66,53,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing`

Example `ec 66,53,1,4000,6400,124,5,0,1`

Node Error Configuration Text - Node Status (ec 66)

PURPOSE: This node error configuration text command displays the static text associated with node status. It is normally used in system status displays. The default text presented by this command is *Node Status*.

COMMAND: `ec 66,54,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing`

Example `ec 66,54,1,6800,6400,124,5,0,1`

Module Address (ec 67)

PURPOSE: The module address command retrieves and displays the module address defined in the tag database for a specified tag.

COMMAND: `ec 67,32,tag,x-coord y-coord charsize,fgcolor,bgcolor,spacing`

Example: `ec 67,32,1,1200,1000,124,7,0,1`

GRAPHIC AND ESCAPE COMMANDS

Device Type (ec 96)

PURPOSE: The device type command retrieves and displays either the device type or device subtype defined in the tag database for a specified DEVSTAT tag

COMMAND: *ec 96,subtype,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing,charlength,start-char*

where

subtype 59 device type text, 60 device subtype text

Example *ec 96,59,1,4300,2600,124,3,0,1*

Device Number (ec 97)

PURPOSE: Each device type or subtype has an associated device number. The device number command retrieves and displays this device number instead of the device name for a DEVSTAT tag defined in the tag database.

COMMAND: *ec 97,subtype,tag,x-coord,y-coord charsize fgcolor,bgcolor spacing*

where

subtype 32 device number, 61 - device subnumber

Example *ec 97,32,1,4300,2600,124,3,0,1*

Alarm Group (ec 104)

PURPOSE: The alarm group command enables a two character field that displays the alarm group number of a tag. The command works with any tag type. The field presents a 0 for no group assignment, 1 to 99, S for system status group, or D for device status group.

COMMAND: *ec 104,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor spacing*

Example *ec 104,32,40,1575,1600,124,3,0,1*

Data Acquisition Reference Value (ec 105)

PURPOSE: The reference value command presents three floating point reference values. These identify the low limit reference value, center reference value and high limit reference value set in the PCU control module. The low reference value is placed at the x,y coordinate parameter of the command. The high reference value is positioned at the low reference value position plus the scale. The center value is placed proportionally between the high and low reference values. This command functions with a DANG tag type only

COMMAND: *ec 105,subtype,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing,charlength,decimal-digits,scale*

where:

subtype 39 - vertical, 40 - horizontal

x-coord,y-coord Starting point which determines the lowest possible position of the scale. The complete scale range is determined by the x,y coordinate plus the scale parameter. The low reference value is drawn at this point. The center reference value is drawn proportionally between the high and low reference values. The high reference value is positioned at the x,y coordinate plus scale position.

scale Number of display units separating the high reference value and low reference value. The bottom of the scale starts at the x,y coordinate starting point.

Example *ec 105,39,55,2569,2002,124,5,0,1,6,2,1400*

GRAPHIC AND ESCAPE COMMANDS

Data Acquisition Bar Graph Pivot Point Tick Mark (ec 106)

PURPOSE: The bar graph pivot point tick mark enables a horizontal or vertical line segment (tick mark) to identify the center reference value of the reference value scale. The mark positions proportionally between the low reference value and high reference value. This command functions with a DANG tag type only.

COMMAND: `ec 106,subtype,tag,x-coord,y-coord,charsize,color scale`

where

`subtype` 39 vertical, 40 - horizontal

`x-coord,y-coord` Starting point which determines the lowest possible position of the scale. The tick mark is drawn proportionally between the high reference value and low reference value. The complete scale range is determined by the x,y coordinate plus the scale parameter

`color` Index number of the color to use for the tick mark. Refer to Table B 2 for color index numbers

`scale` Number of display units separating the high reference value and low reference value. The bottom of the scale starts at the x,y coordinate starting point

Example `ec 106,39,55,2569,2002,124,3,1400`

Console Text String Length (ec 124)

PURPOSE: The console text string length command indicates the length of the text string configured in the tag database for a TEXTSTR tag

COMMAND: `ec 124,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing`

Example `ec 124,32,15,2200,3000,124,3,0,1`

Block Text String Length (ec 125)

PURPOSE: The block text string length command indicates the length of the text string in the function code configured in a PCU module associated with a TEXTSTR tag

COMMAND: `ec 125,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing`

Example `ec 125,32,15,2200,3015,124,3,0,1`

DYNAMIC COMMANDS

Dynamic commands give the capability to include real-time process values and indicators in a display. The dynamic information presented by these commands reflects exception reported values and states, and operator process control actions.

NOTE Refer to Table B-3 for additional parameter definitions

Alarm Comment (ed 33)

PURPOSE: The alarm comment command presents alarm comment text corresponding to alarm conditions exception reported for a specified tag. The descriptor that appears depends on both the alarm condition being reported and the alarm comment referenced during tag configuration.

COMMAND: `ed 33,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing, charlength,start-char`

Examples `ed 33,32,2,1051,1432,124,7,0,1,22,0`
`ed 33,32,2,1051,1432,124,7,0,1,22,22`
`ed 33,32,2,1051,1432,124,7,0,1,20,44`

Logic State Descriptor (ed 37)

PURPOSE: The logic state descriptor command presents the logic state descriptor corresponding to the digital state exception reported for a specified tag. The descriptor that appears depends on both the state being reported and the descriptor defined for that state during tag configuration.

COMMAND: `ed 37,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing`

Example `ed 37,32,8,1599,1512,124,3,0,7,1`

Value (ed 42)

PURPOSE: The value command presents the real value being exception reported for a specified tag.

COMMAND: `ed 42,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing, charlength,decimal-digits,variable-type`

where

variable-type 0 process variable, 1 - set point, 2 control output, 3 ratio index

Example `ed 42,32,2,1754,1832,124,3,0,7,1,6,2,0`

GRAPHIC AND ESCAPE COMMANDS

Output Indicator (ed 43)

PURPOSE: The output indicator command presents an indicator to identify the output being requested from a device driver (DD) function block, or a remote control memory (RCM) function block. The command can be defined to provide an indication for both the zero and one state requested output, zero state only or one state only.

COMMAND: **ed 43,subtype,tag,x-coord,y-coord,size,fgcolor,bgcolor,almcolor**

where

subtype 32 - zero and one state, 33 zero state only, 34 one state only.

size Size of the indicator expressed in display units

Examples ed 43,34,9,1849,1645,124,3,0,3
ed 43,33,18,1499,1645,124,3,0,3

RCM Feedback Indicator (ed 44)

PURPOSE: The RCM feedback indicator command presents an indicator to verify the actual output of a remote control memory function block. The command defines an indicator for the zero and one state feedback.

COMMAND: **ed 44,subtype,tag,x-coord,y-coord size,fgcolor bgcolor,almcolor**

where

subtype 33 zero state only, 34 - one state only, 32 - zero and one state

size Size of the indicator expressed in display units

Example ed 44,33,18,2399,1402,124,3,0,3

RCMB Feedback Indicator (ed 44)

PURPOSE: The RCMB feedback indicator command presents an indicator to verify the actual output of a remote motor control block function block. The command provides an indication based on both feedback signals. A solid left-pointing arrow denotes one state. A hollow left-pointing arrow denotes zero state. The one state indication displays only when both of the feedbacks for the tag are in their one state; otherwise, it is blank. The zero state indication displays when either of the feedbacks is zero; otherwise, it is blank. Table B-5 shows the relationship between feedback state and indication.

COMMAND: `ed 44,subtype,tag,x-coord,y-coord,size,fgcolor,bgcolor,almcolor`

where

subtype 33 feedback zero state, 34 - feedback one state.

size Size of the indicator expressed in display units

Example `ed 44,33,6,2099,1502,124,3,0,3`

Table B-5 RCMB Feedback Signal to Feedback Indicator Relationship

FB1 State	FB2 State	One State Indication	Zero State Indication
0	0	blank	hollow
0	1	blank	hollow
1	0	blank	hollow
1	1	filled	blank

RCM Set Permissive Indicator (ed 45)

PURPOSE: The RCM set permissive indicator command presents a text indicator to identify either a set permissive or non-permissive condition being reported by a remote control memory function block. The default text presented by this command is *SP* and *NP*.

COMMAND: `ed 45,subtype,tag,x-coord,y-coord charsize,fgcolor,bgcolor spacing`

where

subtype 32 set permissive and non-permissive, 37 - set permissive only, 38 - set non-permissive only

Example `ed 45,32,18,2800,1645,124,3,0,1`

GRAPHIC AND ESCAPE COMMANDS

RCM Override Indicator (ed 46)

PURPOSE: The RCM override indicator command presents a text indicator to identify an override condition being reported by a remote control memory function block. The default text presented by this command is *OVR*

COMMAND: **ed 46,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing**

Example. ed 46,32,18,2800,1245,124,3,0,1

Station Mode - Type 1 (ed 47)

PURPOSE: The station mode command presents a text indication to identify the current operating mode being reported by a station function block. The default text displayed by this command is *AUTO*, *MANUAL*, *BYPASS*, *CASC* or *RATIO*

COMMAND: **ed 47,32,tag,x-coord,y-coord charsize,fgcolor bgcolor,spacing**

Example ed 47,32,15,1869,1202,124,3,0,1

NOTE Do not interm x type 1 stat on commands wth type 2 or 3 commands

Station Status - Type 1 (ed 48)

PURPOSE: The station status command presents a text indication to identify the current operating status being reported by a station function block. The default text displayed by this command is *LOCAL* or *CMPTR*

COMMAND: **ed 48,32,tag,x-coord y-coord charsize,fgcolor bgcolor,spacing**

Example ed 48,32,15,2569,1202,124,3,0,1

NOTE Do not interm x type 1 stat on commands wth type 2 or 3 commands

Moving Value (ed 49)

PURPOSE:

The moving value command presents the real value being exception reported for a specified tag as a moving value. This command can be used to present the value referenced to a scale, and have the value move up and down the scale proportionally. Use this command with an **ec 40** command to create a scaled presentation

COMMAND:

ed 49,subtype,tag,x-coord,y-coord,charsize fgcolor,bgcolor,almcolor, spacing,charlength,decimal-digits,variable-type,scale

where.

- subtype** 39 - vertically moving, 40 - horizontally moving
- x-coord,y-coord** Starting point position of the value which corresponds to the lowest value returned. The highest value position is this coordinate plus the number of scale parameter units.
- variable-type** 0 - process variable, 1 set point, 2 control output
- scale** Number of display units separating the high and low value positions. The scale is referenced to the x,y coordinate starting point

Example **ed 49,40,5,1249,1402,124,3,0,3,1,4,1,2,1700**

GRAPHIC AND ESCAPE COMMANDS

Dynamic Bar (ed 50)

PURPOSE: The dynamic bar command presents the real value being exception reported for a specified tag as an expanding and contracting bar. This command can be used to present the value referenced to a scale, and have the bar expand and contract proportionally. Use this command with an ec 40 command to create a scaled presentation.

COMMAND: *ed 50, subtype, tag, x-coord, y-coord, width, fgcolor, bgcolor, almc, variable-type, scale*

where

subtype 39 - vertical bar, 40 - horizontal bar

x-coord, y-coord Starting point position of the bar which corresponds to the lowest value returned. The bar expands to the highest value which is this coordinate plus the number of scale parameter units.

width Width of the bar expressed in display units.

variable-type 0 process variable, 1 set point, 2 control output

scale Number of display units separating the high and low limits of the bar. The scale is referenced to the x,y coordinate starting point.

Example *ed 50,40,5,1249,1567,40,3,0,3,2,1700*

Dynamic Pointer (ed 51)

PURPOSE: The dynamic pointer command presents the real value being exception reported for a specified tag as a moving pointer. This command can be used to present the value referenced to a scale, and have the pointer move up and down a scale proportionally. Use this command with an **ec 40** command to create a scaled presentation

COMMAND: **ed 51,subtype,tag,x-coord,y-coord,size,fgcolor,bgcolor,almcolor,variable-type,scale**

where

subtype 41 - vertically moving, left pointer,
 42 - vertically moving, right pointer,
 43 - horizontally moving, up pointer,
 44 - horizontally moving, down pointer

x-coord,y-coord Starting point position of the pointer which corresponds to the lowest value returned The pointer moves to a highest value position which is this coordinate plus the number of scale parameter units

size Size of the pointer expressed in display units

variable-type 0 - process variable, 1 - set point, 2 control output.

scale Number of display units separating the high and low positions of the pointer The scale is referenced to the x,y coordinate starting point

Example **ed 51,41,5,1874,2002,100,3,0,3,1,1400**

RMSC Tracking Indicator (ed 57)

PURPOSE: The RMSC tracking command presents a text indication to identify that a remote manual set constant function block has been set to tracking mode The default text displayed by this command is *T*

COMMAND: **ed 57,32,tag x-coord,y-coord,charsize,fgcolor,bgcolor spacing**

Example **ed 57,32,10,1099,1647,124,3,0,1**

GRAPHIC AND ESCAPE COMMANDS

DD or MSDD Override (ed 58)

PURPOSE: The DD or MSDD override indicator command presents a text indicator to identify an override condition being reported by a device driver (DD) function block or a multi state device driver (MSDD) function block. The default text presented by this command is *OVR*

COMMAND: **ed 58,32,tag x-coord,y-coord,charsize,fgcolor,bgcolor,spacing**

Example **ed 58,32,9,2799,1245,124,3,0,1**

Feedback Indicator (ed 59)

PURPOSE: The feedback indicator command presents a logic state descriptor indication to verify the actual output of a device driver (DD) function block, a multi state device driver (MSDD) function block, or a remote motor control (RMCB) function block. Either the zero state or one state descriptor defined in the tag database appears depending on the feedback state returned. The command can be defined to provide an indication for either the feedback 1, feedback 2, feedback 3 or feedback 4 reported states.

COMMAND: **ed 59,subtype,tag,x coord,y-coord,charsize,fgcolor,bgcolor,altncolor spacing**

where

subtype 33 feedback 1, 34 - feedback 2, 47 feedback 3 (MSDD), 48 - feedback 4 (MSDD)

Examples **ed 59,33,9,2279,1402,124,3,0,3,1**

ed 59,48,8,2279,1397,124,3,0,7,1

Mode (ed 60)

PURPOSE: The mode command presents a text indication to identify the current operating mode being reported by a device driver function block. The default text displayed by this command for a DD tag is *MANUAL*, *AUTO* or *REMOTE*.

The mode command also presents a text indication to identify the current operating mode being reported by a multi state device driver function block. The default text displayed by this command for a MSDD tag is *MANUAL* or *AUTO*.

COMMAND: **ed 60,32,tag x-coord y-coord charsize,fgcolor,bgcolor spacing**

Example **ed 60,32,9,1199,1245,124,3,0,3**

MSDD Output Indicator (ed 61)

PURPOSE: The MSDD output indicator command presents an indicator to identify the output being requested from a multi-state device driver function block. The command can be defined to provide an indication for the default, 1, 2 or 3 requested outputs

COMMAND: **ed 61,subtype,tag,x-coord,y-coord size,fgcolor,bgcolor,almcolor**

where

subtype 33 - default output, 34 - output 1 indicator,
47 - output 2 indicator, 48 - output 3 indicator

size Size of the indicator expressed in display units

Example **ed 61,34,8,1289,1567,124,3,0,7**

MSDD Control Override (ed 62)

PURPOSE: The MSDD control override command presents a text indicator to identify a control override condition being reported by a multi state device driver function block

COMMAND: **ed 62,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing**

Example **ed 62,32,8,2799,1227,124,3,0,1**

Node Type and Configuration Error (ed 64)

PURPOSE: The node type and configuration error command presents a node type, and an error indication if there is a conflict between reported node type and the node type configured for a tag. A parameter of the command references an N90STA tag for which it is to present this indication. The command is normally used in system status displays. The default indication presented to identify the error condition is an asterisk (*)

COMMAND: **ed 64,32,tag x-coord y-coord charsize,fgcolor,bgcolor,almcolor,spacing, charlength,start-char**

Example **ed 64,32,1,1000,1000,124,3,0,7,1,8,0**

GRAPHIC AND ESCAPE COMMANDS



Node Error Short Form (ed 65)

PURPOSE: The node error short form command presents a single character indicator to identify the existence of a node off-line, module error, communication error or node status error. A parameter of the command references an N90STA tag for which it is to present these indications. The command is normally used in system status displays. The default indications presented to identify each type of error condition are *O* for node off line, *M* for module error, *C* for communication error, and *S* for node status problem.

COMMAND: `ed 65,50,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing`

Example `ed 65,50,1,1900,1000,124,7,0,7,1`

Node Error Long Form Off-Line (ed 65)

PURPOSE: The node error long form off-line command presents an indicator to identify the existence of a node off-line error. A parameter of the command references an N90STA tag for which it is to present these indications. The command is normally used in system status displays. The default indications presented by this command are *offline* and *online*.

COMMAND: `ed 65,51,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing`

Example `ed 65,51,1,1000,1000,124,3,0,7,1`

Node Error Long Form Module (ed 65)

PURPOSE: The node error long form module command presents an indicator to identify the existence of a module error within the node. A parameter of the command references an N90STA tag for which it is to present these indications. The command is normally used in system status displays. The default indications presented by this command are *error* and *ok*.

COMMAND: `ed 65,52,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing`

Example. `ed 65,52,1,1000,1000,124,3,0,7,1`

Node Error Long Form Communications (ed 65)

PURPOSE: The node error long form communications command presents an indicator to identify the existence of a communication error. A parameter of the command references an N90STA tag for which it is to present these indications. The command is normally used in system status displays. The default indications presented by this command are *error* and *ok*.

COMMAND: `ed 65,53,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing`

Example `ed 65,53,1,1000,1000,124,3,0,7,1`

Node Error Long Form Node Status (ed 65)

PURPOSE: The node error long form node status command presents an indicator to identify the existence of a status problem. A parameter of the command references an N90STA tag for which it is to present these indications. The command is normally used in system status displays. The default indications presented by this command are *problem* and *normal*.

COMMAND: `ed 65,54,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing`

Example: `ed 65,54,1,1000,1000,124,3,0,7,1`

Module Type and Configuration Error (ed 68)

PURPOSE: The module type and configuration error command presents a module type, and an error indication if there is a conflict between reported module type and the module type configured for a tag. A parameter of the command references an N90STA tag for which it is to present this indication. It is normally used in system status displays. The default indication presented to identify the error is an asterisk (*).

COMMAND: `ed 68,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing, charlength,start-char`

Example `ed 68,32,1,1200,1000,124,3 0,7,1,8,0`

Module Mode (ed 69)

PURPOSE: The module mode command presents a module mode indication. A parameter of the command references an N90STA tag for which it is to present this information. The command is normally used in system status displays. The default mode indications presented by this command are *execut* (execute), *config* (configure), *error*, *standby* and *failed*.

COMMAND: `ed 69,32,tag x-coord y-coord,charsize,fgcolor,bgcolor,almcolor,spacing`

Example. `ed 69,32,1,2200,1000,124,3,0,7,1`

Module Error Indicator (ed 70)

PURPOSE: The module error indicator command presents a module error indicator to identify that a module has some error. This is a general indication that only identifies the existence of an error. A parameter of the command references an N90STA tag for which it is to present this indication. The command is normally used in system status displays. The default indication presented by this command is *ERR*.

COMMAND: `ed 70,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing`

Example `ed 70,32,1,3000,1000,124,3,0,7,1`

GRAPHIC AND ESCAPE COMMANDS

Module Status Bytes (ed 71)

PURPOSE: The module status bytes command presents the status bytes returned by a module. A parameter of the command references an N90STA tag for which it is to present the bytes. The command is normally used in system status displays.

COMMAND: ed 71,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor spacing

Example: ed 71,32,200,6600,7000,124,3,0,1

Station Mode - Type 2 (ed 74)

PURPOSE: The station mode command presents a text indication to identify the current operating mode being reported by a station function block. The default text displayed by this command is *BYPASS*, *MANUAL*, *MANUAL/C*, *MANUAL/R*, *AUTO*, *AUTO/C* or *AUTO/R*.

COMMAND: ed 74,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing

Example: ed 74,32,25,1869,1202,124,3,0,1

NOTE Do not intermix type 2 station commands with type 1 commands

Station Status - Type 2 (ed 75)

PURPOSE: The station status command presents a text indication to identify the current operating status being reported by a station function block. The default text displayed by this command is *LOCAL*, *CMPTTR*, *CASC* or *RATIO*.

COMMAND: ed 75,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing

Example: ed 75,32,25,2569,1202,124,3,0,1

NOTE Do not intermix type 2 station commands with type 1 commands

Station Tracking - Type 2 (ed 76)

PURPOSE: The station tracking command presents a text indication to identify the implementation of control output or set point tracking in a station function block. The command also presents an indication of a manual interlock set condition. The default text displayed by this command is *COTR*, *SPTR* or *LOCK*.

COMMAND: ed 76,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing

Example: ed 76,32,25,1249,1202,124,3,0,1

NOTE The order of precedence should an overlap occurs COTR overrules LOCK. LOCK overrules SPTR.

Station Mode - Type 3 (ed 77)

PURPOSE: The station mode command presents a text indication to identify the current operating mode being reported by a station function block. This is similar to type 2 except that instead of using the fixed text strings, it references text strings defined in a *STNSTXT.TXT* user file for a more concise description of station mode.

COMMAND: *ed 77,32,tag,x-coord,y-coord,charsize fgcolor,bgcolor,aimcolor,spacing,charlength,start-char*

Example *ed 77,32,25,1869,1202,124,3,0,1,10,0*

NOTE Do not interm x type 3 station commands wth type 1 commands

Text Selector (ed 79)

PURPOSE: The text selector command presents the text string referenced by a text selector function block. The actual message that displays depends on tag text selector configuration, refer to **TAG TEXT SELECTOR** in the *OIS Configuration* section for specifics.

COMMAND: *ed 79,32,tag x-coord y-coord charsize spacing charlength start-char*

Examples: *ed 79,32,17,2800,1245,124,1,20,0*

ed 79,32,17,2800,1245,124,1,20,20

RMCB Bad Start Text (ed 80)

PURPOSE: The RMCB bad start text command presents a text indication to identify a bad start being reported by a remote motor control function block. The default text displayed by this command is *BAD START*.

COMMAND: *ed 80,33,tag,x-coord,y-coord charsize,fgcolor,bgcolor,aimcolor,spacing*

Example *ed 80,33,6,1200,1340,124,3,0,3,1*

RMCB Fault Indicator Text (ed 80)

PURPOSE: The RMCB fault indicator text command presents a text indication to identify a fault condition being reported by a remote motor control function block. The default text displayed by this command is *FAULT*.

COMMAND: *ed 80,34,tag x-coord,y-coord,charsize,fgcolor bgcolor aimcolor,spacing*

Example *ed 80,34,6,2200,1340,124,3 0,3,1*

GRAPHIC AND ESCAPE COMMANDS

RCMB Permissive Indicator (ed 81)

PURPOSE: The RMCB permissive indicator command presents a logic state descriptor to identify the current permissive inputs to a remote motor control function block. Either the zero state or one state descriptor defined in the tag database appears depending on the permissive state returned. The command can be defined to provide an indication for either the permissive 1 or permissive 2 reported states.

COMMAND: `ed 81,subtype,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor spacing`

where

`subtype` 33 - permissive 1, 34 - permissive 2

Example `ed 81,33,6,2280,1820,124,3,0,1`

RCMB Error Code Text (ed 92)

PURPOSE: The RMCB error code text command presents a text string to identify an error code reported by a remote motor control function block. The block can return one of up to 16 different codes. The actual error code message that displays depends on remote motor control text configuration, refer to **REMOTE MOTOR CONTROL TEXT** in the *OIS Configuration* section for specifics.

COMMAND: `ed 92,32,tag,x-coord,y-coord charsize,fgcolor,bgcolor,almcolor spacing charlength,start-char`

Example `ed 92,32,6,1200,1180,124,3,0,3,1,20,0`

Device Status Bytes (ed 94)

PURPOSE: The device status byte command presents an error code when the interface unit is marked off line, or a storage device controller senses status bytes for the last I/O. The error codes are shown as decimal integers, sense bytes as hexadecimal preceded by a pound sign (#). The command is normally used in device status displays.

COMMAND: `ed 94,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor spacing`

Example `ed 94,32,55,4300,2150,124,3,0,1`

Device Status Description (ed 95)

- PURPOSE:** The device status description command presents a text string associated with an error code, or storage device sense bytes. The command is normally used in device status displays
- COMMAND:** `ed 95,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,aimcolor,spacing, charlength,start-char`
- Example** `ed 95,32,55,4300,2350,124,3 0,7,1,40,0`

Deviation Bar - Type 1 (ed 98)

- PURPOSE:** The deviation bar (type 1) command presents a deviation value being exception reported for a specified tag as an expanding and contracting bar. The bar expands from a baseline or null point to show either a positive or negative deviation value.
- COMMAND:** `ed 98,subtype tag,x-coord,y-coord width,fgcolor,bgcolor,aimcolor, variable-type,scale,base-value,abs-max-deviation,option`
- where
- subtype** 39 - vertical bar, 40 - horizontal bar
- x-coord,y-coord** Starting point position of the bar. The bar expands from this baseline position. The baseline is an imaginary line at the specified y-coordinate parameter for a vertical bar, or at the x coordinate for a horizontal bar. For a vertical bar, the left edge of the bar is defined by the x coordinate. For a horizontal bar, the lower edge of the bar is defined by the y-coordinate.
- width** Width of the bar expressed in display units.
- variable-type** 0 - process variable, 1 - set point, 2 - control output
- scale** Number of screen units representing either full negative deviation or full positive deviation. The entire screen space used by a bar is $2 \times \text{scale}$ units. This is in contrast to normal dynamic bars where scale is the number of screen units necessary to represent the entire span of the bar.
- base-value** Real number that represents the baseline or null point of the bar. When the value reported is equal to the base value, there is no deviation, deviation is zero.

GRAPHIC AND ESCAPE COMMANDS

<i>abs-max-deviation</i>	Unsigned real value that defines the plus or minus (\pm) deviation to present. It is expressed in engineering units. The value should be equal to either the full-positive deviation or full-negative deviation value. For example, if the given screen space represents deviations from -3.0 to +3.0, the deviation should be specified as 3.0.
<i>option</i>	Direction of bar movement. Up or down for vertical, and left or right for horizontal.
	0 - positive deviation drawn upward (vertical subtype 39).
	1 - positive deviation drawn downward (vertical subtype 39)
	0 - positive deviation drawn right (horizontal subtype 40)
	1 - positive deviation drawn left (horizontal subtype 40)

Deviation Bar - Type 2 (ed 99)**PURPOSE:**

The deviation bar (type 2) command presents a deviation value being exception reported for a specified tag as an expanding and contracting bar. The bar expands from a baseline or null point to show either a positive or negative deviation value. Screen space for a type 2 deviation bar is always symmetrical about the baseline. Baseline is the current set point.

COMMAND:

ed 99, subtype, tag, x-coord, y-coord, width, fgcolor, bgcolor, aimcolor, base-type, scale, abs-max-deviation, option

where

subtype 39 - vertical bar, 40 - horizontal bar

x-coord, y-coord Starting point position of the bar. The bar expands from this baseline position. The baseline is an imaginary line at the specified y coordinate parameter for a vertical bar, or at the x coordinate for a horizontal bar. For a vertical bar, the left edge of the bar is defined by the x-coordinate. For a horizontal bar, the lower edge of the bar is defined by the y-coordinate.

width Width of the bar expressed in display units.

variable-type 0 - process variable, 1 - set point, 2 - control output

base-type 0 (reserved for future use)

<i>scale</i>	Number of screen units representing either full negative deviation or full positive deviation. The entire screen space used by a bar is $2 \times \text{scale}$ units. This is in contrast to normal dynamic bars where scale is the number of screen units necessary to represent the entire span of the bar.
<i>abs-max-deviation</i>	Unsigned real value that defines the plus or minus (\pm) deviation to present. It is expressed in engineering units. The value should be equal to either the full-positive deviation or full-negative deviation value. For example, if the given screen space represents deviations from -3.0 to +3.0, the deviation should be specified as 3.0.
<i>option</i>	Direction of bar movement. Up or down for vertical, and left or right for horizontal. <ul style="list-style-type: none"> 0 - positive deviation drawn upward (vertical subtype 39) 1 - positive deviation drawn downward (vertical subtype 39) 0 - positive deviation drawn right (horizontal subtype 40) 1 - positive deviation drawn left (horizontal subtype 40)

Red Tag Status Text (ed 100)

PURPOSE: The red tag status text command presents a two character text indicator to identify the current red tag condition of a process device. The default text displayed by this command is *RT*.

COMMANDS: `ed 100,32,tag x-coord,y-coord charsize,fgcolor bgcolor rcolor, spacing charlength,start-char`

where

rcolor Index number of a color to use as the red tag color, refer to Table B-2 for color index numbers

Example `ed 100,32,3,1020,3680,124,3,0,2,1,2,0`

GRAPHIC AND ESCAPE COMMANDS

Enhanced Module Status (ed 101)

PURPOSE: The enhanced module status command presents the status bytes returned by a module. A parameter of the command references an N90STA tag for which it is to present the bytes. The command is normally used in system status displays. It also gives the ability to present a backup module (BKPBAD), local I/O (LIO) or remote I/O (RIO) error status indicator.

COMMAND: `ed 101,32,tag,x-coord y-coord,charsize,fgcolor,bgcolor,almcolor,spacing,option`

where

option 51 - backup module status indicator, 52 - local I/O error indicator, 53 - remote I/O error indicator

Example `ed 101,32,200,6600,7000,124,3,0,7,1,51`

Red Tag Status Outline (ed 102)

PURPOSE: The red tag status outline command causes the outline of a symbol to change to a specified red tag color when a process device is in a red tag condition. A lower left and upper right parameter in the command specifies the size of the outline. The size should match the outline of the symbol, which is normally defined by a `pl` command.

COMMAND: `ed 102,32 tag,x1-coord,y1-coord x2-coord,y2-coord,rtcolor nrmcolor`

where

x1-coord,y1-coord Lower left corner x,y coordinates

x2-coord,y2-coord Upper right corner x,y coordinates

rtcolor Index number of a color to use as the red tag color; refer to Table B 2 for color index numbers

nrmcolor Index number of a color to use as the normal or non red tag color, refer to Table B 2 for color index numbers

Example `ed 102,32,3,0000,0000,2180,1580,2,4`

Exception Report Text (ed 103)

PURPOSE:

The exception report text command presents a text string associated with certain status indications returned in an exception report for an ANALOG, DIGITAL, DD, MSDD, RCM, RMCB, N90STA or TEXTSTR tag. The actual text that appears depends on both the data option code defined in the command and the state being reported for that data type. Table B-6 lists the data type indications that can be presented by this command.

COMMAND:

ed 103,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,aimcolor,spacing, charlength,start-char.data-option

where

data-option Refer to Table B-6 for valid option codes, and a description of the text presented by the code.

Example: ed 103,32,45,2279,1907,124,3,0,7,1,15,0,3

Table B-6. Exception Report Text Option Codes

Option Code	States Returned	Data Type	Tag Type
3	2	cal brat on qua ty	ANALOG
4	2	po nt d sab ed	ANALOG
6	2	state	DIGITAL RCM DD MSDD RMCB ALL
8	2	red tag status	STATION
9	2	set po nt track ng	STAT ON
10	2	bypass mode	STAT ON
11	2	mode nterock	STATION TEXTSTR
12	2	output track ng	STAT ON
13	2	analog output status	STAT ON
14	2	computer status	STATION
15	2	stat on eve	STAT ON
16	2	cascade "at o o" normal	STAT ON
17	2	auto/manua	STAT ON TEXTSTR
18	2	logic set	RCM
19	2	set permiss ve	RCM
20	2	logic reset	RCM
21	2	override	RCM
22	2	feedback	RCM
23	2	set command	RCM
24	2	reset command	RCM
25	2	feedback status	DD MSDD
26	2	status overr de	DD MSDD
27	4	mode	DD
28	4	requested state	MSDD
29	2	ast good state	MSDD
30	2	feedback 1 state	DD MSDD RMCB
31	2	feedback 2 state	DD MSDD, RMCB
32	2	feedback 3 state	MSDD
33	2	feedback 4 state	MSDD

Table B-6. Exception Report Text Option Codes (continued)

Option Code	States Returned	Data Type	Tag Type
35	2	contro verr de	MSDD
36	2	mode	MSDD
37	2	bad start	RMCB
38	2	fault	RMCB
39	2	start perm ss ve 1	RMCB
40	2	start permissive 2	RMCB
41	16	error code	RMCB
42	2	track ng	RMSC
43	2	PV status	STATION
51	2	backup status	N90STA
52	2	loca /O error	N90STA
53	2	remote /O error	N90STA
65	2	echo contro	TEXTSTR
66	2	str ng nter ock	TEXTSTR
67	2	truncated	TEXTSTR

Data Acquisition Constrained Value Indicator (ed 107)

PURPOSE:

The constrained value indicator command enables two triangular pointers to proportionally show the high constraint limit and low constraint limit set in the PCU control module. The pointers can point up, down, left or right. The pointers proportionally mark the position of the constrained limit values, but do not appear if the constraints have not been enabled. Each pointer positions within the range between the low display reference value and the high display reference value. The pointers remain hollow when the constrained value point has not been reached and fill when reached. This command functions with a DANG tag type only.

COMMAND:

ed 107, subtype tag, x-coord, y-coord, charsize fgcolor bgcolor, scale

where

subtype 41 - vertical left pointer, 42 - vertical right pointer, 43 - horizontal up pointer, 44 - horizontal down pointer

x-coord, y-coord Starting point which determines the lowest possible position of the scale. The constrained value pointers are drawn proportionally between the high reference value and low reference value on the scale. The complete scale range is determined by the x,y coordinate plus the scale parameter.

charsize Size of the pointer

Quality Override Indicator (ed 112)

PURPOSE: The quality override (driven) indicator presents a variable length text field to indicate whether the quality of the tag has been overridden (driven into another condition). The default text string presented by the command is *^QUALITY* if the quality has been overridden in the PCU control module. The field remains blank if not overridden. Thus command functions with a DANG, DADIG or TEXTSTR tag type.

COMMAND: `ed 112,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing, charlength,start-char`

Example `ed 112,32,55,1100,550,124,5,0,1,1,0`

Alarm Priority (ed 113)

PURPOSE: The alarm priority command enables a variable length text field to present a text string that corresponds to the current alarm priority set for a tag. The command works with any tag type and references the alarm priorities set for the tag to determine the text string to display. The colors set during *Alarm Quality Option* configuration affect the alarm colors for this element. The default text strings presented by this command, and the associated alarm priority for each text string include:

- | | |
|---------------------|--------------------|
| (1) <i>DIRE</i> | (5) <i>WARNING</i> |
| (2) <i>CRUCIAL</i> | (6) <i>ADVISE</i> |
| (3) <i>CRITICAL</i> | (7) <i>NOTIFY</i> |
| (4) <i>ALERT</i> | (8) <i>INFORM</i> |

COMMAND: `ed 113,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing, charlength,start-char`

Example `ed 113,32,20,2000,3000,124,3,0,7,1,8,0`

GRAPHIC AND ESCAPE COMMANDS

Alarm State (ed 114)

PURPOSE: The alarm state command enables a two character text field to present the current alarm state of a tag. The command works with any tag type. The colors set during *Alarm Quality Option* configuration affect the alarm colors for this element. The default text strings presented by this command include

- | | |
|-----------------------|--------------------------------|
| blank - no alarm | * bad quality |
| L - low alarm | N return to normal |
| 2L - two-low alarm | // - alarms suppressed |
| 3L - three-low alarm | HD high deviation alarm |
| H - high alarm | LD - low deviation alarm |
| 2H two-high alarm | HR - high rate of change alarm |
| 3H - three-high alarm | LR low rate of change alarm |
- A digital, or N90STA, DEVSTAT or TEXTSTR alarm

COMMAND: ed 114,32,tag x-coord,y-coord,charsize,fgcolor,bgcolor a mcolor spacing

Example ed 114.32.23.4500.3600.124.3.0.7.1

Data Acquisition Next Highest or Next Lowest Alarm State (ed 114)

PURPOSE: The next highest or next lowest alarm state command enables a two character text field to display either the next high alarm condition or next low alarm condition for a tag. This command functions with a DANG tag type only. The default text strings and when they occur based on the current state include

<u>Next High Field</u>	<u>Current State</u>
H	blank or N
2H	H
3H	2H
blank	3H or all other states (L, 2L, 3L, LD, HD, LR, HR)
L	blank or N
2L	L
3L	2L
blank	3H or all other states (H, 2H, 3H, LD, HD, LR, HR)

COMMAND: ed 114,subtype,tag x-coord,y-coord,charsize fgcolor bgcolor spacing

where

subtype 35 next high, 36 next low

Example ed 114,35,55,4300,6250,124,3,0,1

scale Number of display units separating the high reference value and low reference value. The bottom of the scale starts at the x,y coordinate starting point

Example ed 107,42,55,1669,2002,124,5,0,1400

Data Acquisition Bidirectional Dynamic Bar (ed 108)

PURPOSE: The bidirectional dynamic bar command enables a moving, dynamic bar that represents the current value being reported for a DANG tag. The bar proportionally expands from or contracts to the center reference point depending on the reported value. The colors set during *Alarm Quality Option* configuration affect the alarm colors for this element. This command functions with a DANG tag type only.

COMMAND: ed 108,subtype,tag,x-coord y-coord,width fgcolor,bgcolor almcOLOR,scale

where

subtype 39 - vertical bar, 40 - horizontal bar

x-coord,y-coord Starting point which determines the point at which the bar represents the lowest possible value. The bar is drawn proportionally between the high reference value and low reference value on the scale. The complete scale range is determined by the x,y coordinate plus the scale parameter.

width Width of the bar expressed in display units

scale Number of display units separating the high reference value and low reference value. The bottom of the scale starts at the x,y coordinate starting point

Example ed 108,39,55,1669,2002,50,3,0,7,1400

GRAPHIC AND ESCAPE COMMANDS

Data Acquisition Value Source and Lock Indicator (ed 109)

PURPOSE: The value source and lock indicator command presents a text field that displays the current source for a value (DANG) or state (DADIG), and an indicator if that source is locked (select not enabled) The default text presented by this command is

<u>Source Locked</u>	<u>Source Unlocked</u>
NORM (L)	NORM
U/IN (L)	U/IN
ALT (L)	ALT

COMMAND: ed 109,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing

Example ed 109,32,55,5400,6200,124,3,0,1

Data Acquisition Variable Alarm Type Indicator (ed 110)

PURPOSE: The variable alarm type indicator command presents a variable length text field to indicate whether variable alarming is enabled in the PCU control module The default text string presented by this command is *VARIABLE* if alarming is enabled The field remains blank if not enabled This command functions with a DANG tag type only

COMMAND: ed 110,32,tag,x-coord,y coord charsize,fgcolor,bgcolor spacing, charlength,start-char

Example ed 110,32,55,2300,2400,124,5,0,1,8,0

Data Acquisition No Report Indicator (ed 111)

PURPOSE: The no report indicator command enables a variable length text field to indicate that the tag is in a no report mode The default text string presented by this command is *NREPORT* if in a no report mode. The field remains blank if the tag is in its reporting mode This command functions with a DANG or DADIG tag type

COMMAND: ed 111,32,tag,x-coord,y-coord charsize,fgcolor,bgcolor,spacing charlength,start-char

Example ed 111,32,55,1200,550,124,5,0,1,2,0

Quality (ed 115)

PURPOSE: The quality command enables a variable length text field that presents the current quality being reported for a tag. The command works with any tag type. The colors set during *Alarm Quality Option* configuration affect the alarm colors for this element. The default text strings presented by this command include

<i>GOOD</i>	<i>xOFFSCAN</i>
<i>?SUSPECT</i>	<i>iINHIBIT</i>
<i>*BAD</i>	<i>sSUBSTITUTED</i>

COMMAND: *ed 115,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing,charlength,start-char*

Examples. *ed 115,32,55,1250,2500,124,3,0,1,1,0*

ed 115,32,55,1250,2500,124,3,0,1,8,1

Data Acquisition Next Alarm Limit (ed 116)

PURPOSE: The next alarm limit command presents a floating point alarm limit value to show either the next highest or next lowest alarm threshold level for the tag. This shows the value at a fixed position on the display. The field does not appear if the process control point is indicating a low or high rate of change alarm, or low or high deviation alarm. This command functions with a DANG tag type only.

COMMAND: *ed 116,subtype tag x-coord,y-coord charsize,fgcolor bgcolor,spacing,charlength,decimal-digits*

where

subtype 35 next high alarm limit, 36 - next low alarm limit

Example *ed 116,35,55,2569,2002,124,3,0,1,6,2*

GRAPHIC AND ESCAPE COMMANDS

Data Acquisition Moving Next Alarm Limit (ed 117)

PURPOSE: The moving next alarm limit command presents two floating point alarm limit values that move up or down a scaled range. The values are the next highest and next lowest alarm threshold level for the tag. This shows the values proportionally within a scaled range. This command functions with a DANG tag type only.

COMMAND: *ed 117,subtype,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing,charlength,decimal-digits,scale*

where:

subtype 39 - vertical movement, 40 - horizontal movement

x-coord,y-coord Starting point which determines the lowest possible position of the scale. The alarm limit values are drawn proportionally between the high reference value and low reference value on the scale. The complete scale range is determined by the x,y coordinate plus the scale parameter.

scale Number of display units separating the high reference value and low reference value. The bottom of the scale starts at the x,y coordinate starting point.

Example *ed 117,39,55,2569,2002,124,3,0,1,6,2,1400*

Data Acquisition Moving Next Alarm Limit Tick Marks (ed 118)

PURPOSE: The moving next alarm limit tick marks command enables two horizontal or vertical line segments (tick marks) that move within a scaled range. The line segments mark the proportional position of the next highest and next lowest alarm limits. Each moves within the range of low reference value to high reference value set in the PCU control module. This command functions with a DANG tag type only.

COMMAND: `ed 118,subtype,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,scale`

where:

subtype 39 - vertical movement, 40 horizontal movement

x-coord,y-coord Starting point which determines the lowest possible position of the scale. The alarm limit tick marks are drawn proportionally between the high reference value and low reference value on the scale. The complete scale range is determined by the x,y coordinate plus the scale parameter.

scale Number of display units separating the high reference value and low reference value. The bottom of the scale starts at the x,y coordinate starting point.

Example `ed 118,39,55,2569,2002,124,3,0,1400`

Text String (ed 120)

PURPOSE: The text string command presents a variable length text field (80 characters maximum) associated with a TEXTSTR tag. It displays the current text string received for the tag.

COMMAND: `ed 120,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,almcolor,spacing,charlength,start-char,trunc-option`

where

trunc-option 0 - no truncation, 1 - truncate

Example `ed 120,32,15,1850,750,124,3,0,0,1,80,0,1`

GRAPHIC AND ESCAPE COMMANDS

Text String Interlock Indicator (ed 121)

PURPOSE: The text string interlock command presents a lock status indication for a TEXTSTR tag. The indication is either *USER TEXT LOCK* or blank. When locked, the console and PCU module do not accept any operator entered text string.

COMMAND: **ed 121,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor spacing charlength,start-char,trunc-option**

where.

trunc-option 0 - no truncation, 1 - truncate

Example **ed 121,32,15,8059,1150,124,3,0,1,14,0,0**

Text String Truncation Indicator (ed 122)

PURPOSE: The text string truncation indicator command presents a *NO TRUNCATION* or *REMOTE TRUNC* indication for a TEXTSTR tag. The indication allows determining whether or not remote (PCU module or interface unit level) truncation has occurred for the text string presented.

COMMAND: **ed 122,32,tag,x-coord,y-coord charsize,fgcolor,bgcolor,spacing, charlength,start-char,trunc-option**

where

trunc-option 0 - no truncation, 1 truncate

Example **ed 122,32,15,9000,950,124,3,0,1,4,0,0**

Received Text String Length (ed 123)

PURPOSE: The received text string length command indicates the length of the text string received in an exception report for a TEXTSTR tag.

COMMAND: **ed 123,32,tag,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing**

Example **ed 123,32,15,1500,2200,124,3,0,1**

BLOCK DETAILS DISPLAY (bd 126)

PURPOSE: The block details display command can be used to create a block details display for a specific function block. The command contains a loop, PCU, module and block address parameter that dedicates the display to a certain function block. A block details display provides the capability to perform process tuning.

COMMAND: *bd 126,x-coord,y-coord,size,loop,PCU,module,block*

where.

x-coord,y-coord Lower left corner coordinates of the box

size 66 - small (6,725 x 3,456), any other number - large (9,200 x 6,800) block

Example: *bd 126,400,400,1,1,2,3,99*

GRAPHIC AND ESCAPE COMMANDS

ALARM SUMMARY ELEMENT COMMANDS

Alarm summary commands create and define the characteristics of an alarm summary element such as size, coordinate position, alarm line format and color. Depending on the command, it also determines whether the alarm entries are limited to tags within specific or a range of alarm groups, or those having specific or a range of priorities.

NOTE Refer to Table B 3 for additional parameter definitions.

Alarm Summary (as 82)

PURPOSE: The alarm summary command creates an alarm summary element containing alarm entries for a defined range or individual alarm groups only, or both range and individual groups.

COMMAND: as 82, *grpoption*, *grpcount* start, end, *grpnums*, size, format, x coord, y-coord, outline-color

where

- grpoption* Group option, 32 range only, 33 individual groups only, 34 range and individual groups
- grpcount* Group count or number of individual alarm groups from 0 to 10, 0 if *grpoption* is 32
- start* Starting group number in range from 1 to 99, S or D, not applicable if *grpoption* is 33. When specifying the entire alarm group range, set this to 1 as the starting group.
- end* Ending group number in range from 1 to 99, S or D, not applicable if *grpoption* is 33. When specifying the entire alarm group range, set this to D as the ending group.
- grpnums* Individual alarm group numbers, up to 10 individual alarm groups can be specified. Not applicable if *grpoption* is 32.
- size* 32 full screen (100 × 100)
 33 half screen (50 × 100)
 34 - quarter screen (25 × 100)
 35 eighth screen (12.5 × 100)
- format* Alarm line format, 0 to 4 if using the standard line entry formats provided, 5 to 105 if using a user-defined line format. Refer to **ALARM SUMMARY CONFIGURATION** in the **OIS Configuration** section for further information.

x-coord,y-coord Lower left corner x,y coordinate of alarm summary element.

outline-color Index number of a color to use as the outline color when deselected, refer to Table B-2 for color index numbers

DISCUSSION:

The size parameter affects other characteristics of the alarm summary element such as maximum number of alarm entries. Refer to **ALARM SUMMARY CONFIGURATION** in the **OIS Configuration** section for further explanation.

Examples Alarm group range only.

as 82,32,0,1,D,32,0,400,400,4

Individual alarm groups only

as 82,33,5,12,16,33,88,D,32,0,400,400,4

Alarm group range and individuals

as 82,33,3,1,15,99,S,D,32,0,400,400,4

To create a complete alarm summary element, additional commands are necessary including

- 1 Control select using both key (ei 108,87) and touch point (ei 107,87)
- 2 Primary display select using both key (ei 108,88) and touch point (ei 107,88) for each alarm line entry
- 3 Text descriptors (tx) for the control select key characters and each primary display select key character
- 4 Polyline (pl) for the element outline

Example

```

bm 0,almsum~
bp 0,almsum~,0
sm 1
bb
as 82,32,0,1,D,32,0,400,400,4
ei 108,87,83,0,400,400
ei 107,87,400,6650,9600,7200,400,400
ei 108,88,65,0
ei 108,88,66,0
ei 108,88,67,0
ei 108,88,68,0
ei 108,88,69,0
ei 108,88,70,0
ei 108,88,71,0
ei 108,88,72,0
    
```

GRAPHIC AND ESCAPE COMMANDS

Bailey

ei 108,88,73,0
ei 108,88,74,0
ei 108,88,75,0
ei 108,88,76,0
ei 108,88,77,0
ei 108,88,78,0
ei 108,88,79,0
ei 108,88,80,0
ei 107,88,400,6294,9600,6641
er 107,88,400,5946,9600,6293
ei 107,88,400,5598,9600,5945
ei 107,88,400,5250,9600,5597
er 107,88,400,4728,9600,5075
er 107,88,400,4380,9600,4727
ei 107,88,400,4032,9600,4379
ei 107,88,400,3684,9600,4031
ei 107,88,400,3162,9600,3509
ei 107,88,400,2814,9600,3161
ei 107,88,400,2466,9600,2813
ei 107,88,400,2118,9600,2465
ei 107,88,400,1596,9600,1943
er 107,88,400,1248,9600,1595
ei 107,88,400,900,9600,1247
er 107,88,400,552,9600,899
ch 124
cs 01
lc 4
fc 0
lt 0
pl 400,400,9200,0~
pl 400,400,0,6800~
pl 400,7200,9200,0~
pl 9600,400,0,6800~
bc 0,0
tc 2
tx 0,550,6490,A
tx 0,550,6142,B~
tx 0,550,5794,C~
tx 0,550,5446,D~
tx 0,550,4924,E~
tx 0,550,4576,F~
tx 0,550,4228,G~
tx 0,550,3880,H~
tx 0,550,3358,I~
tx 0,550,3010,J~
tx 0,550,2662,K~
tx 0,550,2314,L~
tx 0,550,1792,M~
tx 0,550,1444,N~
tx 0,550,1096,O~
tx 0,550,748,P~


```
tc 5
tx 0,4000,6838,ALARM SUMMARY~
ep
em
%%
%%
```

Alarm Summary (as 83)

PURPOSE: The alarm summary command creates an alarm summary element containing alarm entries for tags assigned to a certain alarm group, or having a certain priority assignment. A parameter of the command determines whether the element limits the entries by alarm group or priority. In either case, the command can also be set to limit the entries to a specified range only, a list of individuals only, or both range and individual alarm groups or priorities. Unlike the **as 82** command, this command generates a complete alarm summary.

COMMAND: **as 83,grpoption, key-select, primkey-select, size touch-flag primkey-orientation, primkey-color, format, x-coord y-coord, outline-color start, end, count grp/prior-nums, grp/prior-filter ack-filter**

where.

- grpoption** Group option, 32 - range only, 33 - individual groups/priorities only, 34 - range and individual groups/priorities
- key-select** Alarm element control select keys. One or two alphanumeric characters (e.g., 1A, A, 2X, etc.), or 0 if not required.
- primkey-select** Primary display key select, alphanumeric character of the key to use as the first primary display select key. The rest of the selectors are generated from this entry. One alpha character (e.g., A, D, etc.), or 0 if not required.
- size** 32 - full screen (100 × 100)
 33 - half screen (50 × 100)
 34 - quarter screen (25 × 100)
 35 - eighth screen (12.5 × 100)
- touch-flag** Touch point flag, 1 - touch points desired, 0 - no touch points
- primkey-orientation** Primary display key select orientation, 1 - place key selectors on right side of element, 0 - place key selectors on left side of element

GRAPHIC AND ESCAPE COMMANDS

<i>primkey-color</i>	Index number of the color to use for the primary display key select characters, refer to Table B 2 for color index numbers
<i>format</i>	Alarm line format number, 0 to 4 if using the standard line entry formats provided, 5 to 105 if using a user defined line format. Refer to ALARM SUMMARY CONFIGURATION in the OIS Configuration section for further information
<i>x-coord,y-coord</i>	Lower left corner x,y coordinate of alarm summary element
<i>outline-color</i>	Index number of a color to use as the outline color when deselected, refer to Table B 2 for color index numbers
<i>start</i>	Starting alarm group/priority number in range, not applicable if <i>grpoption</i> is 33. Valid entry for alarm group is from 1 to 99, S or D, when specifying the entire alarm group range, set this to 1 as the starting group. Valid entry for priority is 1 to 8.
<i>end</i>	Ending alarm group/priority number in range, not applicable if <i>grpoption</i> is 33. Valid entry for alarm group is from 1 to 99, S or D, when specifying the entire alarm group range, set this to D as the ending group. Valid entry for priority is 1 to 8.
<i>count</i>	Number of individual alarm groups/priorities from 0 to 10, 0 if <i>grpoption</i> is 32.
<i>grp/prior-nums</i>	Individual alarm group or priority numbers, up to 10 individual alarm groups or all priorities can be specified. Not applicable if <i>grpoption</i> is 32. The <i>grp/prior-filter</i> parameter determines whether this parameter defines groups or priorities.
<i>grp/prior-filter</i>	Alarm groups or priorities filter, 0 limits alarm summary entries based on alarm group, 1 limits alarm summary entries based on priority.
<i>ack-filter</i>	Acknowledged or unacknowledged alarm filter, 0 - all acknowledged and unacknowledged alarms appear in the summary, 1 - only acknowledged alarms appear in the summary, 2 - only unacknowledged alarms appear in the summary.

DISCUSSION:

The size parameter affects other characteristics of the alarm summary element such as maximum number of alarm entries. Refer to **ALARM SUMMARY CONFIGURATION** in the **OIS Configuration** section for further explanation

Table B 7 shows the results of selecting certain *grp/prior-filter* and *ack-filter* combinations

Table B-7 Alarm Summary Filtering Options

grp/prior-filter	ack-filter	Result
0	0	Standard summary contains selected alarm groups. Summary operates the same as if using the as 82 command
0	1	Summary contains selected alarm groups, acknowledged alarms only
0	2	Summary contains selected alarm groups, unacknowledged alarms only
1	0	Summary contains selected priorities all alarms
1	1	Summary contains selected priorities acknowledged alarms only
1	2	Summary contains selected priorities unacknowledged alarms only

Examples

Summary containing all unacknowledged alarms

as **83,32,1A,A,32,0,0,3,0,400,400,4,1,D,0,2**

Summary of all acknowledged alarms

as **83,32,1A,A,32,0,0,3,0,400,400,4,1,D,0,1**

Summary containing all acknowledged priority 1 alarms only

as **83,33,1A,A,32,0,0,3,0,400,400,4,1,1,1,2**

Summary containing all unacknowledged priority 1 and 2 alarms only

as **83,33,1A,A,32,0,0,3,0,400,400,4,2,1,2,1,2**

or

as **83,32,1A,A,32,0,0,3,0,400,400,4,1,2,1,2**

GRAPHIC AND ESCAPE COMMANDS

TREND ELEMENT COMMANDS

Trend element commands create and define the characteristics of trend graph, tabular trend and XY plot elements

NOTE Refer to Table B-3 for additional parameter definitions

Tabular Trend Element (et 52)

PURPOSE: The tabular trend element command creates a trend element that presents the values collected for up to ten trends. This type trend element shows the trended data in a tabular format (columns). The command defines overall characteristics of the element. Other features of the element must be created using **su** commands.

COMMAND: **et 52,subtype,element res-period,res-units,numtrends x1-coord,y1-coord,x2-coord,y2-coord,color,numsamples time,limit-color,y-tcp,x time**

where.

subtype	32 distributed trend, 33 future use
element	Element number, assigns an element number from one to 30 to this tabular trend. This number is referenced in associated ei and su commands.
res period	Display resolution period, number of units
res-units	Resolution units, 32 - seconds, 33 - minutes, 34 - hours, 35 - days
numtrends	Number of trends in element from 1 to 10
x1-coord,y1-coord	Box lower left corner to highlight when control enabled
x2-coord y2-coord	Box upper right corner to highlight when control enabled
outline-color	Return to normal color of element outline, index number of a color to use when control disabled. Refer to Table B 2 for color index numbers.
numsamples	Number of samples, number of displayed intervals per trend (or number of rows). Requires a minimum of 10.
time	Selects the displayed time format, 0 - mm ss, 1 - hh mm, 2 - hh mm ss, 3 - dd hh, 4 - dd hh mm

NOTE The order of the time (and date) depends on time/date format configuration

limit-color Reached high or low limit color; index number of a color to use when a trend value reaches either a high or low limit Refer to Table B-2 for color index numbers

y-top Y-coordinate position of interval top line point (i.e., top line of element)

x-time X-coordinate position of the time stamp column

Example et 52,32,1,2,1,1,10,400,9600 6600,4,30,1,2,6290,450

Trend Element (et 53)

PURPOSE:

The trend element command creates a single trend element that presents the values collected for up to five trends This type trend element shows the trended data on a graph as a continuous trend line. The command defines the size, resolution, pan option, x,y coordinate position and deselected outline color of the element only Depending on the size chosen, up to four trend elements can appear in one display

COMMAND:

et 53,option,res-period,res-units,numtrends pan-option,x1-coord,y1-coord,x2-coord,y2-coord,outline-color

where

option

32 100 × 100 with key select only

33 - 50 × 100 with key select only.

34 - 100 × 50 with key select only

35 - 50 × 50 with key select only

40 - 100 × 100 with key and touch point select.

41 - 50 × 100 with key and touch point select

42 - 100 × 100 with key and touch point select

43 - 50 × 50 with key and touch point select.

res-period Display resolution, normally 1 for one minute resolution or 15 for 15 second resolution For enhanced trends, the display resolution set during definition of the trend overrides this parameter

GRAPHIC AND ESCAPE COMMANDS

<i>res-units</i>	Resolution units, 32 seconds, 33 minutes.
<i>numtrends</i>	Number of trends in element from 1 to 5
<i>pan-option</i>	32 pan with update window 33 - pan without update window
<i>x1-coord,y1-coord</i>	Lower left corner x,y coordinate of the trend element
<i>x2 coord,y2 coord</i>	Upper right corner x,y coordinate of the trend element including the control box portion of the element
<i>outline-color</i>	Return to normal color, index number of a color to use when control disabled Refer to Table B 2 for color index numbers

DISCUSSION:

The *x1-coord,y1-coord* and *x2-coord,y2-coord* parameters indicate the lower left and upper right corner positions of the entire trend element including both the trend graph and control box portions of the element These must be accurate or the trend will not display properly The coordinates must reflect the size option chosen in the option parameter

To create a complete trend element, additional commands are necessary

- 1 An **es** command to access a trend symbol (e.g., TRNDPVFL, TRNDCOFL, TRNDSPFL, etc) for each trend dependent on the number of trends defined in the *numtrends* parameter
- 2 Control select using both key (**e1 108,86**) and touch point (**e1 107,86**) for each trend of the element There should be one of each of these commands for the number of trends defined in the *numtrends* parameter
- 3 A text descriptor (**tx**) for each control key select command (**e1 108,86**)
- 4 A text color (**tc**) for each key select character corresponding to the color defined in an associated trend symbol

The following example creates a display containing four 50 x 50 trend elements The conditions that exist for this example are

- Trend element one contains five active trends with a display resolution of one minute.
- Trend element two contains only three active trends with the remaining two defined (dummied in) to provide the vertical spacing requirements only The display resolution is one minute

- Trend element three contains only three active trends with a display resolution of one minute
- Trend element four contains five active trends with a display resolution of 15 seconds.

Example

```

bm 0,TREND6~
bp 0,TREND6~,0
sm 1
bb
lc 4
pl 7420,800,0,1200,2180,0,0,-1200,-2180,0~
rm - Trend symbols for trend element 1
es TRNDPVHF~,1,7420,6600,141
es TRNDPVHF~,1,7630,7000,142
es TRNDPVHF~,1,7420,5400,74
es TRNDPVHF~,1,7420,4800,75
es TRNDPVHF~,1,7420,4200,76
rm - Trend symbols for trend element 2
es TRNDPVHF~,1,7420,3200,118
es TRNDPVHF~,1,7420,2600,119
es TRNDPVHF~,1,7420,2000,120
rm - Trend symbols for trend element 3
es TRNDPVHF~,1,2820,6600,132
es TRNDPVHF~,1,2820,6000,78
es TRNDPVHF~,1,2820,5400,133
rm - Trend symbols for trend element 4
es TRNDPVHF~,1,2820,3200,123
es TRNDPVHF~,1,2820,2600,137
es TRNDPVHF~,1,2820,2000,138
es TRNDPVHF~,1,2820,1400,139
es TRNDPVHF~,1,2820,800,141
rm - Control select key characters
ch 124
cs 01
tc 1
tx 0,7450,7010,A~
tc 2
tx 0,7450,6410,B~
tc 3
tx 0,7450,5810,C~
tc 4
tx 0,7450,5210,D~
tc 5
tx 0,7450,4610,E~
tc 6
tx 0,7450,3610,F~
tc 7
tx 0,7450,3010,G~
tc 8
tx 0,7450,2410,H~
tc 11

```

GRAPHIC AND ESCAPE COMMANDS

```

tx 0,2850,7010,K-
tc 12
tx 0,2850,6410,L-
tc 13
tx 0,2850,5810,M-
tc 16
tx 0,2850,3610,P-
tc 17
tx 0,2850,3010,Q-
tc 18
tx 0,2850,2410,R-
tc 19
tx 0,2850,1810,S-
tc 20
tx 0,2850,1210,T-
rm - Trend element 1
et 53,35,1,33,5,32,5000,4200,9600,7200,4
ei 108,86,65,0,19,1,100.0,0.0
ei 108,86,66,0,20,2,100.0,0.0
ei 108,86,67,0,21,3,100.0,0.0
ei 108,86,68,0,22,4,100.0,0.0
ei 108,86,69,0,23,5,100.0,0.0
rm - Trend element 2
et 53,35,1,33,5,33,5000,800,9600,3800,4
ei 108,86,70,0,11,6,40.0,180.0
ei 108,86,71,0,24,7,20.0,160.0
ei 108,86,72,0,12,8,0.0,140.0
ei 108,86,73,0,-1,9,-20.0,120.0
ei 108,86,74,0,-1,10,-40.0,100.0
rm - Trend element 3
et 53,35,1,33,3,33,400,5400,5000,7200,4
ei 108,86,75,0,3,11,200.0,-20.0
ei 108,86,76,0,4,12,180.0,-40.0
ei 108,86,77,0,5,13,160.0,-60.0
rm - Trend element 4
et 53,35,15,32,5,32,400,800,5000,3800,4
ei 108,86,80,0,8,16,-20.0,200.0
ei 108,86,81,0,16,17,-40.0,180.0
ei 108,86,82,0,17,18,-60.0,160.0
ei 108,86,83,0,18,19,-80.0,140.0
ei 108,86,84,0,19,20,-100.0,120.0
ep
em
%%
    
```


Tabular Trend Summary Information - High and Low Limits (su 152)

PURPOSE: The tabular trend summary information - high and low limits command defines the high and low limits of each trend.

COMMAND: **su 152,110,element,trend,x-coord,width,decimal-digits,0,color,hi-limit,lo-limit**

where

element Element number; associates this command with a tabular trend element (of 52 command).

x-coord X coordinate column position for the trend data; the y-coordinate is the *y-top* parameter in an associated of 52 command

width Column width expressed as number of digits

decimal-digits Number of digits from 0 to 4 that are to appear after a decimal point

0 Required, spare parameter for future use.

color Index number of a color to use for this column of values, refer to Table B-2 for color index numbers

hi-limit High limit, high limit value of the trend.

lo-limit Low limit, low limit value of the trend

Example **su 152,110,1,12,1186,8,2,0,3,60,0,0,0**

GRAPHIC AND ESCAPE COMMANDS

**Tabular Trend Summary Information - High Limit of Column
(su 152)**

PURPOSE: The tabular trend summary information - high limit of column command displays the high limit value for each trend column in an element. The value and y-coordinate position for this command are derived from an **su 152,110** command.

COMMAND: **su 152,101,element,y-coord**

where

element Element number; associates this command with a tabular trend element (**et 52** command)

y-coord Y-coordinate position to display the high limit value, the x-coordinate position is taken from an **su 152,110** command

Example. **su 152,101,1,1175**

Tabular Trend Summary Information - Low Limit of Column (su 152)

PURPOSE: The tabular trend summary information - low limit of column command displays the low limit value for each trend column. The value and y-coordinate position for this command are derived from an **su 152,110** command.

COMMAND: **su 152,102,element,y-coord**

where.

element Element number, associates this command with a tabular trend element (**et 52** command)

y-coord Y coordinate position to display the low limit value, the x-coordinate position is taken from an **su 152,110** command

Example **su 152,102,1,1330**

Tabular Trend Summary Information - Maximum of Column (su 152)

PURPOSE: The tabular trend summary information - maximum of column command displays the highest value seen for each trend column. The y-coordinate position for this command is derived from an **su 152,110** command.

COMMAND: **su 152,103,element,y-coord**

where

element Element number; associates this command with a tabular trend element (**et 52** command)

y-coord Y-coordinate position to display the maximum value, the x-coordinate position is taken from an **su 152,110** command

Example **su 152,103,1,555**

Tabular Trend Summary Information - Minimum of Column (su 152)

PURPOSE: The tabular trend summary information - minimum of column command displays the lowest value seen for each trend column. The y-coordinate position for this command is derived from an **su 152,110** command

COMMAND: **su 152,104,element,y-coord**

where

element Element number, associates this command with a tabular trend element (**et 52** command)

y-coord Y coordinate position to display the minimum value, the x coordinate position is taken from an **su 152,110** command

Example **su 152,104,1,865**

GRAPHIC AND ESCAPE COMMANDS

Tabular Trend Summary Information - Average of Column (su 152)

PURPOSE: The tabular trend summary information - average of column command displays the average value seen for each trend column. The y-coordinate position for this command is derived from an **su 152,110** command.

COMMAND: **su 152,105,element,y-coord**

where

element Element number, associates this command with a tabular trend element (**et 52** command)

y-coord Y-coordinate position to display the average value, the x-coordinate position is taken from an **su 152,110** command

Example **su 152,105,1,1730**

Tabular Trend Summary Information - Summation of Column (su 152)

PURPOSE: The tabular trend summary information summation of column command displays the sum of all values seen for each trend column. The y coordinate position for this command is derived from an **su 152,110** command.

COMMAND: **su 152,106,element,y coord**

where

element Element number, associates this command with a tabular trend element (**et 52** command)

y-coord Y-coordinate position to display the summation value, the x coordinate position is taken from an **su 152,110** command

Example **su 152,106,1,1730**

Example Tabular Trend Display

The following example creates a tabular trend display that presents the trended values for ten different trends. The display presents these values in ten columns with 30 values displayed in each column.

```

bm 0,CRTLOG~
bp 0,DIGTREND~
bb
rm -- Selector characters for trend elements 1 thru 10
tc 2
tx 0,1186,6445,A~
tx 0,2022,6445,B~
tx 0,2858,6445,C~
tx 0,3694,6445,D~
tx 0,4530,6445,E~
tx 0,5366,6445,F~
tx 0,6202,6445,G~
tx 0,7038,6445,H~
tx 0,7874,6445,I~
tx 0,8710,6445,J~
rm -- Tag names for trend elements 1 thru 10
ec 34,32,101,1376,6445,124,4,0,1,6,0
ec 34,32,102,2212,6445,124,4,0,1,6,0
ec 34,32,103,3048,6445,124,4,0,1,6,0
ec 34,32,104,3884,6445,124,4,0,1,6,0
ec 34,32,105,4720,6445,124,4,0,1,6,0
ec 34,32,106,5556,6445,124,4,0,1,6,0
ec 34,32,107,6392,6445,124,4,0,1,6,0
ec 34,32,108,7228,6445,124,4,0,1,6,0
ec 34,32,109,8064,6445,124,4,0,1,6,0
ec 34,32,110,8900,6445,124,4,0,1,6,0
rm -- Engineering units for trend elements 1 thru 10
ec 38,32,101,1186,6290,124,4,0,1
ec 38,32,102,2022,6290,124,4,0,1
ec 38,32,103,2858,6290,124,4,0,1
ec 38,32,104,3694,6290,124,4,0,1
ec 38,32,105,4530,6290,124,4,0,1
ec 38,32,106,5366,6290,124,4,0,1
ec 38,32,107,6202,6290,124,4,0,1
ec 38,32,108,7038,6290,124,4,0,1
ec 38,32,109,7874,6290,124,4,0,1
ec 38,32,110,8710,6290,124,4,0,1
rm -- Tabular trend element
lc 4
pl 400,400,0,6200,9200,0,0,-6200,-9200,0~
et 52,32,1,1,33,10,400,400,9600,6600,4,30,1,2,6290,450
rm -- Tabular trend column 1 (tag 101)
ei 108,97,65,0,1,1
ei 107,97,1186,6290,1950,6490,1,1
su 152,110,1,1,1186,8,2,0,3,60,0,0,0

```

GRAPHIC AND ESCAPE COMMANDS

```

rm - Tabular trend column 2 (tag 102)
ei 108 97,66,0,1,2
ei 107 97,2022,6290,2822,6490,1,2
su 152,110,1,2,2022,82,0,3,60.0,0.0
rm - Tabular trend column 3 (tag 103)
ei 108 97,67,0,1,3
ei 107 97,2858,6290,3658,6490,1,3
su 152,110,1,3,2858,8,2,0,3,60.0,0.0
rm - Tabular trend column 4 (tag 104)
ei 108 97,68,0,1,4
ei 107 97,3694,6290,4494,6490,1,4
su 152,110,1,4,3694,8,2,0,3,60.0,0.0
rm - Tabular trend column 5 (tag 105)
ei 108 97,69,0,1,5
ei 107 97,4530,6290,6330,6490,1,5
su 152,110,1,5,4530,8,2,0,3,60.0,0.0
rm - Tabular trend column 6 (tag 106)
ei 108 97,70,0,1,6
ei 107 97,5366,6290,6166,6490,1,6
su 152,110,1,6,5366,8,2,0,3,60.0,0.0
rm - Tabular trend column 7 (tag 107)
ei 108,97,71,0,1,7
ei 107 97,6202,6290,7002,6490,1,7
su 152,110,1,7,6202,8,2,0,3,60.0,0.0
rm - Tabular trend column 8 (tag 108)
ei 108 97,72,0,1,8
ei 107 97,7038,6290,7838,6490,1,8
su 152,110,1,8,7038,8,2,0,3,60.0,0.0
rm - Tabular trend column 9 (tag 109)
ei 108,97,73,0,1,9
ei 107 97,7874,6290,8674,6490,1,9
su 152,110,1,9,7874,8,2,0,3,60.0,0.0
rm - Tabular trend column 10 (tag 110)
ei 108 97,74,0,1,10
ei 107,97,8710,6290,9510,6490,1,10
su 152,110,1,10,8710,8,2,0,3,60.0,0.0
rm - Page summary
su 152,102,1,1330
su 152,101,1,1175
su 152,104,1,865
su 152,103,1,555
rm - Summary headings
tc 4
tx 0,450,1330,LLim::~
tx 0,450,1175,HLim::~
tx 0,450,1015,Min.::~
tx 0,450,865,Time::~
tx 0,450,705,Max.::~
tx 0,450,555,Time::~
rm
ep
em
%%

```

XY Plot Element (et 154)**PURPOSE:**

The XY plot element command creates an element that can be used to compare up to five variables against a sixth or five separate pairs of variables. This type element shows the data on a graph as either a single point, multipoint or a continuous line. The command defines the overall characteristics of the plot element. Other features of the element must be created using **su** commands.

COMMAND:

et 154,32,element,numplots,x1-coord,y1-coord,x2-coord,y2-coord,x3-coord,y3-coord,x4-coord,y4-coord,outline-color,option,numx,numy,x5-coord,y5-coord,x6-coord,y6-coord

where:

<i>element</i>	Element number assigns an element number from 1 to 4 to this XY plot element. This number is referenced in associated ei and su commands.
<i>numplots</i>	Number of plots in element from 1 to 5.
<i>x1-coord,y1-coord</i>	Lower left corner x,y coordinate of highlight box.
<i>x2-coord,y2-coord</i>	Upper right corner x,y coordinate of highlight box.
<i>x3-coord,y3-coord</i>	Lower left corner x,y coordinate of element outline box.
<i>x4-coord,y4-coord</i>	Upper right corner x,y coordinate of element outline box.
<i>outline-color</i>	Return to normal color of element outline; index number of a color to use when control disabled. Refer to Table B-2 for color index numbers.
<i>option</i>	Grid option, 0 grid off, 1 grid on.
<i>numx</i>	Number of x axis grid divisions.
<i>numy</i>	Number of y axis grid divisions.
<i>x5-coord,y5-coord</i>	X,y coordinate position of pan and zoom text (future use).
<i>x6-coord,y6-coord</i>	X,y coordinate position of Target prompt.

GRAPHIC AND ESCAPE COMMANDS**DISCUSSION:**

The highlight coordinates defined in this element should not be the same as the box coordinates in the same escape due to border color conflicts. If they are, the plot select highlight color will be unpredictable as the plot border color changes.

To create a complete XY plot element, additional commands are necessary.

1. Optionally, an **es** command to access an XY plot symbol (e.g., XYAHF, XYDHF, etc.) for each plot dependent on the number of plots defined in the *numplots* parameter.

2. Control select using both key (**ei 108,96**) and touch point (**ei 107,96**) for each plot of the element. There should be one of each of these commands for the number of plots defined in the *numplots* parameter.

3. A text descriptor (**tx**) for each control key select command (**ei 108,96**).

4. A text color (**tc**) for each key select character corresponding to the color defined in an associated plot symbol.

Example **et 154,32,1,5,7420,1200,9600,7200,500,1200,7420,7200/
4,1,10,10,7500,1000,7500,800**

XY Plot Summary Information - High and Low Limit (su 154)

PURPOSE:

The XY plot summary information - high and low limits command defines the position of the high scale limit, low scale limit and last reported value fields for a pair of plotted variables - x axis and y axis variable.

COMMAND:

su 154,110,element,plot-index,color,x1-coord,y1-coord,x2-coord,y2-coord,x3-coord,y3-coord,x4-coord,y4-coord,x5-coord,y5-coord,x6-coord,y6-coord,x7-coord,y7-coord

where:

- element** Element number, associates this command with an XY plot element (et 154 command).
- plot-index** Index number of a plot definition, identifies the plotted variables used in the element. Valid entry is from 1 to 80. Refer to **XY Plot Definition** in the **OIS Configuration** section for additional information.
- color** Index number of a color to use to identify the plotted data. refer to Table B-2 for color index numbers.
- x1-coord,y1-coord** X axis variable low scale limit string x,y coordinate position.
- x2-coord,y2-coord** X axis variable high scale limit string x,y coordinate position.
- x3-coord,y3-coord** Y axis variable low scale limit string x,y coordinate position.
- x4-coord,y4-coord** Y axis variable high scale limit string x,y coordinate position.
- x5-coord,y5-coord** X axis variable last value string x,y coordinate position.
- x6-coord,y6-coord** Y-axis variable last value string x,y coordinate position.
- x7-coord,y7-coord** Update mode indicator x,y coordinate position.

Example: su 154,110,1.1,8880.6660,8880,6835,8880,6060,8880/6235,8160,6660,8160,6060,9400,7005

GRAPHIC AND ESCAPE COMMANDS

*XY Plot Summary Information - Value Per Grid Division (su 154)***PURPOSE:**

The XY plot summary information - value per grid division command presents a value field to identify the value per grid division. The quantity will be calculated by

$(x \text{ axis high limit} - x \text{ axis low limit}) \div \text{number } x \text{ axis grid divisions}$

or

$(y \text{ axis high limit} - y \text{ axis low limit}) \div \text{number of } y \text{ axis grid divisions}$

COMMAND:

*su 154,111,element,plot-index,axis-option x1-coord,y1-coord
x2-coord,y2-coord*

where

element Element number, associates this command with an XY plot element (*ef 154* command)

plot-index Index number of a plot definition, identifies the plotted variables used in the *element*. Valid entry is from 1 to 80. Refer to *XY Plot Definition* in the *OIS Configuration* section for additional information.

axis-option 1 x axis divisions. 2 y axis divisions

x1 coord,y1-coord X,y coordinate position of the calculated value per grid division field

x2-coord y2-coord X,y coordinate position of the engineering unit descriptor associated with the value per grid division quantity

XY Plot Summary Information - Plot Descriptor (su 154)

PURPOSE: The XY plot summary information - plot descriptor command defines the position, size and color of the plot title and the legend text strings. These strings are defined during XY plot definition; refer to *XY Plot Definition* in the *OIS Configuration* section

COMMAND: *su 154,112,element,type,x-coord,y-coord,charsize,fgcolor,bgcolor,spacing,charlength,start-char,orientation*

where:

element Element number; associates this command with an XY plot element (*et 154* command)

type 1 - title, 2 - x-axis legend, 3 y-axis legend.

orientation 1 - horizontal, 2 - vertical (future use)

Example: *su 154,112,3,1,950,3050,1,5,0,20,5,1,1*

Example Tag or Trend XY Plot Display

The following is an example of a full screen XY plot display containing five plots

```

bm 0,XYPFL5-
bp 0,XYPFL5~,0
sm 1
bb
ch 124
cs 1
rm - XY plot symbols for plot pairs 1 thru 5
es XYAHF~,1,7420,6600,1~
es XYAHF~,1,7420,6000,1~
es XYAHF~,1,7420,5400,145~
es XYAHF~,1,7420,4800,144~
es XYAHF~,1,7420,4200,13~
es XYAHF~,1,7420,3600,14~
es XYAHF~,1,7420,3000,8~
es XYAHF~,1,7420,2400,9~
es XYAHF~,1,7420,1800,140~
es XYAHF~,1,7420,1200,146~
rm - Plot selector characters
tc 2
tx 0,7450,7005,A~
tc 3
tx 0,7450,5805,B~
tc 6
tx 0,7450,4605,C~
tc 7
tx 0,7450,3405,D~
tc 8
tx 0,7450,2205,E~

```

GRAPHIC AND ESCAPE COMMANDS

```

rm - XY plot element
et 154,32,1,5,7420,1200,9600,7200,500,1200,7420,7200,4,1,10,10,7500/
1000,7500,800
rm -- Interactive control for plots 1 thru 5
ei 108,96,65,0,1,1~
ei 108,96,66,0,1,3~
ei 108,96,67,0,1,2~
ei 108,96,68,0,1,4~
ei 108,96,69,0,1,5~
rm -- Summary information for plots 1 thru 5
su 154,110,1,1,2,8880,6660,8880,6835,8880,6060,8880,6235,8160/
6660,8160,6060,9400,7005~
su 154,110,1,3,3,8880,5460,8880,5635,8880,4860,8880,5035,8160/
5460,8160,4860,9400,5805~
su 154,110,1,2,6,8880,4260,8880,4435,8880,3660,8880,3835,8160/
4260,8160,3660,9400,4605~
su 154,110,1,4,7,8880,3060,8880,3235,8880,2460,8880,2635,8160/
3060,8160,2460,9400,3405~
su 154,110,1,5,8,8880,1860,8880,2035,8880,1260,8880,1435,8160/
1860,8160,1260,9400,2205~
ep
em
%%
%%

```

The following is an example of a symbol file used in an XY plot display. This symbol file displays the text attributes that appear for a plot.

```

bp 1,XYAHF~,0
rf 0,0~
bb
lc 0
tc 0
rm ---half size XY analog process variable----
lc 4
pl 0,0;2180,0;0,600;-2180,0;0,-600~
ea 56,32,0,100,63,124,7,0,7,01
ec 38,32,0,710,235,124,5,0,01
ed 34,32,0,290,410,124,5,0,01,14,0
ed 42,32,0,60,235,124,3,0,7,01,6,2,0
ep
%%

```

DYNAMIC SYMBOLS

A dynamic symbol command can be used to create symbols (e.g., valves, pumps, etc.) that change in appearance according to exception reported alarm condition, value, state or status of a process variable or device. A dynamic symbol command requires additional supporting commands to call and display the symbols that represent each reported condition

NOTE Refer to Table B-3 for additional parameter definitions

Analog Dynamic Symbol (ed 54)

PURPOSE:

The analog dynamic symbol command creates a dynamic display element that changes according to the value being reported by an analog value reporting function block. The element can show whether the value returned by the function block is currently within a low, mid or high range.

COMMAND:

ed 54,45,tag,flash-option,variable-type,low-range,mid-range

where:

flash-option 0 - no flash, 1 flash, causes the displayed symbol to flash if in alarm and unacknowledged

variable-type 0 process variable, 1 - set point, 2 - control output, 3 ratio index

low-range Maximum value for a low range indication, crossover point between low and mid range

mid-range Maximum value for a mid range indication; crossover point between mid and high range

DISCUSSION:

This command requires an **sn** command defined to indicate each range (i.e., low, mid and high) that a value may fall in, and an **sn** command for a bad quality condition returned by the function block. The symbols required include

- Low range, no alarm
- Low range, alarm
- Mid range, no alarm
- Mid range, alarm
- High range, no alarm.
- High range, alarm
- Bad quality

GRAPHIC AND ESCAPE COMMANDS

Example

```

ed 54,45,17,1,0,25.0,50.0
rm - Low range
sn LOWNA~,6000,5600,124,1,1
sn LOWALM~,6000,5600,124,1,2
rm - Mid range
sn MIDNA~,6000,5600,124,1,3
sn MIDALM~,6000,5600,124,1,5
rm - High range
sn HIGHNA~,6000,5600,124,1,6
sn HIGHALM~,6000,5600,124,1,9
rm - Bad quality
sn BADQUAL~,6000,5600,124,1,7

```

Digital Dynamic Symbol (ed 54)**PURPOSE:**

The digital dynamic symbol command creates a dynamic display element that changes according to the current output state of a function block that reports a zero and one state change

COMMAND:

ed 54,46,*tag flash-option*

where

flash-option 0 - no flash, 1 flash, causes the displayed symbol to flash if in alarm and unacknowledged

DISCUSSION:

This command requires an *sn* command defined for each of the possible states that can be returned by the function block (i.e., zero and one state), and an *sn* command for a bad quality condition returned by the function block. The symbols required include

- Zero state, no alarm
- Zero state, alarm
- One state, no alarm
- One state, alarm
- Bad quality

Example

```

ed 54 46,20,1
rm - Zero state
sn ZERONA~,6000,5600,124,1,1
sn ZEROALM~,6000,5600,124,1,2
rm - One state
sn ONENA~,6000,5600,124,1,3
sn ONEALM~,6000,5600,124,1,5
rm - Bad quality
sn BADQUAL~,6000,5600,124,1,7

```

Exception Report Discrete Dynamic Symbol (ed 54)

PURPOSE: The exception report discrete dynamic symbol command creates a dynamic display element that changes according to certain status indications returned in a station, multi-state device driver, device driver, remote motor control block and remote control memory function block exception report. Refer to Table B-6 for the types of status indications that can be represented by this dynamic element

COMMAND: `ed 54,58,tag,flash-option,data-option`

where

flash-option 0 - no flash, 1 - flash causes the displayed symbol to flash if in alarm and unacknowledged

data-option Refer to Table B 6 for valid option codes, and the data type represented by the code

DISCUSSION: This command requires an `sn` command defined for each of the possible states that can be returned by the function block. It also requires an `sn` command for both alarm and no alarm conditions for the state (i.e., each state requires two symbols), and an `sn` command for a bad quality condition returned by the function block. Table B 6 shows the number of states returned for each selected option code.

Station mode example.

```
ed 54,58,16,1,17
rm -- Zero state
sn MANUALNA~,6000,5600,124,1,1
sn MANULALM~,6000,5600,124,1,2
rm -- One state
sn AUTONA~,6000,5600,124,1,3
sn AUTOALM~,6000,5600,124,1,5
rm -- Bad quality
sn BADQUAL~,6000,5600,124,1,7
```

Red tag status example

```
ed 54,58,16,1,8
rm -- Not red tagged
sn NOTRTNA~,6000,5600,124,1,1
sn NOTRTALM~,6000,5600,124,1,2
rm -- Red tagged
sn REDTGNA~,6000,5600,124,1,3
sn REDTGALM~,6000,5600,124,1,5
rm -- Bad quality
sn BADQUAL~,6000,5600,124,1,7
```

GRAPHIC AND ESCAPE COMMANDS

Symbol Name (sn)

PURPOSE: The symbol name command associates a symbol with a specified analog alarm condition or digital state when creating analog and digital dynamic symbols, or exception report discrete dynamic symbols. Currently, **sn** commands must immediately follow an **ed 54,45** (analog dynamic symbol), **ed 54,46** (digital dynamic symbol) or **ed 54,58** (exception report discrete dynamic) command.

COMMAND: **sn** *symbol-name*~,*x-coord*,*y-coord* *size*,*color*

where

symbol name Name of a symbol file to be displayed followed by a tilde (~). The symbol defined here must not have any internal escapes

size Use 1

color Color index number from 0 to 63, refer to Table B-2 for color index numbers

Example

```
ed 54,46,1,0
sn NASTATE0~,500,2600,1,1,0
sn ALMSTATE0~,500,2600,1,2,0
sn NASTATE1~,500,2600,1,3,0
sn ALMSTATE1~,500,2600,1,5,0
sn BADQUAL~,500,2600,1,6,0
```

Advanced Analog Dynamic Symbol (ed 54)

PURPOSE: The advanced analog dynamic symbol command creates a dynamic display element that changes according to value, alarm or quality conditions. The element can show whether the value returned by an analog value reporting function block is currently within a certain range, or it is in a certain alarm condition or quality state.

COMMAND: **ed 54,49**,*tag*,*flash-option*,*variable-type* *option* *numranges*

where

flash-option 0 - no flash, 1 - flash, causes the displayed symbol to flash if in alarm and unacknowledged

variable type 0 - process variable, 1 - set point, 2 - control output, 3 - ratio index

option 1 - both ranges and alarm/quality,
2 - alarm/quality only, 3 - ranges only

numranges Number of ranges from 1 to 25 to be specified

DISCUSSION:

This command requires an **rs** command defined for each desired range indication (up to 25), and each alarm condition or quality state that may be reported. The command can be defined for range only, alarm only or both range and alarm. A quality indication can also be incorporated. Alarm indications and **rs** command requirements depend on the analog function block being referenced

Any quality symbol codes must appear after the state **symbol** codes. Not all alarms and qualities have to be specified. Any combination is accepted if option 1 or 2 is used

Example:

```
ed 54,49,13,0,0,1,4
rm -- Ranges
rs 20.0,pump20~,6000,5600,1,1,0
rs 40.0,pump40~,6000,5600,1,2,0
rs 60.0,pump60~,6000,5600,1,3,0
rs 80.0,pump80~,6000,5600,1,5,0
rm -- Alarm conditions
rs 30.0,NOALM~,6000,5600,1,7,0
rs 31.0,LOWALM~,6000,5600,1,7,0
rs 32.0,HIGHALM~,6000,5600,1,7,0
rs 33.0,LOW2ALM~,6000,5600,1,7,0
rs 34.0,HIGH2ALM~,6000,5600,1,7,0
rs 35.0,LOW3ALM~,6000,5600,1,7,0
rs 36.0,HIGH3ALM~,6000,5600,1,7,0
rs 37.0,LOWDEV~,6000,5600,1,7,0
rs 38.0,HIGHDEV~,6000,5600,1,7,0
rm -- Qualities
rs 41.0,SUBSTIT~,6000,5600,1,8,0
rs 42.0,INHIBIT~,6000,5600,1,8,0
rs 43.0,DIESTAB~,6000,5600,1,8,0
rs 44.0,BADQUAL~,6000,5600,1,8,0
rs 45.0,SUSPECT~,6000,5600,1,8,0
rm
```

GRAPHIC AND ESCAPE COMMANDS

MSDD Dynamic Symbol - Requested State (ed 54)

PURPOSE: The MSDD dynamic symbol - requested state command creates a dynamic display element that changes according to the requested output state for a multi-state device driver function block

COMMAND: **ed 54,57,tag,flash-option**

where:

flash-option 0 - no flash, 1 - flash; causes the displayed symbol to flash if in alarm and unacknowledged

DISCUSSION: This command requires an **rs** command defined for each of the possible states that can be requested for the function block (i.e., zero, one, two and three state), and an **rs** command can be defined for each quality returned if desired. The state symbols required include

- Zero state, no alarm
- One state, no alarm
- Two state, no alarm
- Three state, no alarm
- Zero state, alarm
- One state, alarm
- Two state, alarm
- Three state, alarm

Any quality symbol codes must appear after the state symbol codes. Not all qualities must be defined. Normally, a quality symbol overrides a state symbol. An exception to this is if a quality symbol is either not defined, or is missing a symbol name or color parameter for the reported quality. In this case, the last good state symbol displays.

Example

```
ed 54 57,157,1
rm -- States 0 thru 3 - no alarm
rs 53.0,MSDRQS3~,6000,4000,1,1,0
rs 52.0,MSDRQS2~,6000,4000,1,1,0
rs 51.0,MSDRQS1~,6000,4000,1,1,0
rs 50.0,MSDRQS0~,6000,4000,1,1,0
rm -- States 0 thru 3 - alarm
rs 57.0,MSDRQS3~,6000,4000,1,3,0
rs 56.0,MSDRQS2~,6000,4000,1,3,0
rs 55.0,MSDRQS1~,6000,4000,1,3,0
rs 54.0,MSDRQS0~,6000,4000,1,3,0
```

rm -- Qualities
rs 45.0,ADVSYM45~,6000,5000,1,7,0
rs 44.0,ADVSYM44~,6000,5000,1,7,0
rs 43.0,ADVSYM43~,6000,5000,1,7,0
rs 42.0,ADVSYM42~,6000,5000,1,7,0
rs 41.0,ADVSYM41~,6000,6000,1,7,0
rm

MSDD Dynamic Symbol - Current State (ed 56)

PURPOSE: The MSDD dynamic symbol - current state command creates a dynamic display element that changes according to the current output state being reported by a multi-state device driver function block

COMMAND: ed 54,56,tag,flash-option

where

flash-option 0 - no flash, 1 - flash; causes the displayed symbol to flash if in alarm and unacknowledged

DISCUSSION: This command requires an *rs* command defined for each of the possible states that can be returned by the function block (i.e., zero, one, two and three state), and an *rs* command can be defined for each quality returned if desired

The state symbols required include

- Zero state, no alarm
- One state, no alarm
- Two state, no alarm
- Three state, no alarm
- Zero state, alarm
- One state, alarm
- Two state, alarm
- Three state, alarm

Any quality symbol codes must appear after the state symbol codes. Not all qualities must be defined. Normally, a quality symbol overrides a state symbol. An exception to this is if a quality symbol is either not defined, or is missing a symbol name or color parameter for the reported quality. In this case, the last good state symbol displays.

Example

```

ed 54,56,157,1
rm - States 0 thru 3 - no alarm
rs 53.0,MSDLGS3~,6000,4000,1,1,0
rs 52.0,MSDLGS2~,6000,4000,1,1,0
rs 51.0,MSDLGS1~,6000,4000,1,1,0
rs 50.0,MSDLGS0~,6000,4000,1,1,0
rm - States 0 thru 3 - alarm
rs 57.0,MSDLGS3~,6000,4000,1,3,0
rs 56.0,MSDLGS2~,6000,4000,1,3,0
rs 55.0,MSDLGS1~,6000,4000,1,3,0
rs 54.0,MSDLGS0~,6000,4000,1,3,0
rm - Qualities
rs 45.0,ADVSYM45~,6000,5000,1,7,0
rs 44.0,ADVSYM44~,6000,5000,1,7,0
rs 43.0,ADVSYM43~,6000,5000,1,7,0
rs 42.0,ADVSYM42~,6000,5000,1,7,0
rs 41.0,ADVSYM41~,6000,6000,1,7,0
rm
    
```

Range Symbol (rs)

PURPOSE:

The range symbol command associates a symbol with a specified analog range, or an alarm condition or digital state when creating advanced analog and MSDD dynamic symbols. Currently, **rs** commands must immediately follow either an **ed 54,49** (analog advanced dynamic symbol), or **ed 54,56**, and **ed 54,57** and **ed 62,32** (MSDD dynamic symbol - current state and requested state). The command can be defined in two different ways.

The first method of defining this command can be used to associate a symbol with a specified range. In this case, the console presents the designated symbol when a reported analog value is equal to, or less than the range value specified in the command. When using ranges, the **rs** commands defining ranges must be placed in ascending order within the file. This can be used for an advanced analog dynamic symbol only.

COMMAND:

rs *range,symbol-name~,x-coord y-coord size color,0*

where

range A real number designating the upper boundary of this range. The format for this parameter is *NNN nnn* where *NNN* is the whole number and *nnn* is a decimal fraction. A decimal point is required.

symbol-name Name of a symbol file to be displayed followed by a tilde (~). The symbol defined here must not have any internal escapes.

size Use 1

color Color index number from 0 to 63, refer to Table B-2 for color index numbers

0 Must be present (future use)

Example.

```
ed 54,49,1,0,0,3,5
rs 10.0,RANGE1~,500,2600,1,1,0
rs 15.0,RANGE2~,500,2600,1,2,0
rs 20.0,RANGE3~,500,2600,1,3,0
rs 25.0,RANGE4~,500,2600,1,5,0
rs 30.0,RANGE5~,500,2600,1,6,0
```

The second method of defining this command can be used to associate a symbol with an alarm condition or digital state. In this case, the console presents the designated symbol when the alarm condition or digital state indicated in the code parameter of the command is reported.

COMMAND:

rs code,symbol-name~,x-coord,y-coord size,color,0

where:

code A real number code which selects the alarm condition, digital state or quality the designated symbol is to represent. Refer to Table B-8 for valid codes. A code follows the same format as a specified range, therefore, if the entered code is not valid it will be treated as a range.

symbol-name Name of a symbol file to be displayed followed by a tilde (~). The symbol defined here must not have any internal escapes.

size Use 1

color Color index number from 0 to 63, refer to Table B-2 for color index numbers

0 Must be present (future use)

GRAPHIC AND ESCAPE COMMANDS

Table B-8. Advanced Dynamic Symbol Codes

Code	Condition	Type
30 0	No a arm	Ana og
31 0	Low	Ana og
32 0	H gh	Analog
33 0	2Low	Analog
34 0	2H gh	Analog
35 0	3Low	Analog
36 0	3High	Analog
37 0	Low deviation	Ana og
38 0	High deviation	Ana og
41 0	Substituted	Analog MSDD
42 0	Inhib ted	Analog MSDD
43 0	Disestab ished	Ana og MSDD
44 0	Bad qua ty	Ana og MSDD
45 0	Suspect	Ana og MSDD
50 0	State 0 (no a arm)	MSDD
51 0	State 1 (no alarm)	MSDD
52 0	State 2 (no alarm)	MSDD
53 0	State 3 (no alarm)	MSDD
54 0	State 0 (a arm)	MSDD
55 0	State 1 (a arm)	MSDD
56 0	State 2 (a arm)	MSDD
57 0	State 3 (a arm)	MSDD

DISCUSSION:

When using the command to specify alarm conditions or states, quality conditions have precedence over alarm or state conditions. If both an alarm or state and quality condition occur at the same time, the symbol representing the quality condition displays.

Example

```
ed 54,56,1,0
rs 53 0,NASTATE3~,500,2600,1,1,0
rs 52.0,NASTATE2~,500,2600,1,2,0
rs 51.0,NASTATE1~,500,2600,1,3,0
rs 50.0,NASTATE0~,500,2600,1,5,0
```

Advanced dynamic symbols have the option of using a good quality or no alarm symbol in place of a bad quality or alarm symbol. The **rs** lines can be coded to permit:

- 1 The name or color of an alarm symbol to be replaced by the name or color of a range symbol.
- 2 The name or color of a quality symbol to be replaced by the name or color of a range symbol, or the name or color of an alarm symbol depending on the value, alarm condition or quality being reported.

To do this, an **rs** command for an alarm and quality symbol can be coded having a blank (or missing) symbol name to indicate

that some previous symbol should be used for occurrences of that type alarm or quality condition. Similarly, the color parameter for the `rs` command can be set to -1 to indicate that the color should be taken from some previous symbol (color missing).

The order of precedence when selecting symbols or colors is quality over alarm, alarm over no alarm value (range) or state symbol. Therefore, if a symbol name in a quality `rs` command is missing, the name is replaced with the name found in the alarm symbol if one is defined. If a symbol name in an alarm `rs` command is missing, the name is replaced with the name found in the value according to range or state symbol. The same holds true for a missing color.

A missing symbol name parameter must be coded as `,-`, with the tilde present. For example:

`rs 34.0,-,500,2600,1,1,0`

A missing color parameter must be coded as `,-1`. For example:

`rs 34.0,SYMNAME-,500,2600,1,-1,0`

GRAPHIC AND ESCAPE COMMANDS

Display File Example

The example is a complete display source file. The commands and escapes in this example create the system status overview page shown in Figure 14.1. This display defines the static text and N90STA tags (nodes) whose status appear at the page. It also designates the symbol files that display the status information for each of the defined nodes, and the interactive escape commands required to call the next status page in a hierarchy of status pages.

```

bm 0,N90STAT1~
bp 0,N90STAT1~,0
sm 1
bb
is 1,1
lc 4
ch 124
cs 01
tc 6
pl 400,7185;9200,0;0,-6800;-9200,0;0,6800~
rm
tc 5
tx 0,4200,7000,System Status~
rm
rm -- OMCS legend
tx 0,6800,2000,O = Node Offline~
tx 0,6800,1800,M = Module Errors~
tx 0,6800,1600,C = Plant Comm. Problem~
tx 0,6800,1400,S = Node Status Problem~
rm
rm --numbers for column 1 nodes
tx 0,500,6800,01~
tx 0,500,6600,02~
tx 0,500,6400,03~
tx 0,500,6200,04~
tx 0,500,6000,05~
tx 0,500,5600,06~
tx 0,500,5400,07~
tx 0,500,5200,08~
tx 0,500,5000,09~
tx 0,500,4800,10~
tx 0,500,4400,11~
tx 0,500,4200,12~
tx 0,500,4000,13~
tx 0,500,3800,14~
tx 0,500,3600,15~
tx 0,500,3200,16~
tx 0,500,3000,17~
tx 0,500,2800,18~
tx 0,500,2600,19~
tx 0,500,2400,20~
tx 0,500,2000,21~
tx 0,500,1800,22~

```


tx 0,500,1600,23~
 tx 0,500,1400,24~
 tx 0,500,1200,25~

rm
 rm —numbers for column 2 nodes

tx 0,3600,6800,26~
 tx 0,3600,6600,27~
 tx 0,3600,6400,28~
 tx 0,3600,6200,29~
 tx 0,3600,6000,30~
 tx 0,3600,5600,31~
 tx 0,3600,5400,32~
 tx 0,3600,5200,33~
 tx 0,3600,5000,34~
 tx 0,3600,4800,35~
 tx 0,3600,4400,36~
 tx 0,3600,4200,37~
 tx 0,3600,4000,38~
 tx 0,3600,3800,39~
 tx 0,3600,3600,40~
 tx 0,3600,3200,41~
 tx 0,3600,3000,42~
 tx 0,3600,2800,43~
 tx 0,3600,2600,44~
 tx 0,3600,2400,45~
 tx 0,3600,2000,46~
 tx 0,3600,1800,47~
 tx 0,3600,1600,48~
 tx 0,3600,1400,49~
 tx 0,3600,1200,50~

rm
 rm —numbers for column 3 nodes

tx 0,6600,6800,51~
 tx 0,6600,6600,52~
 tx 0,6600,6400,53~
 tx 0,6600,6200,54~
 tx 0,6600,6000,55~
 tx 0,6600,5600,56~
 tx 0,6600,5400,57~
 tx 0,6600,5200,58~
 tx 0,6600,5000,59~
 tx 0,6600,4800,60~
 tx 0,6600,4400,61~
 tx 0,6600,4200,62~
 tx 0,6600,4000,63~

rm
 rm -- column 1 node status line symbols

rm -- node 1 thru 25
 es NODLINE~,1,900,6800,01
 es NODLINE~,1,900,6600,02
 es NODLINE~,1,900,6400,03
 es NODLINE~,1,900,6200,04
 es NODLINE~,1,900,6000,05
 es NODLINE~,1,900,5600,06

GRAPHIC AND ESCAPE COMMANDS

es NODLINE~,1,900,5400,07
 es NODLINE~,1,900,5200,08
 es NODLINE~,1,900,5000,09
 es NODLINE~,1,900,4800,10
 es NODLINE~,1,900,4400,11
 es NODLINE~,1,900,4200,12
 es NODLINE~,1,900,4000,13
 es NODLINE~,1,900,3800,14
 es NODLINE~,1,900,3600,15
 es NODLINE~,1,900,3200,16
 es NODLINE~,1,900,3000,17
 es NODLINE~,1,900,2800,18
 es NODLINE~,1,900,2600,19
 es NODLINE~,1,900,2400,20
 es NODLINE~,1,900,2000,21
 es NODLINE~,1,900,1800,22
 es NODLINE~,1,900,1600,23
 es NODLINE~,1,900,1400,24
 es NODLINE~,1,900,1200,25

rm

rm — column 2 node status line symbols

rm — node 26 thru 50

es NODLINE~,1,4000,6800,26
 es NODLINE~,1,4000,6600,27
 es NODLINE~,1,4000,6400,28
 es NODLINE~,1,4000,6200,29
 es NODLINE~,1,4000,6000,30
 es NODLINE~,1,4000,5600,31
 es NODLINE~,1,4000,5400,32
 es NODLINE~,1,4000,5200,33
 es NODLINE~,1,4000,5000,34
 es NODLINE~,1,4000,4800,35
 es NODLINE~,1,4000,4400,36
 es NODLINE~,1,4000,4200,37
 es NODLINE~,1,4000,4000,38
 es NODLINE~,1,4000,3800,39
 es NODLINE~,1,4000,3600,40
 es NODLINE~,1,4000,3200,41
 es NODLINE~,1,4000,3000,42
 es NODLINE~,1,4000,2800,43
 es NODLINE~,1,4000,2600,44
 es NODLINE~,1,4000,2400,45
 es NODLINE~,1,4000,2000,46
 es NODLINE~,1,4000,1800,47
 es NODLINE~,1,4000,1600,48
 es NODLINE~,1,4000,1400,49
 es NODLINE~,1,4000,1200,50

rm

rm — column 3 node status line symbols

rm — node 51 thru 63

es NODLINE~,1,7000,6800,51
 es NODLINE~,1,7000,6600,52
 es NODLINE~,1,7000,6400,53
 es NODLINE~,1,7000,6200,54

es NODLINE-1,7000,6000,55
es NODLINE-1,7000,5600,56
es NODLINE-1,7000,5400,57
es NODLINE-1,7000,5200,58
es NODLINE-1,7000,5000,59
es NODLINE-1,7000,4800,60
es NODLINE-1,7000,4400,61
es NODLINE-1,7000,4200,62
es NODLINE-1,7000,4000,63

rm

rm - ei display selects for node status displays

ei 108,82,48,49,NODSTA01~
ei 108,82,48,50,NODSTA02~
ei 108,82,48,51,NODSTA03~
ei 108,82,48,52,NODSTA04~
ei 108,82,48,53,NODSTA05~
ei 108,82,48,54,NODSTA06~
ei 108,82,48,55,NODSTA07~
ei 108,82,48,56,NODSTA08~
ei 108,82,48,57,NODSTA09~
ei 108,82,49,48,NODSTA10~
ei 108,82,49,49,NODSTA11~
ei 108,82,49,50,NODSTA12~
ei 108,82,49,51,NODSTA13~
ei 108,82,49,52,NODSTA14~
ei 108,82,49,53,NODSTA15~
ei 108,82,49,54,NODSTA16~
ei 108,82,49,55,NODSTA17~
ei 108,82,49,56,NODSTA18~
ei 108,82,49,57,NODSTA19~
ei 108,82,50,48,NODSTA20~
ei 108,82,50,49,NODSTA21~
ei 108,82,50,50,NODSTA22~
ei 108,82,50,51,NODSTA23~
ei 108,82,50,52,NODSTA24~
ei 108,82,50,53,NODSTA25~
ei 108,82,50,54,NODSTA26~
ei 108,82,50,55,NODSTA27~
ei 108,82,50,56,NODSTA28~
ei 108,82,50,57,NODSTA29~
ei 108,82,51,48,NODSTA30~
ei 108,82,51,49,NODSTA31~
ei 108,82,51,50,NODSTA32~
ei 108,82,51,51,NODSTA33~
ei 108,82,51,52,NODSTA34~
ei 108,82,51,53,NODSTA35~
ei 108,82,51,54,NODSTA36~
ei 108,82,51,55,NODSTA37~
ei 108,82,51,56,NODSTA38~
ei 108,82,51,57,NODSTA39~
ei 108,82,52,48,NODSTA40~
ei 108,82,52,49,NODSTA41~
ei 108,82,52,50,NODSTA42~
ei 108,82,52,51,NODSTA43~

GRAPHIC AND ESCAPE COMMANDS

```

ei 108,82,52,52,NODSTA44~
ei 108,82,52,53,NODSTA45~
ei 108,82,52,54,NODSTA46~
ei 108,82,52,55,NODSTA47~
ei 108,82,52,56,NODSTA48~
ei 108,82,52,57,NODSTA49~
ei 108,82,53,48,NODSTA50~
ei 108,82,53,49,NODSTA51~
ei 108,82,53,50,NODSTA52~
ei 108,82,53,51,NODSTA53~
ei 108,82,53,52,NODSTA54~
ei 108,82,53,53,NODSTA55~
ei 108,82,53,54,NODSTA56~
ei 108,82,53,55,NODSTA57~
ei 108,82,53,56,NODSTA58~
ei 108,82,53,57,NODSTA59~
ei 108,82,54,48,NODSTA60~
ei 108,82,54,49,NODSTA61~
ei 108,82,54,50,NODSTA62~
ei 108,82,54,51,NODSTA63~
rm
pe 124,CONTROL~
ep
em
%%
%%

```

Symbol File Examples

These examples are SYMBOLS, not complete displays. Symbols do not require the **bm** and **em** commands found in display files.

Analog Faceplate

The commands and escapes in the following example create an analog value faceplate symbol. This faceplate uses an ANALOG tag type.

```

bp 1,analog1~,0
sm 1
bb
rm Beginning of emitted code~
rf 1000,1000
fc 1
lc 1
tc 1
lw 1
lc 4
pl 999,1002;2180,0;0,1580;-2180,0;0,-1580~
ec 34,32,1,1439,2396,124,5,0,1,14,0
ec 35,32,1,1342,2256,124,5,0,1,16,0
ec 35,32,1,1342,2116,124,5,0,1,16,16
ed 42,32,1,1489,1512,124,3,0,7,1,6,2,0
ec 38,32,1,2109,1512,124,5,0,1
ea 56,32,1,1099,1065,124,7,0,7,1

```

rm ***END*** of emitted code-
 ep
 %%

Digital Control Station The commands and escapes in the following example create a digital control station faceplate symbol. This faceplate uses a STATION tag type.

```

bp 1,dcsfull1~,0
sm 1
bb
rm Beginning of emitted code-
rf 1000,1000
fc 1
lc 1
tc 1
lw 1
lc 5
pl 1799,3402;100,0~
pl 1799,3262;50,0~
pl 1799,3122;50,0~
pl 1799,2982;50,0~
pl 1799,2842;50,0~
pl 1799,2702;75,0~
pl 1799,2562;50,0~
pl 1799,2422;50,0~
pl 1799,2282;50,0~
pl 1799,2142;50,0~
pl 1799,2002;100,0~
pl 1239,1652;0,100~
pl 1409,1652;0,50~
pl 1579,1652;0,50~
pl 1749,1652;0,50~
pl 1919,1652;0,50~
pl 2089,1652;0,75~
pl 2259,1652;0,50~
pl 2429,1652;0,50~
pl 2599,1652;0,50~
pl 2769,1652;0,50~
pl 2939,1652;0,100~
lc 4
pl 999,1002;2180,0;0,3256;-2180,0;-3256~
ec 34,32,1,1439,4056,124,5,0,1,14,0
ec 35,32,1,1342,3916,124,5,0,1,16,0
ec 35,32,1,1342,3756,124,5,0,1,16,16
ec 38,32,1,1074,3502,124,5,0,1
ec 41,39,1,1669,2002,50,5,0,1400
ec 40,39,1,2569,1852,124,5,0,1,6,2,0,1700
ed 49,39,1,1029,2002,124,3,0,7,1,6,2,0,1400
ed 49,39,1,1974,2002,124,3,0,3,1,6,2,1,1400
ed 51,41,1,1874,2002,100,3,0,3,1,1400
ed 50,39,1,1714,2002,40,3,0,7,0,1400
ed 50,40,1,1239,1567,40,3,0,3,2,1700
ed 47,32,1,1869,1202,124,3,0,1

```

GRAPHIC AND ESCAPE COMMANDS

```

ed 48,32,1,2569,1202,124,3,0,1
ed 49,40,1,1249,1402,124,3,0,3,1,4,1,2,1700
ea 56,32,1,1099,1065,124,7,0,7,1
ec 39,39,1,2569,2002,124,5,0,1,6,2,1400
bc 1,4
tc 5
ch 124
cs 20
tx 0,2989,1637,%~
ed 100,32,1,1020,3680,124,3,0,2,1,2,0
rm ***END*** of emitted code~
ep
%%

```

Multi-State Device
Driver

The commands and escapes in the following example create a multi-state device driver faceplate symbol. This faceplate uses an MSDD tag type.

```

bp 1,msdevdr1~,0
sm 1
bb
rm Beginning of emitted code~
rf 1000,1000
fc 1
lc 1
tc 1
lw 1
lc 4
pl 999,1002;2180,0;0,1580;-2180,0;0,-1580~
ec 37,48,1,1289,1907,124,5,0,0,1
ec 37,47,1,1289,1737,124,5,0,0,1
ec 37,34,1,1289,1567,124,5,0,1
ec 37,33,1,1289,1397,124,5,0,1
ed 61,48,1,1899,1907,124,3,0,7
ed 61,47,1,1899,1737,124,3,0,7
ed 61,34,1,1899,1567,124,3,0,7
ed 61,33,1,1899,1397,124,3,0,7
ed 59,33,1,2279,1907,124,3,0,7,1
ed 59,34,1,2279,1737,124,3,0,7,1
ed 59,47,1,2279,1567,124,3,0,7,1
ed 59,48,1,2279,1397,124,3,0,7,1
ed 60,32,1,1719,1227,124,3,0,1
ed 58,32,1,2799,1227,124,3,0,1
ec 34,32,1,1439,2396,124,5,0,1,14,0
ec 35,32,1,1342,2256,124,5,0,1,16,0
ec 35,32,1,1342,2116,124,5,0,1,16,16
ea 56,32,1,1099,1065,124,7,0,7,1
ed 100,32,1,1025,1975,124,3,0,2,1,2,0
rm ***END*** of emitted code~
ep
%%

```

APPENDIX C - HARD DISK UTILIZATION

INTRODUCTION

An important consideration in the configuration process is the amount of hard disk space utilized. This appendix explains how to calculate the amount of space a configuration occupies on the hard disk.

Operator interface station (OIS) software - occupies 28 megabytes

Displays - the total amount of hard disk space allocated for display storage varies. The minimum amount of space to allow should be one megabyte. To calculate the amount of hard disk space consumed by displays, use the formula

$$\text{No of displays} \times (\text{average display size} \times \text{retention factor})$$

The amount of space needed for a single display varies from four kilobytes for a simple menu to up to 40 kilobytes for a complex display. The average display size depends on the complexity of the actual display files. Using a 40 kilobyte average display size calculates a **worst case** amount. The utilization example given later in this section uses a 15 kilobyte average display file size.

When transferring a display source file and its associated symbol source files (.DT) to the console, they initially reside on the hard disk as PC (DOS) format files. They are then converted to VMS format and reside in .DT files in another directory. After converting, the original .DT files in PC format still remain on the hard disk. Once converted, a display (.DT) source file must be processed using the display generator. The result of this processing is a usable .DU display file and associated .DL symbol files. The .DU and .DL files occupy approximately the same amount of disk space as their corresponding .DT source files.

All three sets of display files must be considered when calculating the amount of hard disk space consumed by displays. This determines the value used as the retention factor in the calculation. Once a display is processed and has no errors, its associated .DT files can be removed from the hard disk if desired. The retention factor should be one if only the .DU/.DL files are retained on the hard disk, two if .DU/.DL and one set of .DT files, and three if .DU/.DL and both sets of .DT files.

Trend data - the minimum amount of space to allow is one megabyte. The maximum depends on the size of the hard disk drive and how much space is allocated for other functions.

Use the following formula to calculate the disk space usage for a standard trend (normal and fast)

$$(\text{numsamples} \times 4 \text{ bytes}) + 48 \text{ bytes}$$

where:

numsamples Total number of samples collected over a certain period of time. The number of samples is equal to:

$$\frac{\text{time period}}{\text{collection resolution}}$$

Table C 1 gives examples of calculated trend data disk space utilization for standard trends

Table C-1 Standard Trend Data Disk Space Utilization

Trend Type	Utilization per Trend
15 second trended over 1 day	23 040 + 48 bytes
15 second trended over 2 days	46 080 + 48 bytes
15 second trended over 3 days	69 120 + 48 bytes
15 second trended over 4 days	92 160 + 48 bytes
15 second trended over 5 days	115 200 + 48 bytes
15 second trended over 6 days	138 240 + 48 bytes
15 second trended over 7 days	161 280 + 48 bytes
1 m nute trended over 1 day	5 760 + 48 bytes
1 m nute trended over 2 days	11 520 + 48 bytes
1 m nute trended over 3 days	17 280 + 48 bytes
1 m nute trended over 4 days	23 040 + 48 bytes
1 m nute trended over 5 days	28 800 + 48 bytes
1 m nute trended over 6 days	34 560 + 48 bytes
1 m nute trended over 7 days	40 320 + 48 bytes

Intermediate time frames can be calculated by interpolation. For example, a 15 second trend, trended over eight hours

$$\left(\frac{8}{24} \times 23,040 \right) + 48 = 7 728 \text{ bytes per trend}$$

500 one minute trends, trended over seven days

$$(500 \times 40,320) + 48 \text{ bytes} = 20 2M$$

The disk space usage for enhanced trends depends on the variable being trended. Use one of the following formulas to calculate the disk space usage for an enhanced trend

ANALOG $(\text{numsamples} \times 10 \text{ bytes}) + 48 \text{ bytes}$

DADIG $(\text{numsamples} \times 8 \text{ bytes}) + 48 \text{ bytes}$

DANG	$(\text{numsamples} \times 23 \text{ bytes}) + 48 \text{ bytes}$
Digital type	$(\text{numsamples} \times 8 \text{ bytes}) + 48 \text{ bytes}$
RMSC	$(\text{numsamples} \times 10 \text{ bytes}) + 48 \text{ bytes}$
STATION	$(\text{numsamples} \times 23 \text{ bytes}) + 48 \text{ bytes}$

where:

numsamples Depends on the trend definition. The process engineer sets the maximum number of samples the console is to save on its hard disk during definition of a trend. Refer to *Trend Configuration* in the *OIS Configuration* section for specifics.

Log data use the following formulas to calculate the disk space for custom logs

1. Log definition files consume (approximately)

$$[6.5 \text{ kbytes} + (6 \text{ bytes} \times \text{no. of columns}) \times \text{no. of rows}] \times \text{no. of logs defined}$$
2. Log retention files consume (approximately)

$$(\text{no. of rows} \times 132 \text{ characters}) \times \text{total no. of retentions defined for all logs}$$
3. Log output files consume (approximately)

$$(132 \text{ characters per row} \times \text{no. of rows}) \times n$$

where:

- n** Number of log output files. Ranges from one log output file to possibly 35 log output files per log (when logs are generated faster than the printer can handle).
4. Log data files consume (approximately)

$$(8 \text{ bytes per dynamic variable cell defined} + 1.5 \text{ kbytes}) \times n$$

where:

- n** Number of log data files. Ranges from one data file to possibly 35 data files per log (when logs are generated faster than the printer can handle).

SOE logs use the following formulas to calculate the disk space for SOE logs

1. Each data file consumes

$$8 \text{ bytes} \times \text{no. of events}$$

$$\text{Total} = (8 \times \text{no. of events}) \times \text{no. of SOE logs defined}$$

HARD DISK UTILIZATION

- 2 Each output file consumes (approximately)
132 characters × no of events
- 3 Each SOE retention consumes (approximately)
132 characters × no of events
- 4 Each log is limited to nine retentions. Its data files may range from one to 35 files per SOE log, similar for its output files

UTILIZATION EXAMPLE

The OIS console in this example has the following attributes

- 5,000 tags
- 667 displays (15 kilobytes average display file size, .DU/.DL files and one set of .DT files retained on hard disk)
- 200 standard trends
- 200 megabytes formatted hard disk

NOTE The console may use a different sized hard disk drive. The examples in this section use a 200 megabyte hard disk drive for calculations. Refer to the *Operator Interface Station, Hardware Manual* for actual disk sizes.

Utilization Factors	System software	28 0M	
	Tag utilization	3 0M	
	Display utilization	$667 \times (15k \times 2)$	20 0M
	Trend utilization	Consider the types of trends being configured. Use the worst possible case for number of trends.	
		Example: 200 standard trends at 15 second intervals over seven days	
		$200 \times 161320 \approx 32$ 3M	(trend data)
		200M 32 3M 167 7M	(remaining hard disk space)
Summary	5,000 tags -	3 0M	
	667 displays -	20 0M	
	OIS software	28 0M	
	200 15 second trends × 7 days -	32 3M	
	Total Disk Usage -	83 3M	
	Unused =	116 7M	(available for other OIS functions, e.g., archiving and logging)

APPENDIX D - TASK CODES

INTRODUCTION

Terminals and terminal windows can help to identify and trace specific problems with the operator interface station (OIS). They also allow viewing the overall status of the system. In either case, the OIS console presents task codes in messages to identify a given function. This section provides a list of task codes and their meaning separated into interactive tasks, resident tasks and window and network tasks.

INTERACTIVE TASK CODES

The interactive task codes apply to both configuration programs and operational programs that interact with the operator. The codes include:

ACC	Alarm comment file - displays and verifies the contents of the alarm comment file
ADC	Automatic display configuration - assigns DIGITAL tags, displays and pop up elements to automatic display tag sets
ADS	Annunciator display panel key configuration - assigns displays, key macros, and user task interface tasks to annunciator display panel (ADP) keys
AGC	Alarm group configuration - configures alarm groups for tones, relays, and tag ranges
APT	Application processor task definition - defines user task interface parameters and priority
APO	Application task option - configures the user task interface options
ASF	Alarm summary format configuration - configures line formats, colors, and titles for periodic alarm summaries
CEL	Report generator cell configuration - defines the format of custom logs through a spreadsheet like interactive.
CMD	Communication module details - reports the specifications for selected communications modules. This is part of the INFI NET diagnostics function
CTP	CIU task priority - sets the priority of transactions for the communications interface unit

DAC	Display archive data interaction - displays the directories of retrieved archive data
DED	Display generator - translates console <i>.DT</i> display source files into binary <i>.DU</i> and <i>.DL</i> files
DLG	Display log displays custom logs and SOE logs on the screen It also enables viewing the continuous events log and the periodic events log
DMD	Display mask definition - sets security levels for individual displays
DVT	Archive data type to volume definition assigns volume name, overwrite priority, and on/off status changes for archive volumes
EEC	Event and error counters - reports the event and error counters for selected nodes This is part of the INFINET diagnostics function
ELF	Event log format configuration configures event log item formats and colors
EUD	Engineering units descriptor configuration configures engineering unit descriptors
EVT	Event log configuration selects alarms, state changes, operator notes, operator actions, logical printer numbers, etc for event logs
GEN	Report generator configuration - configures logs for start times, completion times, log types, number of retentions, etc
HIC	Tag historian - defines groups of tag data to be archived
INH	Group alarm inhibit - inhibits entire alarm groups by individual group or range of groups
KTA	Key to action assignment assigns displays, key macros, and user task programs to keyboard function keys
LCD	Logical CRT definition/console definition associates a logical CRT number with a specific console and window This information is used with the password security function
LOG	Logging parameters configuration - defines logging shift times
LSD	Logic state descriptor configuration configures logic state descriptors

LST	Log status summary - displays current log status for all log types Allows activation, deactivation, and cancellation of log reports
LTR	Loop topology report - displays the topology of a loop. This is part of the INFI-NET diagnostics function
MAC	Key macro definition configures macros of key sequences to be processed when annunciator display panel or function keys are pressed
MCF	System configuration configures primary system attributes
MIS	Archive miscellaneous definitions - defines disk space available for archive storage and retrieval, fullness warning level, and magnetic tape density
MFR	Module firmware displays existing module firmware revision levels for the selected modules
MPR	Module problem report - displays module status bytes and module problem reports using soft key escapes
NTR	Node topology report reports the topology for selected nodes This is part of the INFI NET diagnostics function
OAD	OAS node definition - configures the open access system (OAS) node used for trend data and log collection
OCC	Operator configurable display configuration assigns faceplate names, trend colors, etc for operator configurable displays
OCD	Operator configurable display builder - creates operator displays using faceplates for tags, trends, and alarm summaries
OTA	Operator assignable trend configuration - assigns tags and INFI 90 function blocks for operator assignable two second trend displays
PA	Printer assignment - assigns logical printer numbers to actual physical printer number
PAS	Alarm summary report definition - configures periodic and tag triggered alarm summary reports
PCM	Printer color maps - defines text and line color substitution for hard copies on systems with color printers
PENA	Trend pen general parameters

TASK CODES

PENB	Trend pen device definition
PENC	Trend pen device assignment
PLS	PCU management downloads, saves and verifies PCU module configurations from the console.
POI	PCU configuration - configures INFI 90 function blocks, module mode changes, etc
PRM	Operating parameters displays the characteristics of a tag such as current value or state, alarm limits, alarm comment, etc at a single display. It also enables operations specific to certain types of tags such as manually inhibit, scan on or off, substitute value, etc
QPC	Queued print cancellation displays a list of files queued to a printer, and gives the ability to cancel any or all queued print requests
REL	Relay configuration configures logical relays for duration, keyboard number, and actual relay number on keyboard
RET	Archive retrieval interaction - retrieves archived trends, logs, events, PCU configurations, and tag data
RMC	RMCB text configuration - configures text for remote motor control block error codes
SDE	Show display errors retrieves errors encountered within a display source file (.DT) during processing of the file using the display generator
SOEA	SOE recorder configuration configures any parameters associated with sequence of event recorders
SOEB	SOE report definition - configures any parameters associated with sequence of events logs
SMC	Security mask configuration defines security level, access rights and key lock function, and logical CRT access
STO	Archive storage interaction enables demanding archival storage of events, logs, PCU configurations, trends, and tag data
TCF	Tag configuration - configures attributes for all tag types such as tag name, descriptor, block address, etc
TDC	Trend configuration configures attributes for distributed trends such as trend resolution, collection period, and block address

TDF	Time and date format - defines the format to display the system time and date on the console
TDP	Trend list to printer - prints the trend database using different search constraints such as trend mode, hardware address, and wild card name options
TIM	Set time and date - adjusts OIS time and date, which also propagates to the INFI 90 system through time synchronization.
TLP	Tag list to printer - prints tag configuration using different search attributes such as tag type and wild card names.
TON	Tone configuration - configures logical tones for duration, keyboard number, volume, pitch, and actual tone number on keyboard
TSC	Text substitution - configures all ASCII text throughout the console
TST	Text selector block text configuration - configures text message numbers for support of the text selector block (function code 151)
TSU	Tag summaries - displays and prints tag data using data criteria such as tags in alarm, bad quality tags, off scan tags, and inhibited tags
UPD	User password definition - defines user ID, password, security level, access to individual tag groups and regional access for individual passwords
VMD	Archive volume to media definition - defines archival volume descriptors, media type, time span, and time of day to output
XCP	Exception statistics - reports the exception statistics for selected nodes This is part of the INFI-NET diagnostics function
XYC	XY plot definition - defines XY Plot parameters such as status, plot type, and mode

RESIDENT TASK CODES

The codes that apply to background programs (data collection, I/O interfaces, etc.) that make up the core of the system include.

ADX	Automatic display executive - handles the automatic callup of displays and pop up elements to the screen based on the state transition of a DIGITAL tag
-----	---

AS	Alarm summary task - handles display of alarms in custom alarm summaries
BTM	PCU configuration handles the reading of block data, deleting blocks, and writing blocks for INFI 90 module configuration
CCP	Keyboard interaction task - handles interfacing between the console and keyboard for input from the mylar keyboard, touch point, annunciator display panel, and auxiliary engineering keyboard
CHR	Chronological scheduler - handles periodic scheduling of logs, periodic alarm summaries, and operator assignable trends
CIU	Interface task handles interfacing of the console with the IIMCP01 module on Plant Loop system and IIMCP02 module on INFI-NET system Translates messages within the system (trend polls, control requests, tag connects, etc) into command and reply sequences for the interface unit Polls exception reports and routes the reports to database tasks
DBR	Database retrieval executive handles data retrieval for the tag historian
DBS	Database storage management handles data storage for the tag historian
DOT	Display optimizing translator handles optimization of user-configured displays and real time trend displays
DSU	Dynamic display manager handles dynamic updates of tag data on faceplates and any graphic displays
DSX	Display executive task handles the forwarding of display requests to all tasks that need to search the display file for dynamic items, escape sequences, trend elements, alarm elements, etc
ERR	Operator message task handles display of operator error messages on the bottom of the screen
EVL	Event log manager - handles formatting of event log items for print and storage to disk
FCP	Function code processor interfaces function block operation requests from the OIS virtual module to the communications interface unit of the console
GPL	General polling data manager handles collection of tag exception report data and block output data for operator assignable trends

INI	Initialization - handles start-up of all console tasks, reading of database into memory, and initialization of various memory tables upon start-up.
INT	Interactive program executive - handles activation of any interactive type program or background task
ITX	Interactive loader - handles relocation of any interactive program called to a window
LDC	Logging data collector - handles collection of tag and trend data for custom logs
NCP	Node communications processor - handles tag broadcast messages to and from a global database manager work station, and display file transfers from a software, logging, database and graphics work station
OCn	Operator control task - handles operator control of process control and data acquisition tags for window one (OC1) through window eight (OC8)
OPS	Operator status task - handles output of time, date, alarm groups, and keyboard status information on the screen
ORA	Operator request for action task - handles display and interaction with operator for action requests such as asking for a magnetic tape to be installed in the drive for archive purposes
PRX	Periodic executive task - handles periodic scheduling of alarm summary and event logs
PST	Print spooler task - handles interfacing with printers for printing logs, events, screen copies, files, etc
PSX	Password security executive
RDM	Magnetic tape data archive manager
RDO	Optical disk data archive manager
RDX	Archive executive task
RPT	Report format task - handles formatting of custom logs for print and archive
RRX	Archive retrieval executive task
RSX	Archive storage executive task

TASK CODES

SCP	Segment control processor - executes the function code blocks in the OIS virtual module. It supports up to eight segment control blocks in the virtual module.
SCT	Print screen task - sets up the screen of the OIS application for the copy screen function to capture.
SEL	Sequence of events data collection - handles collection of SOE data for SOE logs.
SLC	Soft key select interactive - handles interfacing with operator for callup of a tuning display, block details display, operator assignable trends display, etc. using the soft key escape.
TD1	Trend display task - handles display of distributed trend data and operator assignable trend data. It also handles panning, zooming, and time cursor movement on trend displays.
TDD	Tag dynamic database manager - handles alarm processing of exception reports, update of exception reports in database, and requests from within the system for tag dynamic data.
TGD	Tag static database manager - handles connects and disconnects to the tag database to acquire static configuration data (names, descriptors, etc.).
TRD	Trend data manager - handles trend definition changes and return of distributed trend data for display, logging, and archive purposes.
VDI	Virtual display metafile interpreter - handles interface with the graphics card for display of data on the screen. Also does translation of display commands into a format required by the graphic card.
XYM	XY plot data manager - handles data collection and management for XY plots.
XYP	XY plot - handles drawing and updating of XY plots.

WINDOW AND NETWORK TASK CODES

The codes that apply to window and network operations include

BLK 00n	Manages blinking of colors for window one (001) through window eight (008).
CCP SYM 00n	Processes an X window keyboard event for the CCP task for window one (000) through window eight (007).

MBOX SERVER	Manages sending and receiving of mail messages through prioritized mailbox queues.
MILLISEC	Increments the millisecond counter for the console
MKISYM	Reads keystrokes from the mylar keyboard for the CCP task
RDC	Sends archived logs to an OAS node for storage.
TRD CLIENT	Handles requests from the TRD task for trend data from an external source Sends a request to the external node, then routes any received data to the TRD task
UTI	Routes user task requests (e g , read value, get trend data, etc)
UTI ACT	Client task that handles user task activation through touch point, key select or ADP push button
UT DSP	Handles user task display callup requests including the optional dialog box
UTI PRT	Handles various print requests for user tasks
UTI SERVER	Handles local and remote requests from user task nodes to access INFI 90 process data and certain OIS resources, and replies to these requests
V CPUQMON	Monitors execution of OIS tasks
VDI SYM 00n	Processes X window graphic requests for the VDI task for window one (000) through window eight (007)

APPENDIX E - ERROR MESSAGES

INTRODUCTION

The operator interface station (OIS) presents the messages in this section to inform the operator of the status of a desired action. Some messages indicate errors, while others prompt for actions or provide information. In the case of a prompt message, the console requires a response before continuing.

ERROR MESSAGES

ERR 1, Invalid Operation Requested

The attempted operation is not valid for the current display or function. Refer to the appropriate section in the instruction for an explanation of valid operations.

ERR 2, Value is Out of Range

The entered value is not valid for the current display or function. Refer to the appropriate section in the instruction for valid entries.

ERR 3, Wrong Set of Keys Being Used

Contact Bailey Controls Company.

ERR 4, No Response to the requested action

Unable to reset the configured RCM tag for the trend pen function. Examine the module configuration (no feedback to the RCM tag).

ERR 5, Unexpected Key

1 Key entered in calculator sequence not allowed. Enter the calculation with correct characters.

2 Bottom line prompts for annunciator display panel received invalid key. Try another key.

ERR 6, Invalid Denominator in Input Field

Zero entered as the denominator in the calculator function. Enter calculation with non zero denominator.

ERROR MESSAGES

ERR 7, Invalid Input

The input is not valid for the current display or function. Refer to the appropriate section in the instruction for valid entries.

ERR 8, Shift Times are not in ascending order

Modify logging parameters.

MSG 9, Display File(s) is/are Being Processed

Informs that display processing has begun while using the display generator. It may take a few minutes for this message to occur if entering a wild card request that satisfies several files. No action required.

MSG 10, File Not Processed Internal Error

The attempt to process a file failed because of an internal operating system error. Wait a few minutes and try again.

MSG 11, Log skeleton has been queued for print

Acknowledges request for print of log skeleton. No operator action required.

MSG 12, Invalid Tag Entered

1 The tag name or index number entered is not valid or not defined in the database. Enter a valid tag name or index number.

2 The entered tag is not of the correct type for the function. Verify valid tag types used by the function.

MSG 13, Loop failed to respond to the request

Mail to database failed for operator control (OC). Retry controlling the tag.

MSG 14, Gathering tag static data failed

Obtaining static data of a tag from the database failed. Retry controlling the tag.

MSG 15, Gathering tag dynamic data failed

Obtaining dynamic data of a tag from the database failed. Retry controlling the tag.

.ERR 16, Keyboard # %d does not exist

Attempted to assign a keyboard that does not exist to a screen Enter a keyboard number of a supported physical keyboard

:ERR 17, CRT # %d does not exist

Assigned a keyboard to a nonexistent screen or used a screen number of a nonexistent screen Enter a screen number that has a physical CRT

:ERR 18, Printer # %d does not exist

Attempted to assign a printer that does not exist to a screen. Enter a printer number of a supported physical printer

MSG 19, All alarms on screen are acknowledged

Pressed an acknowledge alarm key while all alarms currently on the screen are acknowledged No action required

MSG 20, Cannot configure trends, max trends - 0

The number of trends in system configuration is set to 0. Change the number of trends in system configuration to any valid number except zero

MSG 21, Invalid action for this type of station

Invalid control key for type of station being controlled Control the station with proper control keys (OC)

ERR 22, LEDG can only run on 1 CRT, press ESCAPE

The display generator function is active on another screen Press **ESC** and wait until display is finished on the other screen then try again

MSG 23, CRT is assigned to keyboard %d

Displayed when **SWITCH CRT** is pressed This displays on the screen currently assigned to the keyboard being used No action required The operator can reassign the keyboard at this time

ERR 24, Configuration error

1. Configuration inconsistent for desired action Occurs when attempting a change to the configuration that is not valid Check the configuration

2 Tag type specified in the display is different than in the database. Check the escapes for control in the display source file

3 This or another configuration is not correct to allow completion of the current configuration being performed

.ERR 25, Cannot use alarm type, limit exceeded

The alarm type selected has a limit which was exceeded
Check other tags for same alarm type

.ERR 26, Tag name duplicated, see tag %d

Tag name already used for another tag Check tag configuration for indicated tag with same name

.ERR 27, Blank tag name invalid

A blank tag name or index number was entered Cannot use blank trigger tag in a currently active SOE report Enter a valid tag name or index number

ERR 28, Tag address duplicated, see tag %d

The tag address keyed in is used for another tag Check tag configuration for indicated tag

ERR 29, Valid states are A, H L, 2H, 2L, 3H, 3L

The alarm state entered was wrong Enter a valid alarm state
If still wrong, refer to text substitution

.ERR 30, Cannot enter tag

The tag name is blank but the tag type is not undefined
Either set the tag type to undefined to clear the tag or enter a valid tag name

MSG 31, WARNING, ARE YOU SURE? ESCAPE IF NOT

The data entered can delete existing configuration Press **ENTER** if sure, **ESC** to prevent deletion

MSG 32, Update of Files In Progress, Please Wait

As a result of operator interaction, some files are being updated Wait until the message disappears to continue

MSG 33, Restart System, Updates Have Been Done

A change in configuration requires a restart to be used by the console. After completing configuration, reset the console.

ERR 34, Invalid Log Name/Number Entered

Invalid log identification entered Retry with the correct log identification

ERR 35, Duplicate Log Name Entered

Log name entered has already been used for another log Enter a unique name

ERR 36, Invalid range, start not less than finish

Range for tags is not valid Enter a starting index number that is less than the ending index number

ERR 37, Ranges must contain same number of tags

The keyed in ranges have different number of tags Key in indexes with proper range of tags

ERR 38, Zero is invalid tag index

The tag index keyed in was zero Enter a valid tag index.

ERR 39, Invalid display

The display name entered does not exist on the hard disk Enter the name of an existing display

MSG 40, There are no ADPs to configure

No annunciator display panels have been configured in system configuration Change the number of annunciator display panels in system configuration

ERR 41, Inconsistent # of Cells and Starting Cell

Number of trend cells overrun the number of cells left in the column or row Redefine the number of columns or rows, or redefine the trend cells

ERR 42, Inconsistent Time Units

Appears during trend cell definition if an invalid time unit is specified Check the definition

ERROR MESSAGES

.ERR 43, OIS Configuration Key Locked

Configuration operation requested cannot be used while the key lock is not in the CONFIG position Change the position of the key lock, then try again

ERR 44, LOG is already active or in transition

Log is either active or in transition of being active Wait for log to become active

ERR 45, LOG is already inactive or in transition

Log is either inactive or in transition of being inactive Wait for log to become inactive

MSG 46, Tag value request failed for LOG no %d

Tag request during log collection failed Check the tag or log configuration

MSG 47, Trend value request failed for LOG no %d

Trend request during log collection failed Check the trend definition or log configuration

MSG 48, LOG no %d is active

Confirmation of log being active Proceed as desired

MSG 49, LOG no %d is inactive

Confirmation of log being inactive Proceed as desired

MSG 50, Tag's Primary Display not configured

Operator requested the primary display from the operating parameters page for a tag that does not have one defined Configure a primary display for the tag if desired

MSG 51, Operator Request for %s Ignored

Display called up with the maximum number of displays presently up Check the system configuration during start-up

MSG 52, No Printer Configured

Use of a system printer requested when no system printers exist Check system printer, printer configuration or connect a system printer

MSG 60, End idx must be greater than Start Idx

The start index range must be smaller than the end. Enter new indexes and try again

:MSG 61, Duplicate definition

1. Indexes the operator entered already exist Enter new indexes

2 In alarm summary format configuration (ASF), alarm summary element that the operator selected already exists Select another element

.MSG 62, Trend is defined but is inactive

The current trend index has been defined in the database but has been marked inactive until restart No action except restart when trend definition is complete

ERR 63, Log must be inactive to reconfigure

Configuring an active log is not permitted Deactivate the log, then proceed

:ERR 64, Internal error Log will not activate

File error on log being configured, try again If unsuccessful, delete the definition file for the log, then retry

ERR 65, Internal error Log file/memory error

LOGSTATS.LG or **CRNTLOG.LG** file may be corrupted Check the files, then retry They may need to be restored from default files

ERR 66, Internal error Log reset to inactive

Some internal error or file error encountered Check the **.LF** file for the log, then retry

ERR 67, Log is in transition Request ignored

Log is awaiting service by the logging data collector (LDC) task to be activated or deactivated Wait, then retry

.ERR 68, File Not Found in given directory

The file name entered did not exist in the directory indicated Enter correct path name or copy the **.DT** file to the [DATA USN54] directory

ERR 69, Cannot open storage file WILDCARD.OP

The **WILDCARD.OP** file is a reserved file Do not try to open

ERR 70, No filename entered Please Continue

Did not enter a file name, which terminated processing Call up the display generator page again

ERR 71, Yellow files with asterisk not processed

One of the wild carded files processed by the display generator had some manner of processing error When wild carding is complete, examine the files and run them through the display generator individually File **WILDCARD.OP** contains a list of files with errors

ERR 72, Invalid command or syntax within file

The display source file had a bad command, invalid parameters, etc Examine the file and fix errors

MSG 73, Processing Completed

No action required Proceed as desired

ERR 74, Display config'd for another target sys

Run display file through the display generator

ERR 75, Problem reading or allocating file

- 1 Problem with **.LF** file being configured Check file in the directory, then retry or delete and retry
2. Problem with **.DT** file being run through the display generator, examine the file

ERR 76, LEDG session tracking file not opened

When a wild card file name is entered, this file is used to keep track of the display generator progress See if there is enough disk space for the file If the file **WILDCARD.OP** is present, try deleting it before continuing

ERR 77, DOT Configuration file not found, created

The default configuration file will be created No action required

:ERR 78, Display/Window not called, over 800 tags

The display source file has more than 400 unique tag indexes as part of the display elements. Reduce the number of tag indexes in the display.

:MSG 79, Function Under TUNE Keylock Control

1 Operator tried to perform an action at the operating parameters function with the key lock not in the TUNE position. Change the position of the key lock.

2 Cannot tune from a block details or tuning display with the key lock not in the TUNE position. Change the position of the key lock.

MSG 80, Function under CONF keylock control

Cannot perform any PCU or OIS configuration of any kind with the key lock not in the CONFIG position. Change the position of the key lock.

NOTE Messages 81 through 116 correspond to interface unit firmware codes 1 to 36. The appropriate reply message displays depending on which error occurred within the interface unit. Check the INF 90 module that was accessed and its configuration. Refer to the **Operator Interface Station, Hardware Manual** for a list of error codes.

ERR 81, Reply Error - Waiting for Loop

ERR 82, Reply Error - Improper Format

ERR 83, Reply Error - Undefined Command

ERR 84, Reply Error - Index Already Established

ERR 85, Reply Error - Block Already Established

ERR 86, Reply Error - Command Too Long

ERR 87, Reply Error - Bad Reply from BTM

ERR 88, Reply Error - Export Used as Import

ERR 89, Reply Error - CIU Needs Another Restart

ERR 90, Reply Error - Undefined Index

- ERR 91, Reply Error - Memory Full*
- ERR 92, Reply Error Communication Error*
- ERR 93, Reply Error BTM Not Responding*
- ERR 94, Reply Error Import Used as Export*
- ERR 95, Reply Error Plant Loop Timeout*
- :ERR 96, Reply Error Number Out Of Range*
- ERR 97, Reply Error Illegal Key*
- ERR 98, Reply Error CIU Needs a Restart Command*
- ERR 99, Reply Error Module Status Used as Import*
- ERR 100, Reply Error Message Active on Loop*
- ERR 101, Reply Error - Import/Export Used as Mod*
- ERR 102, Reply Error Exception Report Specifications Lost*
- ERR 103, Reply Error No Message Queue*
- ERR 104, Reply Error Reply Too Large*
- ERR 105, Reply Error Illegal Station Mode Command*
- ERR 106, Reply Error Illegal Module Number to CIU Problem Report*
- ERR 107, Reply Error Timeout Between Bytes*
- ERR 108, Reply Error Index Already Established*
- ERR 109, Reply Error Point Type Incom with Command*
- ERR 110, Reply Error Watchdog Timeout*
- ERR 111, Reply Error Checksum Compare*
- ERR 112, Reply Error Destination Node Offline*

·ERR 113, Reply Error - Callup Command Required

·ERR 114, Reply Error - CIU Internal Error

ERR 115, Reply Error - CIU Busy

·ERR 116, Reply Error - BTM Offline

NOTE Messages 117 through 127 correspond to module bus reply codes 100 to 110. The appropriate messages display depending on which error occurred within the interface unit. Check the INFI 90 module that was accessed and its configuration. Refer to the *Operator Interface Station, Hardware Manual* for a list of error codes.

ERR 117, Module Error - Undefined Message

ERR 118, Module Error - Busy

ERR 119, Module Error - Mode Conflict

ERR 120, Module Error - Illegal Data

ERR 121, Module Error - Invalid Block Number

ERR 122, Module Error - Undefined Block Number

ERR 123, Module Error - Block Not Readable

ERR 124, Module Error - Invalid Function Code

ERR 125, Module Error - Blk and FC Incompatible

ERR 126, Module Error - Insuff. Memory for Block

ERR 127, Module Error - Insuff. Memory for Block

ERR 128, Communication Timeout Error

Interface unit request reply code 200 returned. Check all communication links between the console and the loop.

ERR 129, Communication Framing or Parity Error

Interface unit request reply code 201 returned. Check all communication links between the console and the loop.

ERROR MESSAGES

:ERR 130, Communication Checksum Error

Interface unit request reply code 202 returned Check all communication links between the console and the loop

.ERR 131, Communication Overrun Error

Interface unit request reply code 203 returned Check all communication links between the console and the loop

ERR 132, MFC File Error Ok

ERR 133, MFC File Error - Busy

ERR 134, MFC File Error - No Buffer Available

ERR 135, MFC File Error Buffers Too Small

ERR 136, MFC File Error - File/Buffer Not Open

ERR 137, MFC File Error Write Protected

ERR 138, MFC File Error

ERR 139, MFC File Error Already Opened

ERR 140, MFC File Error Invalid Operation

ERR 141, MFC File Error Wrong Mode

ERR 142, MFC File Error

ERR 143, MFC File Error File Does Not Exist

.ERR 144, MFC File Error

ERR 145, MFC File Error Can't Create File

ERR 146, Error %d has occurred

Generic error message for any unknown error code that is returned from the interface unit Contact Bailey Controls Company

:ERR 147, Module is Busy

Operation stopped because module is busy Try again

:ERR 148, Loop range is [0 - 250]

Entered value is not in the valid range Enter a valid number.

:ERR 149, PCU range is [0 250]

Entered value is not in the valid range Enter a valid number.

:ERR 150, Module range is [0 - 31]

Entered value is not in the valid range Enter a valid number.

:ERR 151, Block range is [0 9998]

Entered value is not in the valid range Enter a valid number.

ERR 152, Function code range is [1 - 210]

Entered value is not in the valid range Enter a valid number.

:MSG 153, Loop/PCU/Module must be defined

1 Cannot do requested PCU module configuration operation (POI) while a loop, PCU, and module address is not entered. Define the loop, PCU, and module to be tuned, configured or inspected

2 PENB or PENC unable to attain the module hardware address No operator action required

MSG 154, Module must be in CONFIGURE mode

Cannot do requested PCU module configuration operation while module is not in configure mode Change module mode to configure

MSG 155, Module must be in EXECUTE mode

Cannot do requested PCU module configuration operation while module is not in execute mode Change module mode to execute

ERR 156, Block not defined

Need to specify a block number before an operation involving that block is started Enter a valid block number

ERROR MESSAGES

.ERR 157, Function code not defined

Need to specify a function code value before a search for a block with the given function code is started Enter a valid function code number

ERR 158, Source block not defined

Need to specify a source block before a copy operation is started Enter a valid source block number

ERR 159, Target block not defined

Need to specify a target block before a copy operation is started Enter a valid target block number

ERR 160, Block values may not be equal

Cannot copy a block into itself Enter a source and target block number that are different

ERR 161, Invalid function code

Invalid string entered as a function code value (e.g., alpha numeric string) Enter a valid function code number

ERR 162, Block already exists

Cannot ADD a block that is already in the module Enter a block number that is not currently used in this module

ERR 163, No tunable parameters in this block

Block details (BTM) specification list for this function code has no tunable specifications Cannot tune any block with this function code

ERR 164, Error while reading 'N90FUNC.CF'

Error reading the data file containing the offset values for referencing the specification configurable text records Check if the file **N90FUNC.CF** exists on the hard drive or if it is unreadable

ERR 165, Block does not exist

Unable to find the specified block defined in this module Enter a block number that is for a tune or modify operation

MSG 166, Press ENTER to send block, ESC to cancel

Confirmation required from the operator before the change, tune, or add is to the module. Proceed as desired

ERR 167, Destination Format Number not defined

Increase the number of format records in the file by using change number of formats option and try again

ERR 168, Requested Tag Is Not Station Type

The tag name or index number entered for a tuning request is not a STATION tag Enter a STATION tag or examine the configuration

ERR 173, Cannot Reserve The Selected Port

A software error Contact Bailey Controls Company

ERR 174, Selected Port Already in Use

A software error Contact Bailey Controls Company

ERR 175, Module is not On line

Attempted an operation on a module that is not on line or does not exist on this loop Use a module that is on line

MSG 176, Block move is in progress

Moving a block to another location in the module Wait until message is cleared or replaced

MSG 177, Block copy is in progress

Copying a block to another block in the module Wait until message is cleared or replaced

:MSG 178, Block operation completed

Appears after completion of a function block copy Proceed as desired

MSG 179, Initializing selected module

Currently initializing the module Wait until message is cleared or replaced

ERROR MESSAGES

MSG 180, Module initialization completed

Appears after PCU module initialization is complete Proceed as desired

:MSG 181, Block # %d deleted

Appears after block is deleted from the current module Proceed as desired

MSG 182, Searching for block

Currently searching for the specified block within this module Wait until message stops blinking and clears

MSG 183, Completed %d adjusted spec(s)

Displays the number of the specification value within the module that is being automatically changed to reflect the new location of a block that was just moved

MSG 184 Processing page %d

Current page is being formatted to send to the printer Wait until the message disappears

MSG 185, Operation in progress, Please Wait

Currently requested operation is being performed, wait for completion

ERR 186, End of Report, Page to reread problems

No action required

ERR 187, Log #%d is not active, demand ignored

Demand of current log is ignored because the log is not active Activate the log, then demand the log after active confirmation

ERR 188, Accessing log #%d configuration failed

Reading log configuration file failed, try again If it occurs again, check the file for cause of file access error

ERR 189, Log demand queue is full

Too many outstanding demanded logs (limit is nine) Wait for processing of a demanded log to finish, then try again

:MSG 190, Processing demand log # %d

Identifies the demanded log being processed No action required.

MSG 191, Queued demand log # %d

Acknowledges queued demand log for processing for a *Log by Name* request No operator action required

.MSG 192, Internal error Demand log # %d failed

Processing of a demanded log failed due to an existing error in the log. Check log configuration and also tag or trend referenced in the log

ERR 193, Cannot Continue Processing Request

Generic internal processing error for soft key tag select (SLC). A soft key or hard key request failed Try the request again

.ERR 194, Tuning requires a PID block

The function block specified in the tag name or index number is not a PID block The console presents a prompt for a PID block address

:ERR 195, Log Retention is Out of Range

The entered log retention is not in the prescribed range Enter a valid retention number

ERR 196, Tag name/index not found

The tag name or index number does not exist in the database Check input or tag configuration

ERR 197, Invalid trend index (not found)

Contact Bailey Controls Company

.ERR 198, Soft Key Default Parameter Out Of Range

The user configured soft key parameter was invalid Check the display source file from which the soft key was called.

.ERR 199, No log Name/Index entered

No log name or index number was entered in the *Log by Name* request so the program ignored the request Call *Log by Name* again

ERR 200, No Display Name entered

No display name was entered in the *Display by Name* request so the program ignored the request Call *Display by Name* again

ERR 201, No Trend Index entered

Contact Bailey Controls Company

ERR 202, No Log Retention entered

Did not fill in the log retention before pressing **ENTER** in a *Log by Name* request The console prompts again

ERR 203, Insufficient Parameters to Process

Pressed **ENTER** before all parameters were entered for *Log by Name*, module problem report, tuning or block details) The console prompts again Fill in remaining parameters and retry

ERR 204, Display Not Found

Display name entered in *Display by Name* request does not exist on disk Check disk or correct name

ERR 205, Log Index/Retention pair does not exist

The supplied retention does not exist for the entered log name or index number Examine the log configuration, or change the name or retention number

ERR 206, ABORT Soft Key Fixed default invalid

A soft key non modifiable default parameter was out of range Correct error in display source file containing soft key request

ERR 207, WARNING Soft Key default invalid

A soft key modifiable default parameter was out of range (initialized by SLC to zero) Correct error in display source file containing soft key request

ERR 208, Error creating EVENTS LG for %d events

Generated by the event log manager (EVL) if a file cannot be allocated for the number of events set during event log configuration Change the number of events in event log configuration

:ERR 209, Tag not defined for this index

Could not find a defined tag in the database with this index number Enter a valid index number

:ERR 210, Maximum wait time exceeded

SOE report wait time exceeds the maximum allowable wait time (32,767 seconds) Enter a valid wait time

:ERR 211 Invalid selection for this field

1. Invalid alphanumeric string was keyed in Enter a valid string.
2. PENA the text entry for the key lock check field is invalid Enter a valid string
3. PENC - the text entry for the pen status field is invalid Enter a valid string

MSG 212, Please Enter PID Block Address

Accompanies the initial display of ERR 194 It asks for an address Fill in supplied fields

ERR 213, Duplicate Address in SP, CO, or PV

Contact Bailey Controls Company

ERR 214, Maximum Number of Fast Trends Exceeded

Occurs after a tuning display request if the maximum number of fast trends (operator assignable) has been exceeded Call up the operator assignable trends function and delete a tuning tag

ERR 215, Previous Input Field Active

Request aborted because it requires an input field and there is already another input field active on the requesting screen Call a display that has no input field and reissue the request, or escape from previous field and try again

:MSC 216, Event Log Queued for Print

Acknowledges the completion of an event log request No action required

ERROR MESSAGES

MSG 217, SOE Log Queued for Prnt

Acknowledges the completion of a sequence of events log request No action required

.MSG 218, Keyboard # %d Reset

A system keyboard has reset No action required, but a slight pause in system performance will be noticed

MSG 219, Specs Not Available Repeat Request later

Tuning request made, but the database has either its process variable or set point low and high values equal This implies the database specifications for the tag are incorrect. Retry request from 30 seconds to 15 minutes later, or check the configuration for the block

MSG 220, Request accepted File search in process

Output by the display generator after entering the file name to process No action required

ERR 221, SOE error # %d See user manual

Error number corresponds to internal communication error codes Refer to **Sequential Events Recorder** and **Multi-Function Processor** or **Multi-Function Controller** manuals Check overall SOE configuration

ERR 222, SOE data lost Check age/wait time config

Wait time in the console is too long relative to the age time set in a MFP or MFC module Refer to the **Sequential Events Recorder** and **Multi-Function Processor** or **Multi-Function Controller** manuals Check wait times and overall SOE configuration

ERR 223, Problem at SER or with SER/MFC communication

Refer to the **Sequential Events Recorder** and **Multi-Function Processor** or **Multi-Function Controller** manuals Check overall SOE configuration and connections

ERR 224, EVENTS are not defined

Events have not been defined for archiving Check the *Data Type to Volume Definition* display

.ERR 225, LOGS are not defined

Logs have not been defined for archiving display Check the Data Type to Volume Definition display

ERR 226, TAG DATA is not defined

Tags have not been defined for archiving Check the Data Type to Volume Definition display

.ERR 227, TRENDS are not defined

Trends have not been defined for archiving Check the Data Type to Volume Definition display.

.ERR 228, Tag name, Tag number, Alarm Group all blank

At least one of these fields must be filled in to retrieve events. Enter valid data in one of the fields

:ERR 229, Auto Output is YES ENTER to override

Data type has already been defined to be archived automatically

.ERR 230, Press ENTER to archive data

Press **ENTER** to continue

ERR 231, 'From' date later than 'To' date

Change date entry to continue

.ERR 232, 'From' log greater than 'To' log

Change log entry to continue

ERR 233, Archive Index already defined in display

Contact Bailey Controls Company

.ERR 234, Time value and units mismatch

Combination of value and units not allowed Check instruction for combinations allowed

ERROR MESSAGES

MSG 236, Substitute by pressing desired State Key

Press (ON) or (OFF) to substitute digital state, or press ESC to exit substitution.

MSG 237, There are no other pages

Pertains to *Operator Action Requests* and *Operator Information Events* display No more pages of requests or information events to display No action required

MSG 238, Item already selected on CRT %d

Pertains to *Operator Action Requests* display Item being selected is already selected in another display Select another item.

MSG 239, Item selected has become unnecessary

Pertains to *Operator Action Requests* display Action requested for selected item no longer needed or relevant Item is erased from display No action required

MSG 240, Update to Configuration is Complete

Changes made to configuration have been saved Proceed as desired

ERR 241, Exceeded Maximum Number of Trends

Tried to configure more than 20 fast trends (operator assignable) Delete other trends

ERR 242, Exceeded Maximum Number of Blocks Trended

Can trend a limited number of blocks through fast trends and the tuning display Delete unused fast trends from blocks or the tuning display.

ERR 243, Cannot Delete Displayed Trend

Trend cannot be deleted while being trended Terminate trending first

ERR 244, File Error Updating Configuration

Updating configuration file failed due to a file management system (FMS) error, either retry or correct the FMS problem

ERR 245, Error Retrieving Tag Configuration

Could be the result of bad tag configuration or FMS file error
Retry or check database and FMS errors

.ERR 246, High Limit must be Greater than Low Limit

When configuring fast trends, high limit must be greater than
low limit Retry entering limits with correct values

MSG 247, No Trend Indices in given list

The soft key request to show a fast trend has no trend index
number in it Check the display file and ensure at least one
fast trend index is non zero

ERR 248, Function not available, missing file

Have requested a soft key or tag select (SLC) function that has
been turned off because a system error has occurred Press
another key

ERR 249, No Fast Trend List Number Entered

Pressed ENTER but did not key in an index number to proc
ess for a fast trend request Enter an index number

MSG 250, Log Numbers and Name cannot all be blank

Fill in log number and name

.ERR 251, Invalid Trend List Number

The trend list number must be zero to four A zero implies a
non reference Check the .DT file for valid ranges

.MSG 252, Press ENTER to save page, ESC if not

Prompt to save data on screen or escape to next screen with
out saving this data Proceed as desired

MSG 253, Cancel reports request serviced

Log status display notifies of completion of a request No ac
tion required

ERR 254, Blank Tag is Invalid for Active SOE Rept

Enter a tag name or index number

MSG 255, Press ENTER to save data

Configuration has been modified, prompts to save before exiting Press **ENTER** to save or another key to exit

.MSG 259, Press NEXT PAGE or PREV PAGE for more items

Notifies that there are more items that can be accessed by pressing **PREV PAGE** or **NEXT PAGE**

.MSG 260, Operation aborted by user

1 PENB download of the module configuration is aborted using **ESC** No action required

2 PENC - download of the module configuration is aborted using **ESC** No action required

MSG 261, SELECT a Cell Item from the Menu

Cell type selection mode is active Choose a cell type for the current cell

MSG 262, Press ENTER to delete cells, ESC to abort

Confirms deletion of cells Press **ENTER** for operation to proceed, press **ESC** to terminate

ERR 263, Number of Events to Save must be Non Zero

Enter a number from 1 to 1,000

MSG 264, REPORT is already active

Operator is requesting to activate, from the log status display, a report that is already active No action required

MSG 265, REPORT is already inactive

Operator is requesting to deactivate, from the log status display, a report that is already inactive No action required

ERR 266 LOG/REPORT Type Requested Not Found

There are no logs or reports currently defined for the type requested Make another selection

:MSG 267, SEARCH IN PROGRESS

The console is processing a search request. Wait for completion.

:ERR 268, LOG/REPORT Does Not Exist

The log or report requested does not exist. Make another selection.

NOTE: Messages 269 through 283 correspond to internally generated console errors related to its interface unit.

:ERR 269, Invalid logical unit

Contact Bailey Controls Company

ERR 270, Invalid index or CIU

Check total tags in system

ERR 271, Invalid CIU restart opt'n

Contact Bailey Controls Company

:ERR 272, Invalid watchdog/delay cnt

Contact Bailey Controls Company

ERR 273, Invalid PCU, module or blk

Check tag configuration

:ERR 274, Invalid point type

Check tag configuration

:ERR 275, Invalid index range

Contact Bailey Controls Company

ERR 276, Invalid eng units code

Contact Bailey Controls Company

:ERR 277, Invalid logical alarm spec

Contact Bailey Controls Company

ERROR MESSAGES

ERR 278 Invalid module op mode

Contact Bailey Controls Company

ERR 279 Invalid function code

Contact Bailey Controls Company

ERR 280, Invalid block data count

Contact Bailey Controls Company

ERR 281, Invalid number of reports

Contact Bailey Controls Company

ERR 282, Offline

Check interface unit and restart

ERR 283, Pending Reply Table Full

If error persists, contact Bailey Controls Company

ERR 284, No Tags in Range to Print w/ this Option

Tag list to printer function (TLP) could not find any tags within given range to print with the specified option. Select another print option or a new tag range.

MSG 285, Operator Action Log Queued for Print

Request to print operator action log has succeeded. No action required.

ERR 286, Cannot Print Logs to Video Copier

Request to print a log to printer number zero is invalid. Check printer assignment for screen and keyboard.

MSG 287, Height Option not allowed for Line Opt 2

The user selected the double height option for a format which has the single line option specified. If double height characters are desired, change the line option for the format to standard (0) or double (1).

:ERR 288, Cannot Change Default Format (Fmt 0 - 4)

Cannot change format number zero through four No action required

:ERR 289, LOG STATUS Changes Require ENTER key

Press **ENTER** to continue.

:ERR 295, Not enough memory. Request Aborted

Operation or display requested cannot be executed because there is not enough memory resources available. Example: display generator is active on another screen consuming much of the memory Exit unused displays in other screens to release resources and try operation or display again

.MSG 296, Display not Found in System

Primary display not found in system After tag is configured, implement the display

MSG 297, ESC exits display Any other key resumes

Informs the operator that **ESC** exits from the cell configuration display back to the log menu

MSG 298, Operation aborted, bottom line is in use

Control tried to access the busy bottom line Escape from using bottom line (input field), try again

:MSG 300, No Data Type to Volume Defined

No data types for archiving have been defined Check data type to volume definition

:MSG 301, Press ENTER to exit, ESC to return

Edits were made and have not been saved Press **ENTER** to abort edits and continue the exit operation requested Press **ESC** to resume editing

MSG 302, Retrieve Archived Data request queued

Retrieve archived data has been requested Message informs that action has been taken

:MSG 303, Retrieval queue full -- Please try later

**Operator made too many requests to retrieve archived data
Wait for a period of time, then try to send request again**

:ERR 304 Line must be all blanks or filled in

**Operator has filled in one or more but not all of media type,
volume label or number If one is filled in, all must be filled in
Fill in blank fields or blank out all fields**

ERR 305 Invalid Alarm Group

**Operator entered an invalid alarm group number or letter
Valid entry is 1 through 99, S or D Enter a valid alarm group**

ERR 306 Invalid Time or Date

**Operator entered either an invalid time or date in the field
Enter a valid time or date**

ERR 307 All Event Types cannot be set to NO

**Operator made a request to retrieve events with all event
types set to NO The console interprets this to mean do not
retrieve any events Change desired event type to YES**

ERR 308 Starting Tag number > Ending Tag number

**Starting tag number must be less than or equal to ending tag
number Enter a valid range**

ERR 309 Starting Alarm Group > Ending Alarm Group

**Starting group number must be less than or equal to ending
group number Enter a valid range**

ERR 310 Install Archive Volume and try again

**No archiving volume installed in the device Put volume in
device for desired directory, then try again**

ERR 311 Retrieve Trends selected Try again later

**Retrieve trends display is only allowed on one screen at a
time Wait until the desired screen is free, then try again**

:MSG 312, Archiving Configuration change made

Change to archiving configuration has been made No action required

:MSG 313, Directory has nothing to be displayed

The requested directory has no entries No action required

:MSG 314, Archiving request queued

The operator has sent a request to store data No action required

:MSG 315, Group Inhibit change queued

The operator has sent a request to inhibit or uninhibit all tags in alarm group No action required

:ERR 316, Disp Request Not Operator Configurable

The operator has entered a display name that exists in a [DATA USNxx] directory, but does not have an operator configurable display definition file Enter a different display name

:MSG 317, Disp File being constructed, Please Wait

After configuring a display, this message appears to inform that the display is being built No action required

MSG 318, Display Configured and Saved to Disk

When the operator configurable display (OCD) function has finished building the configured display, it outputs this message If the operator leaves the display before this message appears on the screen, changes are not saved No action required

ERR 319, Box Overlap, ENTER accept, ESC reject

A box has been chosen that overlaps an existing box or element This error message allows accepting or rejecting the new element Press ENTER to accept Press ESC to reject

ERR 320, Request Ignored Active Function Overlap

Function requires exclusive access to the bottom line prompt area If one is active and another is called, the second request

ERROR MESSAGES



is ignored and this message appears. Escape then try to recall this display

ERR 321, No Faceplate Available for this type

Tag index entered does not have a faceplate associated with its tag type. Enter a tag index that has a faceplate associated with its tag type

ERR 322, Changes made ENTER to save, ESC to Abandon

Attempted to escape from a display which had been changed. Press **ENTER** to save changes, **ESC** to leave operator configurable displays (OCD)

ERR 323, Hit to select box to edit

Informs that **ENTER** must be pressed to select a box to configure in the operator configurable displays function. Press **ENTER** to select a box to edit

ERR 324, Trend System Cfg Error: Tag Type invalid

An attempt was made to get information about a tag from the database that was of unknown type, or is not defined. Enter a different trend index or check the trend definition file for valid index, then try again

.MSG 325, Station Tag, Please Select Trend Tag Type

The selected trend is associated with a STATION tag. Enter one of the following trend box types: PV, SP, RI or CO

.MSG 326, Enter printer number

Asks to enter the printer number which is to be assigned to the screen. Press the number associated with the printer to assign it to the screen

MSG 327, Enter CRT number

Asks to enter the screen number that is to receive the next sequence of keys. Press the number associated with the screen

MSG 328, Enter display number to RECALL

Asks to enter the number of the previously marked display to recall. Enter number of marked display

MSG 329, Enter display number to MARK

Asks to enter the number to be associated with the display when that display is to be recalled by number Enter number to associate with the display

MSG 330, Press ENTER when done selecting else ESC

Asks to press keys associated with a retrieved trend that is to be deleted Select letters to delete Press **ENTER** when done, or **ESC**.

MSG 331, Press ENTER to delete page else ESC

Press **ENTER** to delete all retrieved trends on the display, or **ESC**

MSG 332, Delete Retrieved Trend Files queued

The selected retrieved trend data files have been queued to be deleted No action required

MSG 333, Data Type is ON fill in Volume

If a data type has been turned on to be archived, volume name cannot be left blank Enter a volume name

MSG 334, Data Type previously defined cannot be blank

Once volume name has been defined in the system for a data type, the name cannot be blanked out Leave the name as is, or change to new name

MSG 335, X coordinate would cause line wraparound

The x coordinate entered will cause the element text to exceed the display boundaries Decrease the x-coordinate so that the element fits within the limits of the blue rectangle

MSG 336, DD Mode change invalid while in Remote

MAN/AUTO is locked out if DD is in remote mode When condition goes back to normal, the tag can be controlled

ERR 337, Control invalid while Block is Red Tagged

Before and during control of a tag, the red tag status is checked If red tag status exists, control of the point is aban-

ERROR MESSAGES

done. The tag can only be controlled when the condition is removed

:ERR 338, Control invalid while in Manual Interlock

Only the control output or set point value can be set when in manual interlock mode No action required

.ERR 339, Value Change invalid while in CO Tracking

Setting of control output while in control output tracking mode is not allowed No action required

ERR 340, Value change invalid while in SP Tracking

Setting of set point while in set point tracking mode is not allowed No action required

ERR 341, Press set to enter the value

Press **SET** before entering a value

ERR 342, Control invalid while tag in Bad Quality

Before and during control of the tag, bad quality status is checked If bad quality exists, control of the point is abandoned The tag can only be controlled when this condition is removed

MSG 343, Enter function to be canceled

Appears after pressing **CANCEL** It instructs to complete the key sequence by entering a key whose desired function is to be canceled Press the key of the function to cancel

MSG 344, Conversion is needed for log #%d

Conversion program for SLDG created logs has not been run Run the conversion program for logs and try again

MSG 345, Log #%d is not INACTIVE, request denied

Trying to copy data to a log that is active Change log to **INACTIVE**, then try again

MSG 346, Printer Queue is Full, Try again Later

The requested print cannot be done Check printer status

·MSG 347, First index not printed in request is %d

No action required

:MSG 348, Module firmware revisions queued to print

Appears from the time that a selection is made to print an entire loop until the print is finished No action required.

:ERR 349, Destination ring off-line

Satellite ring of INFI-NET system is off-line or not there
Check status of ring

·ERR 350, Loop and PCU already have a print queued

Appears when a selection to print revision currently on display is made but there is already a print in progress for the same loop and node Check to see if printer is working Wait until revision has been printed, then try again

MSG 351, Print in Progress Please Wait

Appears from the time that a selection is made to print an entire loop until the print is finished No action required

·ERR 352, Internal Error

Shown when there is an internal software error that may lead to the program not functioning properly If the error persists after leaving the function and trying it again, contact Bailey Controls Company

ERR 353, Loop and node must be selected

Shown whenever a request is made to print or update the revisions on display, but there has been no selection of loop and node Select loop and node and try again

MSG 354, File maximum exceed Delete some files

Appears if the system has more than 25 operator configurable display files This is just a warning message No action required

ERR 355, Cannot add new file Too many exist

Appears if attempting to create a new operator configurable display file and there are already 25 files existing Delete an

ERROR MESSAGES

existing file (check directory [DATA USN53] for a list of .CF file names) or reconfigure an existing file

ERR 356, Max # of background files are on display

A maximum of two background curves may be placed on any given x,y graph. This message displays when attempting to place a third background curve on a graph. Clear the two existing background curves using one of the x,y control options before placement of the new curve is possible.

ERR 357, Plot must be ACTIVE in order to continue

Message appears whenever an operation is requested that is invalid when the XY plot index is inactive. Activate the plot index through plot definition.

ERR 358, History request failed

Message appears whenever a request for historical trend data is made for an x,y plot but cannot be completed or displayed. Retry the operation again.

ERR 359, MFC Error not enough free memory

Check MFC configuration. Delete extra files. Reformat MFC.

ERR 360, MFC Error no free files available

Check MFC configuration. Delete extra files. Reformat MFC.

ERR 361, Floppy Disk Error or missing disk

No action required.

MSG 363, Limited to one module at a time

Appears whenever an attempt is made to set the mode of a range of more than one module to configure. Set the PCU management (PLS) module range to include one module only, then retry.

MSG 364, Completed %d config files deleted

Appears at the completion of an operation using option H to delete one or more entries of the current configuration file directory. No action required.

.MSG 365, Sorting current directory Please wait

Appears whenever a sort of the current file directory is in process during a save operation or during a directory file deletion Wait until completion

.MSG 366, Press ENTER to continue, ESC to stop

Displays whenever a verify error occurs Press **ENTER** to process next block Press **ESC** to abort this module operation, proceed to next module

:ERR 367, File type and module type disagree

Displays during a load, save or verify whenever the module type within the file is not the same as the actual type of the current module.

MSG 368, Processing module %d, block %s

Displays during a load, save, verify or print Gives the current module and block being processed It is updated at every fifth defined block

.MSG 369, Processing modules %d thru %s complete

Occurs at the end of every load, save, verify or print PCU operation

ERR 370, Configuration file not found

Error displays during a load, verify or print whenever the corresponding module configuration file does not exist

ERR 371, Address (l/p/m) of file & module disagree

Error displays whenever the hardware address in the configuration file does not match that of the corresponding module.

.ERR 372, Internal error retrieving module type

No action required

.MSG 373, Process BASIC/C for mod %d? Y-Yes, N-No

No action required

ERROR MESSAGES*.ERR 374, Verify error missing file block %d*

Appears during a module verification if a block in the module is not in the corresponding configuration file Message number 366 appears alongside this message Operator action proceeds as per message 366

ERR 375, Verify error missing module block %d

Appears during a module verification if a block in the configuration file is not in the corresponding module Message number 366 appears alongside this message Operator action proceeds as per message number 366

:ERR 376, Verify error - disagreement on block %d

Appears during a module verification if a block in the configuration file differs from its counterpart in the corresponding module (e.g., different function codes, different specification parameter values) Message number 366 appears alongside this message

MSG 377, Grp Overflow-Up to Tagindex %d process

The tag range specified up to the tag index number was processed before the group became full No operator action is necessary unless the operator wants to add the unprocessed tags to the index

MSG 378, Edits were made Update Configuration

Any edits made will be lost unless ENTER is pressed to save them to the hard disk

.MSG 379, Historian Group Configuration Updated

Historian group configuration updated after request No action required

.ERR 380, Request Error - No RDF name Specified

No RDF name was specified for tag historian retrieval Enter a valid RDF name and retry

.ERR 381, Rqst Err No Wildcard Pattern Specified

A blank wild card pattern to search for is invalid Enter a non blank wild card pattern and retry

:ERR 382, Illegal Entry - Tagindex Had Blank Tagname

Tag index entered had a blank tag name which is invalid Enter a tag index that has a non blank tag name

:ERR 383, Illegal Entry - Duplicate Tag

Tag entered is already a member of the tag historian group. Enter a tag which is not already in the group.

:MSG 384, Assigned to keyboard %d, enter new CRT

Message appears on the new screen to which that keyboard is assigned The numeric parameter to the message will echo the keyboard number from which the operation originated

:MSG 385, Enter second key in sequence after '%d'

The numeric parameter to the message will be filled in by the number representation of the numeric key press which initiated the key sequence

MSG 386, Selected RDF Has Been Queued To Print

Acknowledges request to print selected RDF file

MSG 387, Selected RDF Processing Has Been Aborted

Acknowledges request to abort processing an RDF file

:MSG 388, Selected RDF File Has Been Deleted

Acknowledges request to delete selected RDF file

.MSG 389, Illegal Selection Deleted RDF File

An RDF file which has already been deleted was selected from the menu This is illegal Select a file which does not have a status of deleted

:MSG 390, Internal error!! Request ignored

The console had an internal error while processing the request it was sent This may occur if console software is not current Retry request and if it continues to occur, contact Bailey Controls Company

ERROR MESSAGES

MSG 391, Illegal Entry, no RDF for Letter Selected

A letter from the RDF directory was selected which did not have a defined RDF file Select a letter on the menu which has an RDF name defined

.MSG 392, No Combination was selected Rqst Ignored

The operator entered **NO** for all possible RDF print formats before initiating request No request was needed Answer **YES** to at least one of the three possible formats before initiating a request

MSG 393, Retrieval Request Queued

Acknowledges request to retrieve data to create an RDF file

MSG 394, RDF file limit reached, Request Ignored

Up to 50 RDF files are available This message occurs when 50 have previously been defined Delete existing RDF files before retrying to build a new RDF file

:MSG 395, RDF file name not unique, Request Ignored

RDF file names must be unique Requests to build new RDF files will be ignored if another file with the same name exists To initiate the request, use a unique RDF name or delete the other file with that RDF name from the RDF directory and then retry

MSG 395, Request Rejected - Check File Status

The request was rejected most likely because the RDF file already has a pending process in queue or another screen has changed the status of the RDF file Exit the RDF directory, then reenter to see the status of the RDF file Retry the function if appropriate

MSG 397, Request Queue Limit Reached, Request Ignored

The request queue to database retrieval is full at this time Try again later

MSG 398, No Items Key request Ignored

Tried to select an item for which there was nothing to be selected

:ERR 399, This module types needs a module # of 2

Because of the given module type entered when configuring this tag, the tag address for this tag must have a module number of two. Enter a valid module number

ERR 400, This module type needs a module # > 1

Because of the given module type entered when configuring, the tag address for this tag must have a module number greater than one Enter a valid module number

:ERR 401, This module type needs a module # < 2

Because of the given module type entered when configuring, this tag must have module number less than two Enter a valid module number

:ERR 402, Module status tags must have block # of 0

All tags configured with a N90STA tag type must have a block number of zero entered in their tag address Enter a block number of zero

:ERR 403, This module type needs a module # of 0

Because of the given module type entered when configuring this tag, the address for this tag must have a module number of zero Enter a valid module number

:ERR 404, This module type needs a module # of 3

Because of the given module type entered when configuring this tag, the tag address for this tag must have a module number of 3 Enter a valid module number

MSG 405, FIELD NOT APPLICABLE FOR THIS SYSTEM

The field currently being accessed is not used for this system. Any input will not be used by the system Go to next field

:MSG 406, FUNCTION NOT SUPPORTED FOR THIS SYSTEM

Appears when attempting to access a function not currently supported on this system

:MSG 407, Enter Tag Name or Index

Prompt to enter a tag name or an index number

ERROR MESSAGES

:MSG 408, Saving Configured Data

During the configuration of relays or tones, informs the operator that the console is currently saving the configuration. Perform no further actions until the message disappears

:MSG 409, Test in Progress

During the testing of relays or tones, informs the operator that the console is currently performing a requested test. If the test is to run until completion, perform no further actions until the message disappears. Otherwise, press ESC to terminate the test immediately

MSG 410, Physical Device Overlap

During the configuration of relays, informs the operator that the entered relay or keyboard value would cause overlapping use of a physical relay. The offending relay or keyboard value should be reentered in a manner such that it does not cause an overlap of a physical relay

:MSG 411, Bad Logical Relay Value

During the configuration or testing of relays, informs the operator that the entered logical relay number does not exist. Enter a legal logical relay number

MSG 412, Bad Physical Relay Value

During the configuration of relays, informs the operator that the entered physical relay number does not exist. Enter a legal physical relay number

MSG 413, Bad Keyboard Value

During the configuration of relays or tones, informs the operator that the entered keyboard number does not exist. Enter a legal keyboard number

MSG 414, Bad Time Duration Value

During the configuration or testing of relays or tones, informs the operator that the entered duration value (in seconds) is not legal. The duration is too long or too short. Enter a legal duration value

.MSG 417, Bad Logical Tone Value

During the configuration or testing of tones, informs the operator that the entered logical tone number does not exist. Enter a legal logical tone number

.MSG 418, Bad Priority Value

During the configuration of tones, informs the operator that the entered tone priority value is not legal. The priority is too high or too low. Enter a legal tone priority value

.MSG 419, Bad Pitch Value

During the configuration of tones, informs the operator that the entered tone pitch value is not supported. Enter a legal tone pitch value

MSG 420, Bad Volume Value

During the configuration of tones, informs the operator that the entered tone volume value is not legal. The volume is too high or too low. Enter a legal tone volume value

MSG 421, Bad Broadcast Entry

During the configuration of tones, informs the operator that the string entered to confirm tone broadcasts is incorrect. Enter a YES or a NO

MSG 422, Bad Node List Value

During the configuration of tones, informs the operator that the entered node list number does not exist. Enter a legal node list number

MSG 423, Software failure, please restart console

Message is seen as an operator actions request, and causes an operator actions indicator (i.e., flashing A) to appear at the alarm indicators display line. It occurs when one of the OIS program tasks is not operating. Enter the operator action request function, and initiate actions to restart the console

MSG 424, OPTION NOT AVAILABLE ON THIS SYSTEM

The option be attempted is not supported on this system.

ERROR MESSAGES

.MSG 425, Same MKI/EMKI assigned to different nodes

A node can have only one keyboard assigned. The node name being entered already has an assigned keyboard. Enter a node name that does not have a keyboard already assigned.

ERR 426, Insufficient user access rights

Currently logged in user does not have sufficient access rights to the selected function as defined through password security configuration.

ERR 427, Unauthorized access attempted

Currently logged in user attempted to access a function without having sufficient access rights to the function as defined through password security configuration.

.ERR 428, Error Modifying RT ENTER to rtry, or ESC

This indicates that some error which prevents completion of a red tag status change has occurred. Typically, this is an INFI 90 loop or module communication error. View the diagnostic log to determine the module or loop error which has occurred.

ERR 429, Display access restricted on this CRT

Currently logged in user does not have sufficient display access rights to the selected display as defined through password security configuration or during display creation.

.MSG 431, No Assignment Possible -one system CRT

When attempting to assign a keyboard to a screen, this informs the operator that the console has only one screen, therefore, the attempted keyboard assignment is invalid.

MSG 432, Not All Tags ACKED

When using PAGE ACK to acknowledge alarms, not all alarms on the current page have been acknowledged. This occurs when the currently logged in user does not have sufficient access rights to acknowledge an alarm for a certain tag or tags on that page.

MSG 433, Insufficient access to ACK

Occurs when the currently logged in user does not have sufficient access rights to acknowledge an alarm (using ACK ALARM) for a selected tag.

MSG 434, No Access to TAB

Occurs when the currently logged in user does not have sufficient access rights acknowledge an alarm condition for a tag. The console does not allow tabbing to that tag after pressing **ACK ALARM**

ERR 435, Log In Failure -Password Not Found

Password entered during password log in is not defined in password security configuration. Verify the password is valid and try again

ERR 436, CRT Access Denied--Insufficient Rights

Currently logged in user does not have sufficient display access rights to the selected display as defined through password security configuration, or during display creation.

ERR 437, Alarm Inhibit Mode conflict at tag %d

This occurs when attempting to redefine a tag that is being used to inhibit alarming for another tag or tags. The tags being inhibited by this tag must be modified before this tag can be redefined.

ERR 438, Tag Update Failed - Duplicate Tagname

The tag change requested causes a duplicate tag name conflict. In this case, there is already a tag with this name but having a different address. Change the tag name and retry.

ERR 439, Tag Update Failed Duplicate Address

The tag change requested causes a duplicate tag hardware address conflict. In this case, there is already a tag with this address but having a different name. Change the tag address and retry.

ERR 440, Tag Update Failed

A general error message, it is most frequently due to the GDM or RDB work station not being on line, or a failure in the communication system exists. Make sure the work station is on line and that the node address configured at the Broadcast Master field is correct. Consult the *stb.log* file at the work station for additional information.

ERROR MESSAGES

.ERR 441, Tag Broadcast Failed, Local update only

Appears when a tag database change is made to identify that tag broadcasting is in LOCAL mode only. In this mode, the console can receive a tag list broadcast from an GDM or RDB work station, but does not broadcast changes made at the console to the work station. Therefore, any changes made at the console do not affect the GDM or RDB tag database. The change is, however, made locally to the tag database of the console.

.ERR 442, Copy of 'blank' tag to tag %d illegal

The tag type of the tag specified when performing a copy index operation at the tag configuration page is UNDEF. A tag defined as an UNDEF type cannot be copied to another index. Only defined tags (any tag type except UNDEF) can be copied.

ERR 443, Invalid Copy attempt, 'blank' source tag

The tag type of the tag specified as the source tag when performing a copy index to range operation at the tag configuration page is UNDEF. A tag defined as an UNDEF type cannot be copied to another index. Only defined tags (any tag type except UNDEF) can be copied.

ERR 447, Tag Update Failed - RDB broadcasting tag

The GDM or RDB program has a rebroadcast pending on this tag. Wait for the rebroadcast to complete and retry.

ERR 448, Tag Update Failed - Ident Console differs

A tag exists in one identical console but not in another. The consoles have become out of synchronization. Refer to the GDM or RDB instruction for additional information.

ERR 449, Tag Update Failed - Existing tag mismatch

An attempt was made to add a tag that exists in another console without matching all of the common tag fields. Make all of the common tag fields in the tag being added identical to the fields of the existing tag. Refer to the GDM or RDB instruction for additional information.

.ERR 450, Tag Update Failed - Tag not in RDB to del

An attempt has been made to delete a tag that is not in the GDM or RDB database for this console. The GDM or RDB program has become out of synchronization with the console. Add the tag to the GDM or RDB database for this console by

calling it up on the console and pressing **ENTER** to save, then retry the delete

:ERR 451, Tag Update Failed - Tag indx out of range

Occurs when a tag is added at another console that has a larger tag database than this console. The GDM or RDB program has attempted to add the tag to this console at an index number that is invalid for this console.

:ERR 452, Tag Update Failed - RDB move index error

While the console was in LOCAL broadcast mode, a tag was deleted and re-entered at a new index number. The GDM or RDB program has become out of synchronization with the console. Enter the tag name and address at the original index location, then delete it. At the new index, press **ENTER** to save the tag at its new index and to update the GDM or RDB database.

ERR 453, Tag Update Failed - RDB taglst not loaded

There is no tag list loaded in the GDM or RDB work station for this console. Load the tag list.

MSG 454, Tag Update Failed - RDB has duplicate tag name

Informs the operator that the GDM or RDB database contains tags with the same name.

MSG 455, Event and error counters were reset

Indicates that the console has successfully completed a request to reset the event and error counters for the selected node or nodes.

ERR 456, Failed to reset event and error counters

Indicates that the console was unable to complete a request to reset the event and error counters for the selected node, or one or more of the selected nodes. In most cases, this indicates that a node is off-line or in error. Use one of the INFI NET diagnostics functions to check the status of the selected node or nodes.

MSG 457, Exception statistics were reset

Indicates that the console has successfully completed a request to reset the exception statistics for a selected node or nodes.

ERR 458, Failed to reset exception statistics

Indicates that the console was unable to complete a request to reset the exception statistics for the selected node, or one or more of the selected nodes. In most cases, this indicates that a node is off-line or in error. Use one of the INFI-NET diagnostics functions to check the status of the selected node or nodes.

:MSG 459, Assigned to Events Logs, cannot be shared

This occurs when attempting to change a printer assignment from private to shared for a printer used to print a continuously printing events log (i.e., events print as they occur). Printers used for a continuously printing events log cannot be shared. Either use a different printer, or reassign the events log to print to a different private printer.

MSG 460, Assigned to Action Logs, cannot be shared

This occurs when attempting to change a printer assignment from private to shared for a printer used to print a continuously printing actions log (i.e., operator actions print as they occur). Printers used for a continuously printing actions log cannot be shared. Either use a different printer, or reassign the actions log to print to a different private printer.

MSG 461, Assigned as Shared must be a Private prt

This occurs when attempting to assign a shared printer as the logical printer for a continuously printing events or operator actions log while at the event log configuration function. Assign a private printer as the event or operator actions log logical printer, or change the printer assignment to private.

MSG 462, Unable to open window on requested node

During X device definition, the console checks a node before assigning a window to that node. The node name being entered is invalid, or the node is off line. Enter a valid node name or verify that the node is on line.

ERR 463, Output option must be PRINT or DISPLAY

The options for the *Print/Display* portion of the input prompt for the *Log by Name* function are **PRINT** or **DISPLAY** only. Enter either of these.

:MSG 464, Function not valid for media type OAS

Occurs when trying to retrieve log or event data from an OAS media type, or trying to *Use New Volume* for an OAS media type. The console does not support retrieving data from an open access system, and the *Use New Volume* option does not allow for the OAS media type.

:MSG 465, Only logs/events valid on media type OAS

When defining archival storage, an attempt to archive either tag, trend or PCU configuration data types to open access system media type was made. Only logs and events data types can be archived to open access system media type.

MSG 466, Maximum or Minimum Zoom reached

Appears if the requested zoom on a trend exceeds the resolution of the display. This occurs when the operator attempts to zoom a trend display past its maximum or minimum resolution.

:ERR 467, Maximum number of save to disk configured

Informs the process engineer that the maximum number save to disk trends have been configured while performing trend definition. No additional save to disk or archiving trends can be added.

MSG 468, Enter YES or NO

Informs the operator that a YES or NO response is required to continue.

:MSG 469, Time change request has completed

Appears after the console finishes processing a time change request.

ERR 470, Console's time has not been synchronized

Appears when the operator requests a change to the local (wall-clock) time before the console begins processing time-sync messages. This can occur during approximately the first nine minutes after a console starts up. The local time at the console will update, but the time will not be updated on the loop. Wait a short period of time and try the change request again.

ERROR MESSAGES

:ERR 471, Console's time has not been synchronized

Appears when the operator requests a change to GMT (system time) before the console begins processing time-sync messages. This can occur during approximately the first nine minutes after a console starts up. Wait a short period of time and try the change request again.

:ERR 472, Internal error processing time request

Some internal error occurred that does not allow the console to process a time change request. Reset the console and attempt the request again. If this does not work, contact Bailey Controls Company.

:ERR 473, System has no satellite clock

One of the satellite clock options was chosen at the *Set Date and Time* function when the console is not equipped with a satellite receiver. Select another option that does not set time using a satellite clock.

ERR 474, Greenwich Mean Time is not established

One of the time maintenance options has not yet been used at this console to initialize time synchronization for the console and establish GMT. Choose any of options *D* through *J* at the *Set Date and Time* function to initialize time synchronization before attempting to change the local (wall clock) time. This is required on all consoles on the loop at least once after start up to initialize time synchronization.

:ERR 475, Failure reading the satellite clock

The console is unable to read the date and time from its satellite receiver. Verify the status of the satellite receiver.

ERR 476, Cannot change GMT before synchronized

The operator selected an option that allows the console to update its time based on the loop time, but the loop has not been synchronized. Choose an option from the *Set Date and Time* function that establishes GMT (system time) for the loop.

ERR 477, Error in formula definition

During custom log cell definition, a formula was entered in correctly.

ERR 478, Invalid cell type in formula definition

An address of a cell that is not valid for the formula cell function was entered. Refer to the formula cell option screen to identify valid cell types.

:ERR 479, Not enough operands in the formula definition

At least two operands must be entered for a formula definition.

:MSG 481, Archival not allowed, Trend must be LOCAL

A remote trend has been designated for archiving. Only local trends at the console can be archived. The open access system can be used to archive remote trends.

MSG 482, Only Terminal Server printers can be Shared

A printer connected to a slave console cannot be a shared printer. Only a printer connected through a terminal server can be designated as shared. Either make the printer a private printer, or select a network printer to be the shared printer.

ERR 483, User task activation node name too long

The node name is limited to six characters. Either the node name specified during user task definition is too long or the logical is defined with an incorrect node name. Check the user task definition or the logical name if used.

:ERR 484, User task activation node not on network

The node indicated in the user task definition function or the interactive escape command in the display source file is invalid. Verify the network node name for the UTI server and check the node name used in the user task definition or display interactive escape.

ERR 485, User task activation server not running

The user task interface is not running on the server node. Check the server node.

ERR 486, Unable to connect to activation server

This indicates a network error. Check the diagnostic log to determine the cause of the network error.

·ERR 487, User task activation server busy

The user task interface server node cannot process any additional user task activations. Either wait for some user tasks to deactivate or deactivate some user tasks before attempting to activate another task.

ERR 488, Error sending activation message

This indicates a network error. Check the diagnostic log to determine the cause of the network error.

ERR 489, Error receiving activation reply

This indicates a network error. Check the diagnostic log to determine the cause of the network error.

ERR 490, Invalid user task name

The user-written program does not exist on the specified node. Verify the network node name for the UTI server is correct at the user task definition function or in the display in interactive `escape`. Check the server node to determine if the task exists.

·ERR 491, Duplicate user task process name

This only occurs for tasks activated using the `CREATE` method of activation. The message appears when the task selected for activation has already been activated previously and an attempt to activate it again has been made.

ERR 492, Error reading user task definition file

The configuration of an ADP pushbutton or keyboard function key references an invalid user task index number. Check the configuration of the ADP pushbutton or keyboard function key, or the user task definition. Check the diagnostic log to determine the cause of the error.

·MSG 493, User task activation queued

This informs the operator that the activation request made at the console has been processed successfully. This message should be followed by another, either a response from the user task interface that the task has been activated, or some error message to indicate the activation was not successful.

ERR 494, User task activation internal error

Some internal error occurred. Check the diagnostic log to determine the cause of the error.

MSG 495, User task activation successful

This is a response from the user task interface that the activation of a user task was successful.

ERR 496, Control Invalid While in String Interlock

Control actions cannot be performed at a TEXTSTR element while *USER TEXT LOCK* appears at the element. The control scheme has been set to not allow input from the console.

ERR 497, Response Is Invalid For Current Prompt

A mismatch between the current prompt or question appearing at a TEXTSTR element and a response to the prompt or question has occurred. Enter a new response to the current prompt or question.

ERR 498, Control Has Not Been Enabled

A TEXTSTR element cannot be selected for control if the *Control Enable* field for the tag is set to *NO* in the tag database.

ERR 499, WARNING - External Source Index undefined

Appears when defining a trend and an index number for an external source node is entered that is not defined through OAS definition.

MSG 500, Press ENTER to accept, ESC to edit again

Allows the operator to press **ENTER** to update the configuration, or **ESC** to return to editing.

2004 10 07

Bailey

Index

A

Accounts		6	7
ACK ALARM	10-9	10-14	14-10
Activity monitor		17-2	17-25
Alarm inhibit			
Automatic indicator		16	98
Manual	7-12	10-15	
Alarm quality option		16-95	
Alarm relay			
Configuration	16-88	16-119	
Test		16	90
ALARM SUMM	10-10	16	99
Alarm summary			
Activation		10-14	
Alarm acknowledgment		10-14	
Attributes		10-12	
Configuration		16	99
Defining line formats		16	103
Described	10-10	16-99	
Display requirements		16-203	
Entries		10-11	
Line format for operator configurable displays		16-206	
Line formats	16-100	16-203	
Line options		16	103
Operations		10	13
Paging		10	14
Priority display		10-15	
Priority colors	16-102	16-111	
Report		16-113	
Sorting options	10-11	16	99
Alarm summary report			
Defined		16	116
Described		16	113
Format		16	116
Scheduling		16-116	
Title line		16	113
Alarm tone			
Configuration	16-85	16-119	
Global alarming		16-123	
Test		16	88
Arms			
Acknowledge keys		3-11	
Alarm comments	16	60	16-233
Alarm groups	4	4	10-7
Alarm inhibit	7-12	10	15
Alarm management	2-6	16	91
Alarm quality option		16	95
Alarm relay	16-88	16-119	
Alarm summary	10-10	16-99	
Alarm summary report		16	113
Alarm tone	16-85	16-119	
Bad quality alarm		10	7

Global alarming		16-120	
Indicators		10-1	
INFI 90 module	10-2,	14-2	
Priority descriptors		10-7	
Process		10-1	
Processing		10-8	
Acknowledge	10-9	14-10	
Correcting alarm conditions		10-10	
Tone silence		10-8	
Remote alarm acknowledgment		16	124
Remote and local I/O error footer	10-11,	14-10	
Return to normal	10-10,	16	98
Silence key	3-11,	10-9	
Status field		10-3	
Status indicators	4-4,	10-3	
Suppress on		7-14	
System status filtering		10-7	
Analog annunciator element		9-4	
Analog element		9-4	
ANALOG tag		16	37
Annunciator display pane			
Accessing displays		7-3	
Configuration		16-74	
Described		3	14
Pushbutton assignment		16	82
Archiving			
Archive storage		12-22	
Archive volume directory		12	27
Configuration		16-178	
Data retrieval	12	27	12-30
Logs		12	34
PCU configurations		12-41	
System events		12-32	
Tag data		12	36
Trend data		12-3/	
Data storage		16	177
Custom logs		16	189
PCU configurations		16-190	
SOE logs		16	190
System events		16-188	
Tag data		16	190
Trend data		16	189
Data type to volume		16-180	
Data types		12	21
Described	2	10	12
Directory of retrieved data		12	43
Medium		12-22	
Miscellaneous definitions		16-186	
OAS storage		16-128	
Scheduling		16	183
Store data		12	24
Tag history	12-48	16	190
Unused archive trend indexes		12-43	
Use new volume		12	25

Index (continued)

Viewing or printing data	12-47
Volume to media	16-182
ASGN PRN option	3-15
Automatic displays	7-4 16-217
Denotation symbol	16 219
Tag set	16-220
Automatic pop ups	7-4 16-217 16-218
Automatic start up of the OIS application	6 7
Auxiliary engineering keyboard	A-1

B

BACK	7 6
Bad quality alarming	10 7
Block address	15 3 15 11
Block data s	7 14 8 26 8 32
Bottom line elements	4-5

C

Capabilities summary	1 14
CASC	8 10
Cell definition for custom ovs	
Alarm/quality file d	16-155
ASC text	16-156
Constant value	16-157
Formula	16-158
Hidden cell	16 155
Offset time	16 160
OIS time and date	16 159
Tag attribute	16 163
Tag value	16 161
Trend value	16-162
Cell utilities for custom ovs	16 164
CMPTTR	8 10 9 11 9 14
Color codes for printing	16 157 16 201
Color scheme	4 7
COMMAND LINE MENU	5 2
Command line menu	4 5 5 2
Communication on messages	2 12
Configuration	
Files	16 1
General information	16-1
Restoring	17-6 17-34
Saving	17 5 17-35
SLDG created	17 11
Subsystems	16-4
Alarm management configuration	16 91
Archive storage	16-177
Database configuration	16 36
Display configuration	16-203
Display generation	16 69
Keyboard	16-74
Logging configuration	16 137

Network definitions	16-7
Open access system	16 125
Password security configuration	16 25
Peripheral configuration	16 194
System configuration	16 8
Text definition and substitution	16 224
Trend definition	16-128
Trend pen cluster configuration	16-233
Window management	16 21
Transferring files	17-6
Console definition	16 196
Control select	4 8
Highlighting	4 9
Control tags	8-2
Copy screen	6-12
Cancel printing request	6-13
Configuration printer	6-14
Number of copies	6 13
Printers	6 12
Selecting a printer	6 14
Custom ovs	
Activating	12 19 16-149
Archiving	16 189
Cell definition	16-153
Cell types	16-148
Cell utilities	16-164
Color codes	16 157
Configuration	16 145
Deactivating	12-20 16 149
Description	12-2 16 137
Generator	16-148
Log definition	16-148
Log errors	16 166
Log status	12 15
Print types	16 147
Printer command codes	16 156
Printing or displaying	12 4
Repeat cycle	16-147
Saving	16 147
Scheduling	16-146
Scheduling examples	16-167
SLDG created	17-22
Types	16 146

D

DAANALG tag	16-37
DADG control	9 14
Change user inserted state	9 15
Force report	7 15
On or off report	7 14
Reset alarm state latch	7 15
Source selection	9 14
Suppress or allow alarms	7-14

Index (continued)

DAD G tag	9-12, 16 38	OIS application	17-1
DAD GTL tag	16 38	PCU management	15-13 15-16
DANG control	9-10	Retrieved archive data	12-43
Change user-inserted value	9-11	Disk drives	
Force report	7-15	Described	1 5
On or off report	7-14	Hard disk utilization	C-1
Source selection	9-11	DISPLAY	10-10
Suppress or allow alarms	7-14	D splay by name	7-3
DANG tag	9-7 16-38	D splay generator	16-69 16-70, B-1
Data acquisition		Errors	16-72
Common attributes for data acquisition elements	9 2	D splay log	
DAD G control	9 14	Custom ovs	12-4
DANG control	9 10	Events log	12-8
Description	9-1	Operation	12 3
Tags	9 1	SOE ovs	12-7
TEXTSTR control	9-17	D splay mask definition	16-34
Data acquisition analog element	9-6	DISPLAY SUMM	7-3
Data acquisition digital element	9-11	D splay system	4-1
Data input		D splays	
Cursor keys	3-8	Access ng	7-2
Input fields	3-12 4-5	ADP	7-3
Inputting data	3 12	Automatic	7-4
Data type to volume	16 180	D splay by name	7-3
Database configuration	16-36	Keyboard	7-3
Date and time		Menu items	7 2
Format	16-19	Paging	7-6
INF-NET system	13 5	User task interface activated	7 5
Plant Loop system	13 9	Assign ng to a keyboard key	16-80
Setting	13 1	Assign ng to an ADP pushbutton	16-83
Title line	4-4	Automatic d splays	7-4 16-217
DD control	8-18	Automatic pop ups	7-4 16-217
DD tag	8 17 16 38	Bottom line elements	4-5
DECnet network	16-7 16 21 16 125 17-6	Characteristics	4-3
Description		Color scheme	4-7
Annunciator d splay pane	1-4	Configuration requirements	16-203
CRT	1-3	Control elements	8-1
Disk drives	1 5	D splay broadcast	2-12 16-69
Driver unit	1-3	D splay log	12-2
Keyboard	1 4	Escape commands	4-7
Keyboard interface pane	1-4	Generator	16-70 B 1
Power entry pane	1-5	Keyboard keys	3-4
Printers	1-5	Keyboard status block	4-5
VAXstation	1-3	Operator configuration	2 12 7 39 16 204
DETAILS	8-27	Options for creating	2 11 16-69
Device driver element	8-17	Pop up elements	4-10
DEVSTAT tag	16-38 16-195	Process	2-16
Diagnostic log	17 2 17 38	Screen coordinates	4-3
Digital annunciator element	9-5	Select ng	4-8
Digital element	9 5	Status d splays	2 15
DIGITAL tag	16 38 16-124 16 217	Summary d splays	2 15
Directories		Title	4-3 4-4 10-6
Archive volume	12 27	User space	4 3 4-6
Changing	17 2	Utilities for processing	17-19
MSG subdirectory	17-3	XY plot	16-211

Index (continued)

Printers

- Assignment 3-15 16-198
- Assignment status 4-6
- Color codes 16-201
- Color map 16-200
- Configuration requirements 16-197
- Copy screen 6-12
- Described 1-5 3-14
- Logging 3-15
- Network 3-14
- Redundancy 3-17
- Shared/private 3-16 16-198
- Status 3-16
- Types 3-15 16-197

Printing

- Alarm comments list 16-64
- Cancellation queued custom and SOE logs 12-20
- Cancellation queued print jobs 13-27
- Logs 12-2
- Network topology 14-28
- PCU configurations 15-15
- RDF file data 12-59
- System diagnosis information 14-26
- Tag database 13-20
- Tag summaries 13-15
- Trend definitions 13-23

Priority colors 16-102 16-111

PROCDT 17-20 17-33

Process alarms 10-1

Process control

- Common attributes for control elements 8-2
- Control keys 3-10
- Control select 4-8
- Control tags 8-2
- DD control 8-18
- Described 8-1
- Device control 8-12
- MSDD control 8-21
- RCM control 8-14
- RMCB control 8-25
- RMSC control 8-16
- STATION control 8-5

Process control unit 2-2

Pull-down menus 6-3

Q

Quality indicators

- Alarm inhibit 10-5
- Bad quality 10-6
- Described 10-5
- Scan 10-6
- Substitute value 10-6
- Suspect 10-6

Quality options for alarming 16-95

R

- RATIO 7-13, 8-10
- RCM control 8-14
- RCM tag 8-12 12-2 16-39 16-172
- RDF file 12-50 12-59 12-62
- RECALL 7-7
- Red tag status 8-4, 9-3 15-6
- Reference documents 1-11
- Remote acknowledge tag assignment 16-124
- Remote and local I/O error filtering 10-11 14-10
- Remote control memory element 8-12
- Remote manual set constant element 8-15
- Remote motor control element 8-23
- Remote motor control text 16-230
- Remote window assignment 6-8 6-10 16-22 16-24
- Reporting on or off 7-14
- Reset 6-11
- Return to normal 10-10 16-98
- RMCB control 8-25
- RMCB error codes 8-24 16-230
- RMCB tag 8-23 16-39 16-230
- RMSC control 8-16
- RMSC tag 8-15 16-39

S

- Scan on or off 7-11 10-6
- Screen coordinates 4-3
- Screen printing see Copy screen
- Security 16-30
- Security events 16-28
- Security passwords 16-32
- Selecting displays 4-8
- Sequent events recorder 12-2
- Session manager 6-5
- SET 7-13 8-11 9-11
- Shutdown 6-4
- Shutdown 6-10
- SLENCE 10-9 16-85
- Sizing a window 6-4
- SLDG utility
- Alarm comments 16-61
- Display broadcast 2-12 16-69
- For console configuration 16-2 17-11
- SODG utility 2-11 4-8 16-69 16-218 16-219 8-1
- Tag descriptors 16-66
- Trend definition 2-19
- XY plot 16-217
- SOE logs
- Activation 12-19 16-175
- Archiving 16-190

Visit **Elsag Bailey** on the World Wide Web at <http://www.bailey.com>

Our worldwide staff of professionals is ready to meet your needs for process automation
For the location nearest you please contact the appropriate regional office

AMERICAS

29601 Euc d Avenue
W ck ffe Oh o USA 44092
Te ephone 1 216 585 8500
Te efax 1 216 585 8756

ASIA/PACIFIC

152 Beach Road
Gateway East #20 04
S ngapore 189721
Te ephone 65 391 0800
Te efax 65 292 9011

EUROPE, AFRICA MIDDLE EAST

V a Pucc n 2
16154 Genoa ta y
Te ephone 39 10 6582 943
Te efax 39 10 6582 941

GERMANY

Graefstrasse 97
D 60487 Frankfurt Ma n
Germany
Te ephone 49 69 799 0
Te efax 49 69 799 2406

Form E96 101D L tho in U S A 793
Copyr ght © 1993 by Elsag Ba ey Group As An Unpublished Work
© Reg stered Trademark of Elsag Ba ey Group
™ Trademark of E sag Ba ley_Group

